



## C9900-Ex2x | Push-button extension for Control Panel and Panel PCs with 19-inch display without keyboard

C9900-Ex2x	
Features	push-button extension for CP6x03-00xx and CP7x03-00xx
	push-button extension on the right side
	20 push-button keys with signal lamp, type Siemens Signum square, 30 x 30 mm
	1 emergency stop key Siemens Signum, directly wireable
	Labels for push-button caps allow individual marking.
	All push-buttons are transmitted via USB with one normally-open contact.
	Additionally, all push-buttons are directly wireable with a second normally-open contact via a terminal row.
Dimensions	All indicator lights are controlled exclusively via USB.
	<a href="#">drawings with dimensions of the push-button extensions as AutoCAD DXF file</a>

Ordering information	Push-button extension for built-in Control Panel, "Economy" built-in Control Panel and "Economy" built-in Panel PCs
C9900-E525	push-button extension for "Economy" built-in Panel PC CP6203-00xx and CP6703-00xx-0040 with screwed cable gland
C9900-E725	push-button extension for DVI/USB built-in Control Panel CP6803-00xx and built-in Panel PC CP6503 with screwed cable gland
C9900-E925	push-button extension for DVI/USB Extended "Economy" built-in Control Panel CP6903-00xx with screwed cable gland

circular plug-in connector instead of screwed cable gland on request

Ordering information	Push-button extension for Control Panel and Panel PCs
C9900-E723	push-button extension for DVI/USB Control Panel CP7803-00xx and DVI/USB Extended "Economy" Control Panel CP7903-00xx without mounting arm connection, without cable bushing
C9900-E728	push-button extension for DVI/USB Control Panel CP7803-00xx and DVI/USB Extended "Economy" Control Panel CP7903-00xx, mounting arm mountable from top or bottom, mounting arm system RolecTara Plus part no. 149.025.012, 149.025.013, 149.025.014, 149.035.012, 149.035.013 or 149.035.015 at the Control Panel backplane, circular plug-in connector instead of screwed cable gland on request
C9900-E823	push-button extension for Panel PC CP7703-00xx without mounting arm connection, without cable bushing
C9900-E828	push-button extension for Panel PC CP7703-00xx, mounting arm mountable from top or bottom, mounting arm system RolecTara Plus part no. 149.025.012, 149.025.013, 149.025.014, 149.035.012, 149.035.013 or 149.035.015 at the Control Panel backplane, circular plug-in connector instead of screwed cable gland on request

Ordering information	Options for the push-button extensions for Control Panel and Panel PCs
C9900-M931	screwed cable gland, designed for feeding the signal line into the push-button extension without mounting arm connection
C9900-M205	mounting arm adapter plate with a cable pit centrally attached at the Control Panel CP78xx or CP79xx with push-button extension for mounting arm system Rittal CP6206.490 instead of Rolec Tara Plus; mounting arm from top or bottom, wiring through the mounting arm with cable gland M25 in the wiring area of the mounting arm adapter plate; circular plug-in connector instead of screwed cable gland on request
C9900-M405	mounting arm adapter plate with a cable pit centrally attached at the Panel PC CP77xx with push-button extension for mounting arm system Rittal CP6206.490 instead of Rolec Tara Plus, mounting arm from top or bottom, wiring through the mounting arm with cable gland M25 in the wiring area of the mounting arm adapter plate, circular plug-in connector instead of screwed cable gland on request

Ordering information	Push-button extension for "Economy" Panel PCs
C9900-E527	push-button extension for "Economy" Panel PC CP7203-00xx with circular plug-in connector between push-button extension and connection section