



C9900-Ex6x | Push-button extension for Control Panel and Panel PCs with 15-inch display and numeric keyboard

C9900-Ex6x	
Features	<p>push-button extension for CP6x22-00xx and CP7x22-00xx</p> <p>push-button extension on the right side</p> <p>14 push-button keys with signal lamp, type Siemens Signum square, 30 x 30 mm</p> <p>1 emergency stop key Siemens Signum, directly wireable</p> <p>Labels for push-button caps allow individual marking.</p> <p>All push-buttons are transmitted via CP-Link or USB with one normally-open contact.</p> <p>Additionally, all push-buttons are directly wireable with a second normally-open contact via a terminal row.</p> <p>All signal lamps are transmitted via CP-Link or USB only.</p>
Dimensions	drawings with dimensions of the push-button extensions as AutoCAD DXF file

Ordering information	Push-button extension for built-in Control Panel, "Economy" built-in Control Panel and "Economy" built-in Panel PCs
C9900-E565	push-button extension for "Economy" built-in Panel PC CP6222-00xx and CP6722-00xx-0040 with screwed cable gland
C9900-E765	push-button extension for DVI/USB built-in Control Panel CP6822-00xx and built-in Panel PC CP6522 with screwed cable gland
C9900-E965	push-button extension for DVI/USB Extended "Economy" built-in Control Panel CP6922-00xx with screwed cable gland
C9900-E466	push-button extension for Ethernet "Economy" built-in Control Panel CP6622-00xx with screwed cable gland

circular plug-in connector instead of screwed cable gland on request

Ordering information	Push-button extension for Control Panel and Panel PCs
C9900-E761	push-button extension for DVI/USB Control Panel CP7822-00xx and DVI/USB Extended "Economy" Control Panel CP7922-00xx without mounting arm connection, without cable bushing
C9900-E768	push-button extension for DVI/USB Control Panel CP7822-00xx and DVI/USB Extended "Economy" Control Panel CP7922-00xx, mounting arm mountable from top or bottom, mounting arm system RolecTara Plus part no. 149.025.012, 149.025.013, 149.025.014, 149.035.012, 149.035.013 or 149.035.015 at the Control Panel backplane, circular plug-in connector instead of screwed cable gland on request
C9900-E861	push-button extension for Panel PC CP7722-00xx without mounting arm connection, without cable bushing
C9900-E868	push-button extension for Panel PC CP7722-00xx, mounting arm mountable from top or bottom, mounting arm system RolecTara Plus part no. 149.025.012, 149.025.013, 149.025.014, 149.035.012, 149.035.013 or 149.035.015 at the Control Panel backplane, circular plug-in connector instead of screwed cable gland on request

Ordering information	Options for the push-button extensions for Control Panel and Panel PCs
C9900-M931	screwed cable gland, designed for feeding the signal line into the push-button extension without mounting arm connection
C9900-M205	mounting arm adapter plate with a cable pit centrally attached at the Control Panel CP78xx or CP79xx with push-button extension for mounting arm system Rittal CP6206.490 instead of Rolec Tara Plus; mounting arm from top or bottom, wiring through the mounting arm with cable gland M25 in the wiring area of the mounting arm adapter plate; circular plug-in connector instead of screwed cable gland on request
C9900-M405	mounting arm adapter plate with a cable pit centrally attached at the Panel PC CP77xx with push-button extension for mounting arm system Rittal CP6206.490 instead of Rolec Tara Plus, mounting arm from top or bottom, wiring through the mounting arm with cable gland M25 in the wiring area of the mounting arm adapter plate, circular plug-in connector instead of screwed cable gland on request

Ordering information	Push-button extension for "Economy" Panel PCs
C9900-E567	push-button extension for "Economy" Panel PC CP7222-00xx with circular plug-in connector between push-button extension and connection section