



C9900-Ex7x | Push-button extension for Control Panel and Panel PCs with 15-inch display and alphanumeric keyboard

C9900-Ex7x	
Features	push-button extension for CP6x32-00xx and CP7x32-00xx push-button extension on the right side 18 push-button keys with signal lamp, type Siemens Signum square, 30 x 30 mm 1 emergency stop key Siemens Signum, directly wireable Labels for push-button caps allow individual marking. All push-buttons are transmitted via CP-Link or USB with one normally-open contact. Additionally, all push-buttons are directly wireable with a second normally-open contact via a terminal row. All signal lamps are transmitted via CP-Link or USB only.
Dimensions	drawings with dimensions of the push-button extensions as AutoCAD DXF file

Ordering information	Push-button extension for built-in Control Panel, "Economy" built-in Control Panel and "Economy" built-in Panel PCs
C9900-E575	push-button extension for "Economy" built-in Panel PC CP6232-00xx and CP6732-00xx-0040 with screwed cable gland
C9900-E775	push-button extension for DVI/USB built-in Control Panel CP6832-00xx and built-in Panel PC CP6532 with screwed cable gland
C9900-E975	push-button extension for DVI/USB Extended "Economy" built-in Control Panel CP6932-00xx with screwed cable gland
C9900-E476	push-button extension for "Economy" built-in Panel PC CP6632-00xx with screwed cable gland

circular plug-in connector instead of screwed cable gland on request

Ordering information	Push-button extension for Control Panel and Panel PCs
C9900-E771	push-button extension for DVI/USB Control Panel CP7832-00xx and DVI/USB Extended "Economy" Control Panel CP7932-00xx without mounting arm connection, without cable bushing
C9900-E778	push-button extension for DVI/USB Control Panel CP7832-00xx and DVI/USB Extended "Economy" Control Panel CP7932-00xx, mounting arm mountable from top or bottom, mounting arm system RolecTara Plus part no. 149.025.012, 149.025.013, 149.025.014, 149.035.012, 149.035.013 or 149.035.015 at the Control Panel backplane, circular plug-in connector instead of screwed cable gland on request
C9900-E871	push-button extension for Panel PC CP7732-00xx without mounting arm connection, without cable bushing
C9900-E878	push-button extension for Panel PC CP7732-00xx, mounting arm mountable from top or bottom, mounting arm system RolecTara Plus part no. 149.025.012, 149.025.013, 149.025.014, 149.035.012, 149.035.013 or 149.035.015 at the Control Panel backplane, circular plug-in connector instead of screwed cable gland on request

Ordering information	Options for the push-button extensions for Control Panel and Panel PCs
C9900-M931	screwed cable gland, designed for feeding the signal line into the push-button extension without mounting arm connection
C9900-M205	mounting arm adapter plate with a cable pit centrally attached at the Control Panel CP78xx or CP79xx with push-button extension for mounting arm system Rittal CP6206.490 instead of Rolec Tara Plus; mounting arm from top or bottom, wiring through the mounting arm with cable gland M25 in the wiring area of the mounting arm adapter plate; circular plug-in connector instead of screwed cable gland on request
C9900-M405	mounting arm adapter plate with a cable pit centrally attached at the Panel PC CP77xx with push-button extension for mounting arm system Rittal CP6206.490 instead of Rolec Tara Plus, mounting arm from top or bottom, wiring through the mounting arm with cable gland M25 in the wiring area of the mounting arm adapter plate, circular plug-in connector instead of screwed cable gland on request

Ordering information	Push-button extension for "Economy" Panel PCs
C9900-E577	push-button extension for "Economy" Panel PC CP7232-00xx with circular plug-in connector between push-button extension and connection section