



## C9900-G00x, C9900-G01x | Push-button extension for built-in CP2xxx multi-touch panels

Control Panels with push-button extension enable the application-specific arrangement of electromechanical buttons, switches, signal lamps, additional membrane keys and a hand wheel directly on the operating unit. It enables precise adaptation of the Control Panel to the machine control requirements. In many cases, a machine operator control panel is no longer required, since all functions are integrated in the Control Panel. The Control Panel housing is increased in size on one side. Depending on the required functions and the electromechanical components, the flat rear panel is enlarged or extended with a trough-shaped rear panel for the button area.

C9900-G00x, -G01x	Push-button extension for built-in multi-touch panels
Technical data	push-button extension below
	push-button keys with signal lamp, type RAFI RAFIX 22FS+, round, 30 mm
	1 emergency stop key, type RAFI RAFIX 22FS+
	labels for push-button caps for individual marking of each push-button
	All push-buttons are transmitted via USB with one normally-open contact.
	Additionally, all push-buttons are directly wireable with a second normally-open contact via a terminal row.
	All signal lamps are transmitted via USB only.
Features	Selector switches and keylock switches as well as other elements from the series RAFIX 22FS+ are integrateable.
	push-button extension below
	push-button keys with signal lamp, type RAFI RAFIX 22FS+, round, 30 mm
	1 emergency stop key, type RAFI RAFIX 22FS+
	labels for push-button caps for individual marking of each push-button
	All push-buttons are transmitted via USB with one normally-open contact.
	Additionally, all push-buttons are directly wireable with a second normally-open contact via a terminal row.
All signal lamps are transmitted via USB only.	
	Selector switches and keylock switches as well as other elements from the series RAFIX 22FS+ are integrateable.

Ordering information	Push-button extension for built-in multi-touch panels
C9900-G002	push-button extension for CP2x12 12" landscape: 4 push-button keys and 1 emergency stop key
C9900-G009	push-button extension for CP2x13 12.1" landscape: 4 push-button keys and 1 emergency stop key
C9900-G003	push-button extension for CP2x15 15" landscape: 7 push-button keys and 1 emergency stop key
C9900-G004	push-button extension for CP2x16 15.6" landscape: 8 push-button keys and 1 emergency stop key
C9900-G005	push-button extension for CP2x18 18.5" landscape: 10 push-button keys and 1 emergency stop key
C9900-G006	push-button extension for CP2x19 19" landscape: 9 push-button keys and 1 emergency stop key
C9900-G008	push-button extension for CP2x21 21.5" landscape: 12 push-button keys and 1 emergency stop key
C9900-G007	push-button extension for CP2x24 24" landscape: 13 push-button keys and 1 emergency stop key
C9900-G012	push-button extension for CP2x12 12" portrait: 3 push-button keys and 1 emergency stop key
C9900-G013	push-button extension for CP2x15 15" portrait: 4 push-button keys and 1 emergency stop key
C9900-G014	push-button extension for CP2x16 15.6" portrait: 4 push-button keys and 1 emergency stop key
C9900-G015	push-button extension for CP2x18 18.5" portrait: 4 push-button keys and 1 emergency stop key
C9900-G016	push-button extension for CP2x19 19" portrait: 7 push-button keys and 1 emergency stop key
C9900-G018	push-button extension for CP2x21 21.5" portrait: 6 push-button keys and 1 emergency stop key
C9900-G017	push-button extension for CP2x24 24" portrait: 6 push-button keys and 1 emergency stop key