



## Documentation

# EL72x1

Servo Motor Terminal, 50 VDC

Version: 3.3  
Date: 2017-01-18

**BECKHOFF**



# 1 Product overview Servo Motor Terminals

[EL7201-0000](#) [▶ 14] Servo Motor Terminal (MDP742 profile), 50 V<sub>DC</sub>, 2,8 A<sub>rms</sub>

[EL7201-0001](#) [▶ 14] Servo Motor Terminal (DS402 profile), 50 V<sub>DC</sub>, 2,8 A<sub>rms</sub>

[EL7211-0000](#) [▶ 14] Servo Motor Terminal (MDP742 profile), 50 V<sub>DC</sub>, 4,5 A<sub>rms</sub>

[EL7211-0001](#) [▶ 14] Servo Motor Terminal (DS402 profile), 50 V<sub>DC</sub>, 4,5 A<sub>rms</sub>

# Table of contents

<b>1</b>	<b>Product overview Servo Motor Terminals.....</b>	<b>3</b>
<b>2</b>	<b>Foreword .....</b>	<b>7</b>
2.1	Notes on the documentation.....	7
2.2	Safety instructions .....	8
2.3	Documentation issue status.....	9
2.4	Version identification of EtherCAT devices.....	9
<b>3</b>	<b>Product overview.....</b>	<b>14</b>
3.1	Introduction EL72x1 .....	14
3.2	Technical data .....	16
3.3	Technology .....	17
3.4	Start-up .....	19
<b>4</b>	<b>Basics communication .....</b>	<b>20</b>
4.1	EtherCAT basics.....	20
4.2	EtherCAT cabling – wire-bound.....	20
4.3	General notes for setting the watchdog.....	21
4.4	EtherCAT State Machine .....	23
4.5	CoE Interface.....	25
4.6	Distributed Clock.....	30
<b>5</b>	<b>Installation.....</b>	<b>31</b>
5.1	Installation on mounting rails .....	31
5.2	Installation instructions for enhanced mechanical load capacity .....	34
5.3	Connection system .....	35
5.4	Positioning of passive Terminals .....	38
5.5	Installation position for operation with or without fan .....	39
5.6	Shielding concept .....	42
5.7	Notes on current measurements using Hall sensors .....	45
5.8	LEDs and connection.....	46
5.8.1	EL7201-000x.....	46
5.8.2	EL7211-000x.....	48
<b>6</b>	<b>Commissioning.....</b>	<b>51</b>
6.1	TwinCAT Development Environment.....	51
6.1.1	Installation of the TwinCAT real-time driver .....	51
6.1.2	Notes regarding ESI device description .....	57
6.1.3	TwinCAT ESI Updater.....	61
6.1.4	Distinction between Online and Offline .....	61
6.1.5	OFFLINE configuration creation .....	62
6.1.6	ONLINE configuration creation .....	67
6.1.7	EtherCAT subscriber configuration .....	75
6.2	Start-up and parameter configuration .....	85
6.2.1	Integration into the NC configuration .....	85
6.2.2	Settings with the Drive Manager .....	88
6.2.3	Settings in the CoE register .....	92
6.2.4	Application example.....	96
6.2.5	Commissioning without NC, status word/control word .....	101
6.2.6	Homing.....	105
6.2.7	NC settings.....	107



6.3	Operating modes .....	113
6.3.1	Overview .....	113
6.3.2	CSV .....	114
6.3.3	CST .....	118
6.3.4	CSTCA .....	121
6.3.5	CSP .....	125
6.4	Profile MDP 742 or DS 402 .....	129
6.5	MDP742 process data .....	130
6.6	DS402 process data .....	133
<b>7</b>	<b>EL72x1-0000 (MDP742) - Object description and parameterization .....</b>	<b>136</b>
7.1	Restore object.....	136
7.2	Configuration data .....	136
7.3	Configuration data (vendor-specific).....	141
7.4	Command object.....	142
7.5	Input data .....	142
7.6	Output data .....	144
7.7	Information / diagnosis data .....	145
7.8	Standard objects .....	146
<b>8</b>	<b>EL72x1-0001 (DS402) - Object description and parameterization .....</b>	<b>153</b>
8.1	Configuration data .....	154
8.2	Configuration data (vendor-specific).....	156
8.3	Command object.....	157
8.4	Input/output data .....	157
8.5	Information / diagnosis data .....	161
8.6	Standard objects .....	162
<b>9</b>	<b>Error correction .....</b>	<b>168</b>
9.1	Diagnostics – basic principles of diag messages .....	168
9.2	Notes on Diag Messages associated with Motor Terminals .....	177
<b>10</b>	<b>Appendix .....</b>	<b>178</b>
10.1	UL notice.....	178
10.2	EtherCAT AL Status Codes .....	179
10.3	Firmware compatibility .....	179
10.4	Firmware Update EL/ES/EM/EPxxxx.....	179
10.4.1	Device description ESI file/XML .....	180
10.4.2	Firmware explanation.....	183
10.4.3	Updating controller firmware *.efw .....	184
10.4.4	FPGA firmware *.rbf .....	186
10.4.5	Simultaneous updating of several EtherCAT devices .....	190
10.5	Restoring the delivery state .....	191
10.6	Support and Service .....	192



## 2 Foreword

### 2.1 Notes on the documentation

#### Intended audience

This description is only intended for the use of trained specialists in control and automation engineering who are familiar with the applicable national standards.

It is essential that the documentation and the following notes and explanations are followed when installing and commissioning these components.

It is the duty of the technical personnel to use the documentation published at the respective time of each installation and commissioning.

The responsible staff must ensure that the application or use of the products described satisfy all the requirements for safety, including all the relevant laws, regulations, guidelines and standards.

#### Disclaimer

The documentation has been prepared with care. The products described are, however, constantly under development.

We reserve the right to revise and change the documentation at any time and without prior announcement.

No claims for the modification of products that have already been supplied may be made on the basis of the data, diagrams and descriptions in this documentation.

#### Trademarks

Beckhoff®, TwinCAT®, EtherCAT®, Safety over EtherCAT®, TwinSAFE®, XFC® and XTS® are registered trademarks of and licensed by Beckhoff Automation GmbH.

Other designations used in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owners.

#### Patent Pending

The EtherCAT Technology is covered, including but not limited to the following patent applications and patents: EP1590927, EP1789857, DE102004044764, DE102007017835 with corresponding applications or registrations in various other countries.

The TwinCAT Technology is covered, including but not limited to the following patent applications and patents: EP0851348, US6167425 with corresponding applications or registrations in various other countries.

The logo for EtherCAT, featuring the word "EtherCAT" in a bold, sans-serif font. A red arrow points from the top of the "A" to the top of the "T". A registered trademark symbol (®) is located to the right of the "T".

EtherCAT® is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany

#### Copyright

© Beckhoff Automation GmbH & Co. KG, Germany.

The reproduction, distribution and utilization of this document as well as the communication of its contents to others without express authorization are prohibited.

Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or design.

## 2.2 Safety instructions

### Safety regulations

Please note the following safety instructions and explanations!  
Product-specific safety instructions can be found on following pages or in the areas mounting, wiring, commissioning etc.

### Exclusion of liability






All the components are supplied in particular hardware and software configurations appropriate for the application. Modifications to hardware or software configurations other than those described in the documentation are not permitted, and nullify the liability of Beckhoff Automation GmbH & Co. KG.

### Personnel qualification

This description is only intended for trained specialists in control, automation and drive engineering who are familiar with the applicable national standards.

### Description of symbols

In this documentation the following symbols are used with an accompanying safety instruction or note. The safety instructions must be read carefully and followed without fail!

 <b>DANGER</b>	<p><b>Serious risk of injury!</b> Failure to follow the safety instructions associated with this symbol directly endangers the life and health of persons.</p>
 <b>WARNING</b>	<p><b>Risk of injury!</b> Failure to follow the safety instructions associated with this symbol endangers the life and health of persons.</p>
 <b>CAUTION</b>	<p><b>Personal injuries!</b> Failure to follow the safety instructions associated with this symbol can lead to injuries to persons.</p>
 <b>Attention</b>	<p><b>Damage to the environment or devices</b> Failure to follow the instructions associated with this symbol can lead to damage to the environment or equipment.</p>
 <b>Note</b>	<p><b>Tip or pointer</b> This symbol indicates information that contributes to better understanding.</p>

## 2.3 Documentation issue status

Version	Comment
3.3	- Update chapter "Technical data" - Chapter "UL notices" added - Chapter "Installation instructions for enhanced mechanical load capacity" added - Update structure
3.2	- Update chapter "Object description"
3.1	- Update chapter "Technical data" - Update chapter "Shielding concept" - Update chapter "Operating mode CSP" - Update chapter "Object description" - Addenda note "Diag messages" - Update structure - Update revision status
3.0	- Migration - Update structure - Update revision status
2.1	- Addenda chapters "Object description" and "Technical data" - Update Firmware status
2.0	- Update structure - Addenda EL7211-0000
1.9	- Update structure - Update Firmware status
1.8	- Addenda chapter "Technical data" - Update Firmware status
1.7	- Addenda chapters "Object description" and "Technical data" - Update Firmware status
1.6	- Addenda chapters "Homing" and "Settings with the Drive Manager" - Update Firmware status
1.5	- Addenda chapter "Operating modes" - Update Firmware status
1.4	- Update chapter "Technical data" - Update chapter "Object description" - Update Firmware status
1.3	- Update chapter "Commissioning without the NC, status word/control word" - Update Firmware status
1.2	- Update chapter "LEDs and connection" - Update Firmware status
1.1	- Addenda description I <sup>2</sup> T model - Addenda to the MDP741 and DS402 profile
1.0	- Addenda - First public issue
0.1	- Provisional documentation for EL72x1

## 2.4 Version identification of EtherCAT devices

### Designation

A Beckhoff EtherCAT device has a 14-digit designation, made up of

- family key
- type
- version
- revision

Example	Family	Type	Version	Revision
EL3314-0000-0016	EL terminal (12 mm, non-pluggable connection level)	3314 (4-channel thermocouple terminal)	0000 (basic type)	0016
ES3602-0010-0017	ES terminal (12 mm, pluggable connection level)	3602 (2-channel voltage measurement)	0010 (high-precision version)	0017
CU2008-0000-0000	CU device	2008 (8-port fast ethernet switch)	0000 (basic type)	0000

## Notes

- The elements mentioned above result in the **technical designation**. EL3314-0000-0016 is used in the example below.
- EL3314-0000 is the order identifier, in the case of “-0000” usually abbreviated to EL3314. “-0016” is the EtherCAT revision.
- The **order identifier** is made up of
  - family key (EL, EP, CU, ES, KL, CX, etc.)
  - type (3314)
  - version (-0000)
- The **revision** -0016 shows the technical progress, such as the extension of features with regard to the EtherCAT communication, and is managed by Beckhoff.  
In principle, a device with a higher revision can replace a device with a lower revision, unless specified otherwise, e.g. in the documentation.  
Associated and synonymous with each revision there is usually a description (ESI, EtherCAT Slave Information) in the form of an XML file, which is available for download from the Beckhoff web site.  
From 2014/01 the revision is shown on the outside of the IP20 terminals, see Fig. “EL5021 EL terminal, standard IP20 IO device with batch number and revision ID (since 2014/01)”.
- The type, version and revision are read as decimal numbers, even if they are technically saved in hexadecimal.

## Identification number

Beckhoff EtherCAT devices from the different lines have different kinds of identification numbers:

### Production lot/batch number/serial number/date code/D number

The serial number for Beckhoff IO devices is usually the 8-digit number printed on the device or on a sticker. The serial number indicates the configuration in delivery state and therefore refers to a whole production batch, without distinguishing the individual modules of a batch.

Structure of the serial number: **KK YY FF HH**

KK - week of production (CW, calendar week)  
 YY - year of production  
 FF - firmware version  
 HH - hardware version

Example with

Ser. no.: 12063A02: 12 - production week 12 06 - production year 2006 3A - firmware version 3A 02 - hardware version 02

Exceptions can occur in the **IP67 area**, where the following syntax can be used (see respective device documentation):

Syntax: D ww yy x y z u

D - prefix designation  
 ww - calendar week  
 yy - year  
 x - firmware version of the bus PCB

y - hardware version of the bus PCB  
z - firmware version of the I/O PCB  
u - hardware version of the I/O PCB

Example: D.22081501 calendar week 22 of the year 2008 firmware version of bus PCB: 1 hardware version of bus PCB: 5 firmware version of I/O PCB: 0 (no firmware necessary for this PCB) hardware version of I/O PCB: 1

### Unique serial number/ID, ID number

In addition, in some series each individual module has its own unique serial number.

See also the further documentation in the area

- IP67: [EtherCAT Box](#)
- Safety: [TwinSafe](#)
- Terminals with factory calibration certificate and other measuring terminals

### Examples of markings



Fig. 1: EL5021 EL terminal, standard IP20 IO device with serial/ batch number and revision ID (since 2014/01)



Fig. 2: EK1100 EtherCAT coupler, standard IP20 IO device with serial/ batch number



Fig. 3: CU2016 switch with serial/ batch number

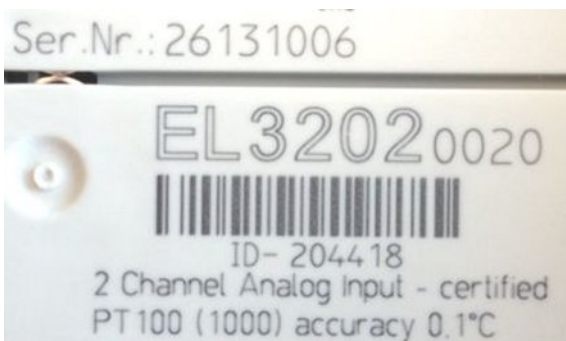


Fig. 4: EL3202-0020 with serial/ batch number 26131006 and unique ID-number 204418

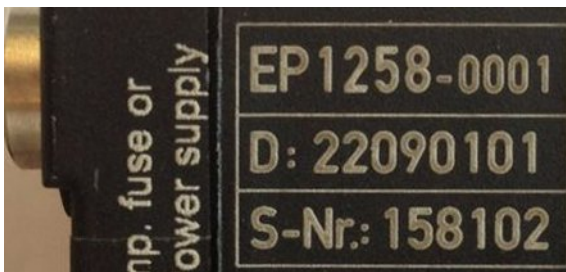


Fig. 5: EP1258-0001 IP67 EtherCAT Box with batch number/ date code 22090101 and unique serial number 158102

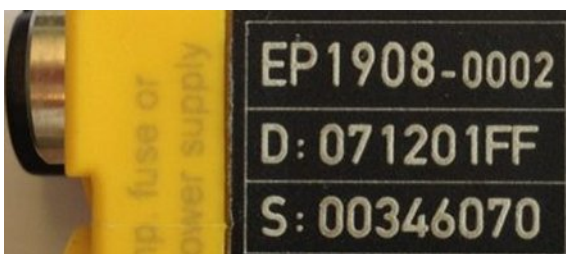


Fig. 6: EP1908-0002 IP67 EtherCAT Safety Box with batch number/ date code 071201FF and unique serial number 00346070





Fig. 7: EL2904 IP20 safety terminal with batch number/ date code 50110302 and unique serial number 00331701



Fig. 8: ELM3604-0002 terminal with unique ID number (QR code) 100001051 and serial/ batch number 44160201

### 3 Product overview

#### 3.1 Introduction EL72x1

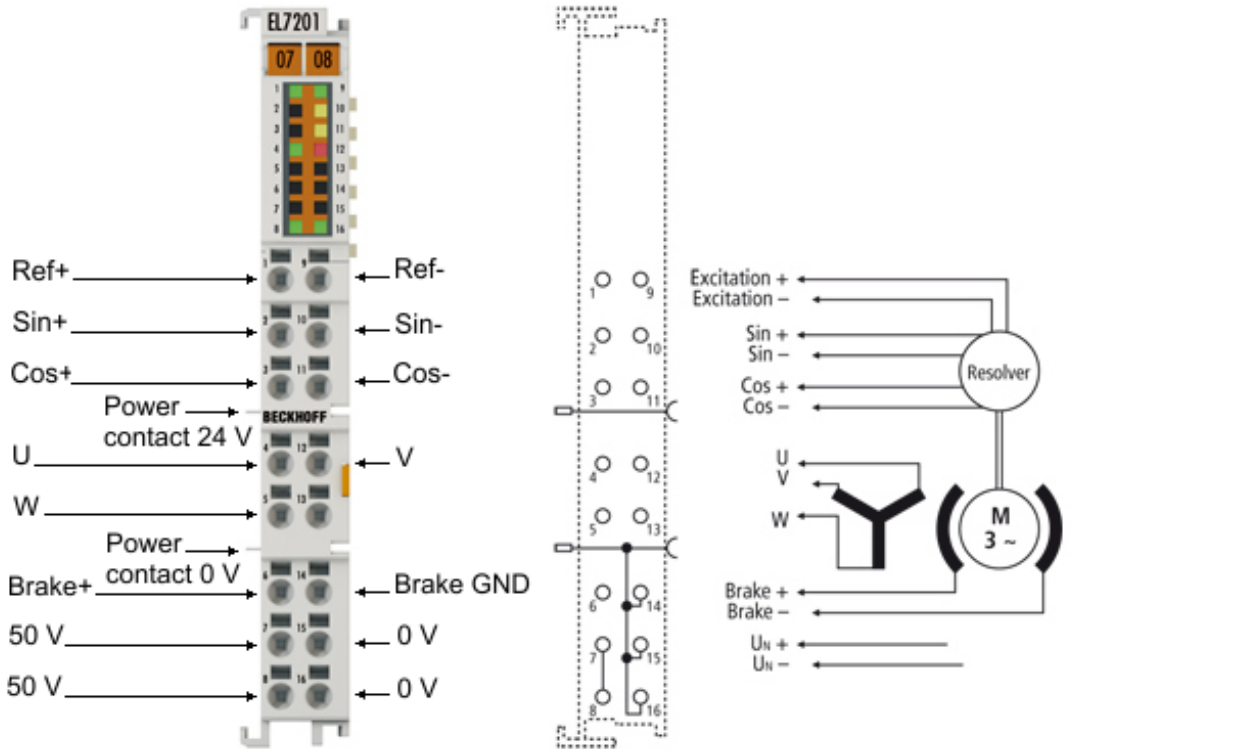


Fig. 9: EL7201

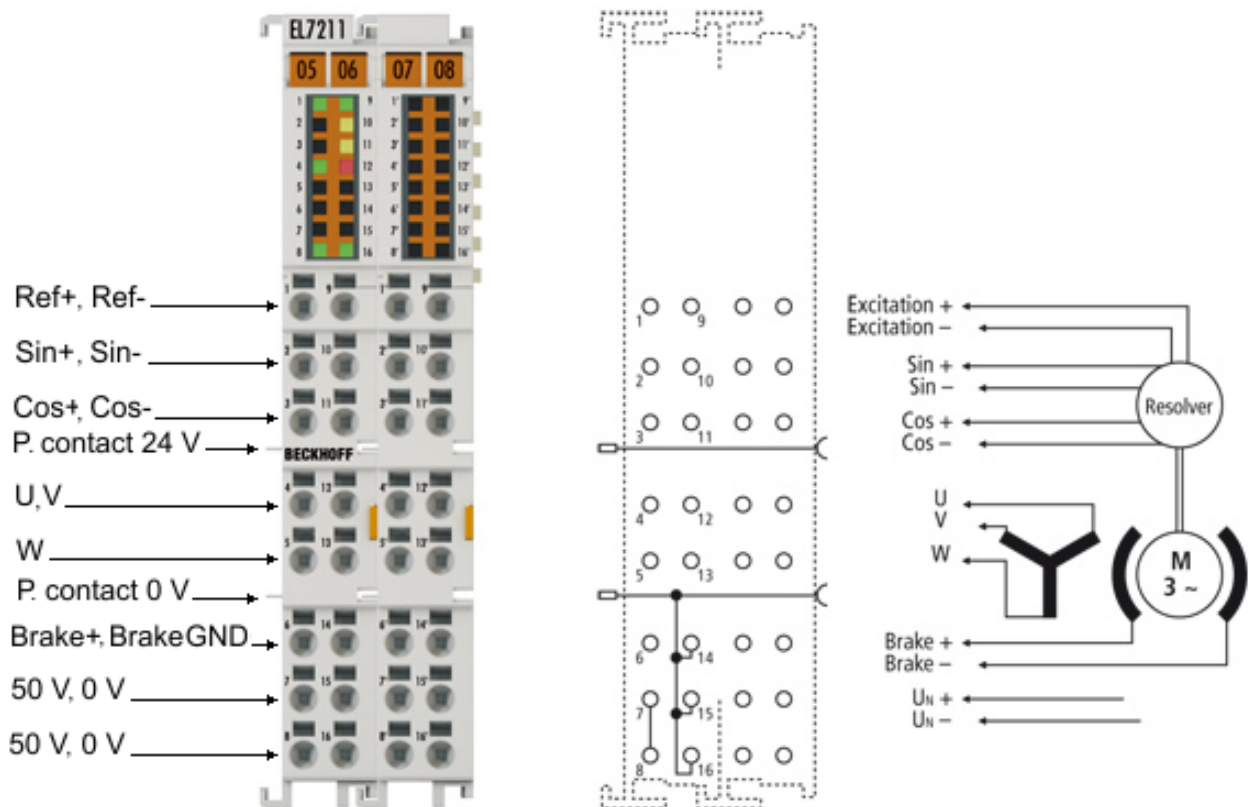


Fig. 10: EL7211

## Servomotor terminals, 50 V<sub>DC</sub>




The servomotor EtherCAT Terminals EL7201-0000 (MDP742 profile, 50 V<sub>DC</sub>, 2.8 A<sub>rms</sub>) / EL7201-0001 (DS402 profile, 50 V<sub>DC</sub>, 2.8 A<sub>rms</sub>) and EL7211-0000 (MDP742 profile, 50 V<sub>DC</sub>, 4.5 A<sub>rms</sub>) / EL7211-0001 (DS402 profile, 50 V<sub>DC</sub>, 4.5 A<sub>rms</sub>) with integrated resolver interface offer high servo performance with a very compact design. The EL72x1 was designed for the motor types of the AM31xx and AM81xx series from Beckhoff Automation.

The fast control technology, based on field-orientated current and PI speed control, supports fast and highly dynamic positioning tasks. The monitoring of numerous parameters, such as overvoltage and undervoltage, overcurrent, terminal temperature or motor load via the calculation of a I<sup>2</sup>T model, offers maximum operational reliability.

EtherCAT, as a high-performance system communication, and CAN-over-EtherCAT (CoE), as the application layer, enable ideal interfacing with PC-based control technology.

The latest power semiconductors guarantee minimum power loss and enable feedback into the DC link when braking.

The LEDs indicate status, warning and error messages as well as possibly active limitations.

	<b>Recommended TwinCAT version</b>
Note	In order to be able to utilize the full power of the EL72x1, we recommend using the EL72x1 with TwinCAT 2.11 R3 or higher!
	<b>Mandatory hardware</b>
Note	The EL72x1 must be operated with a real-time capable computer and distributed clocks.
	<b>Approved motors</b>
Note	Trouble-free operation can only be guaranteed with motors approved by Beckhoff.

## Quick links

### Connection instructions

- Chapter "Mounting and wiring",
  - [LEDs and connection](#) [► 46]
  - [Shielding concept](#) [► 42]
  - [Notes on current measurement via Hall sensor](#) [► 45]

### Configuration instructions

- Chapter "Commissioning",
  - [Configuration of the main parameters](#) [► 85]
- Chapter "Configuration with the TwinCAT System Manager",
  - [Object description and parameterization](#) [► 136]

### Application example

- Chapter "Commissioning",
  - [Application example](#) [► 96]

## 3.2 Technical data

Technical data	EL7201-000x	EL7211-000x
Number of outputs	3 motor phases, 2 resolver excitations, 2 motor holding brakes	
Number of inputs	2 (4) DC link voltages, 4 resolvers	
DC link supply voltage	8...50 V <sub>DC</sub>	
Supply voltage	24 V <sub>DC</sub> via the power contacts, via the E-bus	
Output current	2.8 A <sub>rms</sub> (without fan cartridge ZB8610) 4.5 A <sub>rms</sub> (with fan cartridge ZB8610)	4.5 A <sub>rms</sub>
Peak current	5.7 A <sub>rms</sub> for 1 second 2.8 A <sub>rms</sub> (without fan cartridge ZB8610) 9 A <sub>rms</sub> for 1 second 2.8 A <sub>rms</sub> (with fan cartridge ZB8610)	9 A <sub>rms</sub> for 1 second
Rated power	170 W (without fan cartridge ZB8610) 276 W (with fan cartridge ZB8610)	276 W
Motor holding brake output voltage	24 V (+ 6 %, - 10 %)	
Max. motor holding brake output current	max. 0.5 A	
Load type	Permanent magnet synchronous motors, inductive (series AM31xx)	
PWM switching frequency	16 kHz	
Current controller frequency	double PWM switching frequency	
Velocity controller frequency	16 kHz	
Diagnostics LED	Status, warning, errors and limits	
Power loss	typ. 1.6 W	
Current consumption via E-bus	typ. 120 mA	
Current consumption from the 24 V	typ. 50 mA + holding brake	
Supports <a href="#">NoCoeStorage [► 25]</a> function	Yes	
Reverse polarity protection	24 V power supply yes, with leakage capacitor 50 V power supply yes, with leakage capacitor	
Fuse protection	24 V power supply 10 A 50 V power supply 10 A	
Electrical isolation	500 V (E-bus/signal voltage)	
Possible EtherCAT cycle times	Multiple of 125 µs	
Configuration	no address setting required configuration via TwinCAT System Manager	
Weight	approx. 60 g	approx. 95 g
Permissible ambient temperature range during operation	0°C ... + 55°C	
Permissible ambient temperature range during storage	-25°C ... + 85°C	
Permissible relative humidity	95%, no condensation	
Dimensions (W x H x D)	approx. 15 mm x 100 mm x 70 mm (width aligned: 12 mm)	approx. 27 mm x 100 mm x 70 mm (width aligned: 24 mm)
<a href="#">Mounting [► 31]</a>	on 35 mm mounting rail conforms to EN 60715	
Vibration/shock resistance	conforms to EN 60068-2-6 / EN 60068-2-27, see also <a href="#">installation instructions [► 34]</a> for enhanced mechanical load capacity	
EMC immunity/emission	conforms to EN 61000-6-2 / EN 61000-6-4 according to IEC/EN 61800-3	
EMC category	Category C3 - standard Category C2, C1 - auxiliary filter required	
Protection class	IP20	
Installation position	without fan cartridge ZB8610: standard installing position with fan cartridge ZB8610: standard installing position, other installing positions (example 1 & 2) see <a href="#">notice [► 39]</a>	
Approval	CE cULus <a href="#">[► 178]</a>	

### 3.3 Technology

The very compact EL72x1 servomotor terminal integrates a complete servo drive for servomotors up to 276 W.

#### Servomotor

The servomotor is an electrical motor. Together with a servo amplifier the servomotor forms a servo drive. The servomotor is operated in a closed control loop with position, torque or speed control.

The servo terminal EL72x1 supports control of permanent magnet synchronous motors. These consist of 3 coils which are offset by  $120^\circ$  and a permanent magnet rotor.

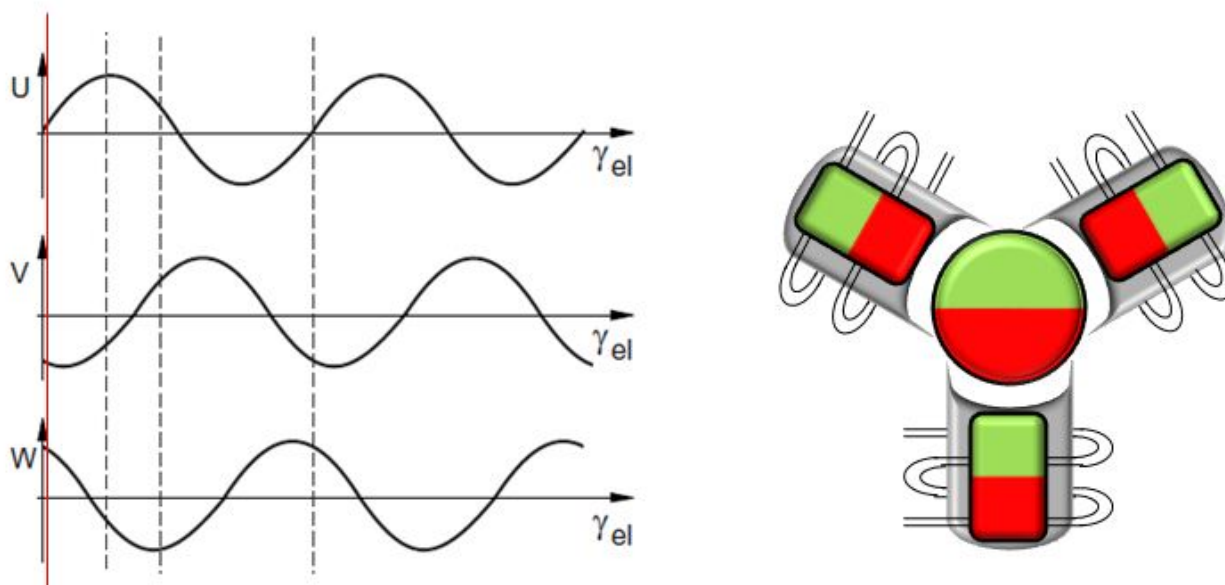


Fig. 11: Three synchronous motor coils, each offset by  $120^\circ$

Servomotors particularly demonstrate their advantages in highly dynamic and precise positioning applications:

- very high positioning accuracy in applications where maximum precision is required through integrated position feedback
- high efficiency and high acceleration capacity
- servomotors are overload-proof and therefore have far greater dynamics than stepper motors, for example.
- load-independent high torque right up to the higher speed ranges
- maintenance requirements reduced to a minimum

The EtherCAT servomotor terminal offers users the option to configure compact and cost-effective systems without having to give up the benefits of a servomotor.

#### The Beckhoff servo terminal

The EL72x1 is a fully capable servo drive for direct connection to servomotors in the lower performance range. There is no need for further modules or cabling to make a connection to the control system. This results in a very compact control system solution. The E-Bus connection of the EL72x1 makes the full functionality of EtherCAT available to the user. This includes in particular the short cycle time, low jitter, simultaneity and easy diagnostics provided by EtherCAT. With this performance from EtherCAT the dynamics that a servomotor can achieve can be used optimally.

A rated voltage of max.  $50 V_{DC}$  and a rated current of max. 4.5 A enable the user to drive a servomotor with a rating of up to 276 W using the EL7211. Permanent magnet synchronous motors with a rated current of up to 4.5 A can be connected as loads. The monitoring of numerous parameters, such as overvoltage and

undervoltage, overcurrent, terminal temperature or motor load, offers maximum operational reliability. Modern power semiconductors guarantee minimum power loss and enable feedback into the DC link when braking.

Beckhoff sets new benchmarks with regard to size with the integration of a fully-featured servo drive in a standard EtherCAT terminal – the EL7201 – with a width of just 12 mm. This small manufactured size is possible thanks to the latest semiconductor technology and the resulting very high power factor. And yet, despite the small dimensions, nothing has to be sacrificed.

The integrated fast control technology, with a field-orientated current and PI speed control, supports highly dynamic positioning tasks. Apart from the direct connection of motor and resolver, the connection of a motor holding brake is also possible.

### Connection to the control system

A further big advantage of the EL72x1 is the easy incorporation into the control solution. The complete integration into the control system simplifies commissioning and parameterization. As with all the other Beckhoff terminals, the EL72x1 is simply inserted into the terminal network. Then the full terminal network can be scanned by the TwinCAT System Manager or manually added by the application engineer. In the System Manager the EL72x1 can be linked with the TwinCAT NC and parameterized.

### Scalable motion solution

The servo terminal complements the product range of compact drive technology for Beckhoff I/O systems that are available for stepper motors, AC and DC motors. With the EL72x1, the range of servo drives becomes even more finely scalable: from the miniature servo drive up to 200 W in the EtherCAT Terminal through to the AX5000 servo drive with 118 KW, Beckhoff offers a wide range including the servomotors. The AM31xx series was specially developed for the servomotor terminal EL72x1.

### Thermal I<sup>2</sup>T motor model

The thermal I<sup>2</sup>T motor model represents the thermal behavior of the motor winding taking into account the absolute thermal resistance  $R_{th}$  and the thermal capacity  $C_{th}$  of motor and the stator winding.

The model assumes that the motor reaches its maximum continuous operating temperature  $T_{nom}$  during continuous operation with rated current  $I_{nom}$ . This temperature corresponds to 100% motor load. During operation at rated current the motor model reaches a load of 63% after a time of  $\tau_{th}=R_{th}\cdot C_{th}$  and slowly reaches its continuous operating temperature.

If the motor is operated with a current that is greater than the rated current, the model reaches 100% load more quickly.

If the load of the I<sup>2</sup>T model exceeds 100%, the requested set current is limited to the rated current, in order to protect the motor winding thermally. The load reduces to a maximum of 100%. If the current falls below the rated current, the load falls below 100% and the set current limitation is cancelled.

For a motor that has been cooled to ambient temperature, the time for reaching 100% load with a set current that exceeds the rated current can be estimated with  $T_{th}\cdot I_{nom}^2/I_{actual}^2$ .

The actual load must be known for exact calculation of the time when the 100% load threshold is exceeded.

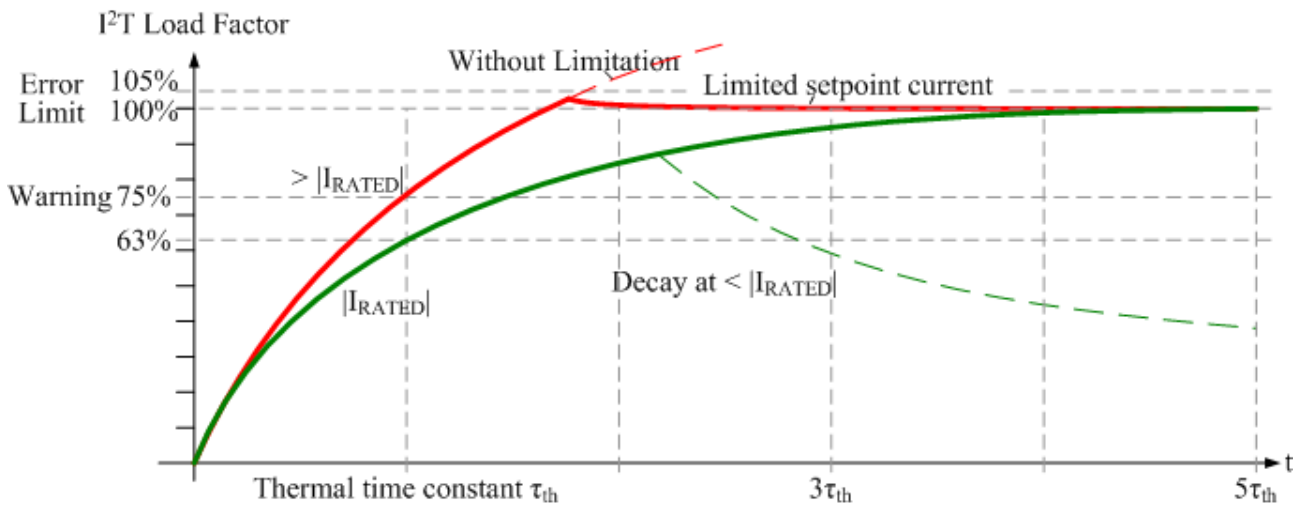


Fig. 12: Limitation to the rated motor current

### 3.4 Start-up

For commissioning:

- mount the EL72x1-000x as described in the chapter [Mounting and wiring](#) [▶ 31]
- configure the EL72x1-000x in TwinCAT as described in the chapter [Commissioning](#) [▶ 51].



## 4 Basics communication

### 4.1 EtherCAT basics

Please refer to the chapter [EtherCAT System Documentation](#) for the EtherCAT fieldbus basics.

### 4.2 EtherCAT cabling – wire-bound

The cable length between two EtherCAT devices must not exceed 100 m. This results from the FastEthernet technology, which, above all for reasons of signal attenuation over the length of the cable, allows a maximum link length of 5 + 90 + 5 m if cables with appropriate properties are used. See also the [Design recommendations for the infrastructure for EtherCAT/Ethernet](#).

#### Cables and connectors

For connecting EtherCAT devices only Ethernet connections (cables + plugs) that meet the requirements of at least category 5 (Cat5) according to EN 50173 or ISO/IEC 11801 should be used. EtherCAT uses 4 wires for signal transfer.

EtherCAT uses RJ45 plug connectors, for example. The pin assignment is compatible with the Ethernet standard (ISO/IEC 8802-3).

Pin	Color of conductor	Signal	Description
1	yellow	TD +	Transmission Data +
2	orange	TD -	Transmission Data -
3	white	RD +	Receiver Data +
6	blue	RD -	Receiver Data -

Due to automatic cable detection (auto-crossing) symmetric (1:1) or cross-over cables can be used between EtherCAT devices from Beckhoff.



**Note**

#### Recommended cables

Suitable cables for the connection of EtherCAT devices can be found on the Beckhoff website!

#### E-Bus supply

A bus coupler can supply the EL terminals added to it with the E-bus system voltage of 5 V; a coupler is thereby loadable up to 2 A as a rule (see details in respective device documentation).

Information on how much current each EL terminal requires from the E-bus supply is available online and in the catalogue. If the added terminals require more current than the coupler can supply, then power feed terminals (e.g. [EL9410](#)) must be inserted at appropriate places in the terminal strand.

The pre-calculated theoretical maximum E-Bus current is displayed in the TwinCAT System Manager. A shortfall is marked by a negative total amount and an exclamation mark; a power feed terminal is to be placed before such a position.



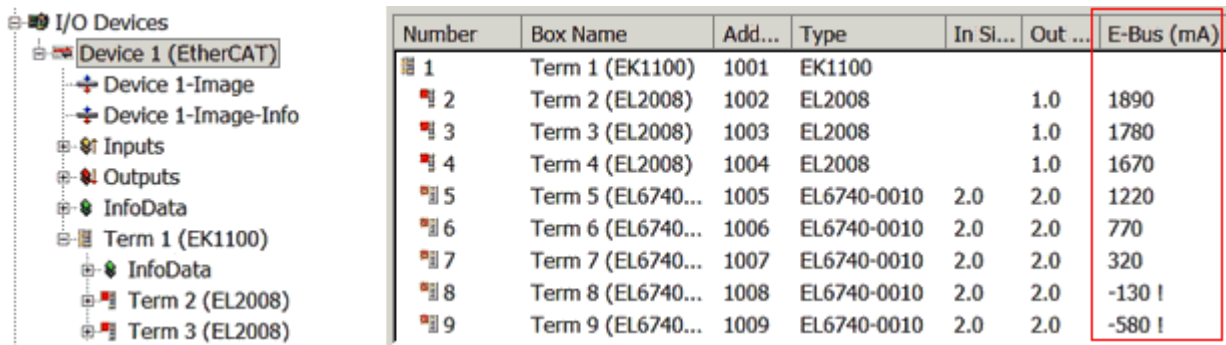



Fig. 13: System manager current calculation

 <b>Attention</b>	<p><b>Malfunction possible!</b></p> <p>The same ground potential must be used for the E-Bus supply of all EtherCAT terminals in a terminal block!</p>
---	---

### 4.3 General notes for setting the watchdog

ELxxx terminals are equipped with a safety feature (watchdog) that switches off the outputs after a specifiable time e.g. in the event of an interruption of the process data traffic, depending on the device and settings, e.g. in OFF state.

The EtherCAT slave controller (ESC) in the EL2xxx terminals features 2 watchdogs:

- SM watchdog (default: 100 ms)
- PDI watchdog (default: 100 ms)

#### SM watchdog (SyncManager Watchdog)

The SyncManager watchdog is reset after each successful EtherCAT process data communication with the terminal. If no EtherCAT process data communication takes place with the terminal for longer than the set and activated SM watchdog time, e.g. in the event of a line interruption, the watchdog is triggered and the outputs are set to FALSE. The OP state of the terminal is unaffected. The watchdog is only reset after a successful EtherCAT process data access. Set the monitoring time as described below.

The SyncManager watchdog monitors correct and timely process data communication with the ESC from the EtherCAT side.

#### PDI watchdog (Process Data Watchdog)

If no PDI communication with the EtherCAT slave controller (ESC) takes place for longer than the set and activated PDI watchdog time, this watchdog is triggered.

PDI (Process Data Interface) is the internal interface between the ESC and local processors in the EtherCAT slave, for example. The PDI watchdog can be used to monitor this communication for failure.

The PDI watchdog monitors correct and timely process data communication with the ESC from the application side.

The settings of the SM- and PDI-watchdog must be done for each slave separately in the TwinCAT System Manager.

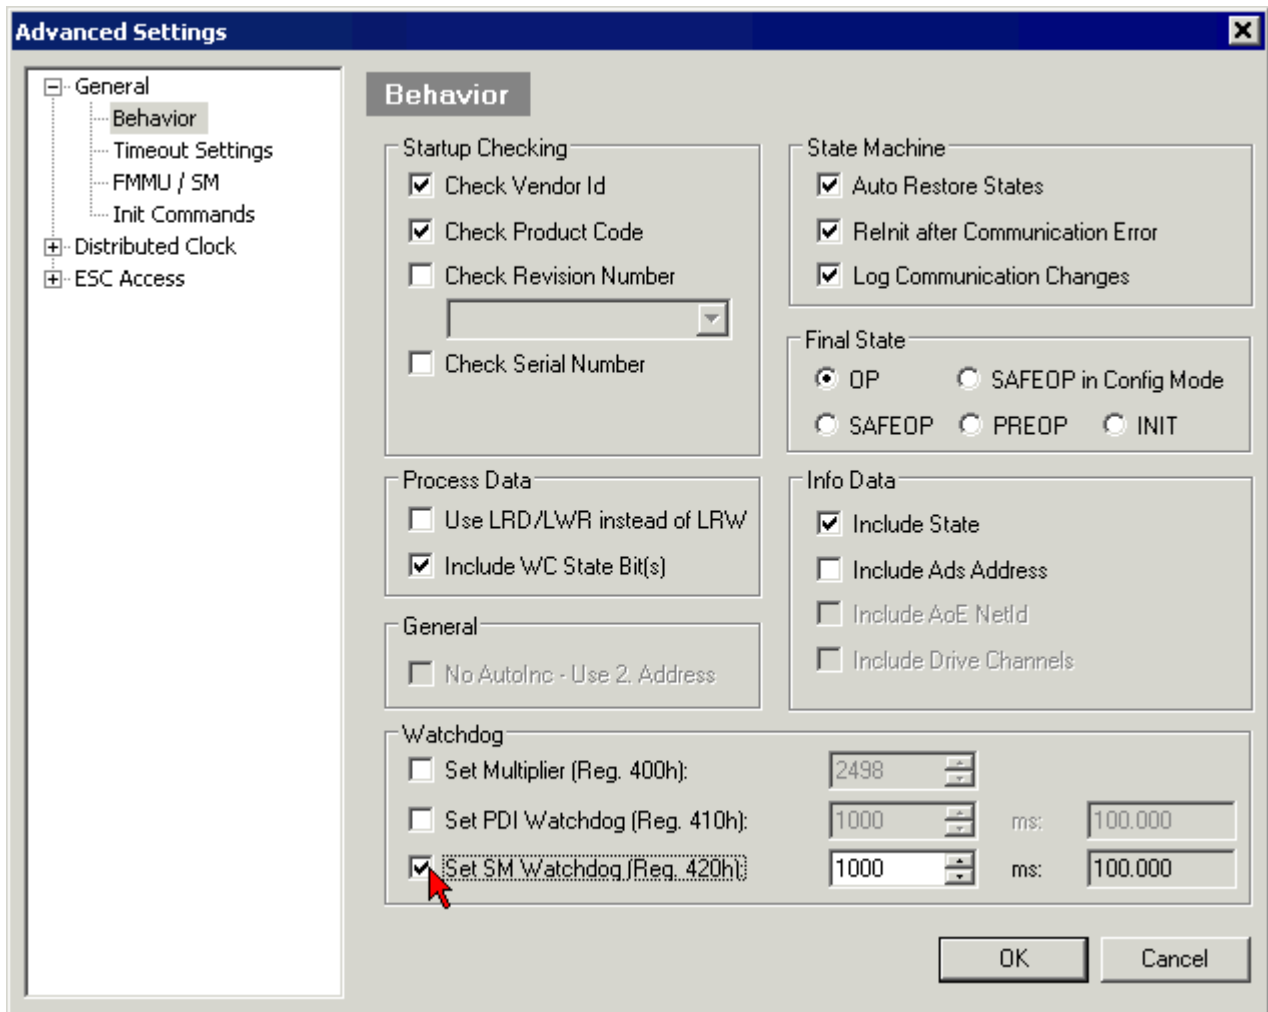


Fig. 14: EtherCAT tab -> Advanced Settings -> Behavior -> Watchdog

Notes:

- the multiplier is valid for both watchdogs.
- each watchdog has its own timer setting, the outcome of this in summary with the multiplier is a resulting time.
- Important: the multiplier/timer setting is only loaded into the slave at the start up, if the checkbox is activated.  
If the checkbox is not activated, nothing is downloaded and the ESC settings remain unchanged.

**Multiplier**

Multiplier

Both watchdogs receive their pulses from the local terminal cycle, divided by the watchdog multiplier:

$$1/25 \text{ MHz} * (\text{watchdog multiplier} + 2) = 100 \text{ } \mu\text{s} \text{ (for default setting of 2498 for the multiplier)}$$

The standard setting of 1000 for the SM watchdog corresponds to a release time of 100 ms.


The value in multiplier + 2 corresponds to the number of basic 40 ns ticks representing a watchdog tick. The multiplier can be modified in order to adjust the watchdog time over a larger range.


**Example "Set SM watchdog"**

This checkbox enables manual setting of the watchdog times. If the outputs are set and the EtherCAT communication is interrupted, the SM watchdog is triggered after the set time and the outputs are erased. This setting can be used for adapting a terminal to a slower EtherCAT master or long cycle times. The default SM watchdog setting is 100 ms. The setting range is 0..65535. Together with a multiplier with a range of 1..65535 this covers a watchdog period between 0..~170 seconds.

**Calculation**

Multiplier = 2498 → watchdog base time = 1 / 25 MHz \* (2498 + 2) = 0.0001 seconds = 100 μs  
 SM watchdog = 10000 → 10000 \* 100 μs = 1 second watchdog monitoring time

 <b>CAUTION</b>	<p><b>Undefined state possible!</b></p> <p>The function for switching off of the SM watchdog via SM watchdog = 0 is only implemented in terminals from version -0016. In previous versions this operating mode should not be used.</p>
---	--

 <b>CAUTION</b>	<p><b>Damage of devices and undefined state possible!</b></p> <p>If the SM watchdog is activated and a value of 0 is entered the watchdog switches off completely. This is the deactivation of the watchdog! Set outputs are NOT set in a safe state, if the communication is interrupted.</p>
---	--

## 4.4 EtherCAT State Machine

The state of the EtherCAT slave is controlled via the EtherCAT State Machine (ESM). Depending upon the state, different functions are accessible or executable in the EtherCAT slave. Specific commands must be sent by the EtherCAT master to the device in each state, particularly during the bootup of the slave.

A distinction is made between the following states:

- Init
- Pre-Operational
- Safe-Operational and
- Operational
- Boot

The regular state of each EtherCAT slave after bootup is the OP state.

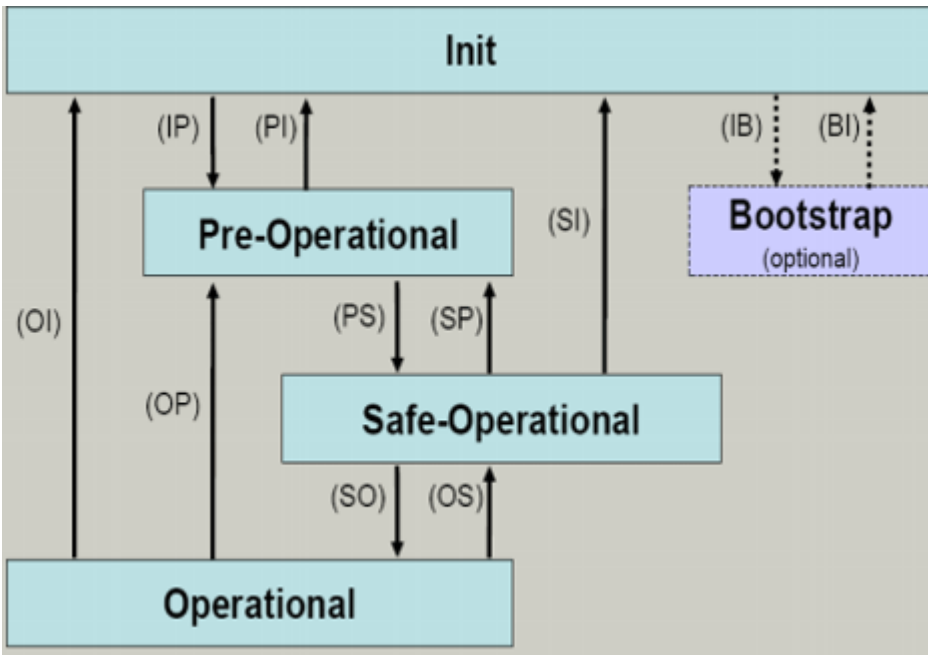


Fig. 15: States of the EtherCAT State Machine

**Init**

After switch-on the EtherCAT slave in the *Init* state. No mailbox or process data communication is possible. The EtherCAT master initializes sync manager channels 0 and 1 for mailbox communication.

**Pre-Operational (Pre-Op)**

During the transition between *Init* and *Pre-Op* the EtherCAT slave checks whether the mailbox was initialized correctly.

In *Pre-Op* state mailbox communication is possible, but not process data communication. The EtherCAT master initializes the sync manager channels for process data (from sync manager channel 2), the FMMU channels and, if the slave supports configurable mapping, PDO mapping or the sync manager PDO assignment. In this state the settings for the process data transfer and perhaps terminal-specific parameters that may differ from the default settings are also transferred.

**Safe-Operational (Safe-Op)**

During transition between *Pre-Op* and *Safe-Op* the EtherCAT slave checks whether the sync manager channels for process data communication and, if required, the distributed clocks settings are correct. Before it acknowledges the change of state, the EtherCAT slave copies current input data into the associated DP-RAM areas of the EtherCAT slave controller (ECSC).

In *Safe-Op* state mailbox and process data communication is possible, although the slave keeps its outputs in a safe state, while the input data are updated cyclically.



**Note**

**Outputs in SAFEOP state**

The default set `watchdog` [► 21] monitoring sets the outputs of the module in a safe state - depending on the settings in SAFEOP and OP - e.g. in OFF state. If this is prevented by deactivation of the watchdog monitoring in the module, the outputs can be switched or set also in the SAFEOP state.

**Operational (Op)**

Before the EtherCAT master switches the EtherCAT slave from *Safe-Op* to *Op* it must transfer valid output data.

In the *Op* state the slave copies the output data of the masters to its outputs. Process data and mailbox communication is possible.

## Boot

In the *Boot* state the slave firmware can be updated. The *Boot* state can only be reached via the *Init* state.

In the *Boot* state mailbox communication via the *file access over EtherCAT* (FoE) protocol is possible, but no other mailbox communication and no process data communication.

## 4.5 CoE Interface

### General description

The CoE interface (CANopen over EtherCAT) is used for parameter management of EtherCAT devices. EtherCAT slaves or the EtherCAT master manage fixed (read only) or variable parameters which they require for operation, diagnostics or commissioning.

CoE parameters are arranged in a table hierarchy. In principle, the user has read access via the fieldbus. The EtherCAT master (TwinCAT System Manager) can access the local CoE lists of the slaves via EtherCAT in read or write mode, depending on the attributes.

Different CoE parameter types are possible, including string (text), integer numbers, Boolean values or larger byte fields. They can be used to describe a wide range of features. Examples of such parameters include manufacturer ID, serial number, process data settings, device name, calibration values for analog measurement or passwords.

The order is specified in 2 levels via hexadecimal numbering: (main)index, followed by subindex. The value ranges are

- Index: 0x0000 ...0xFFFF (0...65535<sub>dez</sub>)
- SubIndex: 0x00...0xFF (0...255<sub>dez</sub>)

A parameter localized in this way is normally written as 0x8010:07, with preceding "x" to identify the hexadecimal numerical range and a colon between index and subindex.

The relevant ranges for EtherCAT fieldbus users are:

- 0x1000: This is where fixed identity information for the device is stored, including name, manufacturer, serial number etc., plus information about the current and available process data configurations.
- 0x8000: This is where the operational and functional parameters for all channels are stored, such as filter settings or output frequency.

Other important ranges are:

- 0x4000: In some EtherCAT devices the channel parameters are stored here (as an alternative to the 0x8000 range).
- 0x6000: Input PDOs ("input" from the perspective of the EtherCAT master)
- 0x7000: Output PDOs ("output" from the perspective of the EtherCAT master)



#### Note

#### Availability

Not every EtherCAT device must have a CoE list. Simple I/O modules without dedicated processor usually have no variable parameters and therefore no CoE list.

If a device has a CoE list, it is shown in the TwinCAT System Manager as a separate tab with a listing of the elements:

Index	Name	Flags	Value
1000	Device type	RO	0x00FA1389 (16389001)
1008	Device name	RO	EL2502-0000
1009	Hardware version	RO	
100A	Software version	RO	
⊕ 1011:0	Restore default parameters	RO	> 1 <
⊖ 1018:0	Identity	RO	> 4 <
1018:01	Vendor ID	RO	0x00000002 (2)
1018:02	Product code	RO	0x09C63052 (163983442)
1018:03	Revision	RO	0x00130000 (1245184)
1018:04	Serial number	RO	0x00000000 (0)
⊕ 10F0:0	Backup parameter handling	RO	> 1 <
⊕ 1400:0	PwM RxDPO-Par Ch.1	RO	> 6 <
⊕ 1401:0	PwM RxDPO-Par Ch.2	RO	> 6 <
⊕ 1402:0	PwM RxDPO-Par h.1 Ch.1	RO	> 6 <
⊕ 1403:0	PwM RxDPO-Par h.1 Ch.2	RO	> 6 <
⊕ 1600:0	PwM RxDPO-Map Ch.1	RO	> 1 <

Fig. 16: "CoE Online " tab

The figure above shows the CoE objects available in device "EL2502", ranging from 0x1000 to 0x1600. The subindices for 0x1018 are expanded.

### Data management and function "NoCoeStorage"

Some parameters, particularly the setting parameters of the slave, are configurable and writeable. This can be done in write or read mode

- via the System Manager (Fig. "CoE Online " tab) by clicking  
This is useful for commissioning of the system/slaves. Click on the row of the index to be parameterised and enter a value in the "SetValue" dialog.
- from the control system/PLC via ADS, e.g. through blocks from the TcEtherCAT.lib library  
This is recommended for modifications while the system is running or if no System Manager or operating staff are available.

i  
**Note**

### Data management

If slave CoE parameters are modified online, Beckhoff devices store any changes in a fail-safe manner in the EEPROM, i.e. the modified CoE parameters are still available after a restart.  
The situation may be different with other manufacturers.

An EEPROM is subject to a limited lifetime with respect to write operations. From typically 100,000 write operations onwards it can no longer be guaranteed that new (changed) data are reliably saved or are still readable. This is irrelevant for normal commissioning. However, if CoE parameters are continuously changed via ADS at machine runtime, it is quite possible for the lifetime limit to be reached. Support for the NoCoeStorage function, which suppresses the saving of changed CoE values, depends on the firmware version. Please refer to the technical data in this documentation as to whether this applies to the respective device.

- If the function is supported: the function is activated by entering the code word 0x12345678 once in CoE 0xF008 and remains active as long as the code word is not changed. After switching the device on it is then inactive. Changed CoE values are not saved in the EEPROM and can thus be changed any number of times.
- Function is not supported: continuous changing of CoE values is not permissible in view of the lifetime limit.

i  
**Note**

### Startup list

Changes in the local CoE list of the terminal are lost if the terminal is replaced. If a terminal is replaced with a new Beckhoff terminal, it will have the default settings. It is therefore advisable to link all changes in the CoE list of an EtherCAT slave with the Startup list of the slave, which is processed whenever the EtherCAT fieldbus is started. In this way a replacement EtherCAT slave can automatically be parameterized with the specifications of the user.

If EtherCAT slaves are used which are unable to store local CoE values permanently, the Startup list must be used.

**Recommended approach for manual modification of CoE parameters**

- Make the required change in the System Manager  
The values are stored locally in the EtherCAT slave
- If the value is to be stored permanently, enter it in the Startup list.  
The order of the Startup entries is usually irrelevant.

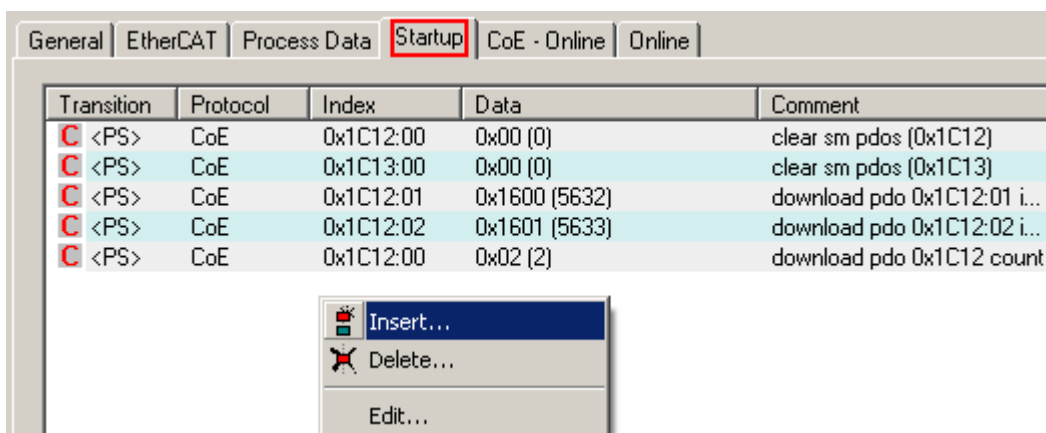


Fig. 17: Startup list in the TwinCAT System Manager

The Startup list may already contain values that were configured by the System Manager based on the ESI specifications. Additional application-specific entries can be created.

**Online/offline list**

While working with the TwinCAT System Manager, a distinction has to be made whether the EtherCAT device is "available", i.e. switched on and linked via EtherCAT and therefore **online**, or whether a configuration is created **offline** without connected slaves.

In both cases a CoE list as shown in Fig. "CoE online' tab" is displayed. The connectivity is shown as offline/online.

- If the slave is offline
  - The offline list from the ESI file is displayed. In this case modifications are not meaningful or possible.
  - The configured status is shown under Identity.
  - No firmware or hardware version is displayed, since these are features of the physical device.
  - **Offline** is shown in red.

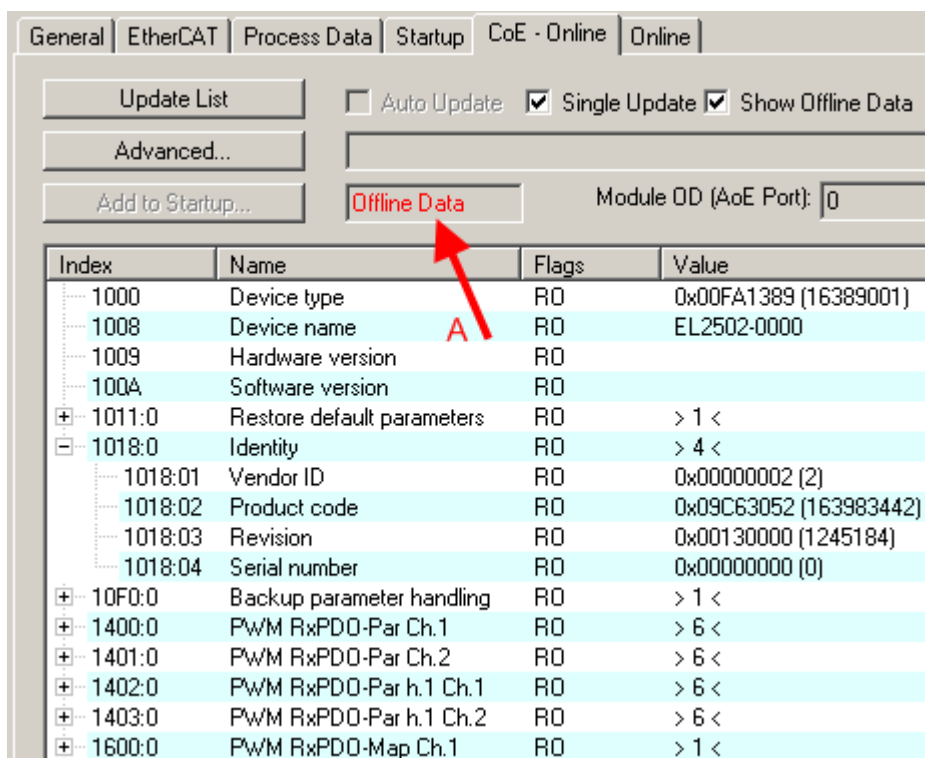


Fig. 18: Offline list

- If the slave is online
  - The actual current slave list is read. This may take several seconds, depending on the size and cycle time.
  - The actual identity is displayed
  - The firmware and hardware version of the equipment according to the electronic information is displayed
  - **Online** is shown in green.



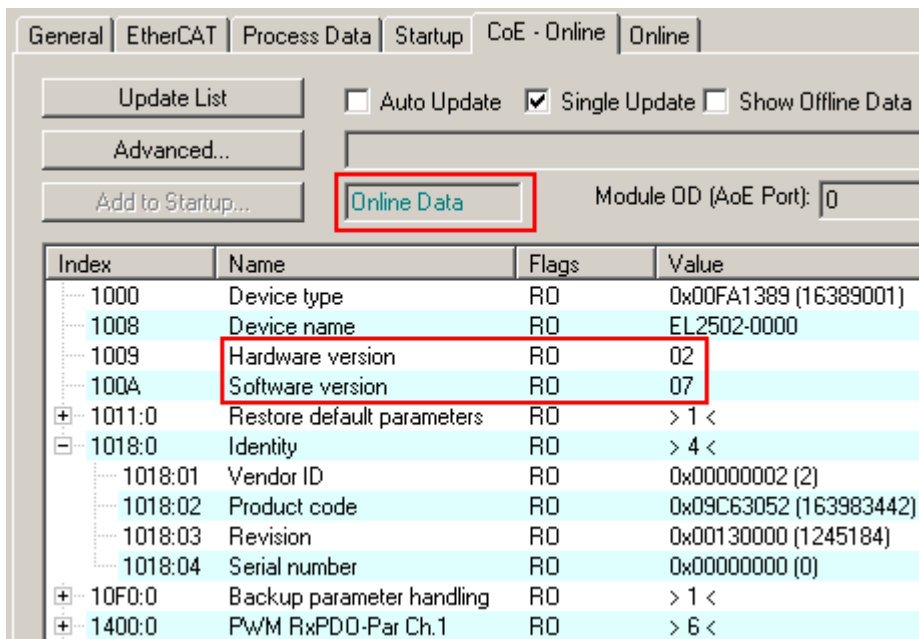


Fig. 19: Online list

**Channel-based order**

The CoE list is available in EtherCAT devices that usually feature several functionally equivalent channels. For example, a 4-channel analog 0..10 V input terminal also has 4 logical channels and therefore 4 identical sets of parameter data for the channels. In order to avoid having to list each channel in the documentation, the placeholder "n" tends to be used for the individual channel numbers.

In the CoE system 16 indices, each with 255 subindices, are generally sufficient for representing all channel parameters. The channel-based order is therefore arranged in  $16_{dec}/10_{hex}$  steps. The parameter range 0x8000 exemplifies this:

- Channel 0: parameter range 0x8000:00 ... 0x800F:255
- Channel 1: parameter range 0x8010:00 ... 0x801F:255
- Channel 2: parameter range 0x8020:00 ... 0x802F:255
- ...

This is generally written as 0x80n0.

Detailed information on the CoE interface can be found in the [EtherCAT system documentation](#) on the Beckhoff website.

## 4.6 Distributed Clock


The distributed clock represents a local clock in the EtherCAT slave controller (ESC) with the following characteristics:

- Unit *1 ns*
- Zero point *1.1.2000 00:00*
- Size *64 bit* (sufficient for the next 584 years; however, some EtherCAT slaves only offer 32-bit support, i.e. the variable overflows after approx. 4.2 seconds)
- The EtherCAT master automatically synchronizes the local clock with the master clock in the EtherCAT bus with a precision of < 100 ns.

For detailed information please refer to the [EtherCAT system description](#).

## 5 Installation

### 5.1 Installation on mounting rails

 <b>WARNING</b>	<p><b>Risk of electric shock and damage of device!</b></p> <p>Bring the bus terminal system into a safe, powered down state before starting installation, disassembly or wiring of the Bus Terminals!</p>
---	---

**Assembly**

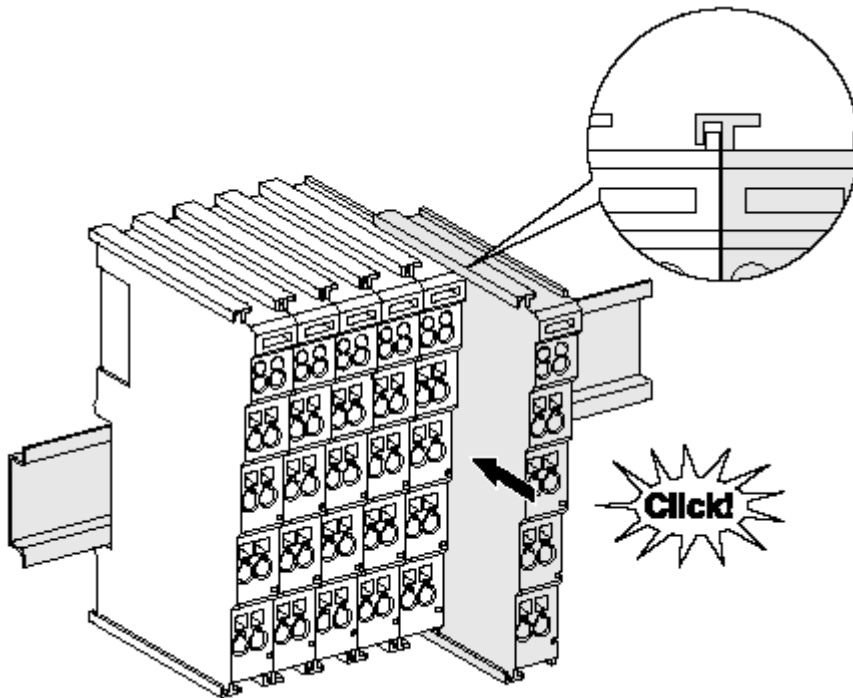



Fig. 20: Attaching on mounting rail

The Bus Coupler and Bus Terminals are attached to commercially available 35 mm mounting rails (DIN rails according to EN 60715) by applying slight pressure:

1. First attach the Fieldbus Coupler to the mounting rail.
2. The Bus Terminals are now attached on the right-hand side of the Fieldbus Coupler. Join the components with tongue and groove and push the terminals against the mounting rail, until the lock clicks onto the mounting rail.

If the Terminals are clipped onto the mounting rail first and then pushed together without tongue and groove, the connection will not be operational! When correctly assembled, no significant gap should be visible between the housings.

 <b>Note</b>	<p><b>Fixing of mounting rails</b></p> <p>The locking mechanism of the terminals and couplers extends to the profile of the mounting rail. At the installation, the locking mechanism of the components must not come into conflict with the fixing bolts of the mounting rail. To mount the mounting rails with a height of 7.5 mm under the terminals and couplers, you should use flat mounting connections (e.g. countersunk screws or blind rivets).</p>
--	---

## Disassembly

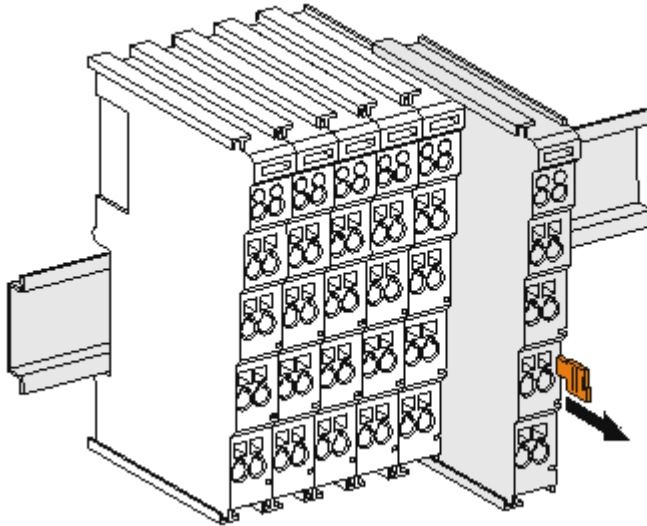


Fig. 21: Disassembling of terminal

Each terminal is secured by a lock on the mounting rail, which must be released for disassembly:

1. Pull the terminal by its orange-colored lugs approximately 1 cm away from the mounting rail. In doing so for this terminal the mounting rail lock is released automatically and you can pull the terminal out of the bus terminal block easily without excessive force.
2. Grasp the released terminal with thumb and index finger simultaneous at the upper and lower grooved housing surfaces and pull the terminal out of the bus terminal block.

### Connections within a bus terminal block

The electric connections between the Bus Coupler and the Bus Terminals are automatically realized by joining the components:

- The six spring contacts of the K-Bus/E-Bus deal with the transfer of the data and the supply of the Bus Terminal electronics.
- The power contacts deal with the supply for the field electronics and thus represent a supply rail within the bus terminal block. The power contacts are supplied via terminals on the Bus Coupler (up to 24 V) or for higher voltages via power feed terminals.



#### Note

#### Power Contacts

During the design of a bus terminal block, the pin assignment of the individual Bus Terminals must be taken account of, since some types (e.g. analog Bus Terminals or digital 4-channel Bus Terminals) do not or not fully loop through the power contacts. Power Feed Terminals (KL91xx, KL92xx or EL91xx, EL92xx) interrupt the power contacts and thus represent the start of a new supply rail.

### PE power contact

The power contact labeled PE can be used as a protective earth. For safety reasons this contact mates first when plugging together, and can ground short-circuit currents of up to 125 A.

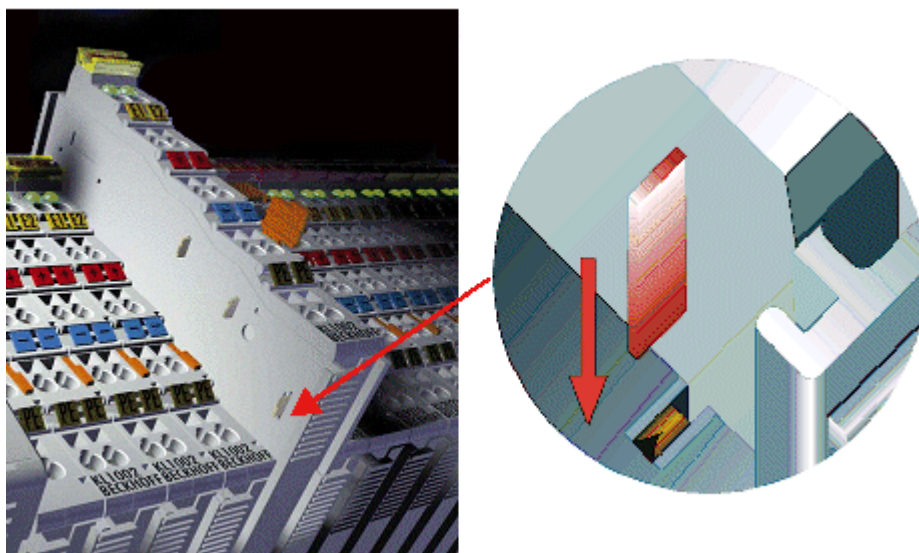





Fig. 22: Power contact on left side

 <p><b>Attention</b></p>	<p><b>Possible damage of the device</b></p> <p>Note that, for reasons of electromagnetic compatibility, the PE contacts are capacitatively coupled to the mounting rail. This may lead to incorrect results during insulation testing or to damage on the terminal (e.g. disruptive discharge to the PE line during insulation testing of a consumer with a nominal voltage of 230 V). For insulation testing, disconnect the PE supply line at the Bus Coupler or the Power Feed Terminal! In order to decouple further feed points for testing, these Power Feed Terminals can be released and pulled at least 10 mm from the group of terminals.</p>
 <p><b>WARNING</b></p>	<p><b>Risk of electric shock!</b></p> <p>The PE power contact must not be used for other potentials!</p>

## 5.2 Installation instructions for enhanced mechanical load capacity

 <b>WARNING</b>	<p><b>Risk of injury through electric shock and damage to the device!</b></p> <p>Bring the Bus Terminal system into a safe, de-energized state before starting mounting, disassembly or wiring of the Bus Terminals!</p>
---	--

### Additional checks

The terminals have undergone the following additional tests:

Verification	Explanation
Vibration	10 frequency runs in 3 axes
	6 Hz < f < 60 Hz displacement 0.35 mm, constant amplitude
	60.1 Hz < f < 500 Hz acceleration 5 g, constant amplitude
Shocks	1000 shocks in each direction, in 3 axes
	25 g, 6 ms

### Additional installation instructions

For terminals with enhanced mechanical load capacity, the following additional installation instructions apply:

- The enhanced mechanical load capacity is valid for all permissible installation positions
- Use a mounting rail according to EN 60715 TH35-15
- Fix the terminal segment on both sides of the mounting rail with a mechanical fixture, e.g. an earth terminal or reinforced end clamp
- The maximum total extension of the terminal segment (without coupler) is:  
64 terminals (12 mm mounting with) or 32 terminals (24 mm mounting with)
- Avoid deformation, twisting, crushing and bending of the mounting rail during edging and installation of the rail
- The mounting points of the mounting rail must be set at 5 cm intervals
- Use countersunk head screws to fasten the mounting rail
- The free length between the strain relief and the wire connection should be kept as short as possible. A distance of approx. 10 cm should be maintained to the cable duct.

## 5.3 Connection system



**WARNING**

### Risk of electric shock and damage of device!

Bring the bus terminal system into a safe, powered down state before starting installation, disassembly or wiring of the Bus Terminals!

### Overview

The Bus Terminal system offers different connection options for optimum adaptation to the respective application:

- The terminals of KLxxxx and ELxxxx series with standard wiring include electronics and connection level in a single enclosure.
- The terminals of KSxxxx and ESxxxx series feature a pluggable connection level and enable steady wiring while replacing.
- The High Density Terminals (HD Terminals) include electronics and connection level in a single enclosure and have advanced packaging density.

### Standard wiring



Fig. 23: Standard wiring

The terminals of KLxxxx and ELxxxx series have been tried and tested for years. They feature integrated screwless spring force technology for fast and simple assembly.

### Pluggable wiring



Fig. 24: Pluggable wiring

The terminals of KSxxxx and ESxxxx series feature a pluggable connection level. The assembly and wiring procedure for the KS series is the same as for the KLxxxx and ELxxxx series. The KS/ES series terminals enable the complete wiring to be removed as a plug connector from the top of the housing for servicing.

The lower section can be removed from the terminal block by pulling the unlocking tab. Insert the new component and plug in the connector with the wiring. This reduces the installation time and eliminates the risk of wires being mixed up.

The familiar dimensions of the terminal only had to be changed slightly. The new connector adds about 3 mm. The maximum height of the terminal remains unchanged.

A tab for strain relief of the cable simplifies assembly in many applications and prevents tangling of individual connection wires when the connector is removed.

Conductor cross sections between 0.08 mm<sup>2</sup> and 2.5 mm<sup>2</sup> can continue to be used with the proven spring force technology.

The overview and nomenclature of the product names for KSxxxx and ESxxxx series has been retained as known from KLxxxx and ELxxxx series.

### High Density Terminals (HD Terminals)



Fig. 25: High Density Terminals

The Bus Terminals from these series with 16 connection points are distinguished by a particularly compact design, as the packaging density is twice as large as that of the standard 12 mm Bus Terminals. Massive conductors and conductors with a wire end sleeve can be inserted directly into the spring loaded terminal point without tools.



Note

#### Wiring HD Terminals

The High Density (HD) Terminals of the KLx8xx and ELx8xx series doesn't support steady wiring.

### Ultrasonically "bonded" (ultrasonically welded) conductors



Note

#### Ultrasonically "bonded" conductors

It is also possible to connect the Standard and High Density Terminals with ultrasonically "bonded" (ultrasonically welded) conductors. In this case, please note the tables concerning the [wire-size width](#) [▶ 36] below!

## Wiring

### Terminals for standard wiring ELxxxx/KLxxxx and for pluggable wiring ESxxxx/KSxxxx

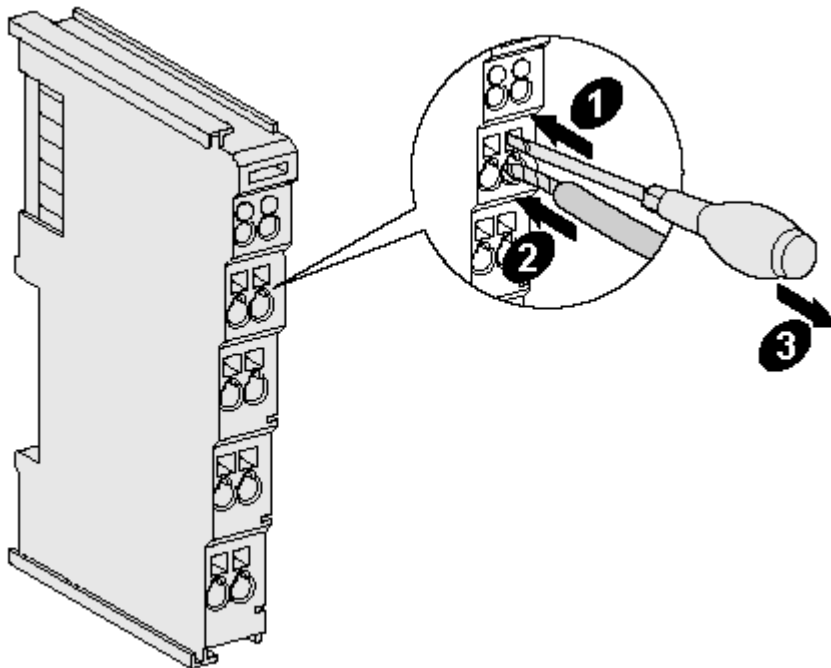


Fig. 26: Mounting a cable on a terminal connection



Up to eight connections enable the connection of solid or finely stranded cables to the Bus Terminals. The terminals are implemented in spring force technology. Connect the cables as follows:

1. Open a spring-loaded terminal by slightly pushing with a screwdriver or a rod into the square opening above the terminal.
2. The wire can now be inserted into the round terminal opening without any force.
3. The terminal closes automatically when the pressure is released, holding the wire securely and permanently.


Terminal housing	ELxxxx, KLxxxx	ESxxxx, KSxxxx
Wire size width	0.08 ... 2,5 mm <sup>2</sup>	0.08 ... 2.5 mm <sup>2</sup>
Wire stripping length	8 ... 9 mm	9 ... 10 mm

**High Density Terminals ELx8xx, KLx8xx (HD)**

The conductors of the HD Terminals are connected without tools for single-wire conductors using the direct plug-in technique, i.e. after stripping the wire is simply plugged into the contact point. The cables are released, as usual, using the contact release with the aid of a screwdriver. See the following table for the suitable wire size width.

Terminal housing	High Density Housing
Wire size width (conductors with a wire end sleeve)	0.14 ... 0.75 mm <sup>2</sup>
Wire size width (single core wires)	0.08 ... 1.5 mm <sup>2</sup>
Wire size width (fine-wire conductors)	0.25 ... 1.5 mm <sup>2</sup>
Wire size width (ultrasonically "bonded" conductors)	only 1.5 mm <sup>2</sup> (see <a href="#">notice [► 36]!</a> )
Wire stripping length	8 ... 9 mm

**Shielding**

 <b>Note</b>	<p><b>Shielding</b>                  Analog sensors and actors should always be connected with shielded, twisted paired wires.</p>
--	--

## 5.4 Positioning of passive Terminals



**Note**

**Hint for positioning of passive terminals in the bus terminal block**

EtherCAT Terminals (ELxxxx / ESxxxx), which do not take an active part in data transfer within the bus terminal block are so called passive terminals. The passive terminals have no current consumption out of the E-Bus.

To ensure an optimal data transfer, you must not directly string together more than 2 passive terminals!

**Examples for positioning of passive terminals (highlighted)**

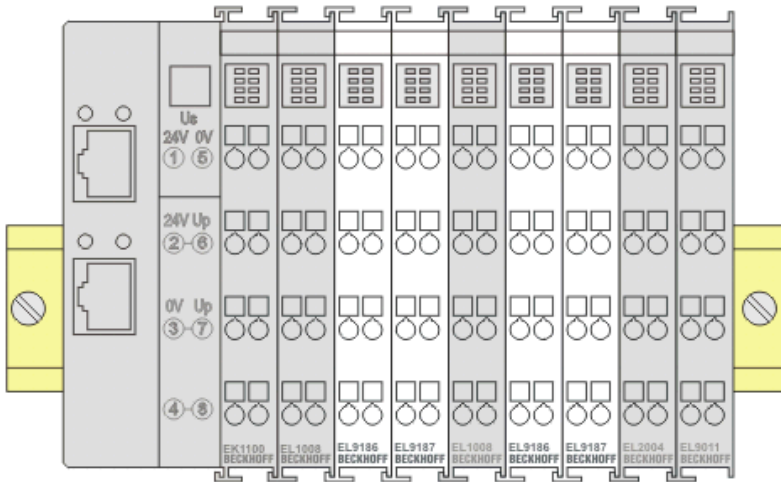


Fig. 27: Correct positioning

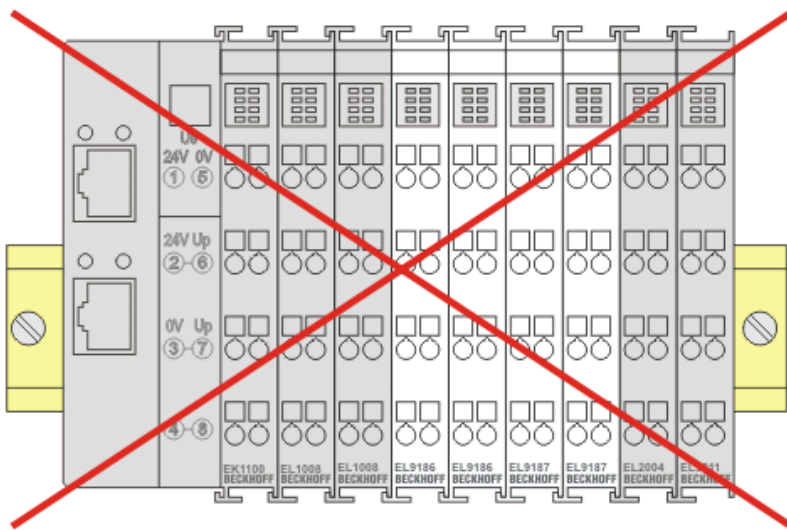


Fig. 28: Incorrect positioning

## 5.5 Installation position for operation with or without fan



**Attention**

### Constraints regarding installation position and operating temperature range

When installing the terminals ensure that an adequate spacing is maintained between other components above and below the terminal in order to guarantee adequate ventilation!

### Prescribed installation position for operation without fan

The prescribed installation position requires the mounting rail to be installed horizontally and the connection surfaces of the EL/KL terminals to face forward (see Fig. "Recommended distances of installation position for operating without fan").

The terminals are ventilated from below, which enables optimum cooling of the electronics through convection.

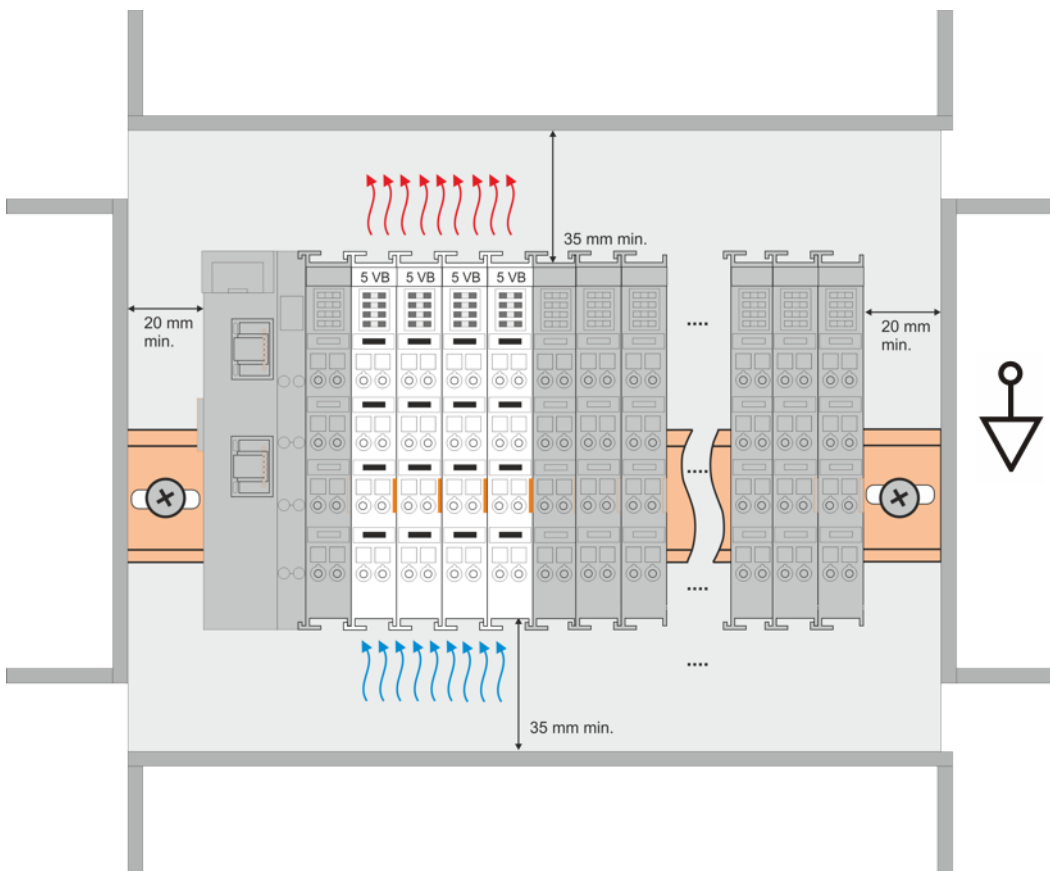


Fig. 29: Recommended distances of installation position for operating without fan

Compliance with the distances shown in Fig. "Recommended distances of installation position for operating without fan" is recommended.

For further information regarding the operation without fan refer to the Technical Data of the terminal.

### Standard installation position for operation with fan

The standard installation position for operation with fan requires the mounting rail to be installed horizontally and the connection surfaces of the EL/KL terminals to face forward (see Fig. Recommended distances for installation position for operation with fan).

The terminals are ventilated fan supported (e.g. with fan cartridge ZB8610) from below.

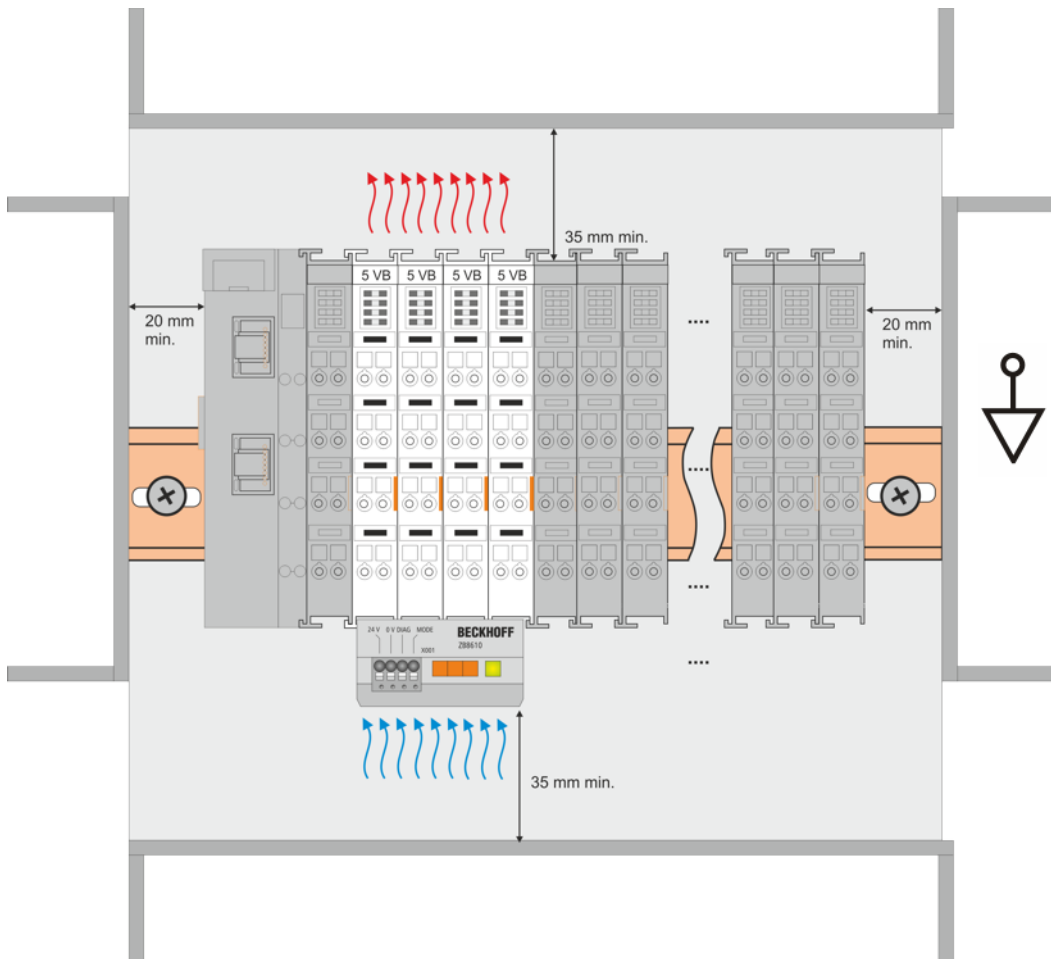


Fig. 30: Recommended distances for installation position for operation with fan

**Other installation positions**

Due to the enforced effect of the fan on the ventilation of the terminals, other installation positions (see Fig. "Other installation positions, example 1 + 2") may be permitted where appropriate.

See corresponding notes in the Technical Data of the terminal.

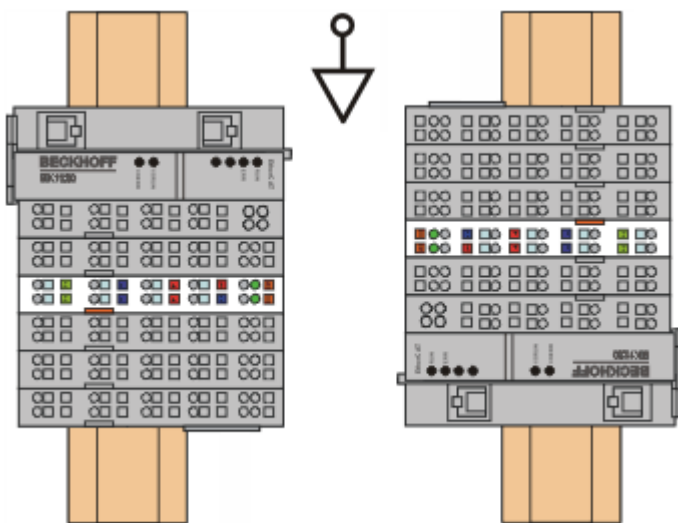


Fig. 31: Other installation positions, example 1

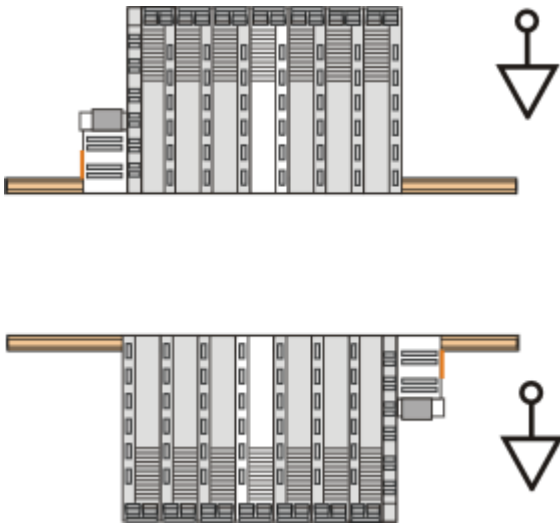


Fig. 32: Other installation positions, example 2

## 5.6 Shielding concept

Together with the shield busbar, the prefabricated cables from Beckhoff Automation offer optimum protection against electromagnetic interference.

It is highly recommended to apply the shield as close as possible to the terminal, in order to minimize operational disturbances.

### Connection of the motor cable to the shield busbar

Fasten the shield busbar supports 1 to the DIN rail 2. The mounting rail 2 must be in contact with the metallic rear wall of the control cabinet over a wide area. Install the shield busbar 3 as shown below.

As an alternative, a shield busbar clamp 3a can be screwed directly to the metallic rear wall of the control cabinet (fig. "shield busbar clamp")

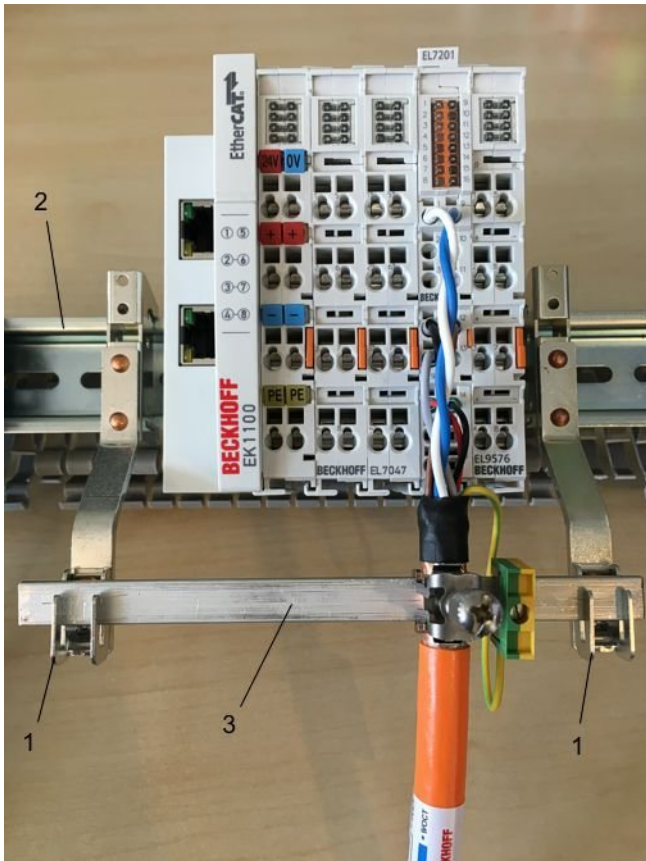


Fig. 33: Shield busbar

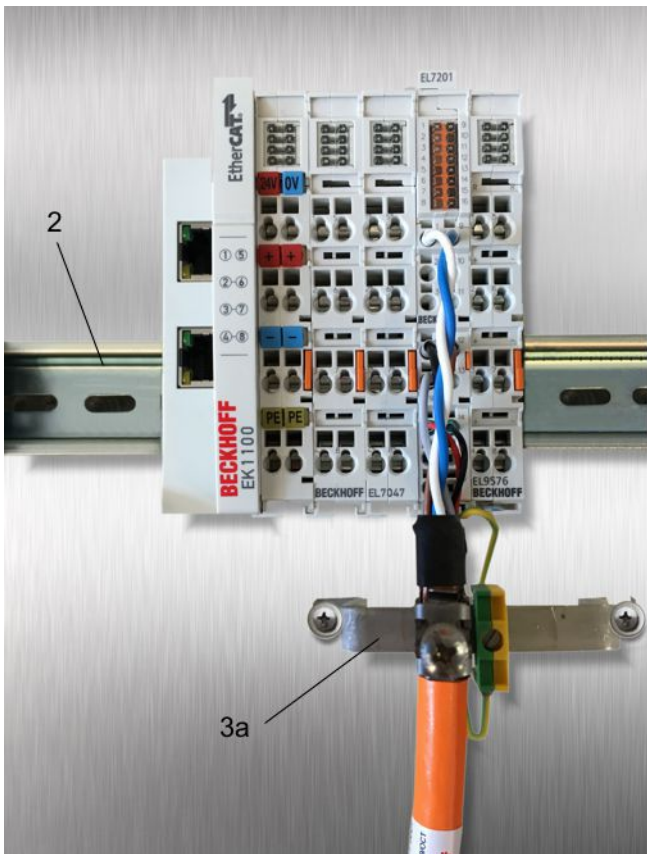


Fig. 34: Shield busbar clamp

Connect the cores 4 of the motor cable 5, then attach the copper-sheathed end 6 of the motor cable 5 with the shield clamp 7 to the shield busbar 3 or shield busbar clamp 3a. Tighten the screw 8 to the stop. Fasten the PE clamp 9 to the shield busbar 3 or shield busbar clamp 3a. Clamp the PE core 10 of the motor cable 5 under the PE clamp 9.

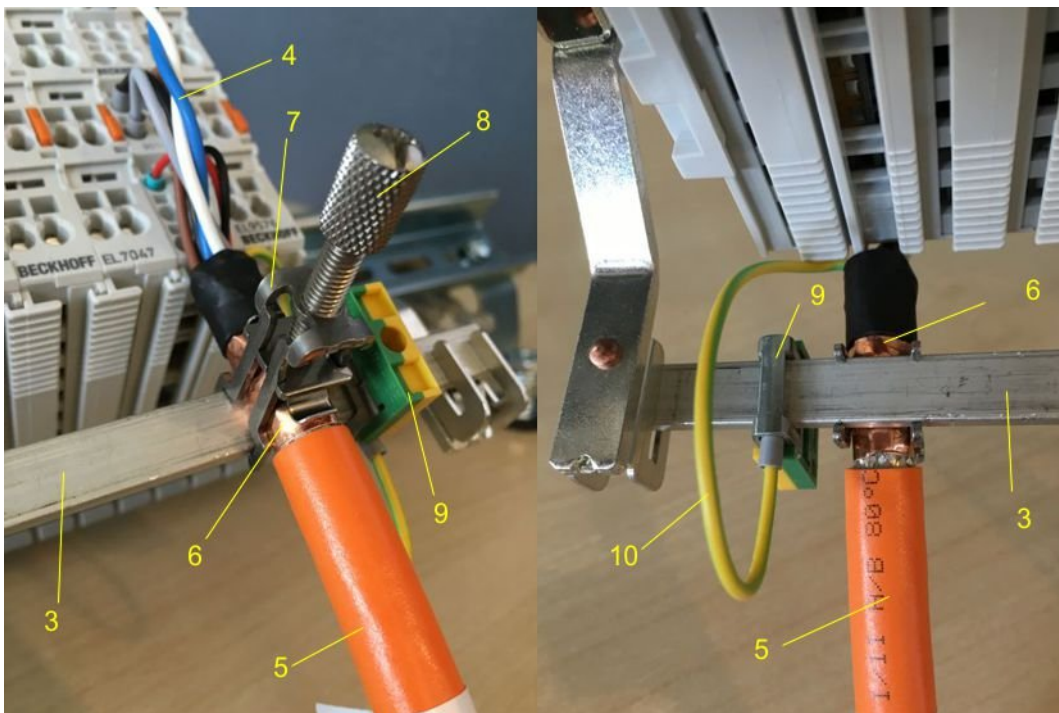


Fig. 35: Shield connection



**Connection of the feedback cable to the motor****Note****Twisting of the feedback cable cores**

The feedback cable cores should be twisted, in order to avoid operational disturbances.

When screwing the feedback plug to the motor, the shield of the feedback cable is connected via the metallic plug fastener.

On the terminal side the shield can also be connected. Connect the cores of the feedback cable and attach the copper-sheathed end of the feedback cable to the shield busbar 3 or shield busbar clamp 3a with the shield clamp 7. The motor cable and the feedback cable can be connected to the shield clamp 7 with the screw 8.



## 5.7 Notes on current measurements using Hall sensors

The device described in this documentation features one or several integrated Hall sensor for the purpose of current measurements.

During this process, the Hall sensor monitors the magnetic field generated by a current flowing through a conductor.

In order to prevent compromising the measurement we recommend screening exterior magnetic fields from the device, or to keep such fields at an adequate distance.



Fig. 36: Note

### Background

A current-carrying conductor generates a magnetic field around it according to

$$B = \mu_0 \cdot I / (2\pi \cdot d)$$

with

B [Tesla] magnetic field

$\mu_0 = 4 \cdot \pi \cdot 10^{-7}$  [H/m] (assumption: no magnetic shielding)

I [A] current

d [m] distance to conductor



**Note**

#### Interference from external magnetic fields

The magnetic field strength should not exceed a permitted level all around the device. In practice this equates to a recommended minimum distance between a conductor and the device surface as follows:

- Current 10 A: 12 mm
- Current 20 A: 25 mm
- Current 40 A: 50 mm

Unless specified otherwise in the device documentation, stringing together modules (e.g. terminal blocks based on a 12 mm grid) of same type (e.g. EL2212-0000) is permitted.

## 5.8 LEDs and connection

### 5.8.1 EL7201-000x

#### LEDs

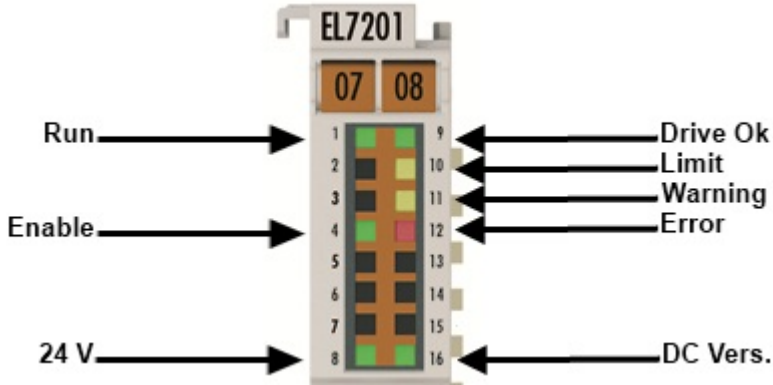


Fig. 37: EL7201-000x - LEDs

LED	Color	Meaning	
RUN	green	This LED indicates the terminal's operating state:	
		off	State of the <a href="#">EtherCAT State Machine [▶ 75]</a> : <b>INIT</b> = initialization of the terminal
		flashing rapidly	State of the EtherCAT State Machine: <b>BOOTSTRAP</b> = function for <a href="#">firmware updates [▶ 179]</a> of the terminal
		flashing	State of the EtherCAT State Machine: <b>PREOP</b> = function for mailbox communication and different standard-settings set
		single flash	State of the EtherCAT State Machine: <b>SAFEOP</b> = verification of the <a href="#">Sync Manager [▶ 75]</a> channels and the distributed clocks. Outputs remain in safe state
on	State of the EtherCAT State Machine: <b>OP</b> = normal operating state; mailbox and process data communication is possible		
Driver	green	on	Driver stage ready for operation
Limit	orange	on	The LED is linked with bit 11 of the status word ( <a href="#">MDP742 [▶ 143]</a> / <a href="#">DS402 [▶ 158]</a> ) (internal limit active) Limit reached (e.g. torque or speed limit)
Warning	orange	on	The LED is linked with bit 7 of the status word ( <a href="#">MDP742 [▶ 143]</a> / <a href="#">DS402 [▶ 158]</a> ) (warning) The "Warning" threshold value is exceeded. I <sup>2</sup> T model Temperature (90 °C) exceeded Voltage
Enabled	green	on	The LED is linked with the bits 1 and 2 of status word ( <a href="#">MDP742 [▶ 143]</a> / <a href="#">DS402 [▶ 158]</a> ) (if "Switched on" or "Operation enabled") Driver stage enabled
Error	red	on	The LED is linked with bit 3 of the status word ( <a href="#">MDP742 [▶ 143]</a> / <a href="#">DS402 [▶ 158]</a> ) (fault) The "Error" threshold value is exceeded. Overcurrent Voltage not available Resolver not connected Max. temperature (105 °C) exceeded
+24 V via power contacts	green	on	24 V voltage supply for the terminal is present.
DC link supply	green	on	Voltage for the DC link supply is present.

Connection

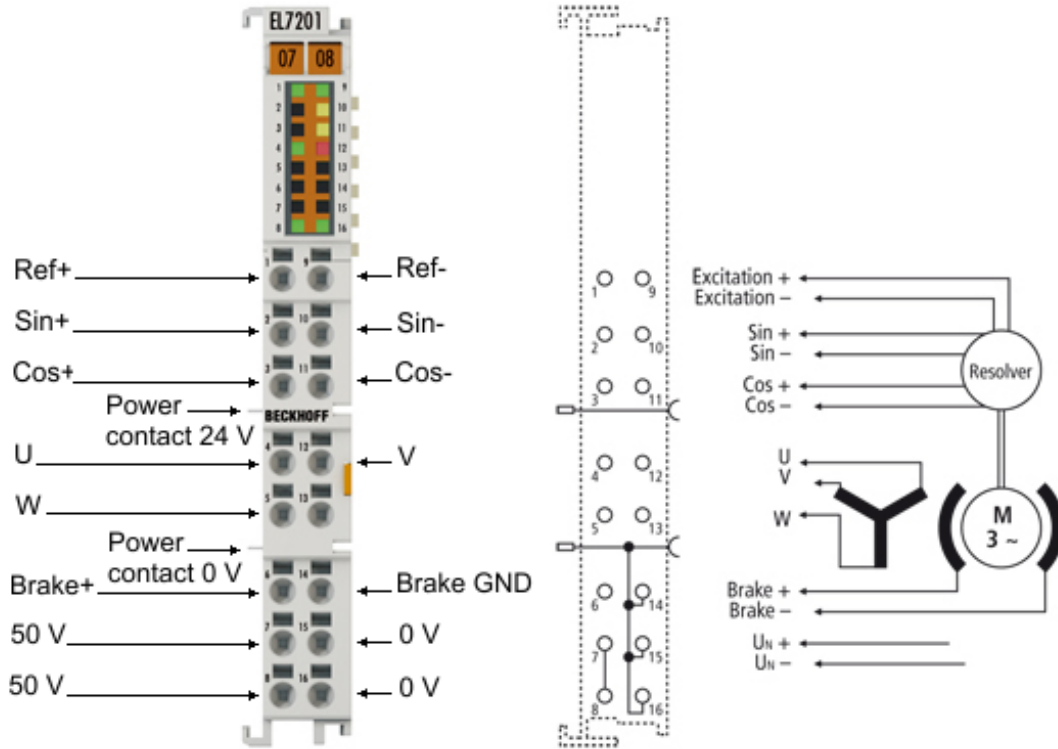


Fig. 38: EL7201-000x connection

Terminal point	Name	Comment
1	Ref +	Resolver excitation +
2	Sin +	Resolver sine +
3	Cos +	Resolver cosine +
4	U	Motor phase U
5	W	Motor phase W
6	Brake +	Motor brake +
7	50 V	DC link supply + (8...50 V)
8	50 V	DC link supply + (8...50 V)
9	Ref -	Resolver excitation -
10	Sin -	Resolver sine -
11	Cos -	Resolver cosine -
12	V	Motor phase V
13	n.c.	not connected
14	GND	Motor brake GND
15	0 V	DC link 0 V supply
16	0 V	DC link 0 V supply

## 5.8.2 EL7211-000x

### LEDs

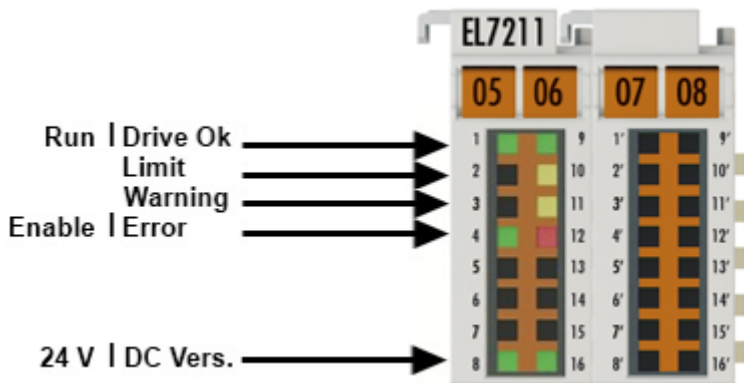


Fig. 39: EL7211-000x - LEDs

LED	Color	Meaning	
RUN	green	This LED indicates the terminal's operating state:	
		off	State of the EtherCAT State Machine [▶ 75]: <b>INIT</b> = initialization of the terminal
		flashing rapidly	State of the EtherCAT State Machine: <b>BOOTSTRAP</b> = function for firmware updates [▶ 179] of the terminal
		flashing	State of the EtherCAT State Machine: <b>PREOP</b> = function for mailbox communication and different standard-settings set
		single flash	State of the EtherCAT State Machine: <b>SAFEOP</b> = verification of the Sync Manager [▶ 75] channels and the distributed clocks. Outputs remain in safe state
on	State of the EtherCAT State Machine: <b>OP</b> = normal operating state; mailbox and process data communication is possible		
Driver	green	on	Driver stage ready for operation
Limit	orange	on	The LED is linked with bit 11 of the status word (MDP742 [▶ 143] / DS402 [▶ 158]) (internal limit active) Limit reached (e.g. torque or speed limit)
Warning	orange	on	The LED is linked with bit 7 of the status word (MDP742 [▶ 143] / DS402 [▶ 158]) (warning) The "Warning" threshold value is exceeded. I <sup>2</sup> T model Temperature (90 °C) exceeded Voltage
Enabled	green	on	The LED is linked with the bits 1 and 2 of status word (MDP742 [▶ 143] / DS402 [▶ 158]) (if "Switched on" or "Operation enabled") Driver stage enabled
Error	red	on	The LED is linked with bit 3 of the status word (MDP742 [▶ 143] / DS402 [▶ 158]) (fault) The "Error" threshold value is exceeded. Overcurrent Voltage not available Resolver not connected Max. temperature (105 °C) exceeded
+24 V via power contacts	green	on	24 V voltage supply for the terminal is present.
DC link supply	green	on	Voltage for the DC link supply is present.

Connection



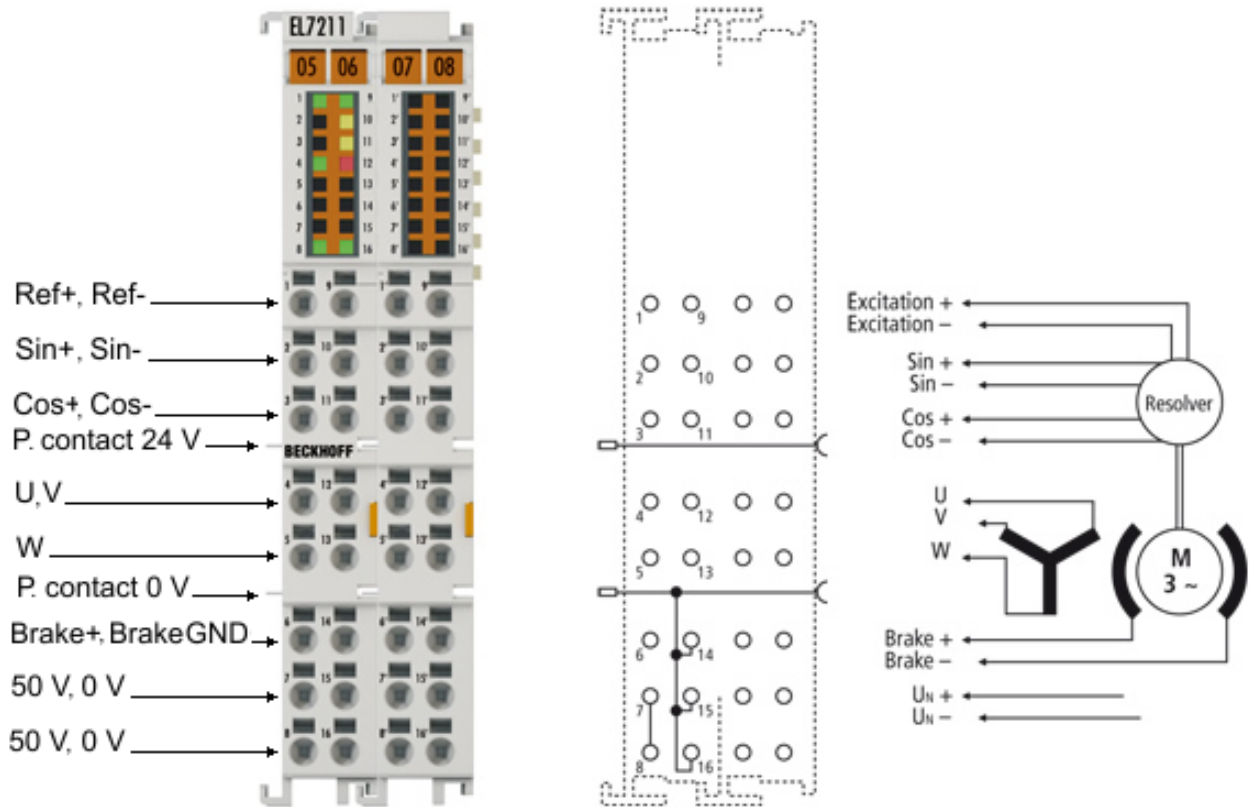


Fig. 40: EL7211-000x connection

Terminal point	Name	Comment
1	Resolver excit. +	Resolver excitation + (R1)
2	Resolver Sin +	Resolver sine + (S2)
3	Resolver Cos +	Resolver cosine + (S1)
4	Motor phase U	Motor phase U
5	Motor phase W	Motor phase W
6	Motor brake +	Motor brake +
7	DC supply +	DC link supply + (8...50 V)
8		
9	Resolver excit. -	Resolver excitation - (R2)
10	Resolver Sin -	Resolver sine - (S4)
11	Resolver Cos -	Resolver cosine - (S3)
12	Motor phase V	Motor phase V
13	n.c.	not connected
14	Motor brake GND	Motor brake GND
15	DC GND supply	DC link GND supply
16		
1' - 16'		not connected

Resolver cable ZK4724-0410-xxxx

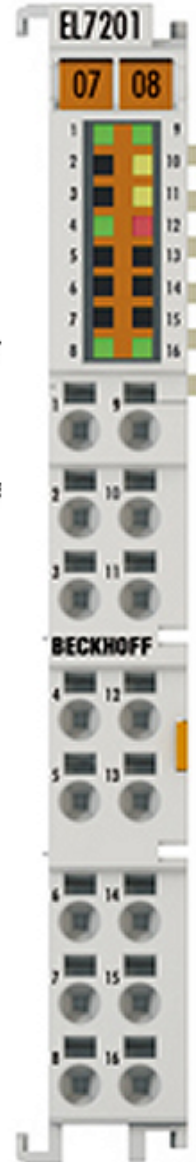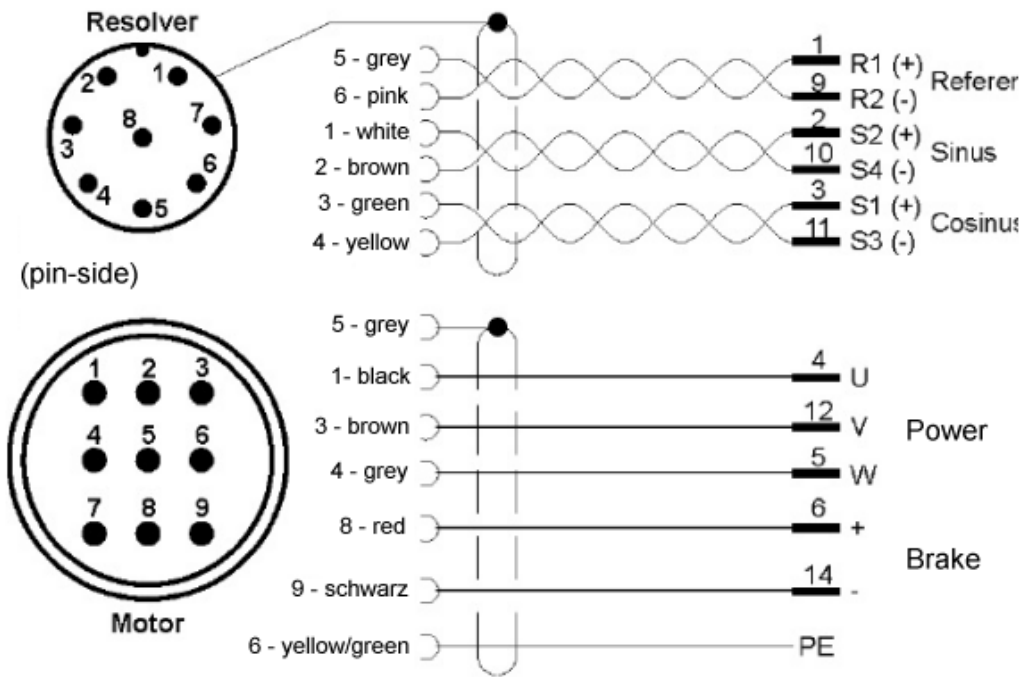

Motor cable ZK4704-0411-2xxx



Fig. 41: Connection resolver and motor cable

## 6 Commissioning

### 6.1 TwinCAT Development Environment

The Software for automation TwinCAT (The Windows Control and Automation Technology) will be distinguished into:

- TwinCAT 2: System Manager (Configuration) & PLC Control (Programming)
- TwinCAT 3: Enhancement of TwinCAT 2 (Programming and Configuration takes place via a common Development Environment)

#### Details:

- **TwinCAT 2:**
  - Connects I/O devices to tasks in a variable-oriented manner
  - Connects tasks to tasks in a variable-oriented manner
  - Supports units at the bit level
  - Supports synchronous or asynchronous relationships
  - Exchange of consistent data areas and process images
  - Datalink on NT - Programs by open Microsoft Standards (OLE, OCX, ActiveX, DCOM+, etc.)
  - Integration of IEC 61131-3-Software-SPS, Software- NC and Software-CNC within Windows NT/2000/XP/Vista, Windows 7, NT/XP Embedded, CE
  - Interconnection to all common fieldbusses
  - [More...](#)

#### Additional features:

- **TwinCAT 3 (eXtended Automation):**
  - Visual-Studio®-Integration
  - Choice of the programming language
  - Supports object orientated extension of IEC 61131-3
  - Usage of C/C++ as programming language for real time applications
  - Connection to MATLAB®/Simulink®
  - Open interface for expandability
  - Flexible run-time environment
  - Active support of Multi-Core- und 64-Bit-Operatingsystem
  - Automatic code generation and project creation with the TwinCAT Automation Interface
  - [More...](#)

Within the following sections commissioning of the TwinCAT Development Environment on a PC System for the control and also the basically functions of unique control elements will be explained.

Please see further information to TwinCAT 2 and TwinCAT 3 at <http://infosys.beckhoff.com>.

#### 6.1.1 Installation of the TwinCAT real-time driver

In order to assign real-time capability to a standard Ethernet port of an IPC controller, the Beckhoff real-time driver has to be installed on this port under Windows.

This can be done in several ways. One option is described here.

In the System Manager call up the TwinCAT overview of the local network interfaces via Options → Show Real Time Ethernet Compatible Devices.



 


Fig. 42: System Manager "Options" (TwinCAT 2)

This has to be called up by the Menü "TwinCAT" within the TwinCAT 3 environment:

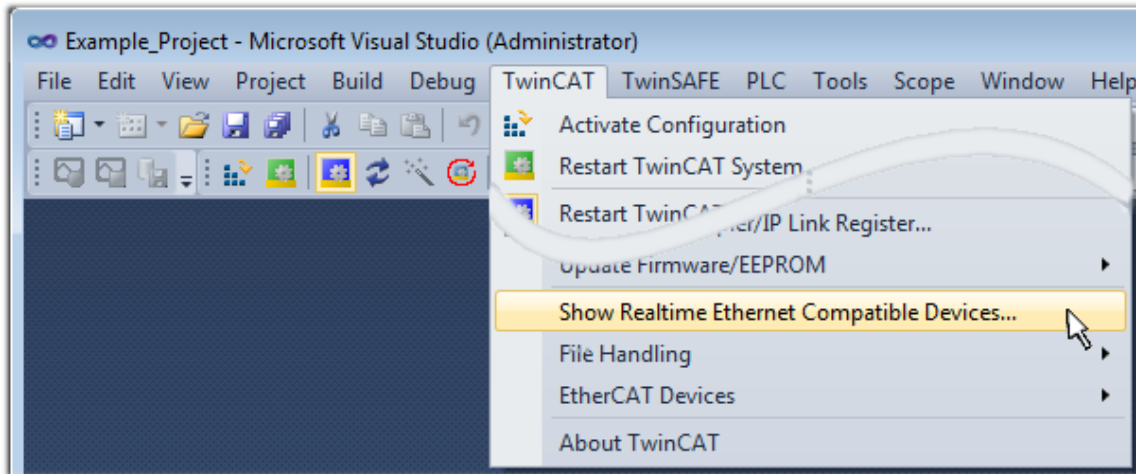


Fig. 43: Call up under VS Shell (TwinCAT 3)

The following dialog appears:

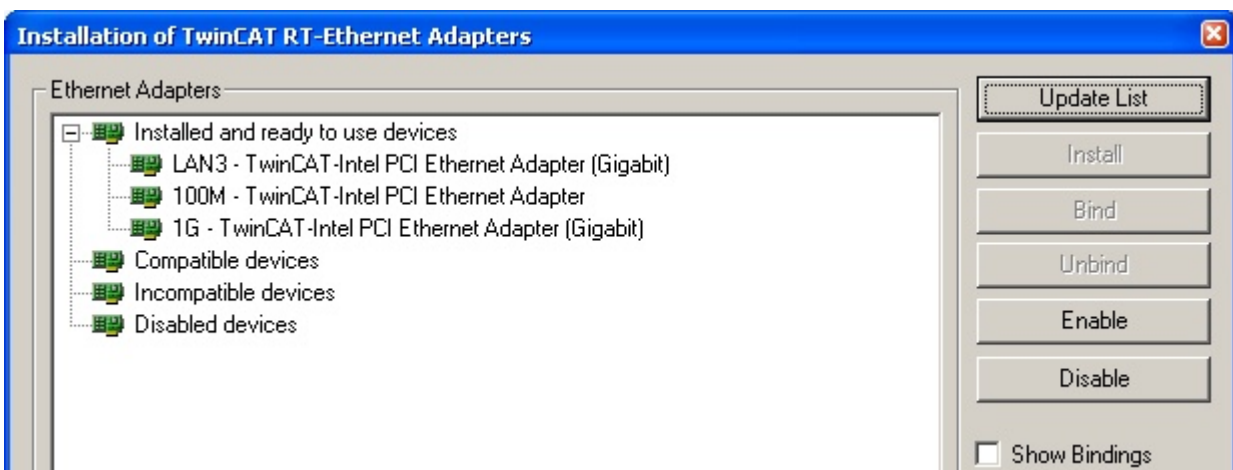


Fig. 44: Overview of network interfaces

Interfaces listed under "Compatible devices" can be assigned a driver via the "Install" button. A driver should only be installed on compatible devices.

A Windows warning regarding the unsigned driver can be ignored.


**Alternatively** an EtherCAT-device can be inserted first of all as described in chapter [Offline configuration creation, section "Creating the EtherCAT device" \[▶ 62\]](#) in order to view the compatible ethernet ports via its EtherCAT properties (tab „Adapter“, button „Compatible Devices...“):





Fig. 45: EtherCAT device properties(TwinCAT 2): click on „Compatible Devices...“ of tab “Adapter”

TwinCAT 3: the properties of the EtherCAT device can be opened by double click on “Device .. (EtherCAT)” within the Solution Explorer under “I/O”:

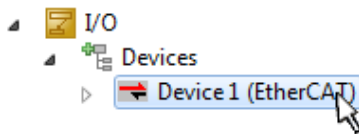

After the installation the driver appears activated in the Windows overview for the network interface (Windows Start → System Properties → Network)

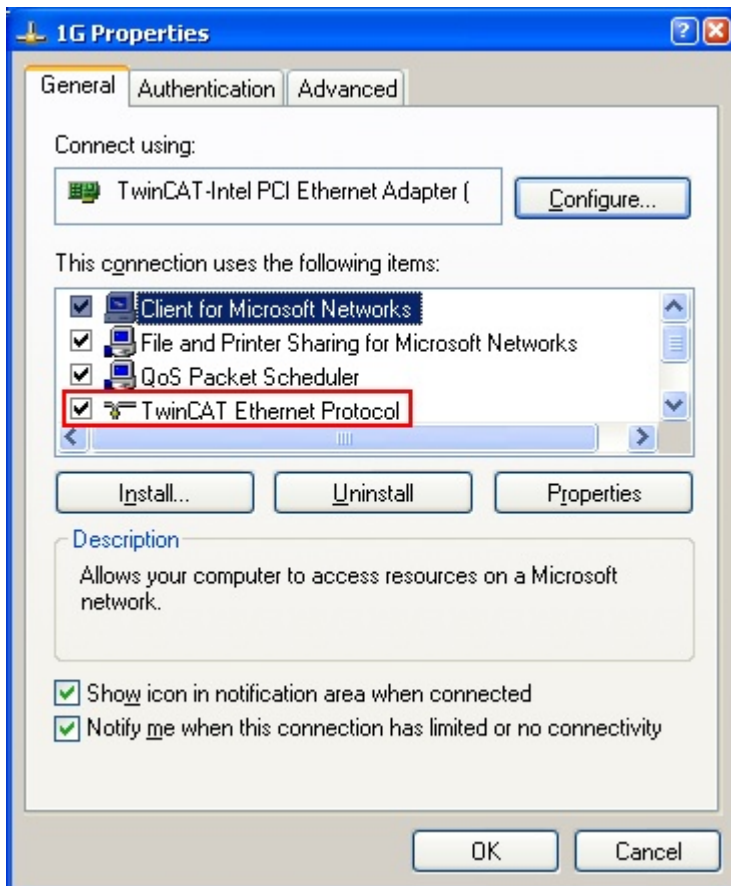


Fig. 46: Windows properties of the network interface

A correct setting of the driver could be:

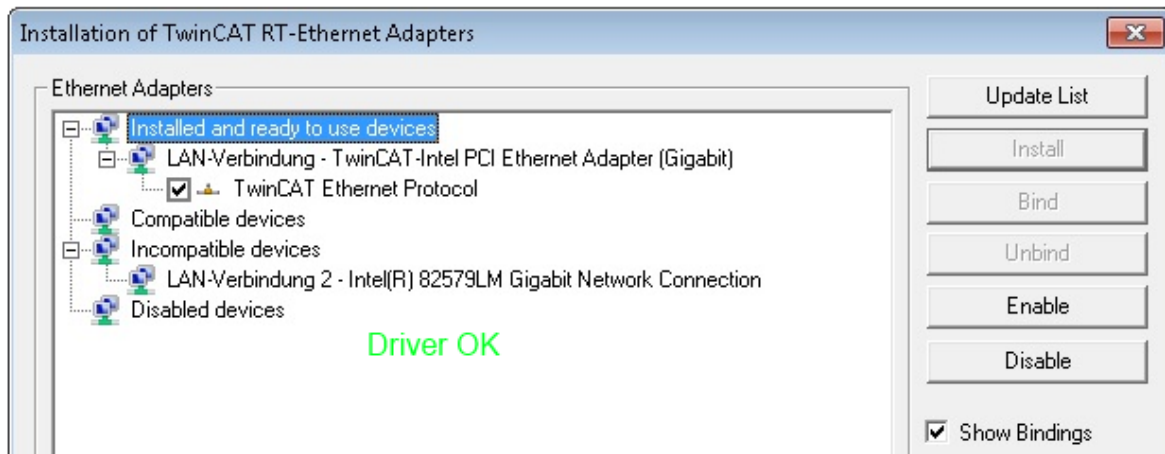


Fig. 47: Exemplary correct driver setting for the Ethernet port

Other possible settings have to be avoided:




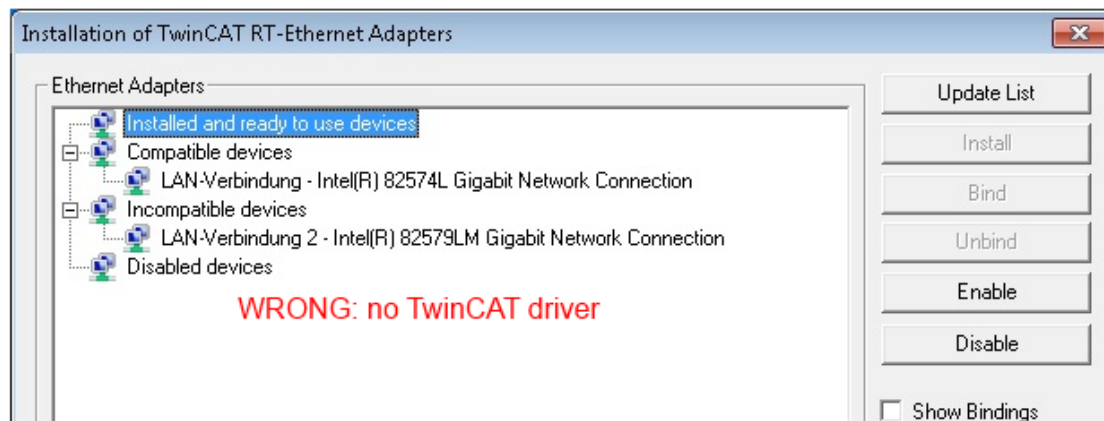


Fig. 48: Incorrect driver settings for the Ethernet port

## IP address of the port used

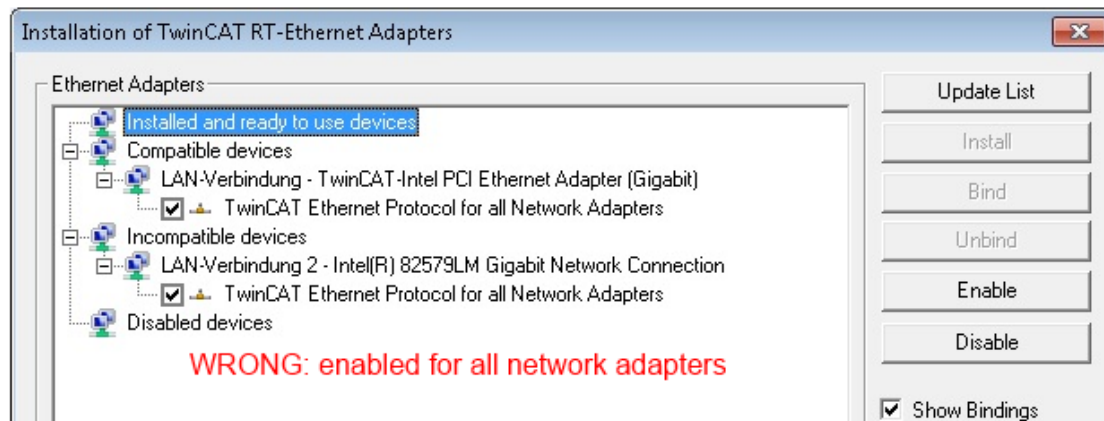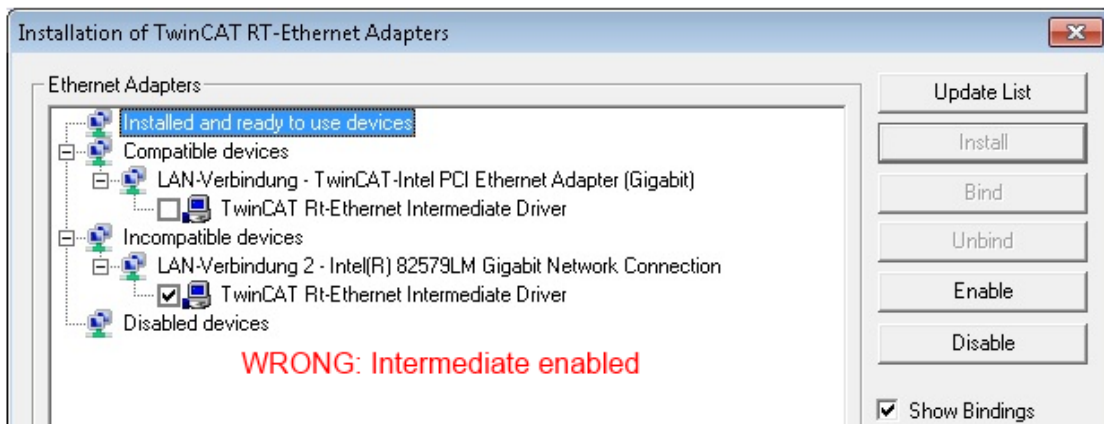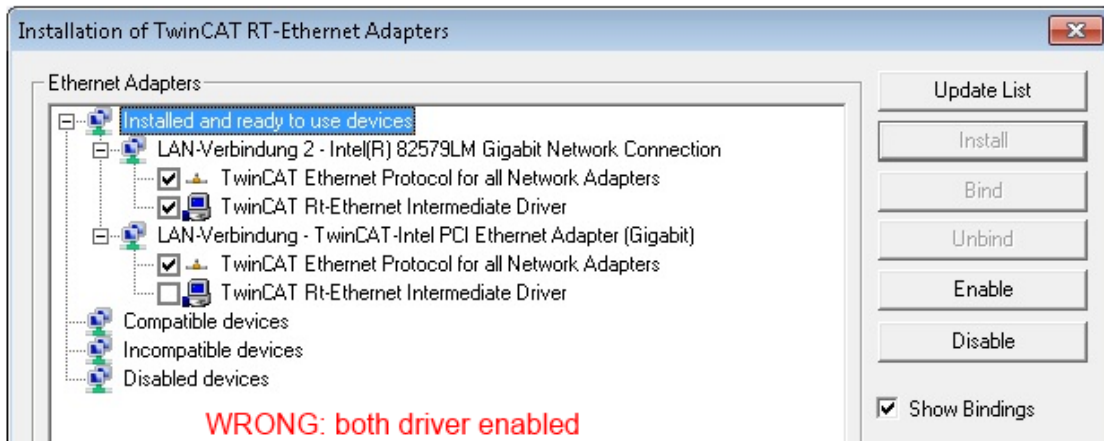

## Note

**IP address/DHCP**

In most cases an Ethernet port that is configured as an EtherCAT device will not transport general IP packets. For this reason and in cases where an EL6601 or similar devices are used it is useful to specify a fixed IP address for this port via the “Internet Protocol TCP/IP” driver setting and to disable DHCP. In this way the delay associated with the DHCP client for the Ethernet port assigning itself a default IP address in the absence of a DHCP server is avoided. A suitable address space is 192.168.x.x, for example.

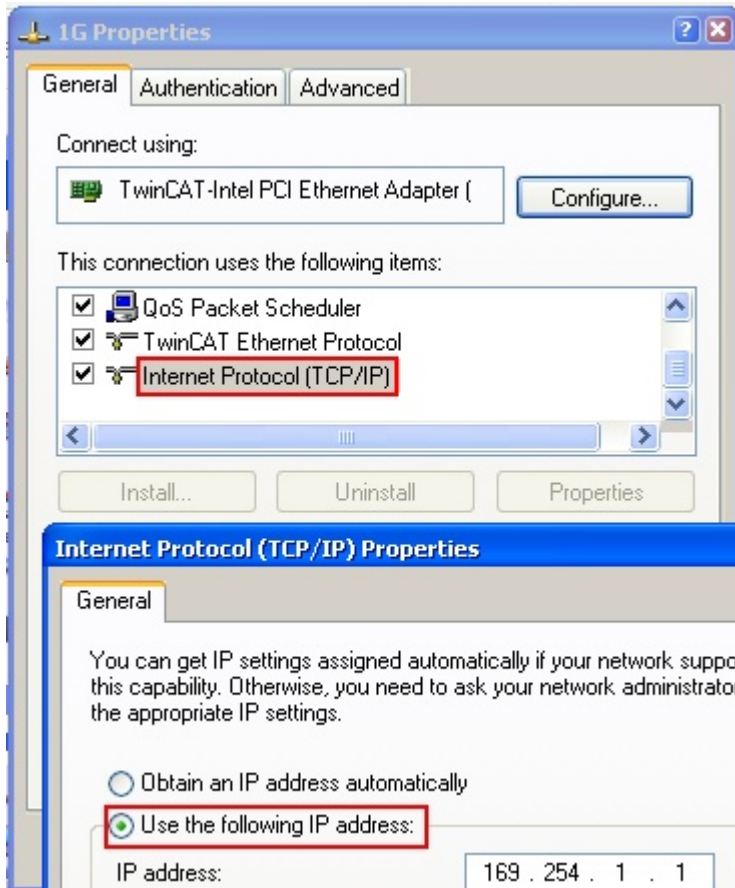


Fig. 49: TCP/IP setting for the Ethernet port

## 6.1.2 Notes regarding ESI device description

### Installation of the latest ESI device description

The TwinCAT EtherCAT master/System Manager needs the device description files for the devices to be used in order to generate the configuration in online or offline mode. The device descriptions are contained in the so-called ESI files (EtherCAT Slave Information) in XML format. These files can be requested from the respective manufacturer and are made available for download. An \*.xml file may contain several device descriptions.

The ESI files for Beckhoff EtherCAT devices are available on the [Beckhoff website](#).

The ESI files should be stored in the TwinCAT installation directory.

Default settings:

- **TwinCAT 2:** C:\TwinCAT\IO\EtherCAT
- **TwinCAT 3:** C:\TwinCAT\3.1\Config\Io\EtherCAT


The files are read (once) when a new System Manager window is opened, if they have changed since the last time the System Manager window was opened.

A TwinCAT installation includes the set of Beckhoff ESI files that was current at the time when the TwinCAT build was created.

For TwinCAT 2.11/TwinCAT 3 and higher, the ESI directory can be updated from the System Manager, if the programming PC is connected to the Internet; by

- **TwinCAT 2:** Option → “Update EtherCAT Device Descriptions”
- **TwinCAT 3:** TwinCAT → EtherCAT Devices → “Update Device Descriptions (via ETG Website)...”

The [TwinCAT ESI Updater \[▶ 61\]](#) is available for this purpose.

 <b>Note</b>	<b>ESI</b> The *.xml files are associated with *.xsd files, which describe the structure of the ESI XML files. To update the ESI device descriptions, both file types should therefore be updated.
--	---

### Device differentiation

EtherCAT devices/slaves are distinguished by four properties, which determine the full device identifier. For example, the device identifier EL2521-0025-1018 consists of:

- family key “EL”
- name “2521”
- type “0025”
- and revision “1018”

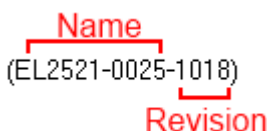


Fig. 50: Identifier structure

The order identifier consisting of name + type (here: EL2521-0010) describes the device function. The revision indicates the technical progress and is managed by Beckhoff. In principle, a device with a higher revision can replace a device with a lower revision, unless specified otherwise, e.g. in the documentation. Each revision has its own ESI description. See [further notes \[▶ 9\]](#).

## Online description

If the EtherCAT configuration is created online through scanning of real devices (see section Online setup) and no ESI descriptions are available for a slave (specified by name and revision) that was found, the System Manager asks whether the description stored in the device should be used. In any case, the System Manager needs this information for setting up the cyclic and acyclic communication with the slave correctly.

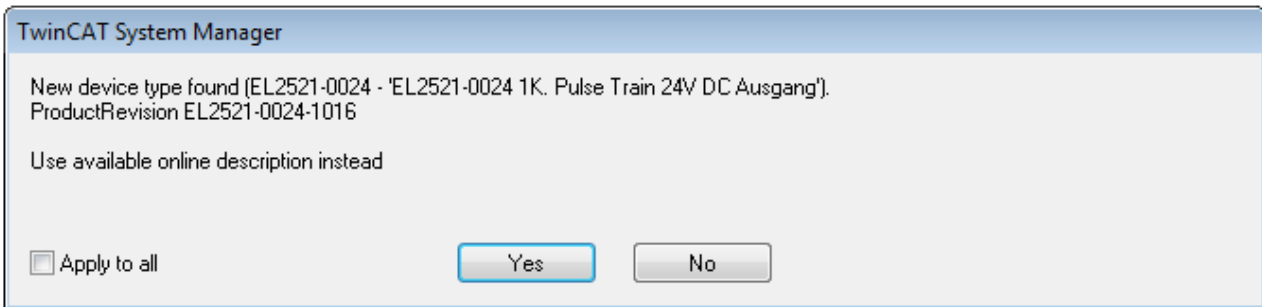


Fig. 51: *OnlineDescription information window (TwinCAT 2)*

In TwinCAT 3 a similar window appears, which also offers the Web update:

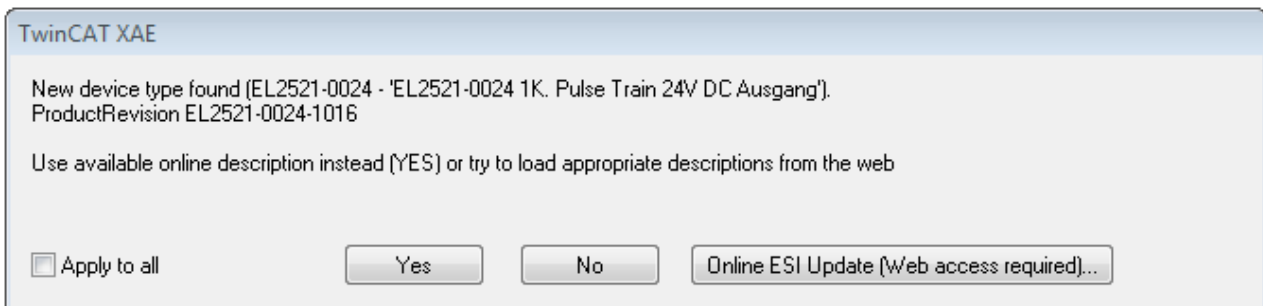



Fig. 52: *Information window OnlineDescription (TwinCAT 3)*

If possible, the Yes is to be rejected and the required ESI is to be requested from the device manufacturer. After installation of the XML/XSD file the configuration process should be repeated.

 <b>Attention</b>	<p><b>Changing the 'usual' configuration through a scan</b></p> <ul style="list-style-type: none"> <li>✓ If a scan discovers a device that is not yet known to TwinCAT, distinction has to be made between two cases. Taking the example here of the EL2521-0000 in the revision 1019             <ol style="list-style-type: none"> <li>a) no ESI is present for the EL2521-0000 device at all, either for the revision 1019 or for an older revision. The ESI must then be requested from the manufacturer (in this case Beckhoff).</li> <li>b) an ESI is present for the EL2521-0000 device, but only in an older revision, e.g. 1018 or 1017.                In this case an in-house check should first be performed to determine whether the spare parts stock allows the integration of the increased revision into the configuration at all. A new/higher revision usually also brings along new features. If these are not to be used, work can continue without reservations with the previous revision 1018 in the configuration. This is also stated by the Beckhoff compatibility rule.</li> </ol> </li> </ul>
---	---

Refer in particular to the chapter '[General notes on the use of Beckhoff EtherCAT IO components](#)' and for manual configuration to the chapter '[Offline configuration creation](#)' [▶ 62].

If the OnlineDescription is used regardless, the System Manager reads a copy of the device description from the EEPROM in the EtherCAT slave. In complex slaves the size of the EEPROM may not be sufficient for the complete ESI, in which case the ESI would be *incomplete* in the configurator. Therefore it's recommended using an offline ESI file with priority in such a case.

The System Manager creates for online recorded device descriptions a new file "OnlineDescription0000...xml" in its ESI directory, which contains all ESI descriptions that were read online.



OnlineDescriptionCache00000002.xml

Fig. 53: File OnlineDescription.xml created by the System Manager

If a slave desired to be added manually to the configuration at a later stage, online created slaves are indicated by a prepended symbol ">" in the selection list (see Figure "Indication of an online recorded ESI of EL2521 as an example").

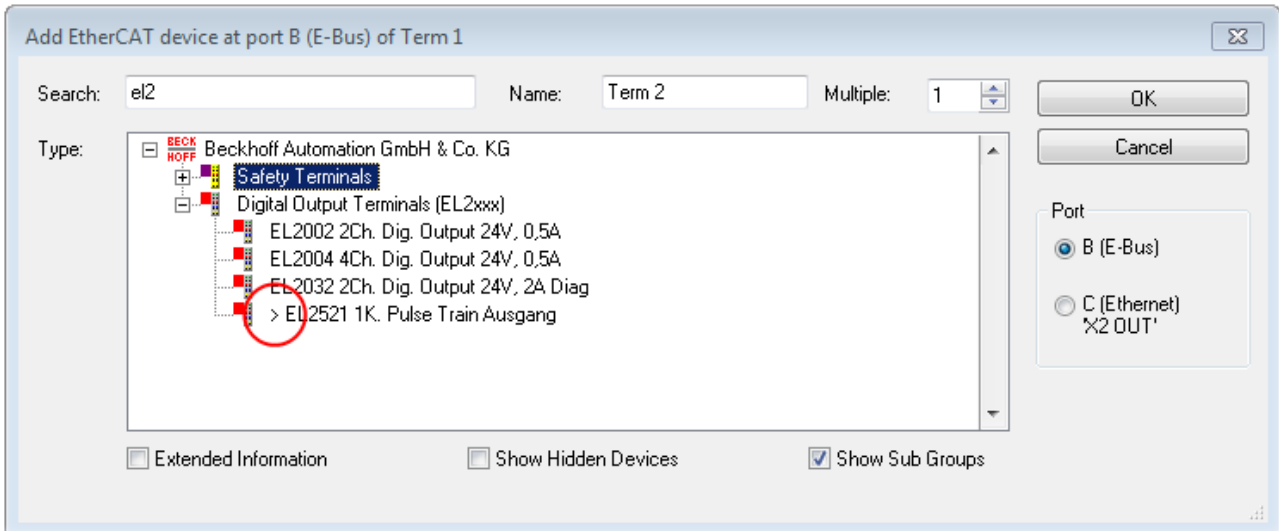



Fig. 54: Indication of an online recorded ESI of EL2521 as an example

If such ESI files are used and the manufacturer's files become available later, the file OnlineDescription.xml should be deleted as follows:

- close all System Manager windows
- restart TwinCAT in Config mode
- delete "OnlineDescription0000...xml"
- restart TwinCAT System Manager

This file should not be visible after this procedure, if necessary press <F5> to update

 <b>Note</b>	<p><b>OnlineDescription for TwinCAT 3.x</b></p> <p>In addition to the file described above "OnlineDescription0000...xml" , a so called EtherCAT cache with new discovered devices is created by TwinCAT 3.x, e.g. under Windows 7:</p> <p><code>C:\User\{USERNAME}\AppData\Roaming\Beckhoff\TwinCAT3\Components\Base\EtherCATCache.xml</code></p> <p>(Please note the language settings of the OS!)          You have to delete this file, too.</p>
--	---

**Faulty ESI file**

If an ESI file is faulty and the System Manager is unable to read it, the System Manager brings up an information window.

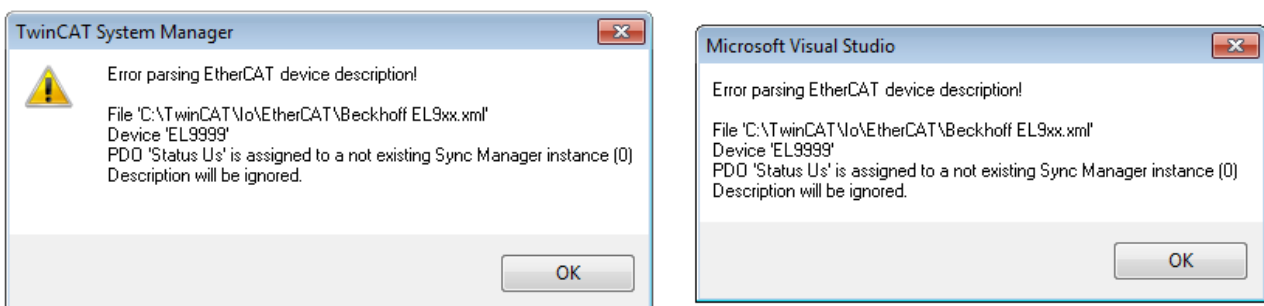


Fig. 55: Information window for faulty ESI file (left: TwinCAT 2; right: TwinCAT 3)

Reasons may include:

- Structure of the \*.xml does not correspond to the associated \*.xsd file → check your schematics
- Contents cannot be translated into a device description → contact the file manufacturer



### 6.1.3 TwinCAT ESI Updater

For TwinCAT 2.11 and higher, the System Manager can search for current Beckhoff ESI files automatically, if an online connection is available:

 


Fig. 56: Using the ESI Updater (>= TwinCAT 2.11)

The call up takes place under:  
 “Options” → “Update EtherCAT Device Descriptions”

Selection under TwinCAT 3:

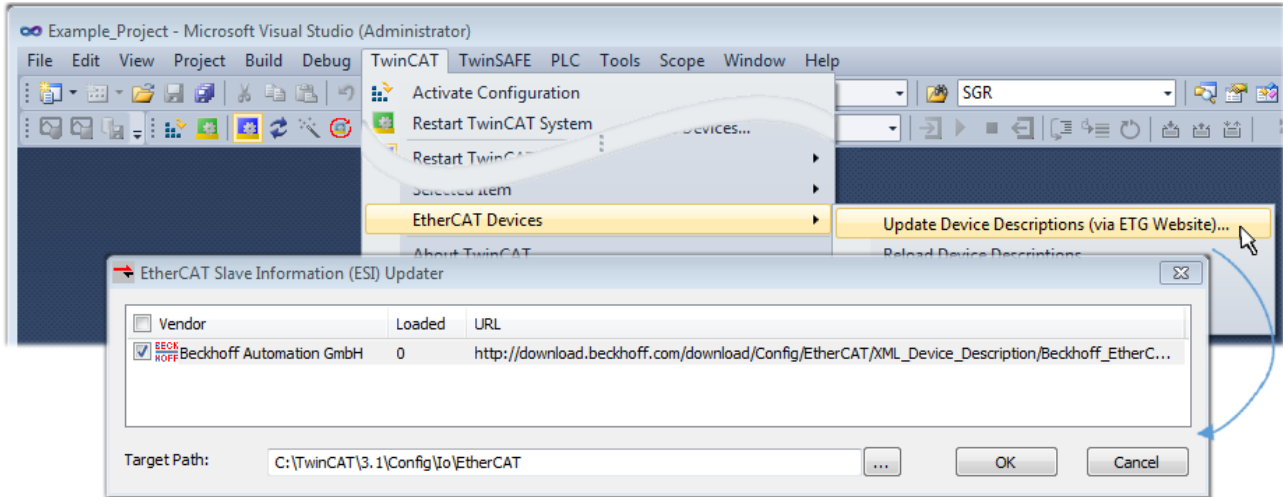


Fig. 57: Using the ESI Updater (TwinCAT 3)

The ESI Updater (TwinCAT 3) is a convenient option for automatic downloading of ESI data provided by EtherCAT manufacturers via the Internet into the TwinCAT directory (ESI = EtherCAT slave information). TwinCAT accesses the central ESI ULR directory list stored at ETG; the entries can then be viewed in the Updater dialog, although they cannot be changed there.

The call up takes place under:  
 “TwinCAT“ → „EtherCAT Devices“ → “Update Device Description (via ETG Website)...“.

### 6.1.4 Distinction between Online and Offline

The distinction between online and offline refers to the presence of the actual I/O environment (drives, terminals, EJ-modules). If the configuration is to be prepared in advance of the system configuration as a programming system, e.g. on a laptop, this is only possible in “Offline configuration” mode. In this case all components have to be entered manually in the configuration, e.g. based on the electrical design.

If the designed control system is already connected to the EtherCAT system and all components are energised and the infrastructure is ready for operation, the TwinCAT configuration can simply be generated through “scanning” from the runtime system. This is referred to as online configuration.

In any case, during each startup the EtherCAT master checks whether the slaves it finds match the configuration. This test can be parameterised in the extended slave settings. Refer to note “Installation of the latest ESI-XML device description” [▶ 57].

**For preparation of a configuration:**

- the real EtherCAT hardware (devices, couplers, drives) must be present and installed
- the devices/modules must be connected via EtherCAT cables or in the terminal/ module strand in the same way as they are intended to be used later

- the devices/modules be connected to the power supply and ready for communication
- TwinCAT must be in CONFIG mode on the target system.

**The online scan process consists of:**

- detecting the EtherCAT device [▶ 67] (Ethernet port at the IPC)
- detecting the connected EtherCAT devices [▶ 68]. This step can be carried out independent of the preceding step
- troubleshooting [▶ 71]

The scan with existing configuration [▶ 72] can also be carried out for comparison.

## 6.1.5 OFFLINE configuration creation

### Creating the EtherCAT device

Create an EtherCAT device in an empty System Manager window.

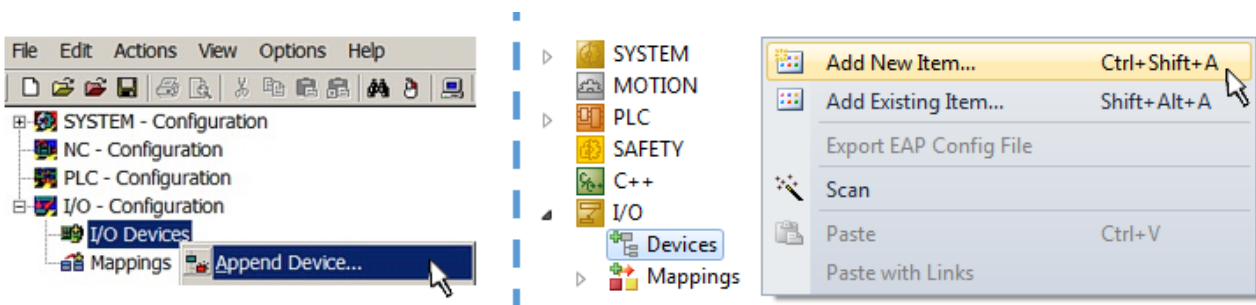


Fig. 58: Append EtherCAT device (left: TwinCAT 2; right: TwinCAT 3)

Select type 'EtherCAT' for an EtherCAT I/O application with EtherCAT slaves. For the present publisher/ subscriber service in combination with an EL6601/EL6614 terminal select "EtherCAT Automation Protocol via EL6601".

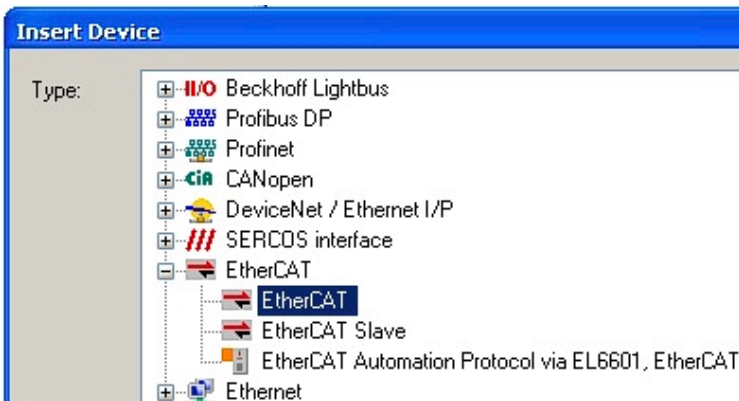


Fig. 59: Selecting the EtherCAT connection (TwinCAT 2.11, TwinCAT 3)

Then assign a real Ethernet port to this virtual device in the runtime system.

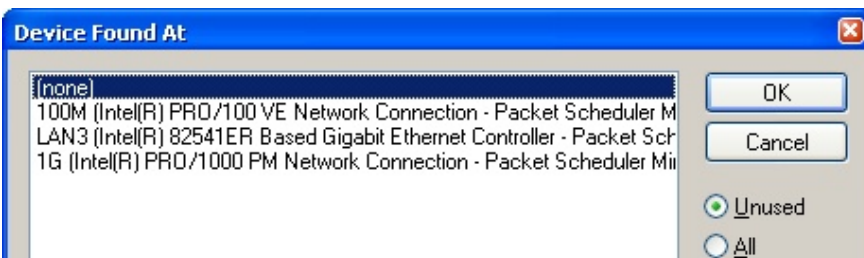


Fig. 60: Selecting the Ethernet port

This query may appear automatically when the EtherCAT device is created, or the assignment can be set/modified later in the properties dialog; see Fig. “EtherCAT device properties (TwinCAT 2)”.


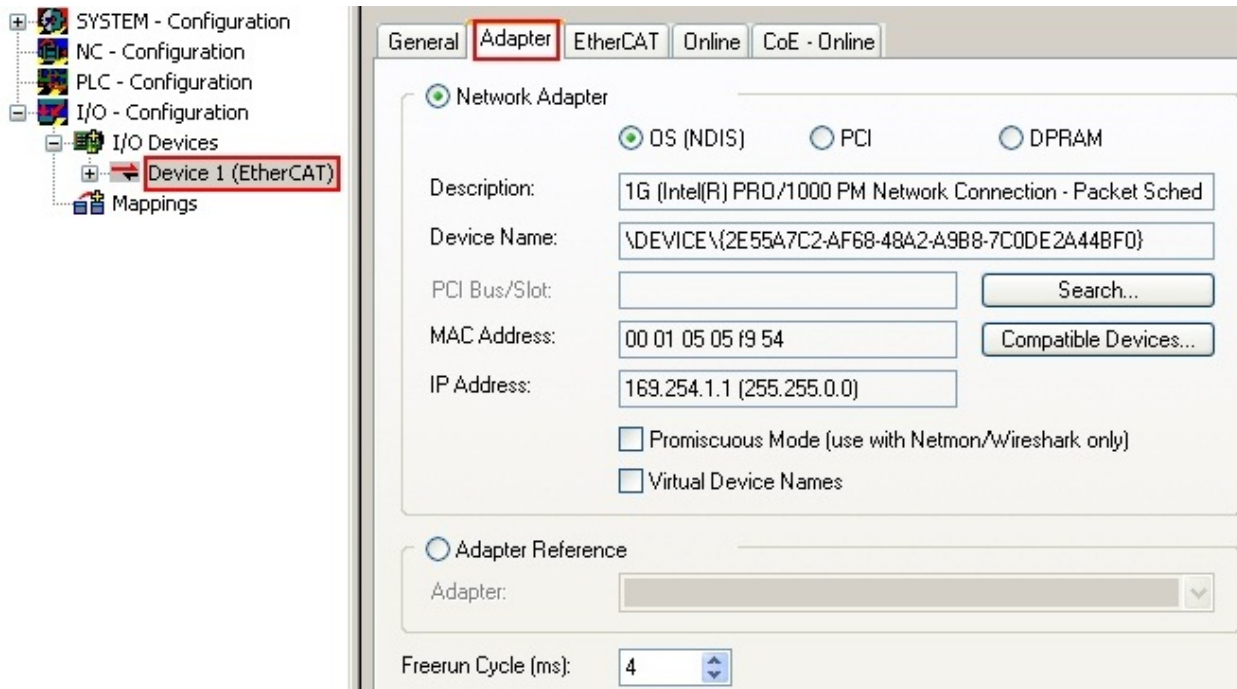


Fig. 61: EtherCAT device properties (TwinCAT 2)

TwinCAT 3: the properties of the EtherCAT device can be opened by double click on “Device .. (EtherCAT)” within the Solution Explorer under “I/O”:

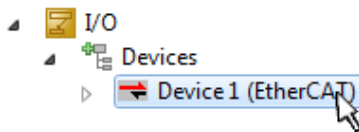

 <b>Note</b>	<p><b>Selecting the Ethernet port</b></p> <p>Ethernet ports can only be selected for EtherCAT devices for which the TwinCAT real-time driver is installed. This has to be done separately for each port. Please refer to the respective <a href="#">installation page [▶ 51]</a>.</p>
--	---

**Defining EtherCAT slaves**

Further devices can be appended by right-clicking on a device in the configuration tree.

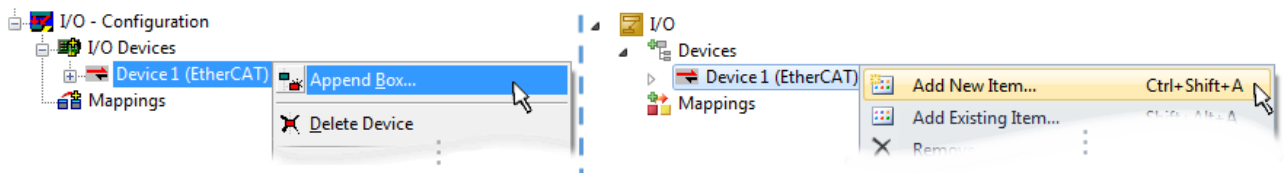


Fig. 62: Appending EtherCAT devices (left: TwinCAT 2; right: TwinCAT 3)

The dialog for selecting a new device opens. Only devices for which ESI files are available are displayed.

Only devices are offered for selection that can be appended to the previously selected device. Therefore the physical layer available for this port is also displayed (Fig. “Selection dialog for new EtherCAT device”, A). In the case of cable-based Fast-Ethernet physical layer with PHY transfer, then also only cable-based devices are available, as shown in Fig. “Selection dialog for new EtherCAT device”. If the preceding device has several free ports (e.g. EK1122 or EK1100), the required port can be selected on the right-hand side (A).

Overview of physical layer

- “Ethernet”: cable-based 100BASE-TX: EK couplers, EP boxes, devices with RJ45/M8/M12 connector

- “E-Bus”: LVDS “terminal bus”, “EJ-module”: EL/ES terminals, various modular modules

The search field facilitates finding specific devices (since TwinCAT 2.11 or TwinCAT 3).

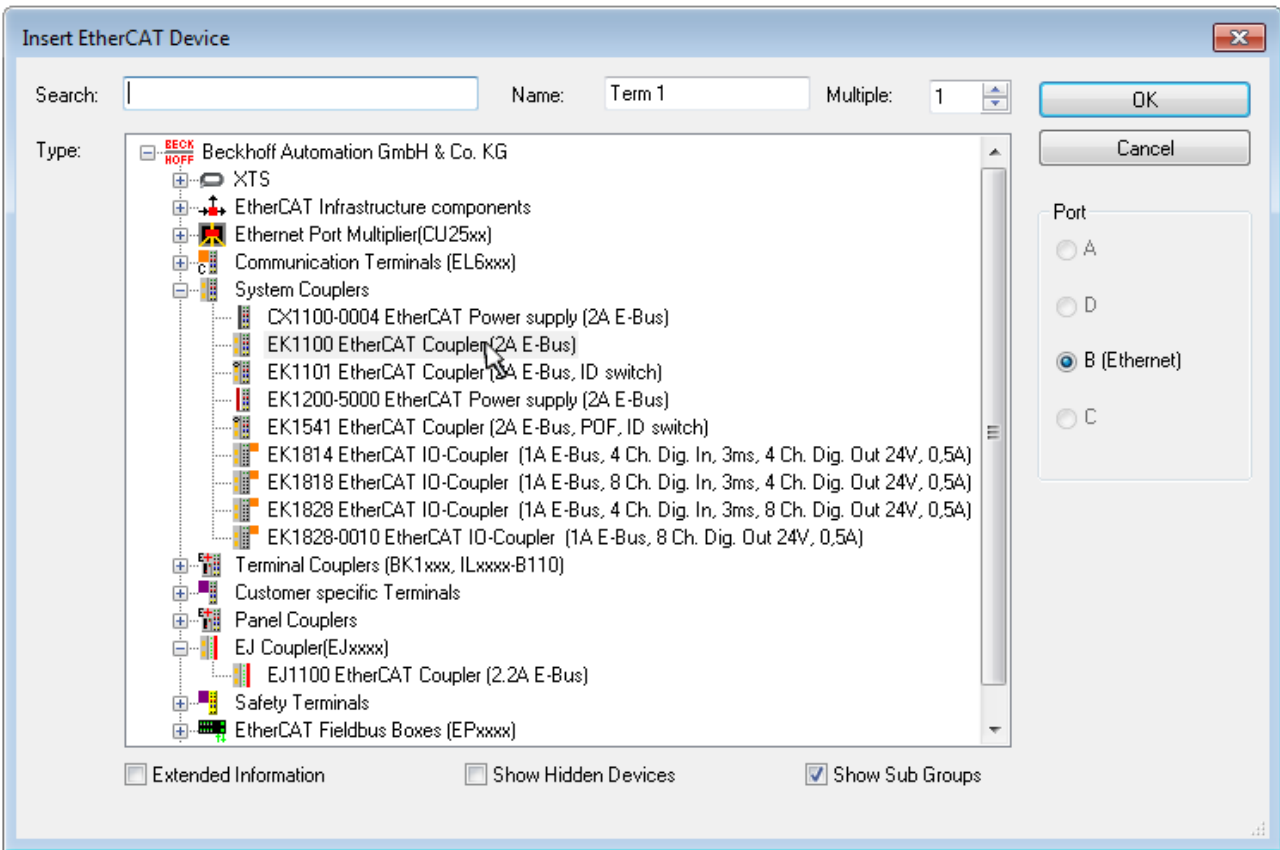


Fig. 63: Selection dialog for new EtherCAT device

By default only the name/device type is used as selection criterion. For selecting a specific revision of the device the revision can be displayed as “Extended Information”.

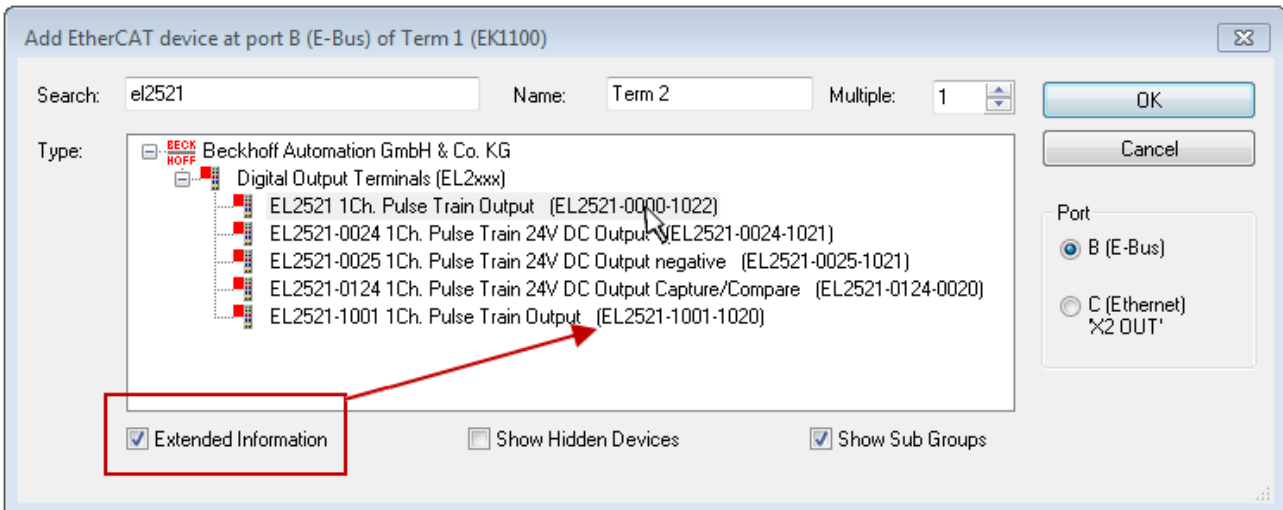


Fig. 64: Display of device revision

In many cases several device revisions were created for historic or functional reasons, e.g. through technological advancement. For simplification purposes (see Fig. “Selection dialog for new EtherCAT device”) only the last (i.e. highest) revision and therefore the latest state of production is displayed in the selection dialog for Beckhoff devices. To show all device revisions available in the system as ESI descriptions tick the “Show Hidden Devices” check box, see Fig. “Display of previous revisions”.

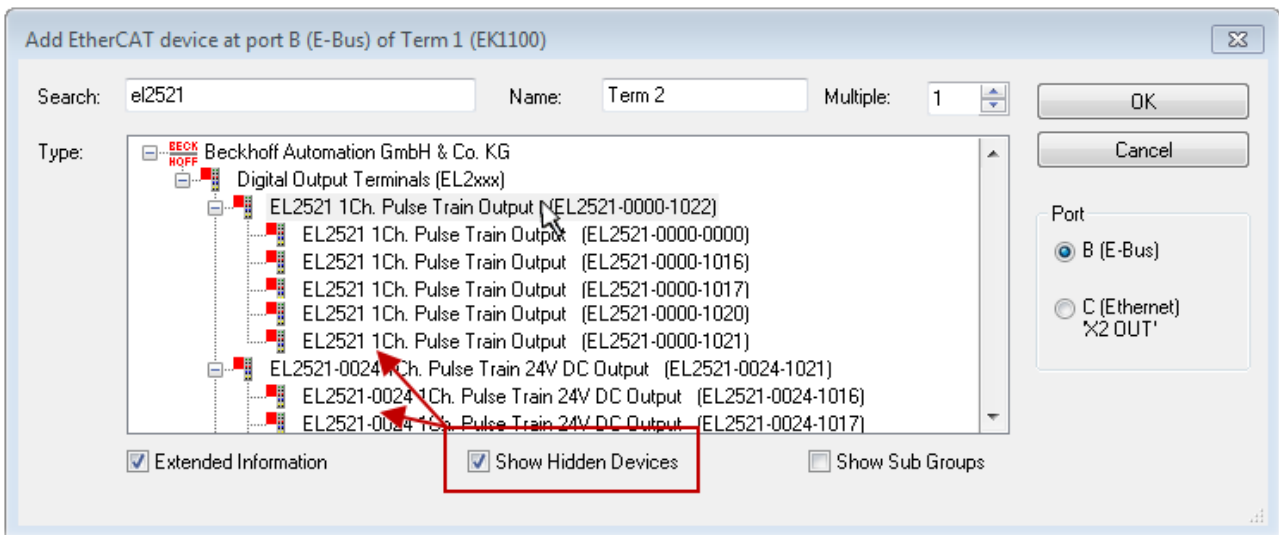



Fig. 65: Display of previous revisions

 <b>Note</b>	<p><b>Device selection based on revision, compatibility</b></p> <p>The ESI description also defines the process image, the communication type between master and slave/device and the device functions, if applicable. The physical device (firmware, if available) has to support the communication queries/settings of the master. This is backward compatible, i.e. newer devices (higher revision) should be supported if the EtherCAT master addresses them as an older revision. The following compatibility rule of thumb is to be assumed for Beckhoff EtherCAT Terminals/ Boxes/ EJ-modules:</p> <p><b>device revision in the system &gt;= device revision in the configuration</b></p> <p>This also enables subsequent replacement of devices without changing the configuration (different specifications are possible for drives).</p>
--	--

**Example:**

If an EL2521-0025-**1018** is specified in the configuration, an EL2521-0025-**1018** or higher (**-1019**, **-1020**) can be used in practice.

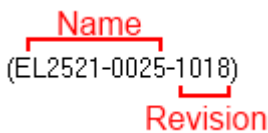


Fig. 66: Name/revision of the terminal

If current ESI descriptions are available in the TwinCAT system, the last revision offered in the selection dialog matches the Beckhoff state of production. It is recommended to use the last device revision when creating a new configuration, if current Beckhoff devices are used in the real application. Older revisions should only be used if older devices from stock are to be used in the application.

In this case the process image of the device is shown in the configuration tree and can be parameterised as follows: linking with the task, CoE/DC settings, plug-in definition, startup settings, ...

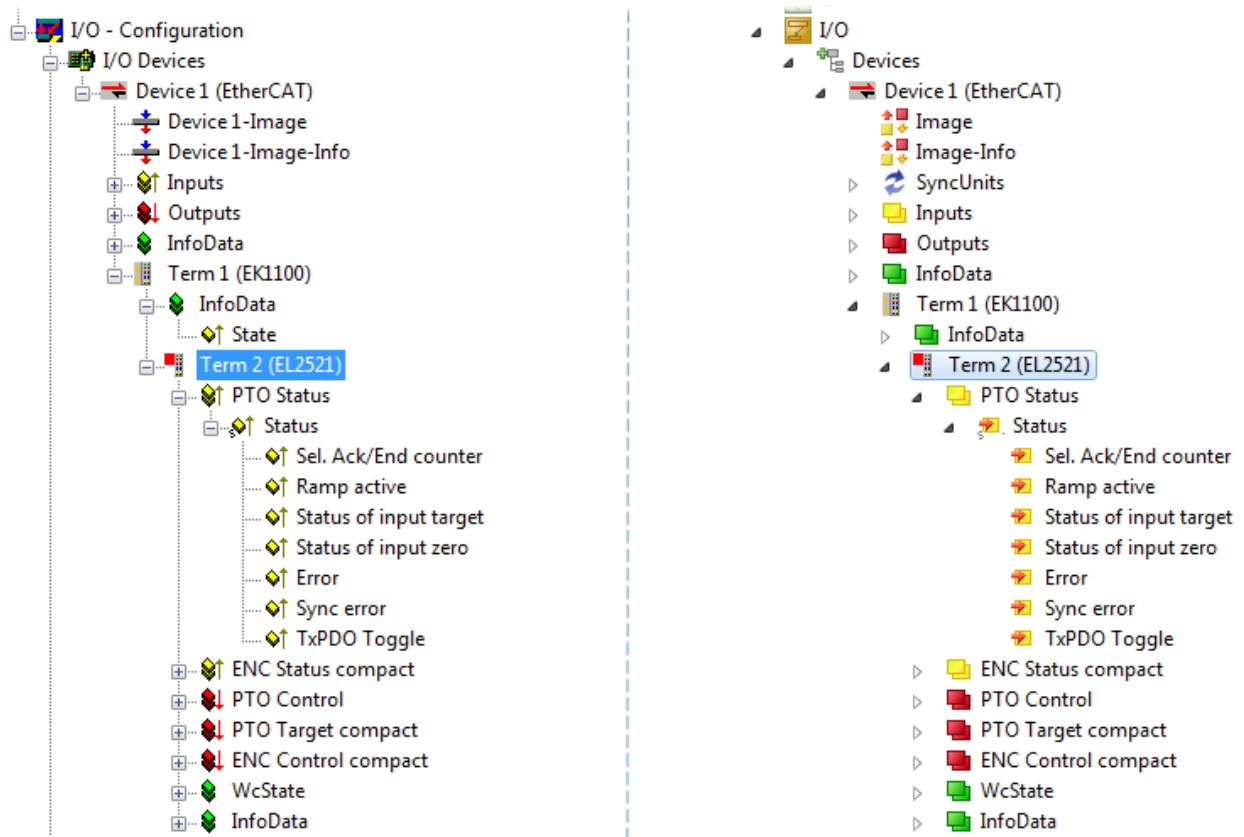




Fig. 67: EtherCAT terminal in the TwinCAT tree (left: TwinCAT 2; right: TwinCAT 3)





### 6.1.6 ONLINE configuration creation


#### Detecting/scanning of the EtherCAT device



The online device search can be used if the TwinCAT system is in CONFIG mode. This can be indicated by a symbol right below in the information bar:

- on TwinCAT 2 by a blue display “Config Mode” within the System Manager window:  .
- on TwinCAT 3 within the user interface of the development environment by a symbol  .

TwinCAT can be set into this mode:

- TwinCAT 2: by selection of  in the Menubar or by “Actions” → “Set/Reset TwinCAT to Config Mode...”
- TwinCAT 3: by selection of  in the Menubar or by „TwinCAT“ → “Restart TwinCAT (Config Mode)”

 <b>Note</b>	<p><b>Online scanning in Config mode</b></p> <p>The online search is not available in RUN mode (production operation). Note the differentiation between TwinCAT programming system and TwinCAT target system.</p>
--	---

The TwinCAT 2 icon (  ) or TwinCAT 3 icon (  ) within the Windows-Taskbar always shows the TwinCAT mode of the local IPC. Compared to that, the System Manager window of TwinCAT 2 or the user interface of TwinCAT 3 indicates the state of the target system.

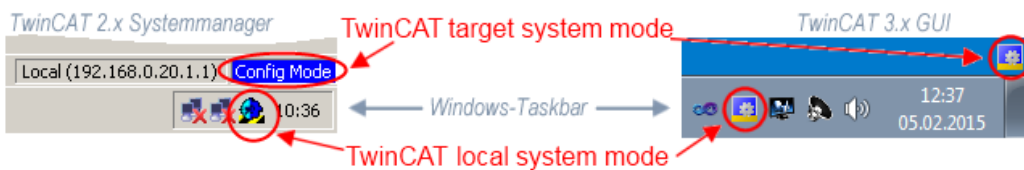


Fig. 68: Differentiation local/target system (left: TwinCAT 2; right: TwinCAT 3)

Right-clicking on “I/O Devices” in the configuration tree opens the search dialog.

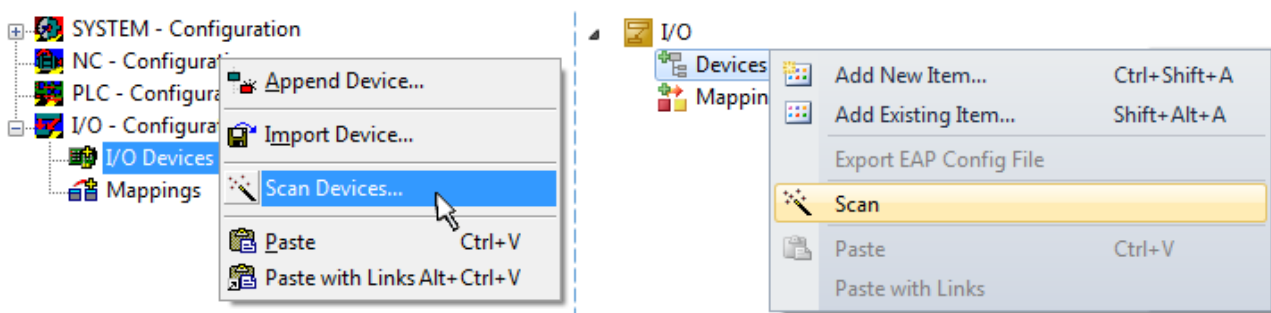


Fig. 69: Scan Devices (left: TwinCAT 2; right: TwinCAT 3)

This scan mode attempts to find not only EtherCAT devices (or Ethernet ports that are usable as such), but also NOVDRAM, fieldbus cards, SMB etc. However, not all devices can be found automatically.

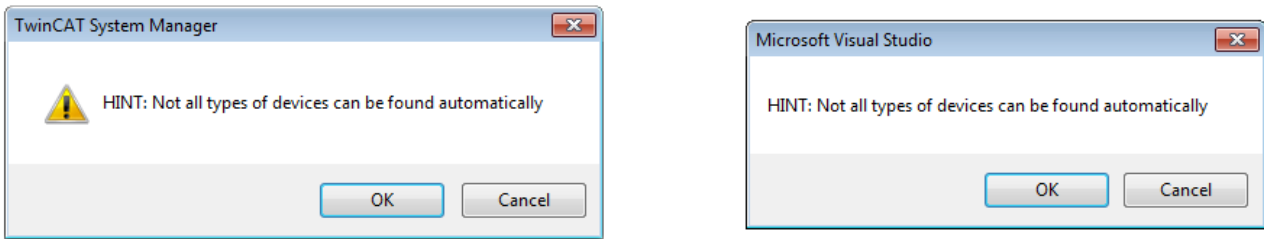


Fig. 70: Note for automatic device scan (left: TwinCAT 2; right: TwinCAT 3)

Ethernet ports with installed TwinCAT real-time driver are shown as “RT Ethernet” devices. An EtherCAT frame is sent to these ports for testing purposes. If the scan agent detects from the response that an EtherCAT slave is connected, the port is immediately shown as an “EtherCAT Device” .

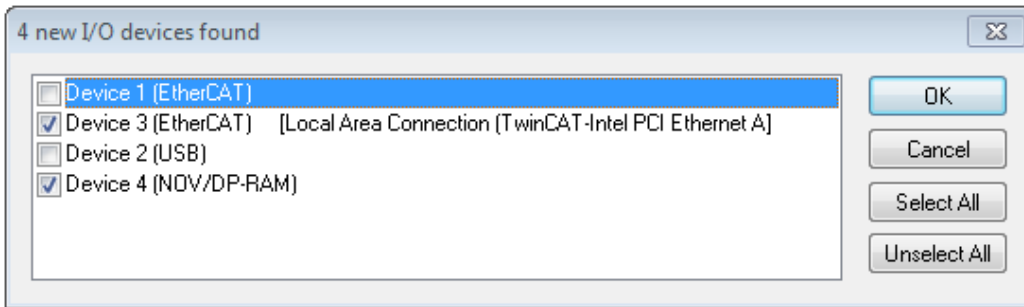




Fig. 71: Detected Ethernet devices

Via respective checkboxes devices can be selected (as illustrated in Fig. “Detected Ethernet devices” e.g. Device 3 and Device 4 were chosen). After confirmation with “OK” a device scan is suggested for all selected devices, see Fig.: “Scan query after automatic creation of an EtherCAT device”.

 <b>Note</b>	<p><b>Selecting the Ethernet port</b></p> <p>Ethernet ports can only be selected for EtherCAT devices for which the TwinCAT real-time driver is installed. This has to be done separately for each port. Please refer to the respective <a href="#">installation page</a> <b>▶ 51</b>.</p>
--	--

**Detecting/Scanning the EtherCAT devices**

 <b>Note</b>	<p><b>Online scan functionality</b></p> <p>During a scan the master queries the identity information of the EtherCAT slaves from the slave EEPROM. The name and revision are used for determining the type. The respective devices are located in the stored ESI data and integrated in the configuration tree in the default state defined there.</p>
--	--

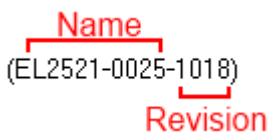



Fig. 72: Example default state

 <b>Attention</b>	<p><b>Slave scanning in practice in series machine production</b></p> <p>The scanning function should be used with care. It is a practical and fast tool for creating an initial configuration as a basis for commissioning. In series machine production or reproduction of the plant, however, the function should no longer be used for the creation of the configuration, but if necessary for <a href="#">comparison</a> <b>▶ 72</b> with the defined initial configuration. Background: since Beckhoff occasionally increases the revision version of the delivered products for product maintenance reasons, a configuration can be created by such a scan which (with an identical machine construction) is identical according to the device list; however, the respective device revision may differ from the initial configuration.</p>
---	--



**Example:**

Company A builds the prototype of a machine B, which is to be produced in series later on. To do this the prototype is built, a scan of the IO devices is performed in TwinCAT and the initial configuration 'B.tsm' is created. The EL2521-0025 EtherCAT terminal with the revision 1018 is located somewhere. It is thus built into the TwinCAT configuration in this way:

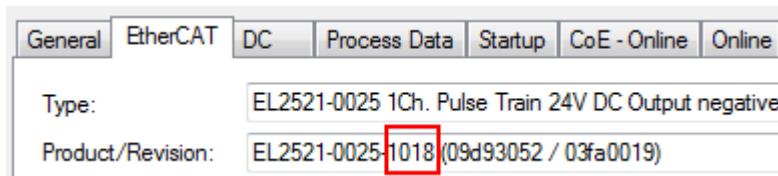


Fig. 73: Installing EtherCAT terminal with revision -1018

Likewise, during the prototype test phase, the functions and properties of this terminal are tested by the programmers/commissioning engineers and used if necessary, i.e. addressed from the PLC 'B.pro' or the NC. (the same applies correspondingly to the TwinCAT 3 solution files).

The prototype development is now completed and series production of machine B starts, for which Beckhoff continues to supply the EL2521-0025-0018. If the commissioning engineers of the series machine production department always carry out a scan, a B configuration with the identical contents results again for each machine. Likewise, A might create spare parts stores worldwide for the coming series-produced machines with EL2521-0025-1018 terminals.

After some time Beckhoff extends the EL2521-0025 by a new feature C. Therefore the FW is changed, outwardly recognizable by a higher FW version and a **new revision -1019**. Nevertheless the new device naturally supports functions and interfaces of the predecessor version(s); an adaptation of 'B.tsm' or even 'B.pro' is therefore unnecessary. The series-produced machines can continue to be built with 'B.tsm' and 'B.pro'; it makes sense to perform a comparative scan [▶ 72] against the initial configuration 'B.tsm' in order to check the built machine.

However, if the series machine production department now doesn't use 'B.tsm', but instead carries out a scan to create the productive configuration, the revision **-1019** is automatically detected and built into the configuration:

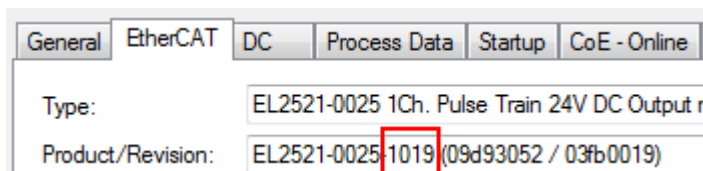


Fig. 74: Detection of EtherCAT terminal with revision -1019

This is usually not noticed by the commissioning engineers. TwinCAT cannot signal anything either, since virtually a new configuration is created. According to the compatibility rule, however, this means that no EL2521-0025-**1018** should be built into this machine as a spare part (even if this nevertheless works in the vast majority of cases).

In addition, it could be the case that, due to the development accompanying production in company A, the new feature C of the EL2521-0025-1019 (for example, an improved analog filter or an additional process data for the diagnosis) is discovered and used without in-house consultation. The previous stock of spare part devices are then no longer to be used for the new configuration 'B2.tsm' created in this way. If series machine production is established, the scan should only be performed for informative purposes for comparison with a defined initial configuration. Changes are to be made with care!

If an EtherCAT device was created in the configuration (manually or through a scan), the I/O field can be scanned for devices/slaves.



Fig. 75: Scan query after automatic creation of an EtherCAT device (left: TwinCAT 2; right: TwinCAT 3)

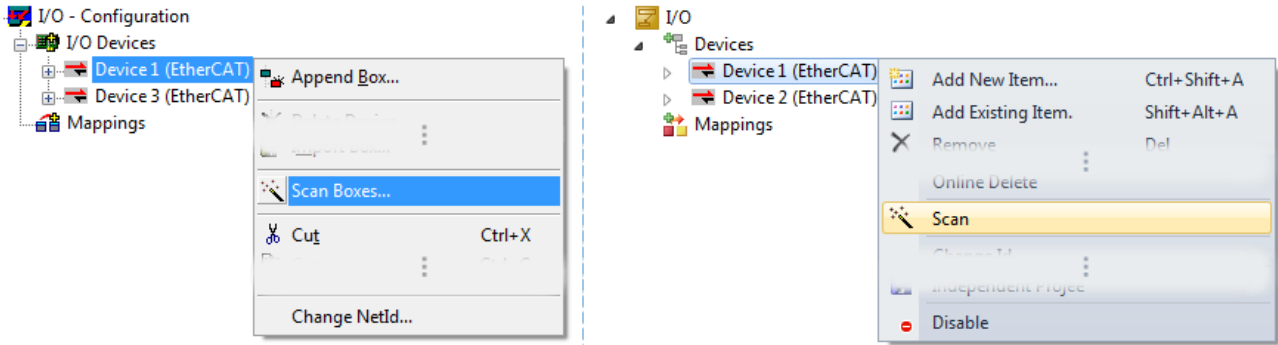


Fig. 76: Manual triggering of a device scan on a specified EtherCAT device (left: TwinCAT 2; right: TwinCAT 3)

In the System Manager (TwinCAT 2) or the User Interface (TwinCAT 3) the scan process can be monitored via the progress bar at the bottom in the status bar.

 


Fig. 77: Scan progress exemplary by TwinCAT 2

The configuration is established and can then be switched to online state (OPERATIONAL).



Fig. 78: Config/FreeRun query (left: TwinCAT 2; right: TwinCAT 3)

In Config/FreeRun mode the System Manager display alternates between blue and red, and the EtherCAT device continues to operate with the idling cycle time of 4 ms (default setting), even without active task (NC, PLC).



Fig. 79: Displaying of "Free Run" and "Config Mode" toggling right below in the status bar



Fig. 80: TwinCAT can also be switched to this state by using a button (left: TwinCAT 2; right: TwinCAT 3)

The EtherCAT system should then be in a functional cyclic state, as shown in Fig. "Online display example".

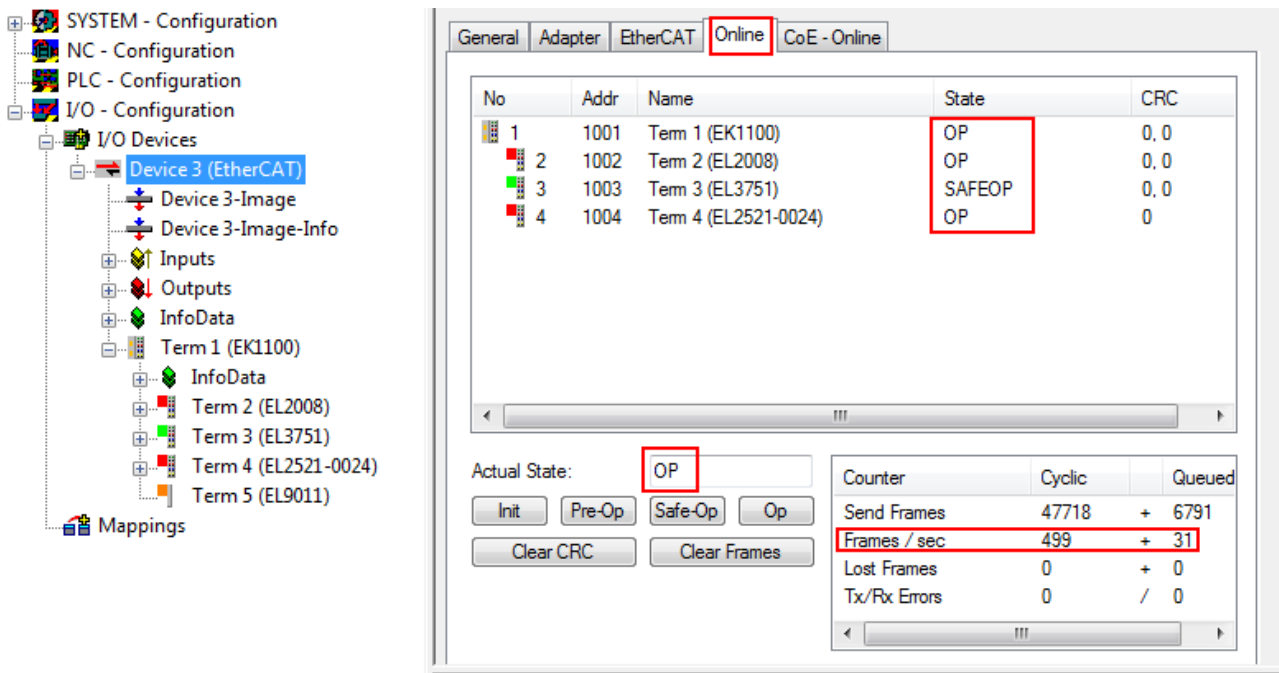


Fig. 81: Online display example

Please note:

- all slaves should be in OP state
- the EtherCAT master should be in “Actual State” OP
- “frames/sec” should match the cycle time taking into account the sent number of frames
- no excessive “LostFrames” or CRC errors should occur

The configuration is now complete. It can be modified as described under [manual procedure \[► 62\]](#).

### Troubleshooting

Various effects may occur during scanning.

- An **unknown device** is detected, i.e. an EtherCAT slave for which no ESI XML description is available. In this case the System Manager offers to read any ESI that may be stored in the device. This case is described in the chapter "Notes regarding ESI device description".
- **Device are not detected properly**  
Possible reasons include:
  - faulty data links, resulting in data loss during the scan
  - slave has invalid device description
 The connections and devices should be checked in a targeted manner, e.g. via the emergency scan. Then re-run the scan.

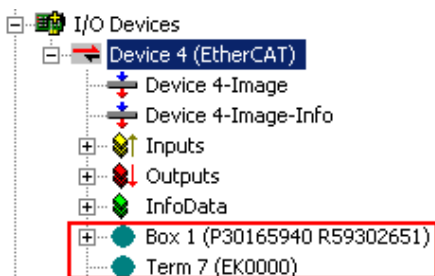



Fig. 82: Faulty identification

In the System Manager such devices may be set up as EK0000 or unknown devices. Operation is not possible or meaningful.

**Scan over existing Configuration**

 <b>Attention</b>	<p><b>Change of the configuration after comparison</b></p> <p>With this scan (TwinCAT 2.11 or 3.1) only the device properties vendor (manufacturer), device name and revision are compared at present! A ‘ChangeTo’ or ‘Copy’ should only be carried out with care, taking into consideration the Beckhoff IO compatibility rule (see above). The device configuration is then replaced by the revision found; this can affect the supported process data and functions.</p>
---	--

If a scan is initiated for an existing configuration, the actual I/O environment may match the configuration exactly or it may differ. This enables the configuration to be compared.



Fig. 83: Identical configuration (left: TwinCAT 2; right: TwinCAT 3)

If differences are detected, they are shown in the correction dialog, so that the user can modify the configuration as required.

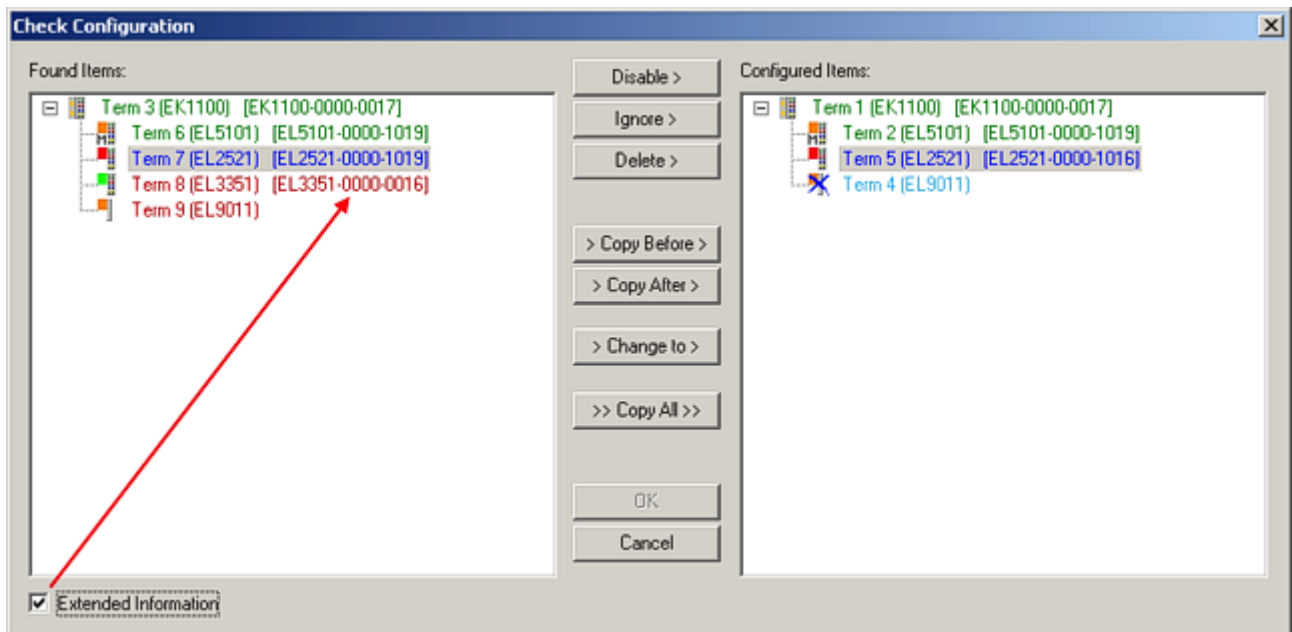


Fig. 84: Correction dialog

It is advisable to tick the “Extended Information” check box to reveal differences in the revision.

Colour	Explanation
green	This EtherCAT slave matches the entry on the other side. Both type and revision match.
blue	This EtherCAT slave is present on the other side, but in a different revision. This other revision can have other default values for the process data as well as other/additional functions. If the found revision is higher than the configured revision, the slave may be used provided compatibility issues are taken into account. If the found revision is lower than the configured revision, it is likely that the slave cannot be used. The found device may not support all functions that the master expects based on the higher revision number.
light blue	This EtherCAT slave is ignored (“Ignore” button)

Colour	Explanation
red	<ul style="list-style-type: none"> <li>This EtherCAT slave is not present on the other side.</li> <li>It is present, but in a different revision, which also differs in its properties from the one specified. The compatibility principle then also applies here: if the found revision is higher than the configured revision, use is possible provided compatibility issues are taken into account, since the successor devices should support the functions of the predecessor devices. If the found revision is lower than the configured revision, it is likely that the slave cannot be used. The found device may not support all functions that the master expects based on the higher revision number.</li> </ul>



**Note**

**Device selection based on revision, compatibility**

The ESI description also defines the process image, the communication type between master and slave/device and the device functions, if applicable. The physical device (firmware, if available) has to support the communication queries/settings of the master. This is backward compatible, i.e. newer devices (higher revision) should be supported if the EtherCAT master addresses them as an older revision. The following compatibility rule of thumb is to be assumed for Beckhoff EtherCAT Terminals/ Boxes/ EJ-modules:

**device revision in the system >= device revision in the configuration**

This also enables subsequent replacement of devices without changing the configuration (different specifications are possible for drives).

**Example:**

If an EL2521-0025-**1018** is specified in the configuration, an EL2521-0025-**1018** or higher (**-1019**, **-1020**) can be used in practice.

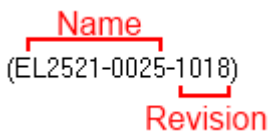


Fig. 85: Name/revision of the terminal

If current ESI descriptions are available in the TwinCAT system, the last revision offered in the selection dialog matches the Beckhoff state of production. It is recommended to use the last device revision when creating a new configuration, if current Beckhoff devices are used in the real application. Older revisions should only be used if older devices from stock are to be used in the application.

In this case the process image of the device is shown in the configuration tree and can be parameterised as follows: linking with the task, CoE/DC settings, plug-in definition, startup settings, ...

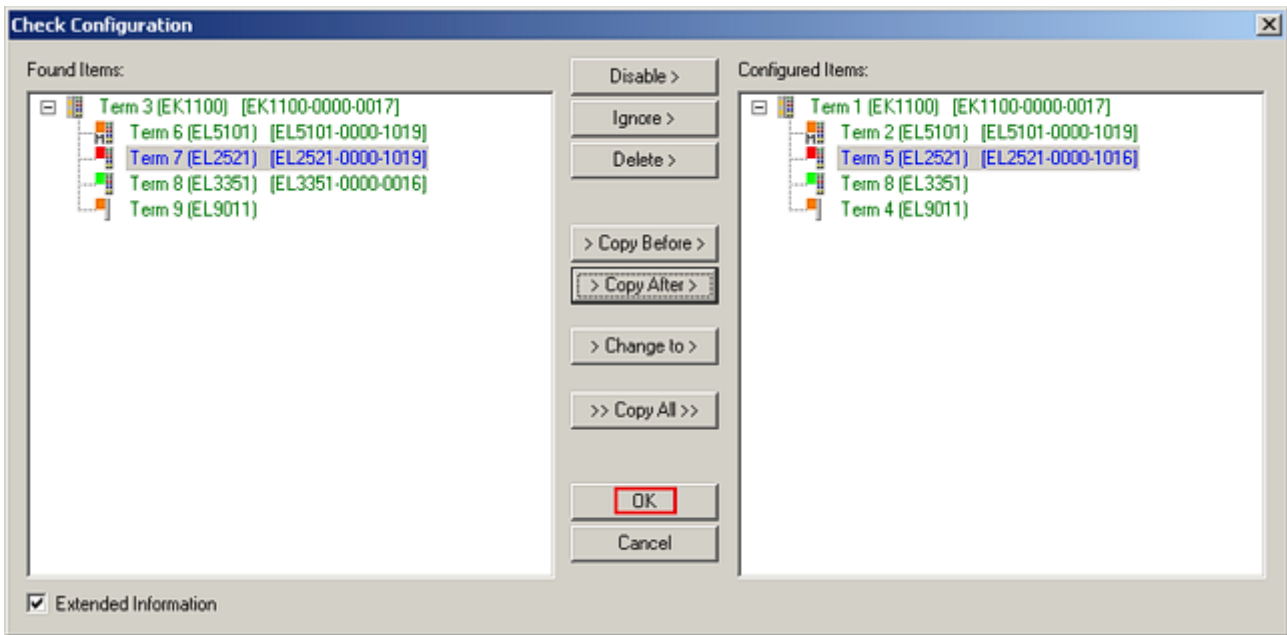


Fig. 86: Correction dialog with modifications

Once all modifications have been saved or accepted, click “OK” to transfer them to the real \*.tsm configuration.

### Change to Compatible Type

TwinCAT offers a function “Change to Compatible Type...” for the exchange of a device whilst retaining the links in the task.

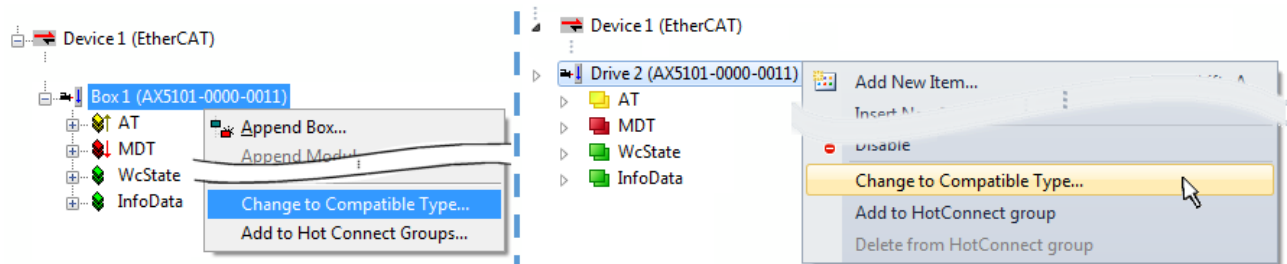


Fig. 87: Dialog “Change to Compatible Type...” (left: TwinCAT 2; right: TwinCAT 3)

This function is preferably to be used on AX5000 devices.

### Change to Alternative Type

The TwinCAT System Manager offers a function for the exchange of a device: *Change to Alternative Type*

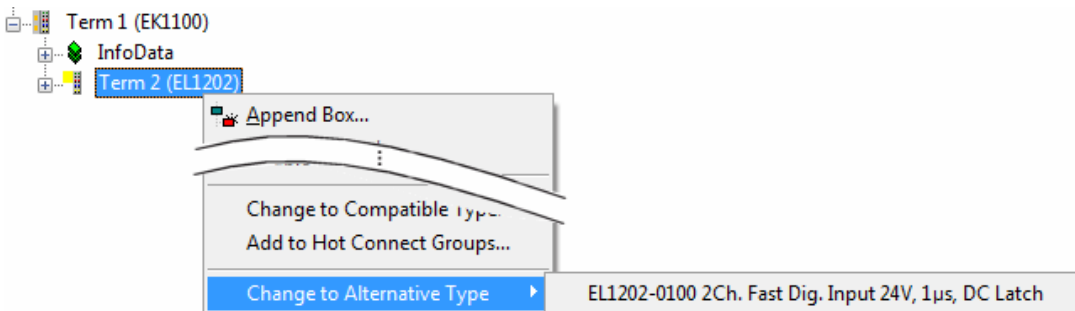


Fig. 88: TwinCAT 2 Dialog Change to Alternative Type

If called, the System Manager searches in the procured device ESI (in this example: EL1202-0000) for details of compatible devices contained there. The configuration is changed and the ESI-EEPROM is overwritten at the same time – therefore this process is possible only in the online state (ConfigMode).

### 6.1.7 EtherCAT subscriber configuration

In the left-hand window of the TwinCAT 2 System Manager or the Solution Explorer of the TwinCAT 3 Development Environment respectively, click on the element of the terminal within the tree you wish to configure (in the example: EL3751 Terminal 3).

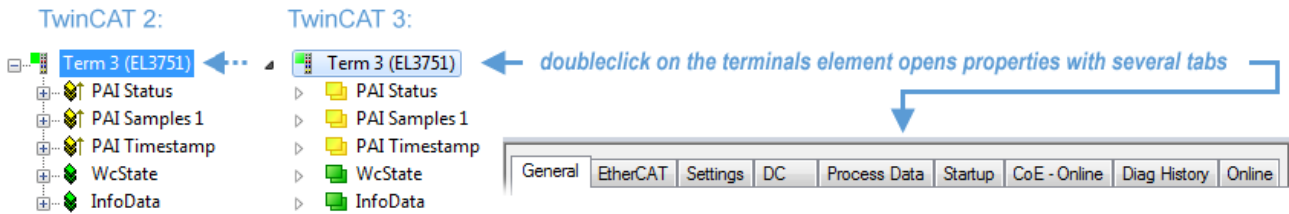


Fig. 89: Branch element as terminal EL3751

In the right-hand window of the TwinCAT System manager (TwinCAT 2) or the Development Environment (TwinCAT 3), various tabs are now available for configuring the terminal. And yet the dimension of complexity of a subscriber determines which tabs are provided. Thus as illustrated in the example above the terminal EL3751 provides many setup options and also a respective number of tabs are available. On the contrary by the terminal EL1004 for example the tabs "General", "EtherCAT", "Process Data" and "Online" are available only. Several terminals, as for instance the EL6695 provide special functions by a tab with its own terminal name, so "EL6695" in this case. A specific tab "Settings" by terminals with a wide range of setup options will be provided also (e.g. EL3751).

#### „General“ tab

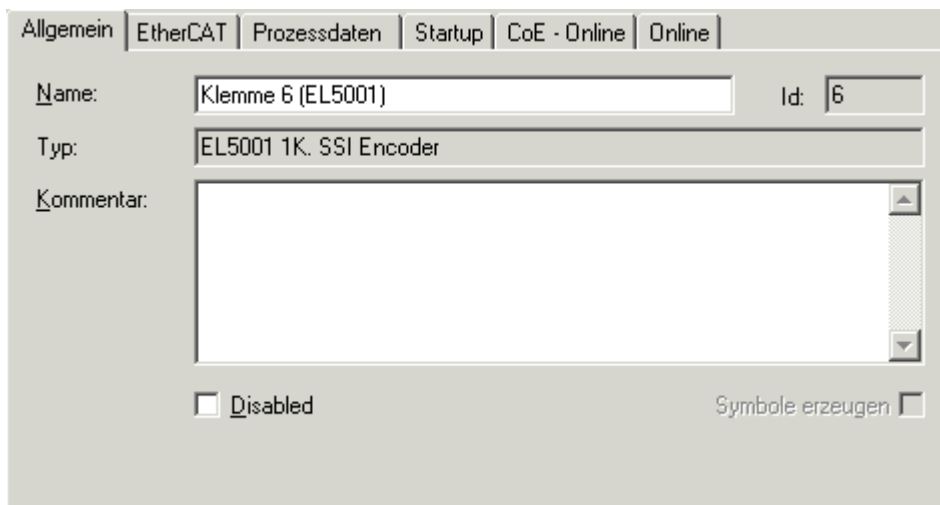


Fig. 90: "General" tab

<b>Name</b>	Name of the EtherCAT device
<b>Id</b>	Number of the EtherCAT device
<b>Type</b>	EtherCAT device type
<b>Comment</b>	Here you can add a comment (e.g. regarding the system).
<b>Disabled</b>	Here you can deactivate the EtherCAT device.
<b>Create symbols</b>	Access to this EtherCAT slave via ADS is only available if this control box is activated.



## „EtherCAT“ tab

Fig. 91: „EtherCAT“ tab

**Type**

EtherCAT device type

**Product/Revision**

Product and revision number of the EtherCAT device

**Auto Inc Addr.**

Auto increment address of the EtherCAT device. The auto increment address can be used for addressing each EtherCAT device in the communication ring through its physical position. Auto increment addressing is used during the start-up phase when the EtherCAT master allocates addresses to the EtherCAT devices. With auto increment addressing the first EtherCAT slave in the ring has the address  $0000_{\text{hex}}$ . For each further slave the address is decremented by 1 ( $FFFF_{\text{hex}}$ ,  $FFFE_{\text{hex}}$  etc.).

**EtherCAT Addr.**

Fixed address of an EtherCAT slave. This address is allocated by the EtherCAT master during the start-up phase. Tick the control box to the left of the input field in order to modify the default value.

**Previous Port**

Name and port of the EtherCAT device to which this device is connected. If it is possible to connect this device with another one without changing the order of the EtherCAT devices in the communication ring, then this combination field is activated and the EtherCAT device to which this device is to be connected can be selected.

**Advanced Settings**

This button opens the dialogs for advanced settings.

The link at the bottom of the tab points to the product page for this EtherCAT device on the web.

**“Process Data” tab**

Indicates the configuration of the process data. The input and output data of the EtherCAT slave are represented as CANopen process data objects (**P**rocess **D**ata **O**bjects, PDOs). The user can select a PDO via PDO assignment and modify the content of the individual PDO via this dialog, if the EtherCAT slave supports this function.



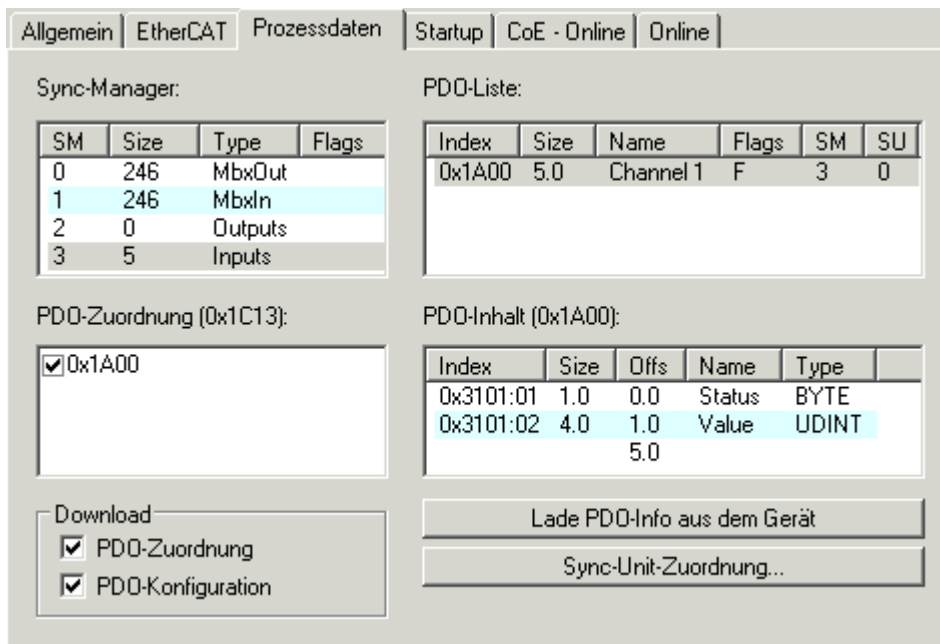


Fig. 92: "Process Data" tab

The process data (PDOs) transferred by an EtherCAT slave during each cycle are user data which the application expects to be updated cyclically or which are sent to the slave. To this end the EtherCAT master (Beckhoff TwinCAT) parameterizes each EtherCAT slave during the start-up phase to define which process data (size in bits/bytes, source location, transmission type) it wants to transfer to or from this slave. Incorrect configuration can prevent successful start-up of the slave.

For Beckhoff EtherCAT EL, ES, EM, EJ and EP slaves the following applies in general:

- The input/output process data supported by the device are defined by the manufacturer in the ESI/XML description. The TwinCAT EtherCAT Master uses the ESI description to configure the slave correctly.
- The process data can be modified in the system manager. See the device documentation. Examples of modifications include: mask out a channel, displaying additional cyclic information, 16-bit display instead of 8-bit data size, etc.
- In so-called "intelligent" EtherCAT devices the process data information is also stored in the CoE directory. Any changes in the CoE directory that lead to different PDO settings prevent successful startup of the slave. It is not advisable to deviate from the designated process data, because the device firmware (if available) is adapted to these PDO combinations.

If the device documentation allows modification of process data, proceed as follows (see Figure "Configuring the process data").

- A: select the device to configure
- B: in the "Process Data" tab select Input or Output under SyncManager (C)
- D: the PDOs can be selected or deselected
- H: the new process data are visible as linkable variables in the system manager  
The new process data are active once the configuration has been activated and TwinCAT has been restarted (or the EtherCAT master has been restarted)
- E: if a slave supports this, Input and Output PDO can be modified simultaneously by selecting a so-called PDO record ("predefined PDO settings").

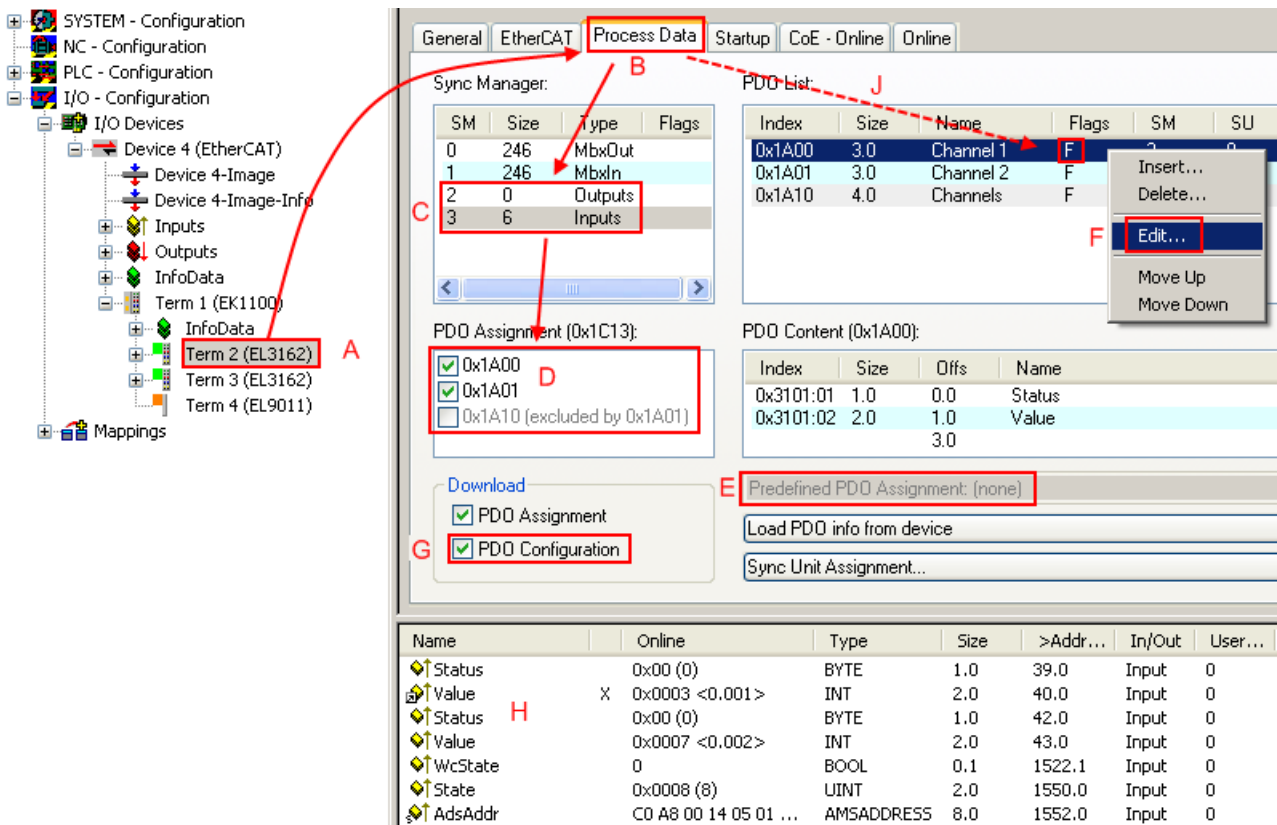


Fig. 93: Configuring the process data

i

**Note**

**Manual modification of the process data**

According to the ESI description, a PDO can be identified as “fixed” with the flag “F” in the PDO overview (Fig. “Configuring the process data”, J). The configuration of such PDOs cannot be changed, even if TwinCAT offers the associated dialog (“Edit”). In particular, CoE content cannot be displayed as cyclic process data. This generally also applies in cases where a device supports download of the PDO configuration, “G”. In case of incorrect configuration the EtherCAT slave usually refuses to start and change to OP state. The System Manager displays an “invalid SM cfg” logger message: This error message (“invalid SM IN cfg” or “invalid SM OUT cfg”) also indicates the reason for the failed start.

A detailed description [► 83] can be found at the end of this section.

**„Startup“ tab**

The *Startup* tab is displayed if the EtherCAT slave has a mailbox and supports the *CANopen over EtherCAT* (CoE) or *Servo drive over EtherCAT* protocol. This tab indicates which download requests are sent to the mailbox during startup. It is also possible to add new mailbox requests to the list display. The download requests are sent to the slave in the same order as they are shown in the list.

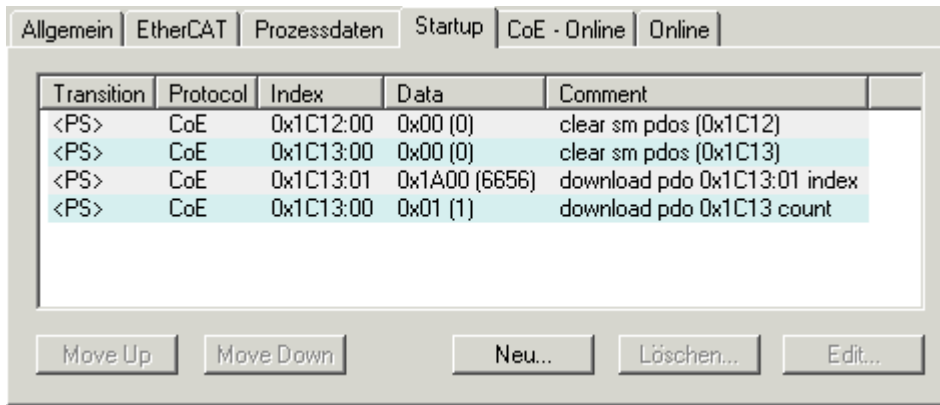


Fig. 94: „Startup“ tab

Column	Description
Transition	Transition to which the request is sent. This can either be <ul style="list-style-type: none"> <li>the transition from pre-operational to safe-operational (PS), or</li> <li>the transition from safe-operational to operational (SO).</li> </ul> If the transition is enclosed in "<>" (e.g. <PS>), the mailbox request is fixed and cannot be modified or deleted by the user.
Protocol	Type of mailbox protocol
Index	Index of the object
Data	Date on which this object is to be downloaded.
Comment	Description of the request to be sent to the mailbox

- Move Up** This button moves the selected request up by one position in the list.
- Move Down** This button moves the selected request down by one position in the list.
- New** This button adds a new mailbox download request to be sent during startup.
- Delete** This button deletes the selected entry.
- Edit** This button edits an existing request.

**“CoE – Online” tab**

The additional *CoE - Online* tab is displayed if the EtherCAT slave supports the *CANopen over EtherCAT* (CoE) protocol. This dialog lists the content of the object list of the slave (SDO upload) and enables the user to modify the content of an object from this list. Details for the objects of the individual EtherCAT devices can be found in the device-specific object descriptions.

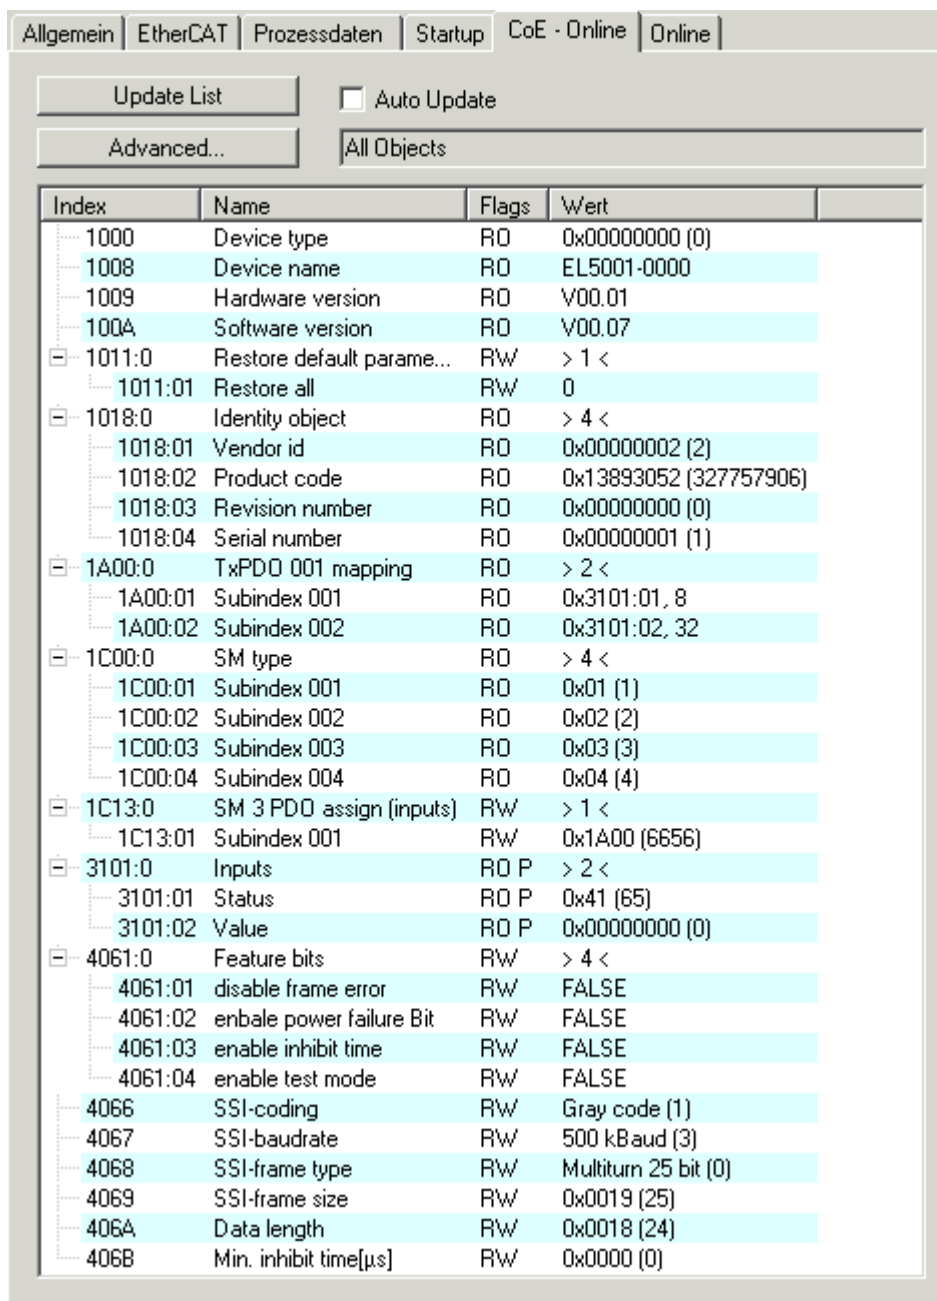


Fig. 95: "CoE – Online" tab

### Object list display

Column	Description	
Index	Index and sub-index of the object	
Name	Name of the object	
Flags	RW	The object can be read, and data can be written to the object (read/write)
	RO	The object can be read, but no data can be written to the object (read only)
	P	An additional P identifies the object as a process data object.
Value	Value of the object	

#### Update List

The *Update list* button updates all objects in the displayed list

#### Auto Update

If this check box is selected, the content of the objects is updated automatically.

**Advanced**

The *Advanced* button opens the *Advanced Settings* dialog. Here you can specify which objects are displayed in the list.

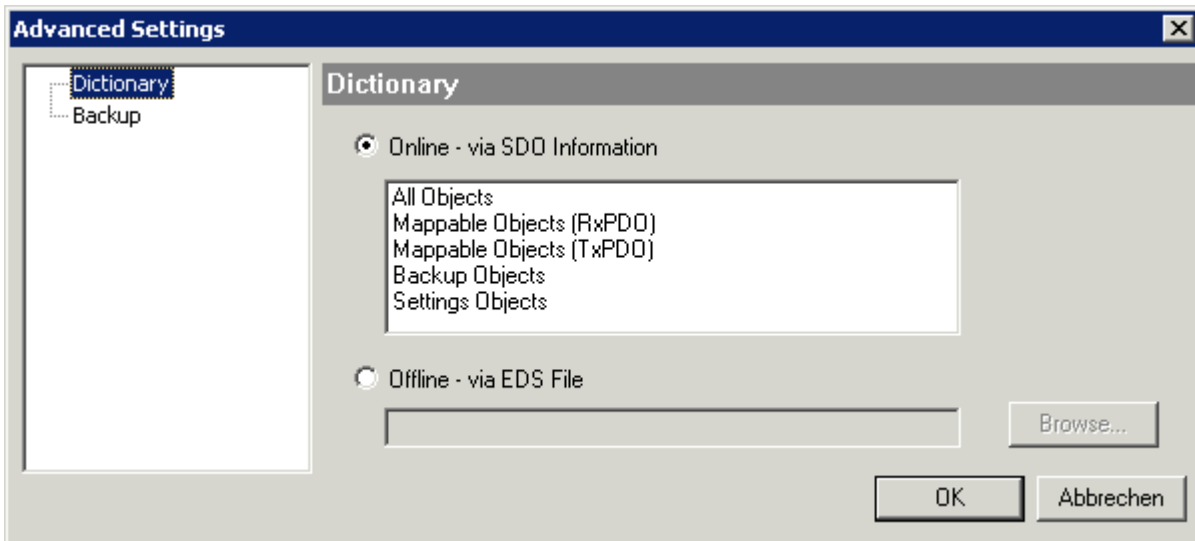


Fig. 96: Dialog “Advanced settings”

<b>Online - via SDO Information</b>	If this option button is selected, the list of the objects included in the object list of the slave is uploaded from the slave via SDO information. The list below can be used to specify which object types are to be uploaded.
<b>Offline - via EDS File</b>	If this option button is selected, the list of the objects included in the object list is read from an EDS file provided by the user.

**„Online“ tab**

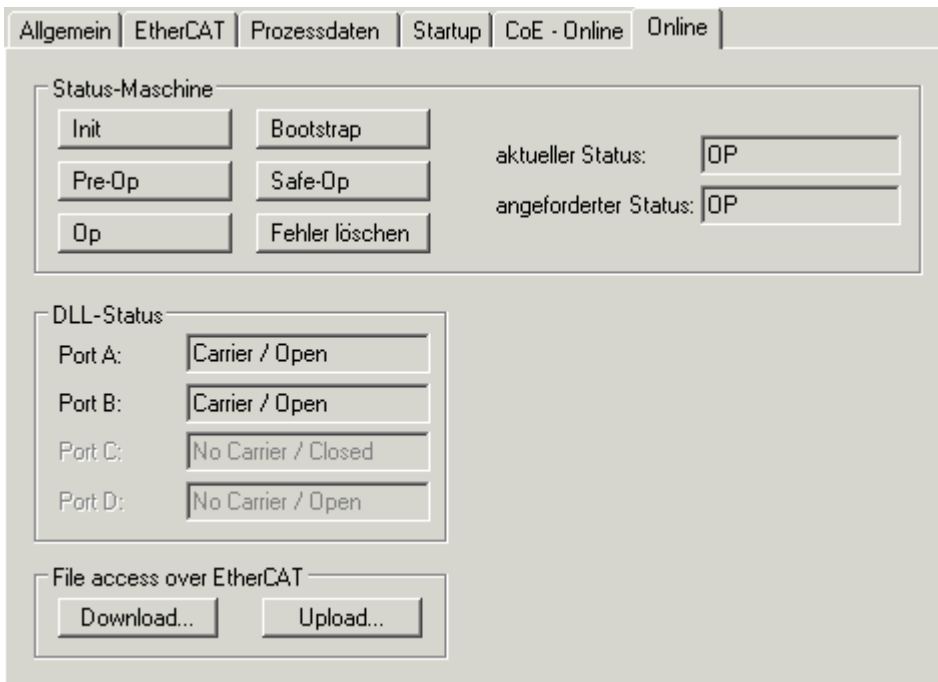


Fig. 97: „Online“ tab

**State Machine**

<b>Init</b>	This button attempts to set the EtherCAT device to the <i>Init</i> state.
<b>Pre-Op</b>	This button attempts to set the EtherCAT device to the <i>pre-operational</i> state.
<b>Op</b>	This button attempts to set the EtherCAT device to the <i>operational</i> state.
<b>Bootstrap</b>	This button attempts to set the EtherCAT device to the <i>Bootstrap</i> state.
<b>Safe-Op</b>	This button attempts to set the EtherCAT device to the <i>safe-operational</i> state.
<b>Clear Error</b>	This button attempts to delete the fault display. If an EtherCAT slave fails during change of state it sets an error flag.  Example: An EtherCAT slave is in PREOP state (pre-operational). The master now requests the SAFEOP state (safe-operational). If the slave fails during change of state it sets the error flag. The current state is now displayed as ERR PREOP. When the <i>Clear Error</i> button is pressed the error flag is cleared, and the current state is displayed as PREOP again.
<b>Current State</b>	Indicates the current state of the EtherCAT device.
<b>Requested State</b>	Indicates the state requested for the EtherCAT device.

**DLL Status**

Indicates the DLL status (data link layer status) of the individual ports of the EtherCAT slave. The DLL status can have four different states:

Status	Description
No Carrier / Open	No carrier signal is available at the port, but the port is open.
No Carrier / Closed	No carrier signal is available at the port, and the port is closed.
Carrier / Open	A carrier signal is available at the port, and the port is open.
Carrier / Closed	A carrier signal is available at the port, but the port is closed.

**File Access over EtherCAT**

<b>Download</b>	With this button a file can be written to the EtherCAT device.
<b>Upload</b>	With this button a file can be read from the EtherCAT device.

"DC" tab (Distributed Clocks)

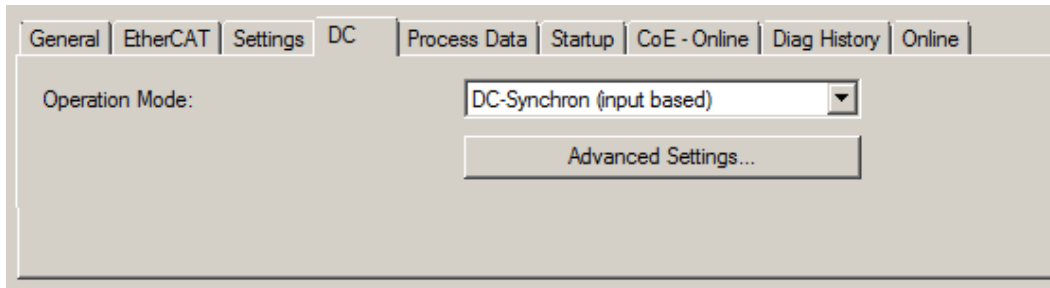


Fig. 98: "DC" tab (Distributed Clocks)

- Operation Mode** Options (optional):
  - FreeRun
  - SM-Synchron
  - DC-Synchron (Input based)
  - DC-Synchron
- Advanced Settings...** Advanced settings for readjustment of the real time determinant TwinCAT-clock

Detailed information to Distributed Clocks are specified on <http://infosys.beckhoff.com>:

**Fieldbus Components** → EtherCAT Terminals → EtherCAT System documentation → EtherCAT basics → Distributed Clocks

6.1.7.1 Download revision

i  
**Note**

**Download revision in Start-up list**

Several terminals / modules generate the entry from object 0xF081:01 in the Start-up list automatically (see fig. "Download revision in Start-up list").

The object 0xF081:01 (Download revision) describes the revision of the terminal / module, e.g. 0x0018000A for EL7201-0010-0024, and is necessary to ensure compatibility.

Please note, that you must not delete this entry from the Start-up list!

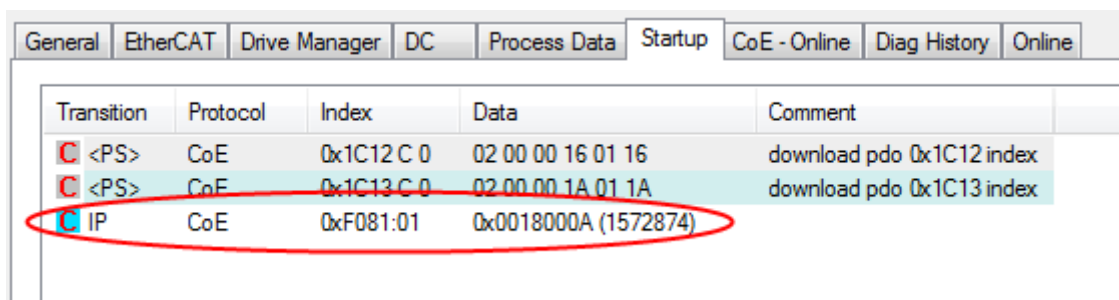


Fig. 99: Download revision in Start-up list

6.1.7.2 Detailed description of Process Data tab

**Sync Manager**

Lists the configuration of the Sync Manager (SM).  
 If the EtherCAT device has a mailbox, SM0 is used for the mailbox output (MbxOut) and SM1 for the mailbox input (MbxIn).  
 SM2 is used for the output process data (outputs) and SM3 (inputs) for the input process data.




If an input is selected, the corresponding PDO assignment is displayed in the *PDO Assignment* list below.

### PDO Assignment

PDO assignment of the selected Sync Manager. All PDOs defined for this Sync Manager type are listed here:

- If the output Sync Manager (outputs) is selected in the Sync Manager list, all RxPDOs are displayed.
- If the input Sync Manager (inputs) is selected in the Sync Manager list, all TxPDOs are displayed.

The selected entries are the PDOs involved in the process data transfer. In the tree diagram of the System Manager these PDOs are displayed as variables of the EtherCAT device. The name of the variable is identical to the *Name* parameter of the PDO, as displayed in the PDO list. If an entry in the PDO assignment list is deactivated (not selected and greyed out), this indicates that the input is excluded from the PDO assignment. In order to be able to select a greyed out PDO, the currently selected PDO has to be deselected first.

 <b>Note</b>	<p><b>Activation of PDO assignment</b></p> <p>✓ If you have changed the PDO assignment, in order to activate the new PDO assignment,</p> <p>a) the EtherCAT slave has to run through the PS status transition cycle (from pre-operational to safe-operational) once (see <a href="#">Online tab [► 81]</a>),</p> <p>b) and the System Manager has to reload the EtherCAT slaves</p> <p>(  button for TwinCAT 2 or  button for TwinCAT 3)</p>
--	--

### PDO list

List of all PDOs supported by this EtherCAT device. The content of the selected PDOs is displayed in the *PDO Content* list. The PDO configuration can be modified by double-clicking on an entry.

Column	Description	
Index	PDO index.	
Size	Size of the PDO in bytes.	
Name	Name of the PDO. If this PDO is assigned to a Sync Manager, it appears as a variable of the slave with this parameter as the name.	
Flags	F	Fixed content: The content of this PDO is fixed and cannot be changed by the System Manager.
	M	Mandatory PDO. This PDO is mandatory and must therefore be assigned to a Sync Manager! Consequently, this PDO cannot be deleted from the <i>PDO Assignment</i> list
SM	Sync Manager to which this PDO is assigned. If this entry is empty, this PDO does not take part in the process data traffic.	
SU	Sync unit to which this PDO is assigned.	

### PDO Content

Indicates the content of the PDO. If flag F (fixed content) of the PDO is not set the content can be modified.

### Download

If the device is intelligent and has a mailbox, the configuration of the PDO and the PDO assignments can be downloaded to the device. This is an optional feature that is not supported by all EtherCAT slaves.

### PDO Assignment

If this check box is selected, the PDO assignment that is configured in the PDO Assignment list is downloaded to the device on startup. The required commands to be sent to the device can be viewed in the [Startup \[► 78\]](#) tab.



**PDO Configuration**

If this check box is selected, the configuration of the respective PDOs (as shown in the PDO list and the PDO Content display) is downloaded to the EtherCAT slave.

**6.2 Start-up and parameter configuration**

**6.2.1 Integration into the NC configuration**

(Master: TwinCAT 2.11 R3)

 <b>Note</b>	<p><b>Installation of the latest XML device description</b></p> <p>Please ensure that you have installed the corresponding latest XML device description in TwinCAT. This can be downloaded from the <a href="#">Beckhoff Website</a> and installed according to the installation instructions.</p>
--	---

Integration into the NC can be accomplished as follows:

- The terminal must already have been added manually under I/O devices or have been scanned in by the system (see section "Configuration set-up in TwinCAT [► 51]").

**Adding an axis automatically**

- Once the terminals have been scanned successfully, TwinCAT detects the new axes automatically. The user is asked whether the detected axes should be added automatically (see Fig. *Axis detected*). If this is confirmed, all axes are automatically linked to the NC.

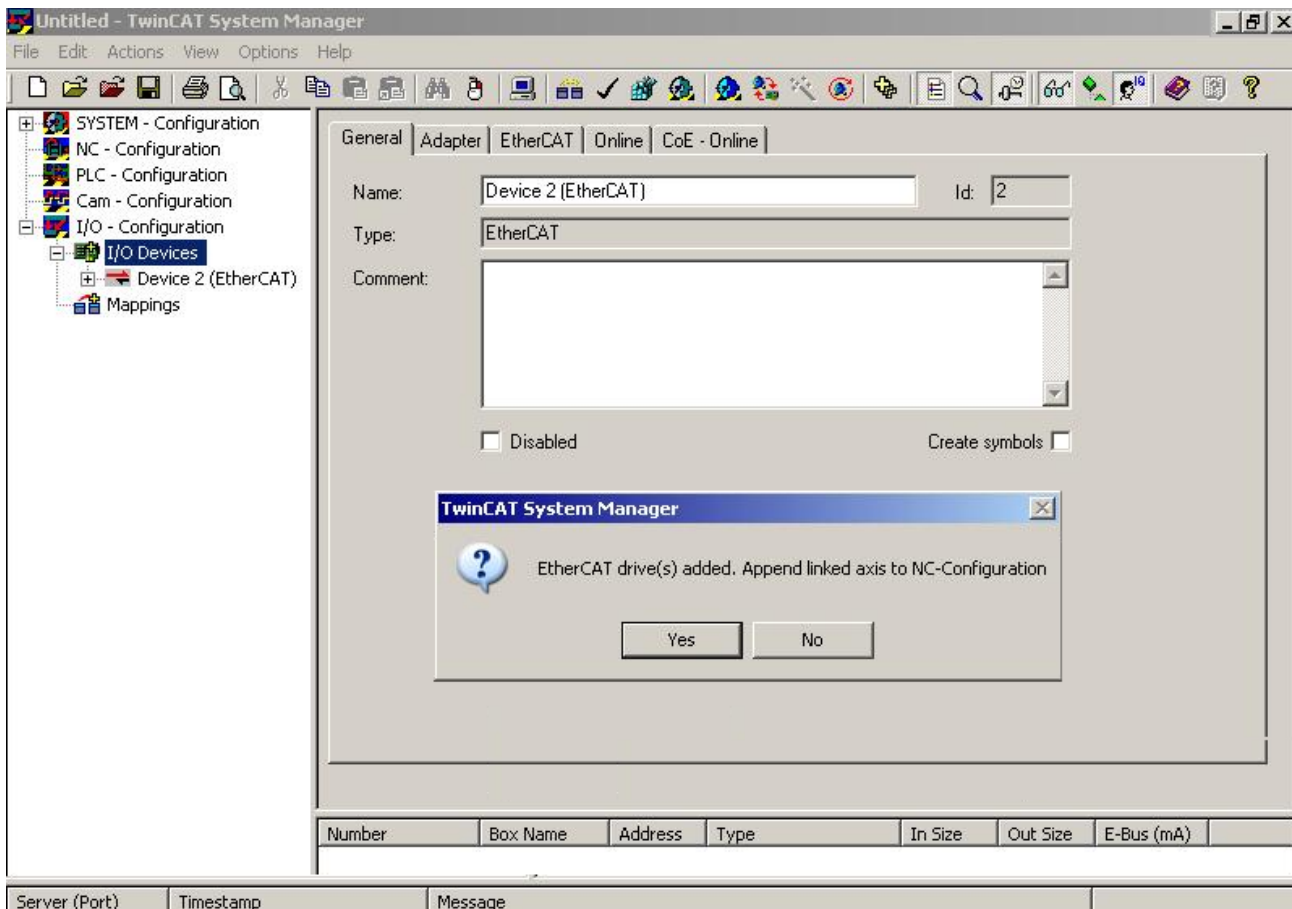


Fig. 100: Axis detected

- Several parameters have to be set before the motor can be started up. The values can be found in section "Configuration of the main parameters [▶ 92]". Please set these parameters before continuing with the motor commissioning procedure.

**Adding an axis manually**

- First add a new task. Right-click on NC configuration and select "Append Task..." (see Fig. *Adding a new task*).
- Rename the task if required and confirm with OK.

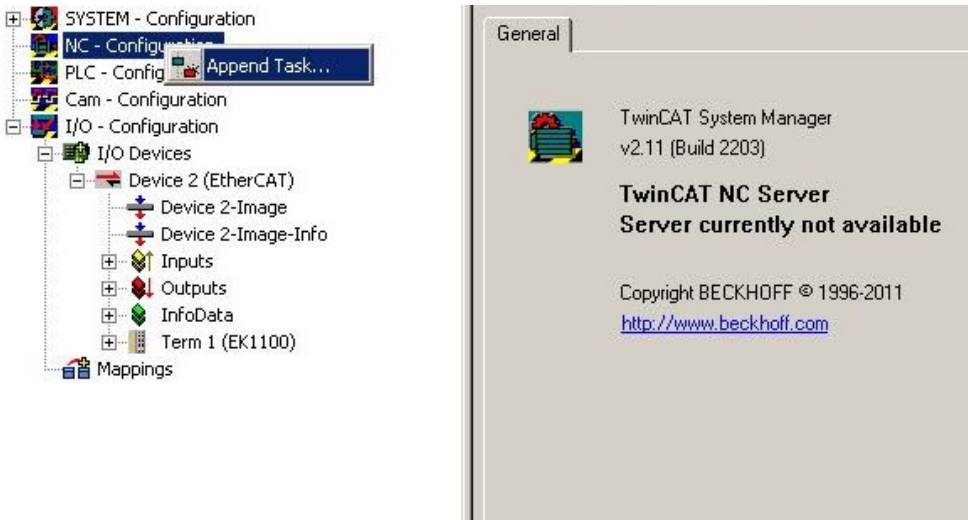


Fig. 101: Adding a new task

- Right-click on Axes, then add a new axis (see Fig. *Adding a new axis*).

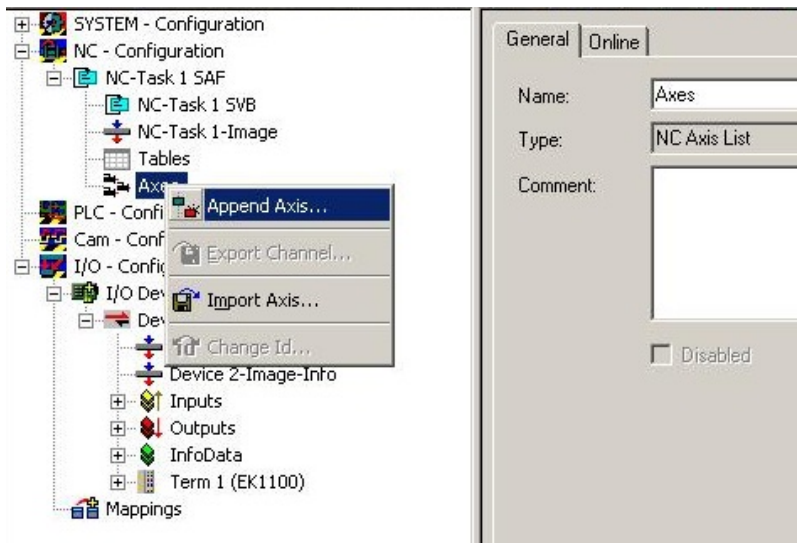


Fig. 102: Adding a new axis

- Select Continuous Axis type and confirm with OK (see Fig. *Selecting and confirming the axis type*).

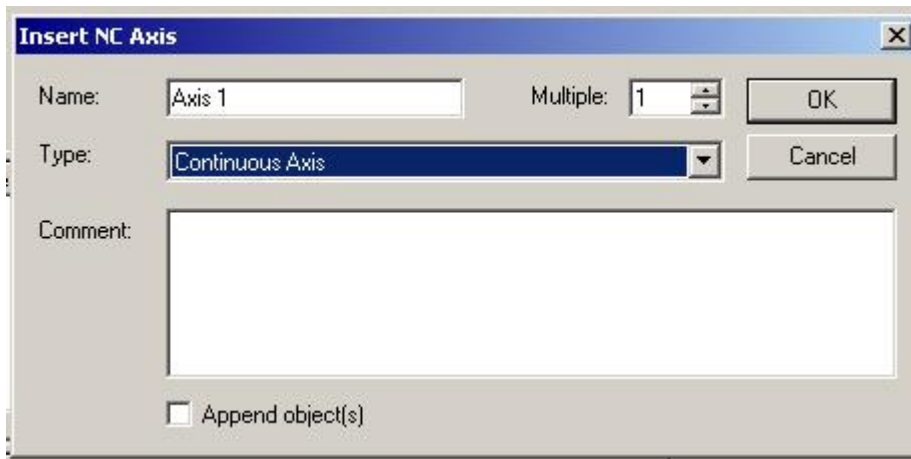


Fig. 103: Selecting and confirming the axis type

- Left-click your axis to select it. Under the *Settings* tab select "Link To..." (see Fig. *Linking the axis with the terminal*).

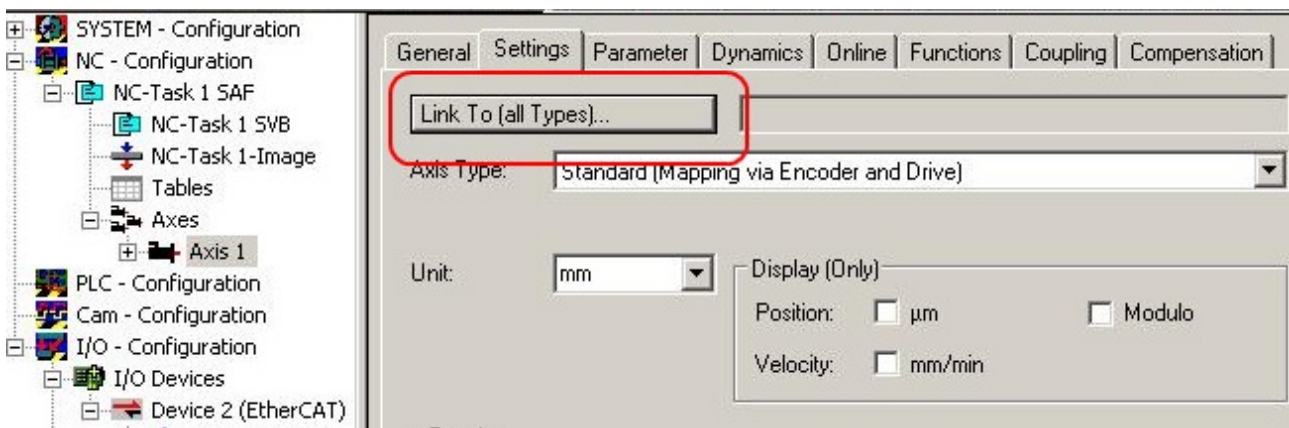


Fig. 104: Linking the axis with the terminal

- Select the required terminal (CANopen DS402, EtherCAT CoE) and confirm with OK.

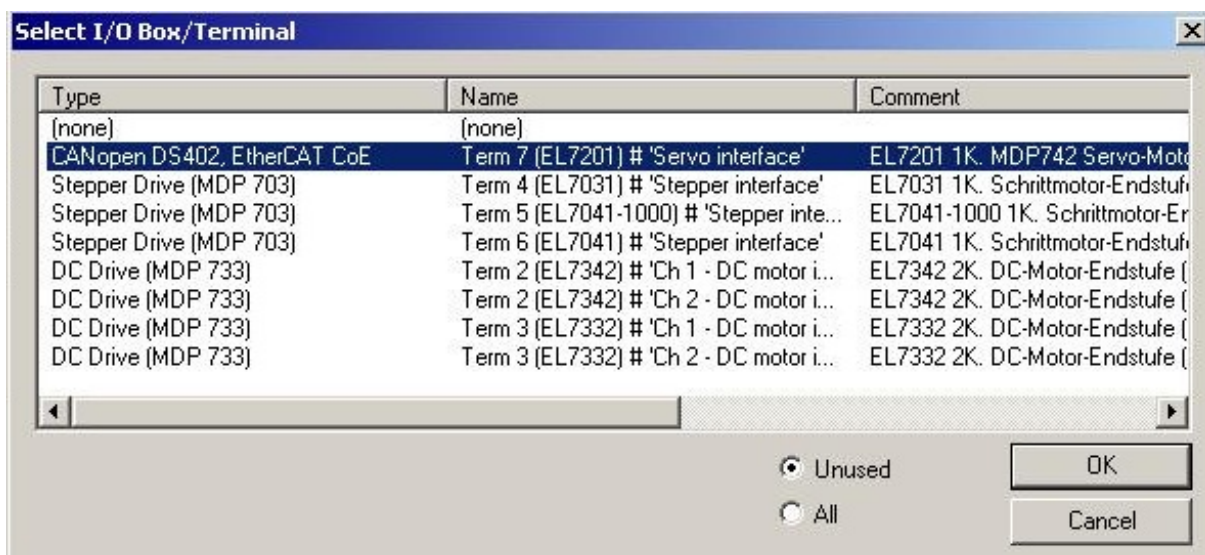


Fig. 105: Selecting the right terminal

- All main links between the NC configuration and the terminal are set automatically (see Fig. *"Automatic linking of all main variables"*)

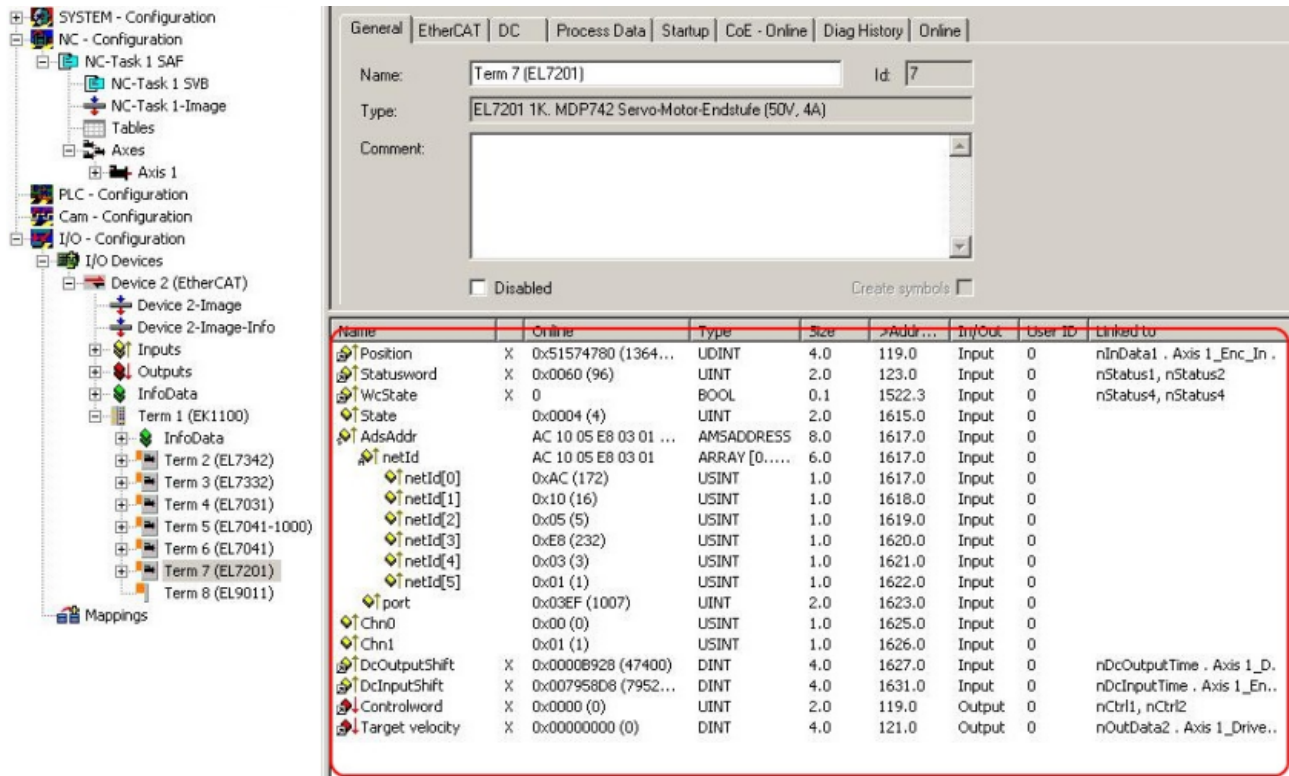


Fig. 106: Automatic linking of all main variables

- Several parameters have to be set before the motor can be started up. The values can be found in sections "[CoE settings](#) [[▶ 92](#)]" and "[NC settings](#)". Please set these parameters before continuing with the motor commissioning procedure.

## 6.2.2 Settings with the Drive Manager

(Master TwinCAT 2.11 R3)

The data provided in this section as an example refer to an AM3121-0200-0001 servomotor from Beckhoff Automation. For other motors the values may vary, depending on the application.


 <b>Note</b>	<p><b>Using the Drive Manager from revision -0019</b></p> <p>The Drive Manager is only supported from <a href="#">revision -0019</a> [<a href="#">▶ 179</a>] of the EL72x1. If you use an older version, the settings have to be made manually. See chapters "<a href="#">CoE settings</a> [<a href="#">▶ 92</a>]" and "<a href="#">NC settings</a>".</p>
--	---

Table of contents
• <a href="#">Start-up with the Drive Manager</a> [ <a href="#">▶ 89</a> ]
• <a href="#">Setting further parameters with the Drive Manager</a> [ <a href="#">▶ 91</a> ]
- <a href="#">Integral velocity controller component Tn</a> [ <a href="#">▶ 91</a> ]
- <a href="#">Proportional velocity controller component Kp</a> [ <a href="#">▶ 92</a> ]

The TwinCAT Drive Manager is available for download in the [AX5000 download package](#)

The TwinCAT Drive Manager for parameterizing an EL72x1 servo terminal is integrated in the System Manager, so that no separate configuration tool is required. Once a servo terminal has been detected or entered, the TwinCAT Drive Manager is available in the Configuration tab.

The following instructions are intended to enable you to start up the servo terminal relatively quickly. More detailed information on the Drive Manager can be found in the corresponding documentation "[AX5000 Introduction in the TCDrivemanager](#)"



**Start-up with the Drive Manager**

- The terminal must already have been added manually under I/O devices or have been scanned in by the system (see section "Configuration set-up in TwinCAT [▶ 67]" )
- The terminal must already be integrated in the NC (see section "Integration in the NC configuration [▶ 85]" )
- Select the *Configuration* tab for the EL72x1.
- Select the connected voltage under *Power Management*.

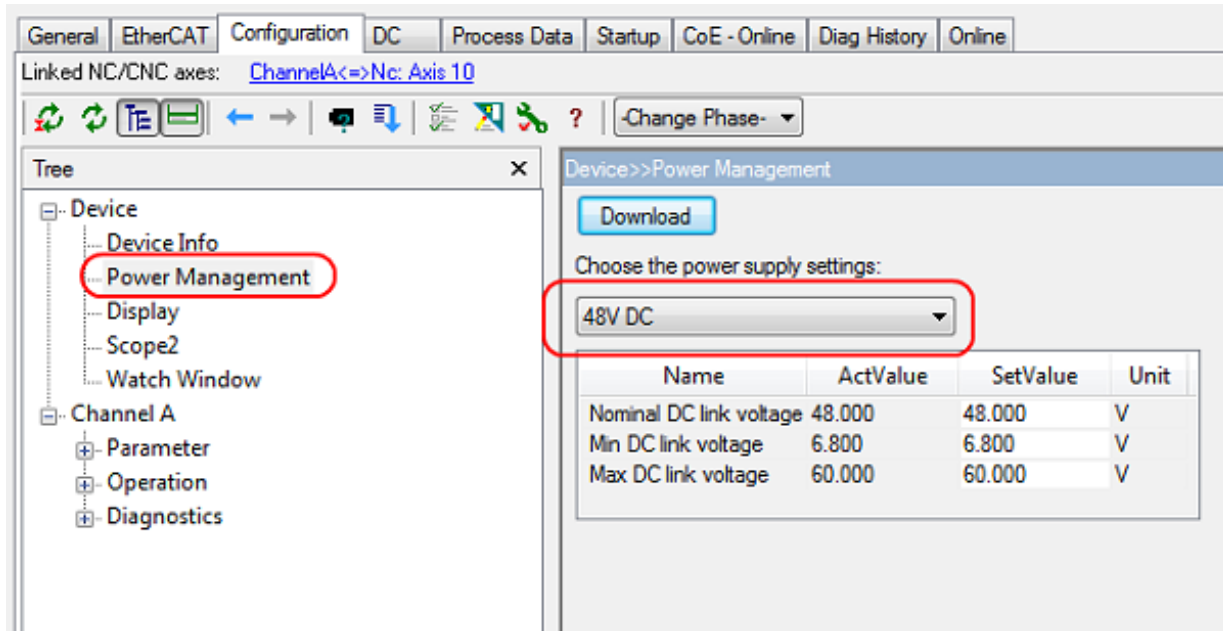


Fig. 107: Selecting the connected voltage

- Then select the connected motor under *Motor and Feedback*. Click on *Select Motor*.

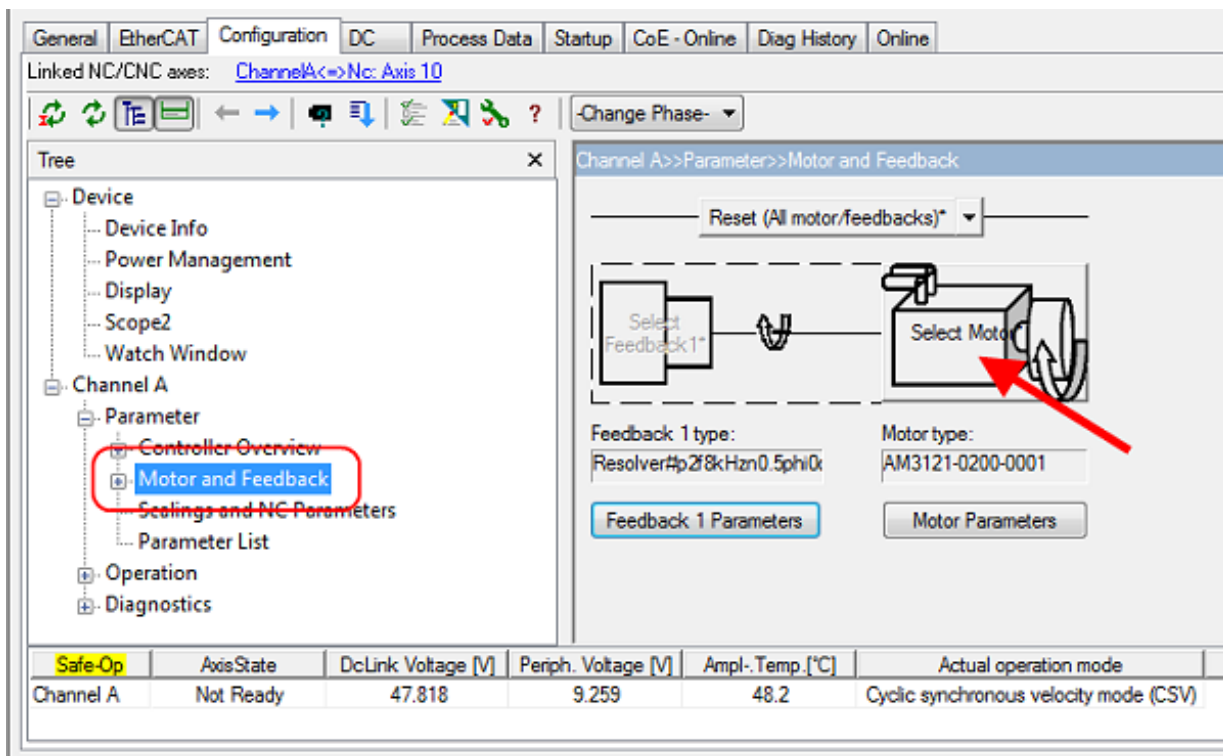


Fig. 108: Selecting the connected motor

- Select the suitable motor in the selection window and confirm with *Ok*.

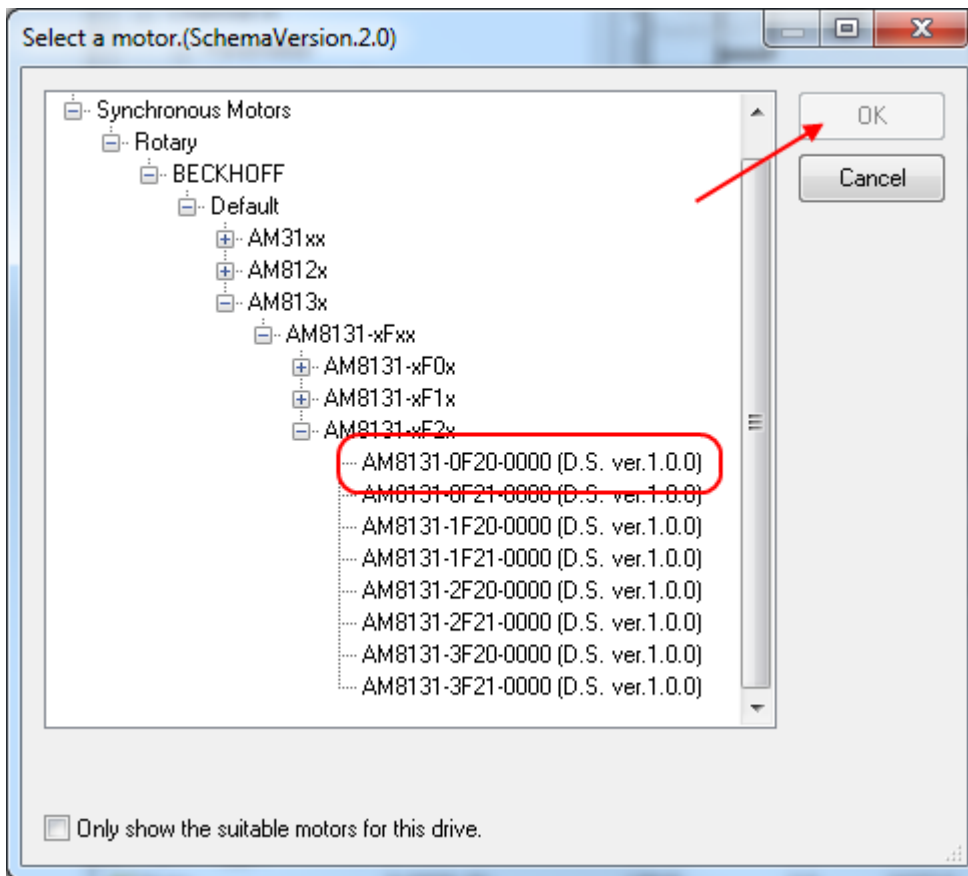


Fig. 109: List of available motors

- Confirm the next dialog box with OK. All required parameters are automatically entered in the NC, and the scaling factor is calculated. If this is not confirmed, these settings have to be entered manually. See section "NC settings".

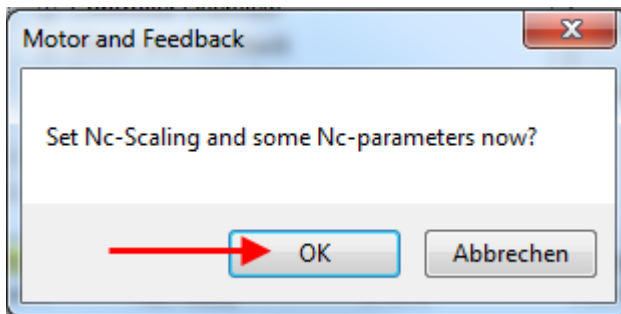


Fig. 110: Confirmation of the automatic NC settings parameters

- The scaling can be determined under *Scalings and NC Parameters*. A motor revolution is defined as 360° as an example. All required parameters are adjusted automatically. The setting only becomes active once the configuration is activated.

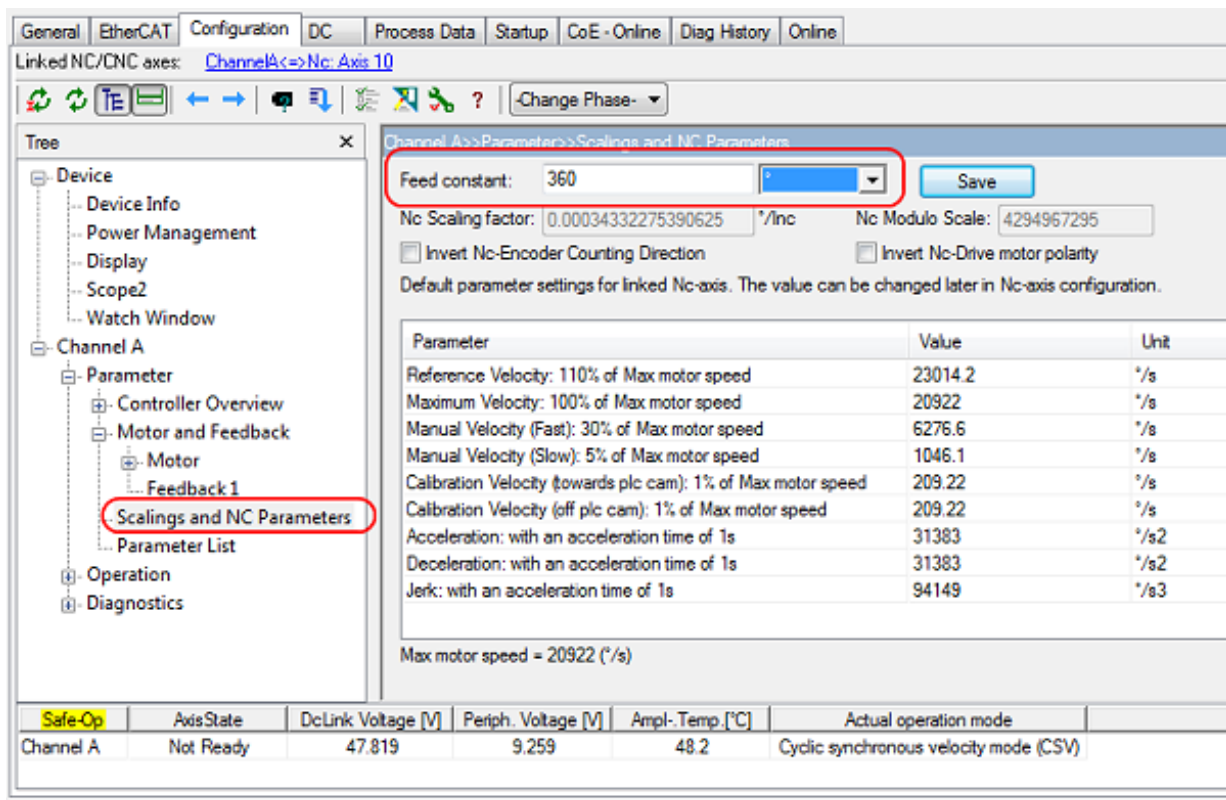


Fig. 111: Adapting the scaling

All main parameters for the commissioning the motor are now set. The motor can now be commissioned with the NC, for example. A brief description can be found in section "[Commissioning the motor with the NC \[► 112\]](#)". Or the NC can be addressed from the PLC. A small (download: (<https://infosys.beckhoff.com/content/1033/el72x1/Resources/zip/1958948107.zip>)) is included in the documentation. Some parameters can be adjusted manually for your particular application.

### Setting further parameters with the Drive Manager

The values specified here are exemplary, although in most cases they have led to excellent results. Depending on the application, other values may yield better results. These values can be changed during operation. Click on *Download* to apply the values.

### Integral velocity controller component Tn

- Reduce the value, until the motor starts to oscillate slightly. Then increase the value by 10%.

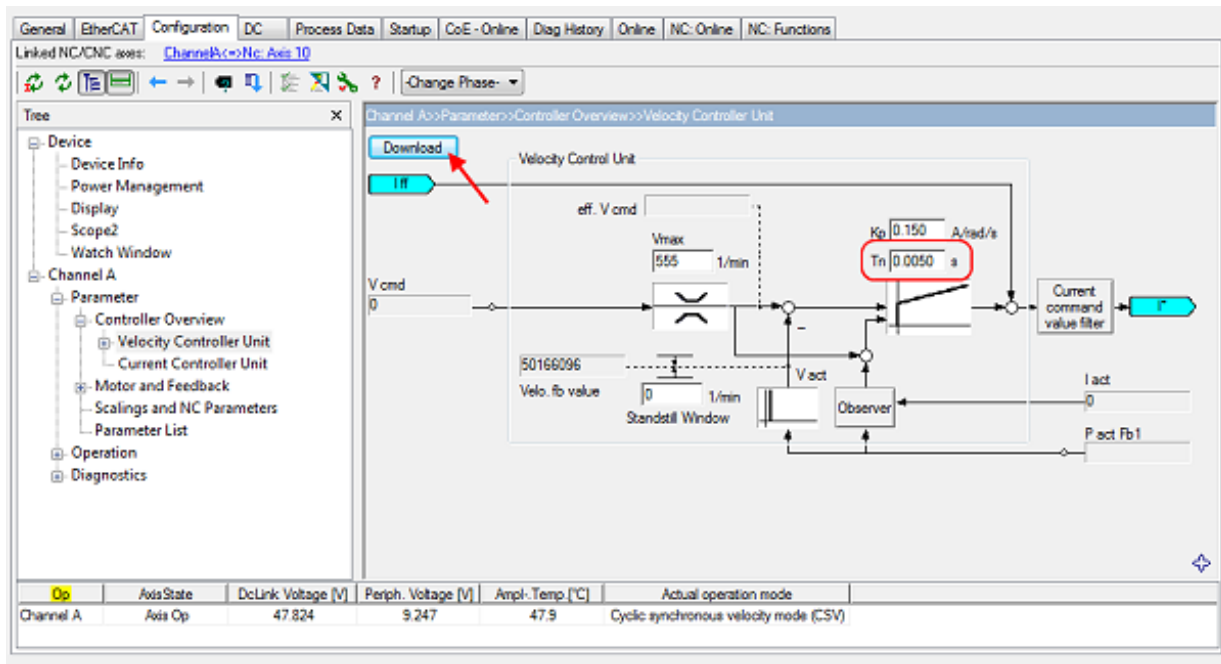


Fig. 112: Adapting Tn

**Proportional velocity controller component Kp**

- Increase the value, until the motor starts to oscillate slightly. Then reduce the value by 80%.

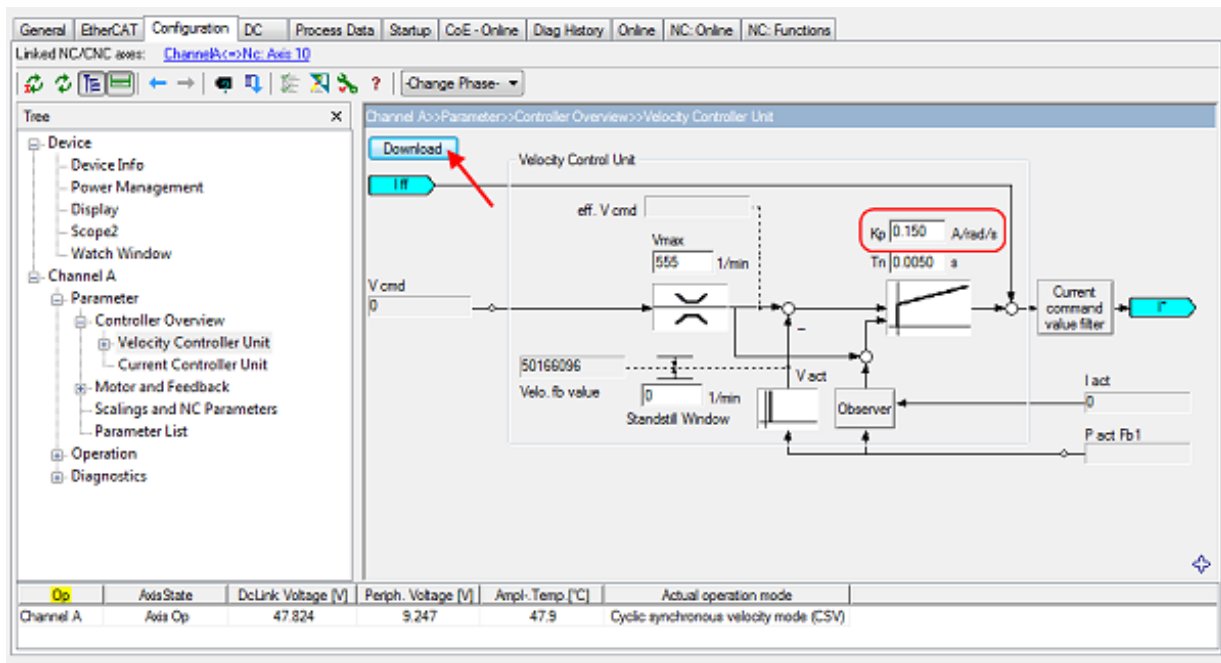


Fig. 113: Adapting Kp

**6.2.3 Settings in the CoE register**

(Master TwinCAT 2.11 R3)

The data provided in this section as an example refer to an AM3121-0200-0001 servomotor from Beckhoff Automation. For other motors the values may vary, depending on the application.



Table of contents
• Inserting the motor XML file [▶ 92]
- Adaptation of current and voltage [▶ 95]
• Setting further parameters [▶ 95]
- Single turn bits / Multi turn bits [▶ 95]
- Automatic gain control [▶ 95]
- Torque limitation [▶ 96]
- Integral velocity controller component Tn [▶ 96]
- Proportional velocity controller component Kp [▶ 96]

Inserting the motor XML file

i

**Downloading the EL72x1 motor XML files**

The motor XML files are available for download from the Beckhoff website.

Note

To facilitate commissioning of the EL72x1 servo terminal, motor XML files are provided for the servomotors that are supported by the EL72x1. The XML files can be read in the System Manager. All CoE parameters and DS 402 parameters are then set as required.

- To read the motor XML file select the EL72x1 and open the Startup tab. Right-click in the empty field and select Import from XML...(see Fig. *Importing the motor XML file*).

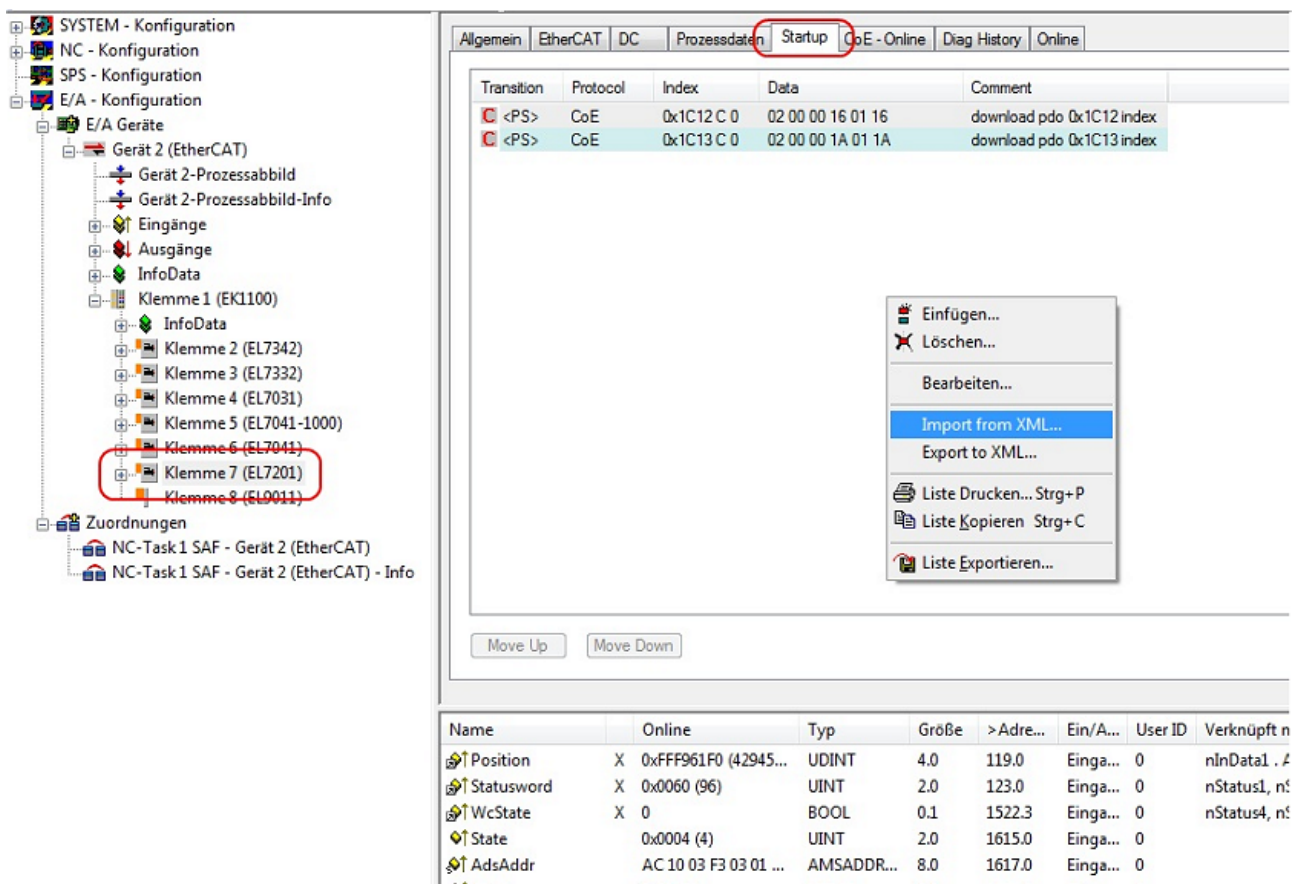


Fig. 114: Importing the motor XML file

- Select the motor XML file that matches the connected motor (see Fig. *Selecting the correct motor XML file*)

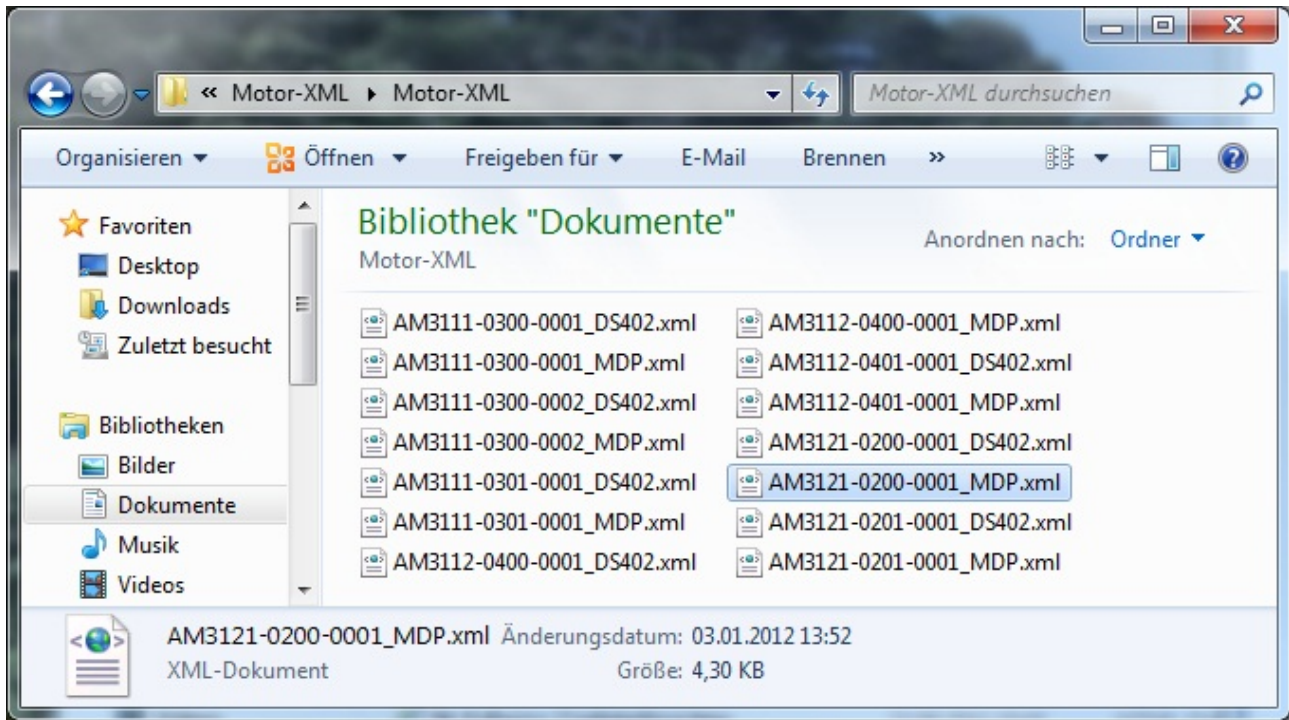


Fig. 115: Selecting the correct motor XML file

- All required parameters are then set, and the motor can be put into operation (see Fig. CoE parameters of the motor XML file).

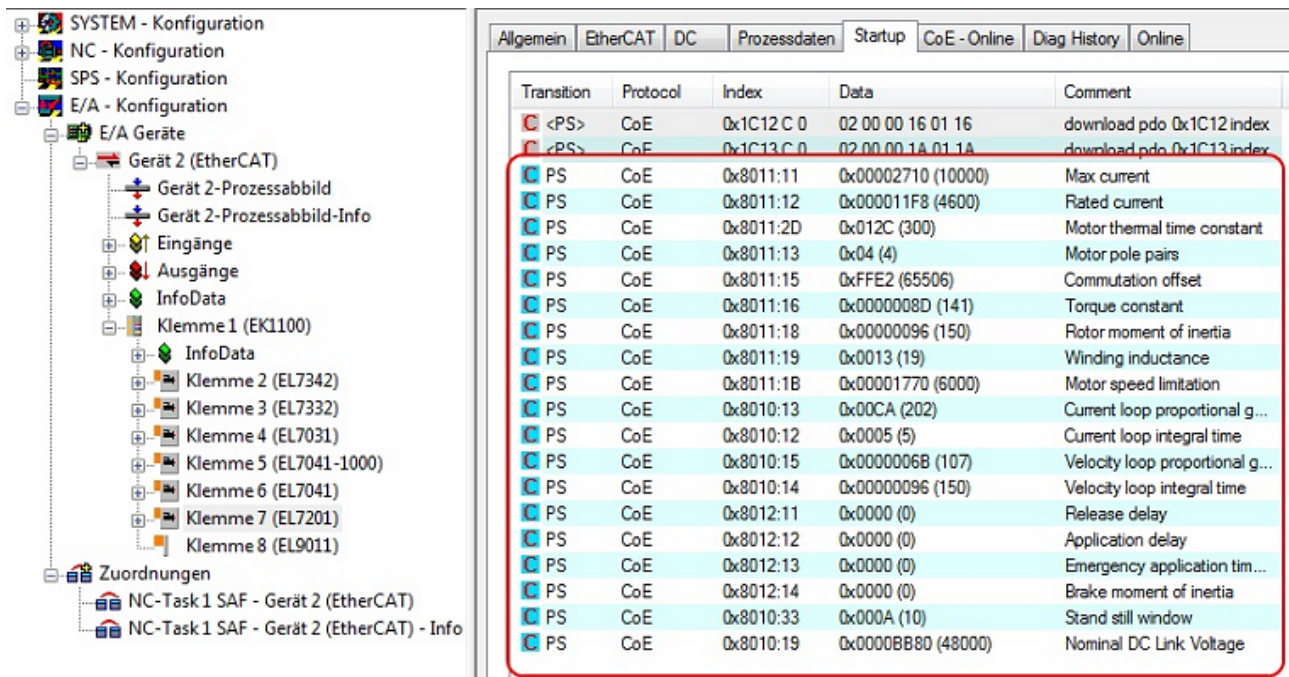


Fig. 116: CoE parameters of the motor XML file


i

**Startup list**

Any further application-specific settings should also be implemented in the Startup list. Otherwise the modified settings will be overwritten next time the terminal starts up.

Note

**Adaptation of current and voltage**

 <b>Attention</b>	<p><b>The motor may overheat!</b></p> <p>In order to prevent overheating of the connected motor, it is important to adjust the voltage of the servo terminal to the actually connected voltage.</p>
---	---

To this end set the index [0x8010:19](#) [[▶ 137](#)] "Nominal DC Link Voltage" of the connected voltage as required


**Setting further parameters**

**Single-turn Bits (MDP742: Index [0x8000:12](#) [[▶ 136](#)] / DS402: Index [0x2010:12](#) [[▶ 155](#)]) / Multi-turn Bits (MDP742: Index [0x8000:13](#) [[▶ 136](#)] / DS402: Index [0x2010:13](#) [[▶ 155](#)])**

Here the user can specify how many single-turn and multi-turn bits the terminal should display. A total of 32 bits are available. These 32 bits can be subdivided as required. The standard setting is 20 single-turn bits and 12 multi-turn bits.

**Singleturn bits:** number of bits relating to the resolution of one rotor rotation.

**Multiturn bits:** after a rotor rotation the multi-turn bits are incremented by one.

 <b>Attention</b>	<p><b>The motor may overheat!</b></p> <p>If the number of single-turn bits is changed, the <u>scaling factor</u> in the NC [<a href="#">▶ 110</a>] has to be adjusted</p>
---	---

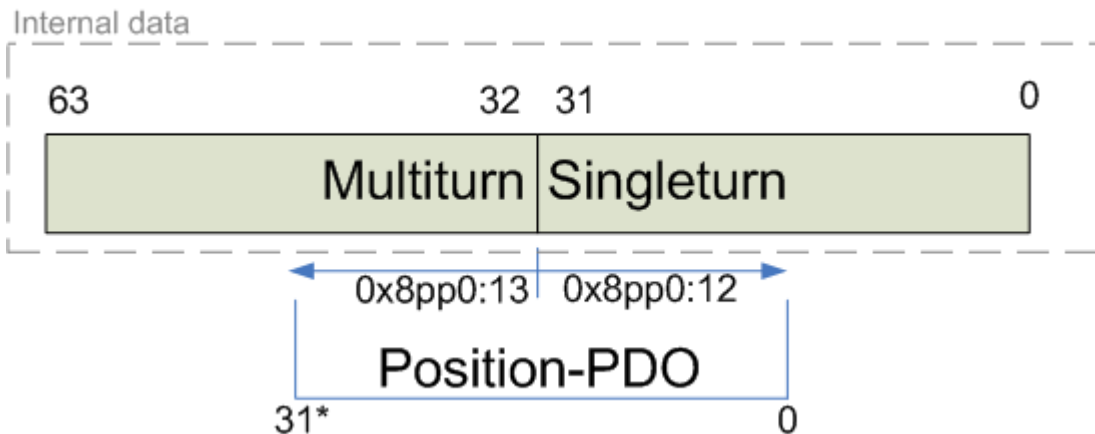


Fig. 117: Multi-turn / single-turn bits

**Automatic gain control**

Each resolver has a small difference between the amplitude of the sine and cosine tracks (see Fig. Resolver gain adjustment). This deviation depends on the variance of the components and other factors and may vary from motor to motor.

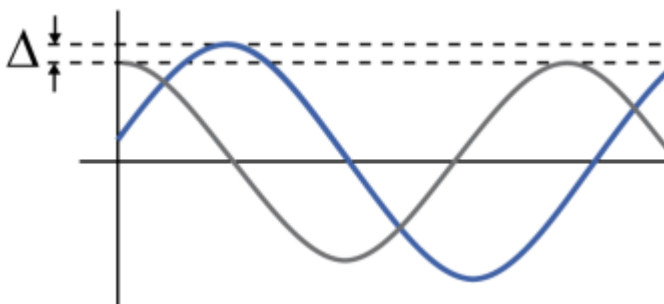


Fig. 118: Resolver gain adjustment

The EL72x1 automatically corrects this small difference in the resolver amplitudes, if the function "Automatic gain control" is active. The correction takes some time, approx. 100 revolutions. This means that the precision during this time is slightly lower than after the correction.

To avoid this small initial inaccuracy, during the commissioning phase, after approx. 100 revolutions, the user can read the "Automatic resolver gain value" determined by the terminal (MDP742: [0x9008:12 \[▶ 145\]](#) / DS402: Index [0x2058:12 \[▶ 162\]](#)) and transfer it to "Resolver gain adjustment" (MDP742: Index [0x8008:12 \[▶ 137\]](#) / DS402: Index [0x2018:12 \[▶ 162\]](#)). The value entered there is the starting point for the correction. Please note that the value varies from motor to motor. If the motor is replaced, the process must be repeated.

The function "Automatic gain control" can be activated or deactivated with "Enable automatic gain control" (MDP742: Index [0x8008:02 \[▶ 137\]](#) / DS402: Index [0x2018:02 \[▶ 156\]](#)).

#### **Torque limitation (MDP742: Index [0x7010:0B \[▶ 144\]](#) / DS402: Index [0x6072:0 \[▶ 159\]](#))**

Limits the current / torque to this value. The value is specified in 1000th of the rated current.

#### **Integral velocity controller component Tn (MDP742: Index [0x8010:14 \[▶ 137\]](#) / DS402: Index [0x2002:14 \[▶ 154\]](#))**

The values specified here are exemplary, although in most cases they have led to excellent results. Depending on the application, other values may yield better results.

- Reduce the value, until the motor starts to oscillate slightly. Then increase the value by 10%.

#### **Proportional velocity controller component Kp (MDP742: Index [0x8010:15 \[▶ 137\]](#) / DS402: Index [0x2002:15 \[▶ 154\]](#))**

The values specified here are exemplary, although in most cases they have led to excellent results. Depending on the application, other values may yield better results.

- Increase the value, until the motor starts to oscillate slightly. Then reduce the value by 80%.

## 6.2.4 Application example



Note

#### **EtherCAT XML Device Description**

The display matches that of the CoE objects from the EtherCAT XML Device Description. We recommend downloading the latest XML file from the [download area of the Beckhoff website](#) and installing it according to installation instructions.

### **Motor control with visualization**



Download (<https://infosys.beckhoff.com/content/1033/el72x1/Resources/zip/1958948107.zip>):

Used Master: TwinCAT 2.11 (for older versions the control loop has to be programmed manually; in this case it is already implemented in the NC).

This application example demonstrates movement of a motor to any position or in continuous mode with the aid of visualization. The velocity, the starting acceleration and the deceleration can be specified.

The sample program consists of 2 files (PLC file and System Manager file).

First open the PLC file and compile it so that you have the \*.tpy file available that is required for the System Manager.

Please note that you may have to adjust the target platform in the PLC program (default: PC or CX 8x86). If required, you can select the target platform under *Resources -> Controller configuration*.



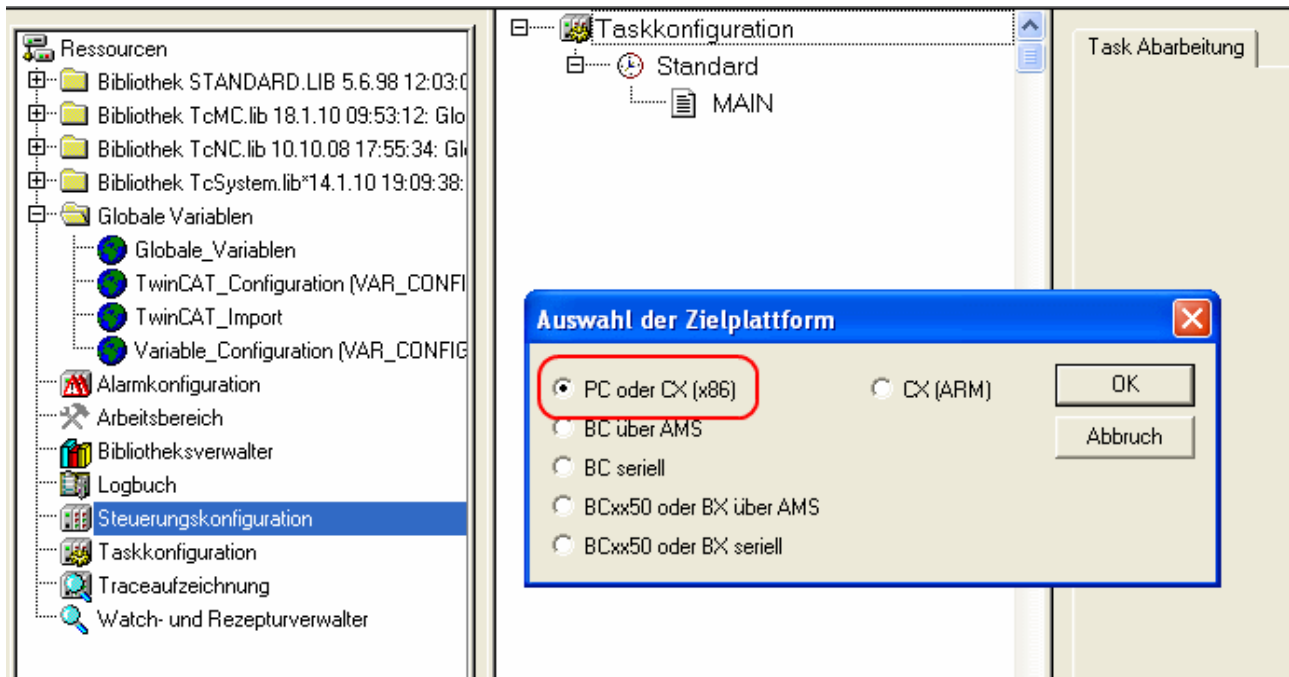


Fig. 119: Selection of the target platform

Please note the following for the System Manager file:

- Start the System Manager in Config mode.
- Please ensure that the I/O configuration matches your actual configuration. In the sample program only one EL7041 is integrated. If further terminals are connected you have to add them or re-scan your configuration.
- You have to adjust the MAC address. To do this, click on your *EtherCAT device*, then select the *Adapter* tab and click on *Search* after the MAC address (see Fig. *Selecting the MAC address*). Select the right adapter.

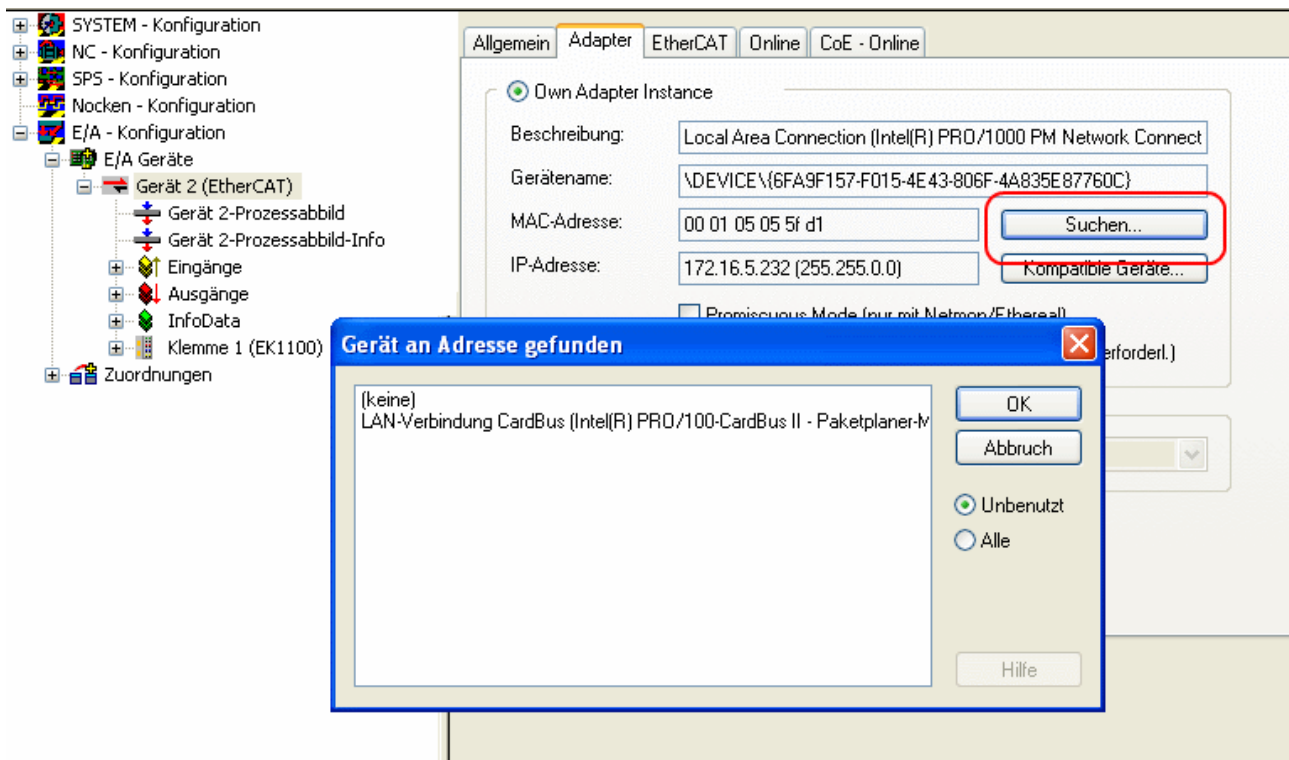


Fig. 120: Selecting the MAC address

- In the PLC configuration you have to adjust the path for the PLC program. Click on the appended PLC program and select the tab *IEC1131* (see Fig. *Changing the PLC path*). Select *Change* and enter the correct path.

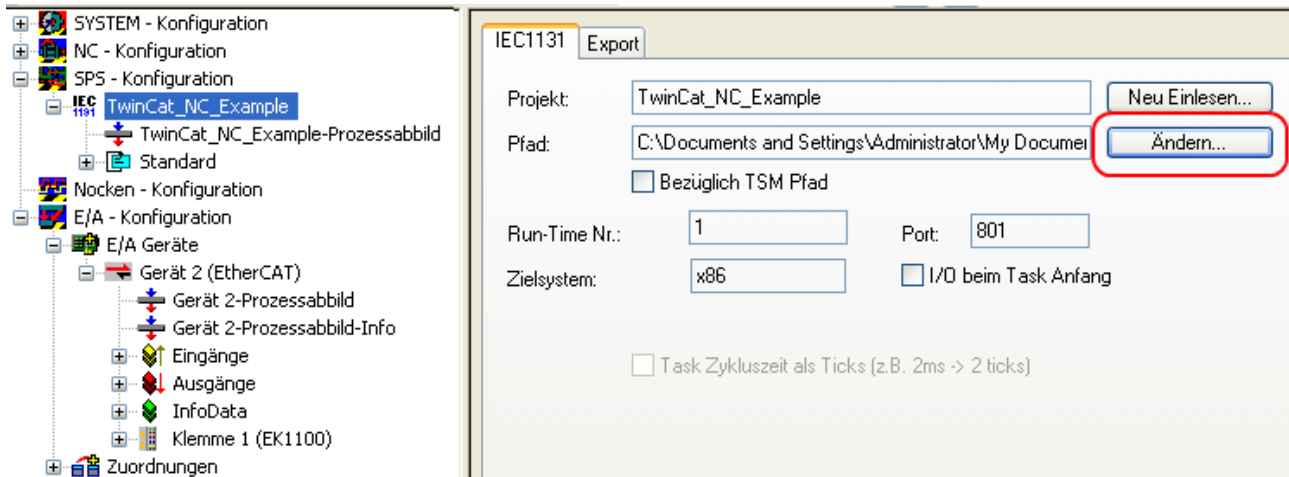


Fig. 121: Changing the PLC path

- Under NC configuration an EL7041 is already linked to the NC. To change the link or add additional devices proceed as described under “[Integration into the NC configuration](#) | 85”.

The PLC program is configured as follows. The libraries *TcMC.lib* and *TcNC.lib* must be integrated (see Fig. *Required libraries*).

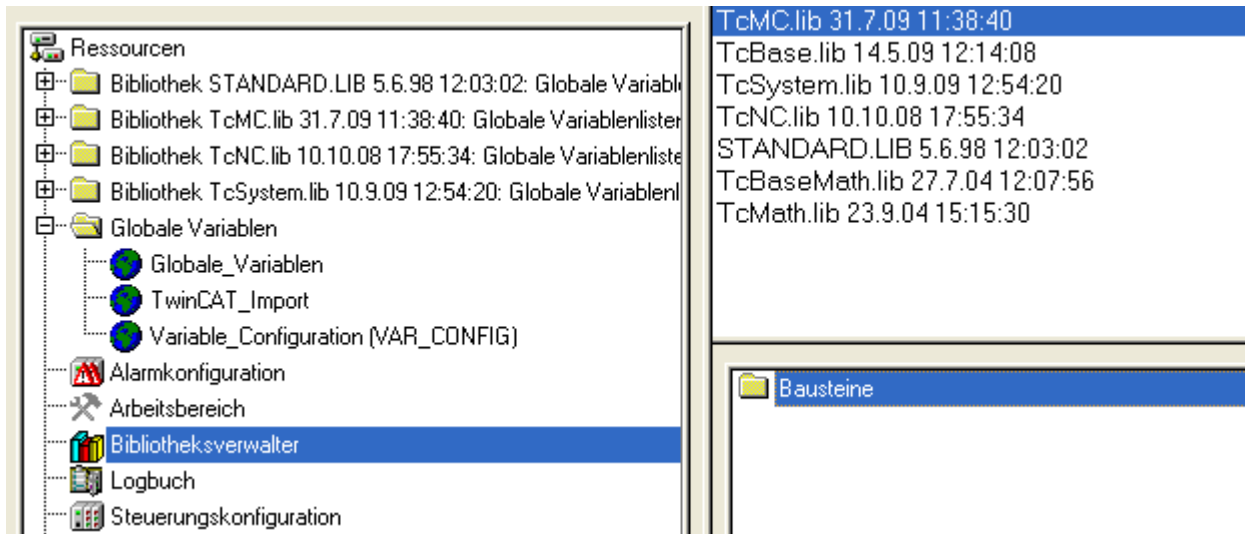


Fig. 122: Required libraries

Once this is done, certain global variables are declared (see Fig. *Global variables*). The data types *PLCTONC\_AXLESTRUCT* and *NCTOPLC\_AXLESTRUCT* deal with the communication between the PLC and the NC.

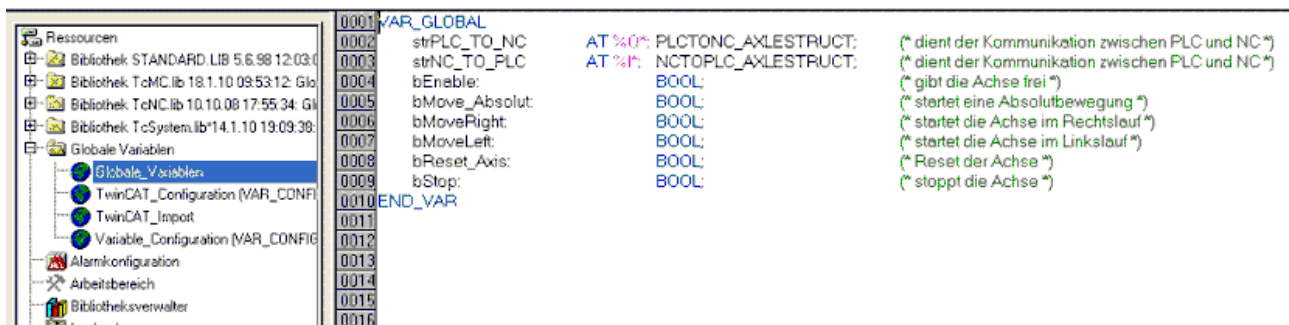


Fig. 123: Global variables

Once the global variables have been declared, programming can commence. Start with declaring local variables (see Fig. *Local variables*).

MC\_Direction is an enumeration type that specifies the direction of travel for the block MC\_MoveVelocity, which in turn initiates continuous travel of the motor.

An axis reset is carried out with the function block MC\_Reset. Absolute positioning is carried out with the function block MC\_MoveAbsolute. The current axis position can be read with the function block MC\_ActualPosition.

MC\_Power enables the axis; MC\_Stop is required for stopping the axis.

```

0001 PROGRAM MAIN
0002 VAR
0003   Direction:          MC_Direction;      (* Aufzählungstyp mit Bewegungsrichtungen für MC_MoveVelocity *)
0004   fbMoveAbsolute_Axis_1: MC_MoveAbsolute; (* Es wird eine absolute Positionierung durchgeführt *)
0005   fbMoveVelocity_Axis_1: MC_MoveVelocity; (* Es wird eine Endlosfahrt durchgeführt *)
0006   fbPower_Axis_1:      MC_Power;          (* Es werden die Freigaben für die Achse gesetzt *)
0007   fbReadActualPosition_1: MC_ReadActualPosition; (* Es wird die aktuelle Position der Achse gelesen *)
0008   fbReset_Axis:       MC_Reset;          (* Es wird ein Reset der Achse durchgeführt *)
0009   fbStop:             MC_Stop;           (* Die Achse wird gestoppt *)
0010   bAxis_Ready:        BOOL;              (* Überprüft, ob die Achse bereit ist *)
0011   bMove_Absolut_Aborted: BOOL;          (* Wird true, wenn die Positionierung nicht vollständig ausgeführt werden konnte *)
0012   bMove_Absolut_Done:  BOOL;            (* Zeigt, ob die Positionierung abgeschlossen ist *)
0013   bReset_Done:         BOOL;            (* Zeigt, ob ein Resetvorgang abgeschlossen ist *)
0014   lAcc_Axis_1:         LREAL;           (* Beschleunigung bei absoluter Positionierung, beim Wert 0 wirkt Standard *)
0015   lActual_Position:   LREAL;           (* Aktuelle Position der Achse *)
0016   lDecel_Axis_1:      LREAL;           (* Verzögerung bei absoluter Positionierung, beim Wert 0 wirkt Standard *)
0017   lJerk_Axis_1:       LREAL;           (* Ruck bei absoluter Positionierung, beim Wert 0 wirkt Standard *)
0018   lPosition_Drive_to: LREAL;           (* Position, die bei einer absoluten Positionierung angefahren werden soll *)
0019   lVelocity_Move_Ab_Axis_1: LREAL; (* Geschwindigkeit, mit der bei einer absoluten Positionierung gefahren werden soll *)
0020 END_VAR
0021
0022

```

Fig. 124: Local variables

The program code is as follows (see Fig. *Program code*):

```

Bausteine
└─ MAIN (PRG)
0001 (*Freigabesignale werden gesetzt*)
0002 fbPower_Axis_1(
0003   Enable      := bEnable,
0004   Enable_Positive := bEnable,
0005   Enable_Negative := bEnable,
0006   Override    := 100.000,
0007   AxisRefIn  := strNC_TO_PLCL,
0008   AxisRefOut := strPLC_TO_NC,
0009   Status     => ,
0010   Error      => , ErrorID      => );
0011
0012 (*Überprüft, ob die Achse bereit ist*)
0013 bAxis_Ready := AxisIsReady(strNC_TO_PLCL.nStateDWord);
0014
0015 (*Reset der Achse*)
0016 fbReset_Axis(
0017   Execute := bReset_Axis,
0018   Axis    := strNC_TO_PLCL,
0019   Done    => bReset_Done,
0020   Error   => , ErrorID => );
0021
0022 (*Führt eine Absolutbewegung durch*)
0023 fbMoveAbsolute_Axis_1(
0024   Execute      := bMove_Absolut,
0025   Position     := lPosition_Drive_to,
0026   Velocity     := lVelocity_Move_Ab_Axis_1,
0027   Acceleration := lAcc_Axis_1,
0028   Deceleration := lDecel_Axis_1,
0029   Jerk        := lJerk_Axis_1,
0030   Axis        := strNC_TO_PLCL,
0031   Done        => bMove_Absolut_Done,
0032   CommandAborted => bMove_Absolut_Aborted,
0033   Error       => , ErrorID      => );
0034
0035 IF fbMoveAbsolute_Axis_1.Done THEN
0036   bMove_Absolut := FALSE;
0037 END_IF
0038
0039 (*Führt eine Endlosbewegung durch*)
0040 IF bMoveRight THEN
0041   Direction := MC_Positive_Direction;
0042 ELSIF bMoveLeft THEN
0043   Direction := MC_Negative_Direction;
0044 END_IF
0045
0046 fbMoveVelocity_Axis_1(
0047   Execute      := bMoveRight OR bMoveLeft,
0048   Velocity     := 1000,
0049   Acceleration := lAcc_Axis_1,
0050   Deceleration := lDecel_Axis_1,
0051   Jerk        := ,
0052   Direction   := Direction,
0053   Axis        := strNC_TO_PLCL,
0054   InVelocity  => ,
0055   CommandAborted => ,
0056   Error       => , ErrorID      => );
0057
0058 IF bMove_Absolut OR bMoveLeft OR bMoveRight THEN
0059   bStop := FALSE;
0060 ELSE
0061   bStop := TRUE;
0062 END_IF
0063
0064 (*Stoppt die Achse*)
0065 fbStop(
0066   Execute      := bStop,
0067   Deceleration := 500,
0068   Jerk        := ,
0069   Axis        := strNC_TO_PLCL,
0070   Done        => ,
0071   Error       => , ErrorID      => );
0072
0073 (*Auslesen der aktuellen Position*)
0074 fbReadActualPosition_1(
0075   Enable := TRUE,
0076   Axis   := strNC_TO_PLCL,
0077   Done   => ,
0078   Error  => ,
0079   ErrorID => ,
0080   Position => lActual_Position);
0081

```

Fig. 125: Program code

The motor can then be operated with the aid of the following visualization (see Fig. *Visualization*).

Press *Enable* to enable the axis. In "Free run mode" you can now use the *Left* or *Right* buttons, and the motor will run with a speed defined under *fbMoveVelocity\_Axis\_1* in the selected direction. In "Absolute mode" you can specify a *Velocity*, *Acceleration*, *Deceleration* and the *Setpoint Position* and initiate the motion with *Start Job*. If no values are entered for *acceleration* and *deceleration* the default value of the NC is used.



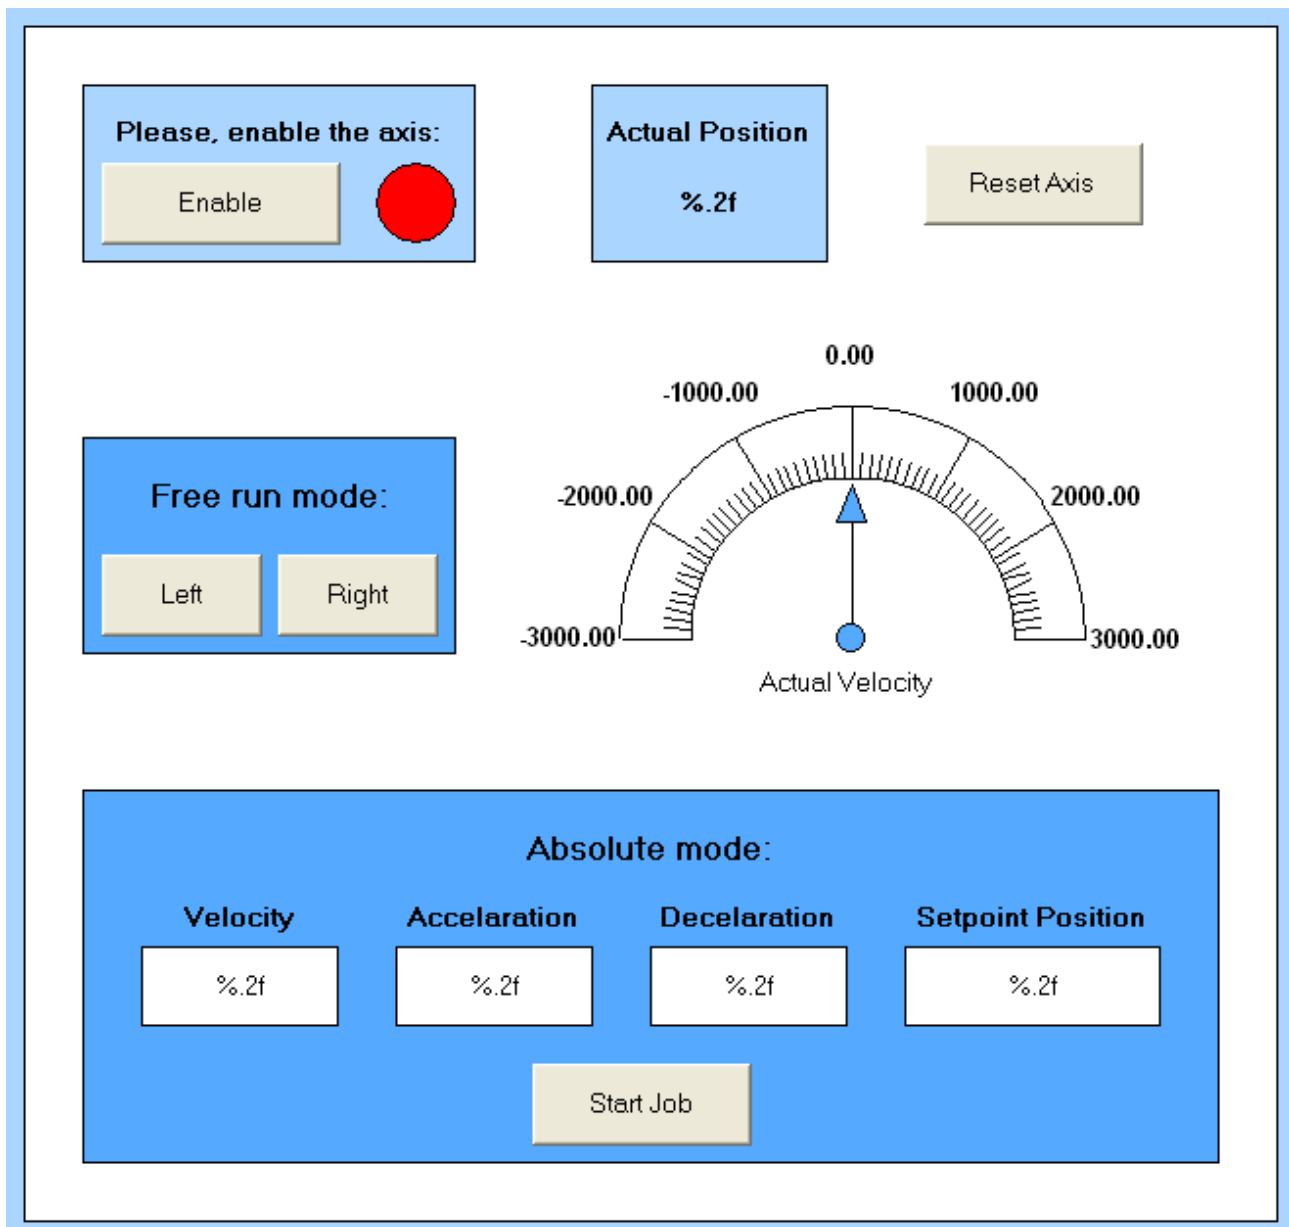


Fig. 126: Visualization

 <b>Note</b>	<p><b>Information on function blocks and data types</b></p> <p>Further information on the function blocks and data types used can be found in the <a href="#">Beckhoff Information System</a>.</p>
--	--

## 6.2.5 Commissioning without NC, status word/control word

(Master: TwinCAT 2.11 R3)

In principle, the operating modes CST, CSTCA, CSV and CSP can be used without TwinCAT NC.

### Output stage enabled via control word

The output stage has to be enabled for each operating mode. To this end enter the following values in the specified order via the PLC control word ([MDP742 \[▶ 144\]](#) / [DS402 \[▶ 158\]](#)) (see Fig. *DS402 State Machine*). The respective status messages are output in the status word ([MDP742 \[▶ 143\]](#) / [DS402 \[▶ 158\]](#)).

0<sub>hex</sub>  
80<sub>hex</sub> (Fault reset)  
6<sub>hex</sub> (Shutdown)  
7<sub>hex</sub> (Switch on)  
F<sub>hex</sub> (Enable operation)



### CST - cyclic synchronous torque

Select *Cyclic synchronous torque mode* in index [0x7010:03](#) [[144](#)] *Modes of operation* (MDP) or [0x6060:0](#) [[158](#)] *Modes of operation* (DS402). The *Predefined PDO Assignment: 'Cyclic synchronous torque mode (CST)'* should also be selected in the respective process data (see [CoE process data](#) [[130](#)] or [DS402 process data](#) [[133](#)]). The configuration then has to be reloaded in order to activate the selection.

Index [0x6010:03](#) [[143](#)] *Modes of operation display* (MDP) or [0x6061:0](#) [[158](#)] *Modes of operation display* (DS402) can be used to check the actual mode of the servo terminal.

Via the PLC a defined torque can be set in the variable *Target torque* as a target value for the servo terminal. The torque is specified in 1000th of the rated current. A value of  $1000_{\text{dec}}$ , for example, corresponds to the set index [0x8011:12](#) [[140](#)] *Rated current* (MDP) or index [0x6075:0](#) [[159](#)] *Motor rated current* (DS402). The value  $1_{\text{dec}}$  corresponds to one 1000th of the rated current.

### CSTCA - cyclic synchronous torque with commutation angle

Select *Cyclic synchronous torque mode with commutation angle* in index [0x7010:03](#) [[144](#)] *Modes of operation* (MDP) or index [0x6060:0](#) [[158](#)] *Modes of operation* (DS402). The *Predefined PDO Assignment: 'Cyclic synchronous torque mode with commutation angle mode (CSTCA)'* should also be selected in the respective process data (see [CoE process data](#) [[130](#)] or [DS402 process data](#) [[133](#)]). The configuration then has to be reloaded in order to activate the selection.

Index [0x6010:03](#) [[143](#)] *Modes of operation display* (MDP) or [0x6061:0](#) [[158](#)] *Modes of operation display* (DS402) can be used to check the actual mode of the servo terminal.

Via the PLC a defined torque can be set in the *Target torque* variable as a basis for the servo terminal control. In the *Commutation angle* variable the angle to be maintained with the set torque can be specified. The torque is specified in 1000th of the rated current. A value of  $1000_{\text{dec}}$ , for example, corresponds to the set index [0x8011:12](#) [[140](#)] *Rated current* (MDP) or index [0x6075:0](#) [[159](#)] *Motor rated current* (DS402). The value  $1_{\text{dec}}$  corresponds to one 1000th of the rated current.

The angle value must be converted,  $65536_{\text{dec}}$  corresponds to  $360^\circ$ .

### CSV - cyclic synchronous velocity

Select *Cyclic synchronous velocity* in index [0x7010:03](#) [[144](#)] *Modes of operation* (MDP) or index [0x6060:0](#) [[158](#)] *Modes of operation* (DS402). The *Predefined PDO Assignment: 'Cyclic synchronous velocity mode (CSV)'* should also be selected in the respective process data (see [CoE process data](#) [[130](#)] or [DS402 process data](#) [[133](#)]). The configuration then has to be reloaded in order to activate the selection.

Index [0x6010:03](#) [[143](#)] *Modes of operation display* (MDP) or [0x6061:0](#) [[158](#)] *Modes of operation display* (DS402) can be used to check the actual mode of the servo terminal.

Via the PLC a defined speed can be set as control parameter for the servo terminal in the variable *Target velocity* [0x7010:06](#) [[144](#)] (MDP) or [0x60FF:0](#) [[161](#)] (DS402). The constant value *Velocity encoder resolution* in CoE object [0x9010:14](#) [[145](#)] (MDP) or [0x6090:0](#) [[160](#)] (DS402) corresponds to 1 revolution per second. If this value is entered under *Target velocity*, the motor speed is 1 rev. per sec. The velocity can be increased by entering a suitable multiple of the *Velocity encoder resolution* value under *Target velocity*.

### CSP - cyclic synchronous position

Select *Cyclic synchronous position* in index [0x7010:03](#) [[144](#)] *Modes of operation* (MDP) or index [0x6060:0](#) [[158](#)] *Modes of operation* (DS402).

Similarly, the *Predefined PDO Assignment: 'Cyclic synchronous position mode (CSP)'* should be selected in the respective process data (see [CoE process data](#) [[130](#)] or [DS402 process data](#) [[133](#)]). The configuration then has to be reloaded in order to activate the selection.

Index [0x6010:03](#) [[143](#)] *Modes of operation display* (MDP) or [0x6061:0](#) [[158](#)] *Modes of operation display* (DS402) can be used to check the actual mode of the servo terminal.

Via the PLC a defined position can be set in the variable *Target position* [0x7010:05](#) [[144](#)] (MDP) or [0x607A:0](#) [[159](#)] (DS402) to which the motor is to drive. The calculated *scaling factor* [[110](#)] is taken as the basis for the calculation of the position. The value entered in the *Target position* variable must be multiplied by the calculated scaling factor.

## 6.2.6 Homing

(Master TwinCAT 2.11 R3)

The data provided in this section as an example refer to an AM3121-0200-0001 servomotor from Beckhoff Automation. For other motors the values may vary, depending on the application.

Table of contents
• Referencing [ <a href="#">▶ 105</a> ]
- Function block "MC_Home" [ <a href="#">▶ 105</a> ]
- Reference modes [ <a href="#">▶ 106</a> ]

### Referencing

Referencing is not available via the online commissioning tab for the axis (see Fig. *Online homing in the NC*), since the reference cam cannot be directly connected to the EL72x1.

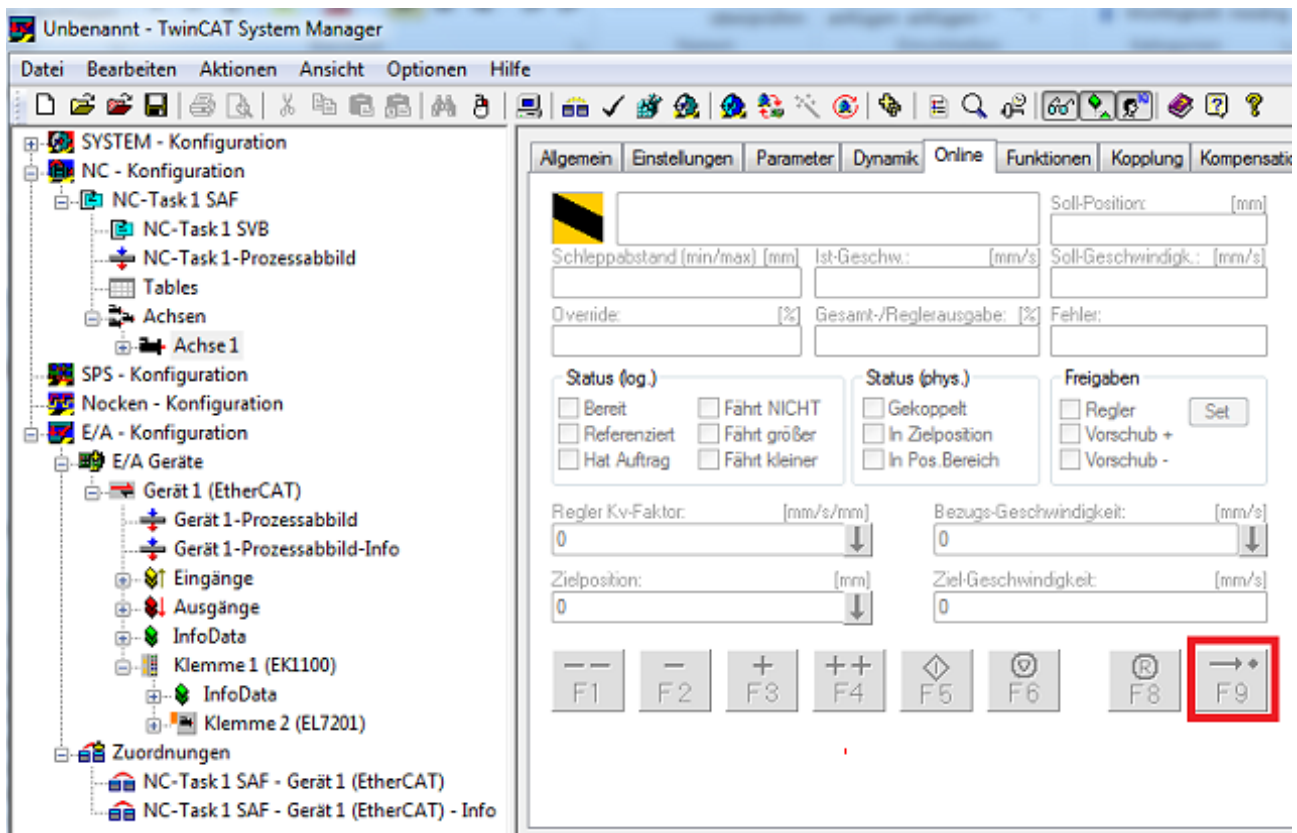


Fig. 128: Online homing in the NC

### Function block "MC\_Home"

- Referencing must be done from the PLC. The function block *MC\_Home* from the TC MC2 Lib is used for this purpose.
- The following minimum configuration is required in *MC\_Home*.
  - Homing mode enables selection of mode to be used for referencing.
  - Execute is used to initiate homing.
  - bCalibrationCam, which has to be linked with your reference cam, is used to stop homing.

```

0046 (*Homing*)
0047
0048 fbMC_Home(
0049     Execute:=bStartHoming, (*Start der Referenzfahrt*)
0050     Position:= ,
0051     HomingMode:= MC_DefaultHoming, (*Führt standart Referenzfahrt aus*)
0052     BufferMode:= ,
0053     Options:= ,
0054     bCalibrationCam:=bReferenceStop, (*Rferenznocke*)
0055     Axis:=axis1,
0056     Done=>,
0057     Busy=>,
0058     Active=>,
0059     CommandAborted=>,
0060     Error=>,
0061     ErrorID=>);
    
```

Fig. 129: Configuration of the MC\_Home block

- The following figure *Extract from the functional description for MC\_Home* shows an extract from the functional description of *MC\_Home*. Full information can be found in the corresponding functional description.

<b>Execute</b>	Mit einer steigenden Flanke am Eingang <i>Execute</i> wird das Kommando ausgeführt.			
<b>Position</b>	Absolute Referenzposition auf die die Achse nach der Referenzfahrt gesetzt wird. Alternativ kann hier die Konstante <code>DEFAULT_HOME_POSITION</code> verwendet werden. Dadurch wird die im TwinCAT System Manager festgelegte <i>Referenzposition für Referenzfahrt</i> verwendet. <b>Achtung:</b> Da die Referenzposition üblicherweise noch während der Fahrt gesetzt wird, bleibt die Achse nicht exakt an dieser Position stehen. Die Stillstandsposition weicht um den Bremsweg der Achse ab, dennoch ist die Kalibrierung exakt.			
<b>HomingMode</b>	<i>HomingMode</i> bestimmt, auf welche Weise die Kalibrierung durchgeführt wird. <ul style="list-style-type: none"> <li>→ <code>MC_DefaultHoming</code> Führt die Standard-Referenzfahrt aus.</li> <li>→ <code>MC_Direct</code> Setzt die Position der Achse direkt auf <i>Position</i> ohne eine Bewegung auszuführen.</li> <li>→ <code>MC_ForceCalibration</code> Erzwingt den Zustand "Achse ist kalibriert". Es wird keine Bewegung ausgeführt und die Position bleibt unverändert.</li> <li>→ <code>MC_ResetCalibration</code> Setzt den Kalibrierungszustand der Achse zurück. Es wird keine Bewegung ausgeführt und die Position bleibt unverändert.</li> </ul>			
<b>BufferMode</b>	Zur Zeit nicht implementiert - Der <i>BufferMode</i> wird ausgewertet, wenn die Achse bereits ein anderes Kommando ausführt. Das laufende Kommando kann abgebrochen werden oder dieses Kommando wird erst nach dem laufenden Kommando aktiv. Die Übergangsbedingung vom laufenden zum nächsten Kommando wird ebenfalls durch den <i>BufferMode</i> festgelegt.			
<b>Options</b>	Die Datenstruktur <i>Options</i> enthält zusätzliche, selten benötigte Parameter. Im Normalfall kann der Eingang offen bleiben. <table border="1" style="width: 100%;"> <tr> <td><b>Options.</b></td> <td><b>ClearPositionLag</b></td> <td><i>ClearPositionLag</i> wirkt nur im Mode <code>MC_Direct</code>. <i>ClearPositionLag</i> kann optional gesetzt werden, falls Soll- und Istposition auf den gleichen Wert gesetzt werden sollen. Damit wird der Schleppfehler gelöscht.</td> </tr> </table>	<b>Options.</b>	<b>ClearPositionLag</b>	<i>ClearPositionLag</i> wirkt nur im Mode <code>MC_Direct</code> . <i>ClearPositionLag</i> kann optional gesetzt werden, falls Soll- und Istposition auf den gleichen Wert gesetzt werden sollen. Damit wird der Schleppfehler gelöscht.
<b>Options.</b>	<b>ClearPositionLag</b>	<i>ClearPositionLag</i> wirkt nur im Mode <code>MC_Direct</code> . <i>ClearPositionLag</i> kann optional gesetzt werden, falls Soll- und Istposition auf den gleichen Wert gesetzt werden sollen. Damit wird der Schleppfehler gelöscht.		
<b>bCalibrationCam</b>	<i>bCalibrationCam</i> spiegelt das Signal einer Referenznocke wieder, das über einen digitalen Eingang in die Steuerung kommen kann.			

Fig. 130: Extraction from the functional description for MC\_Home

**Reference modes**

- The EL72x1 can be operated with the following NC reference modes (see Fig. *Selection of the reference modes in the NC*).
- Default:** Is suitable as a general setting and for most applications. Once the motor reaches the reference cam, the direction is reversed. The declining cam signal causes the motor to stop. The reference position is then set.
- Software Sync:** The C track is modelled virtually.



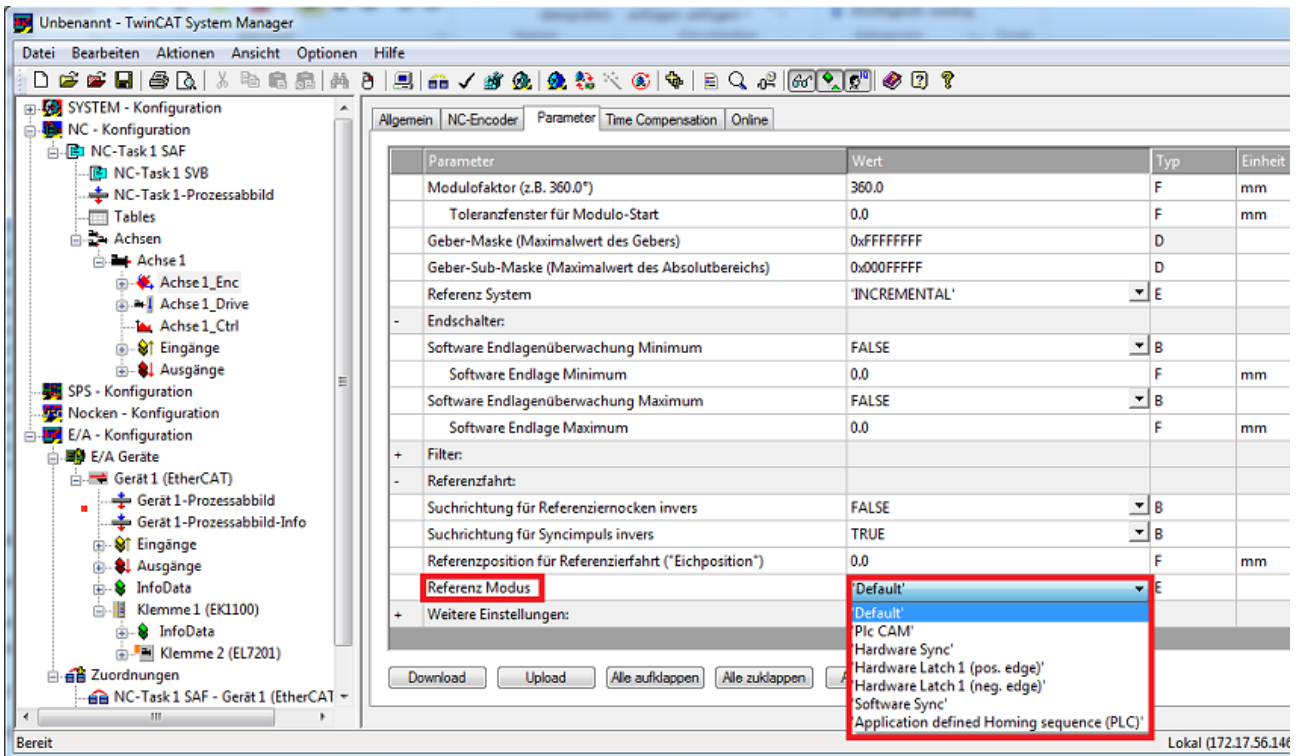


Fig. 131: Selection of the reference modes in the NC

The velocity to be used for homing can also be set in the NC (Fig. *Setting the reference velocity*).

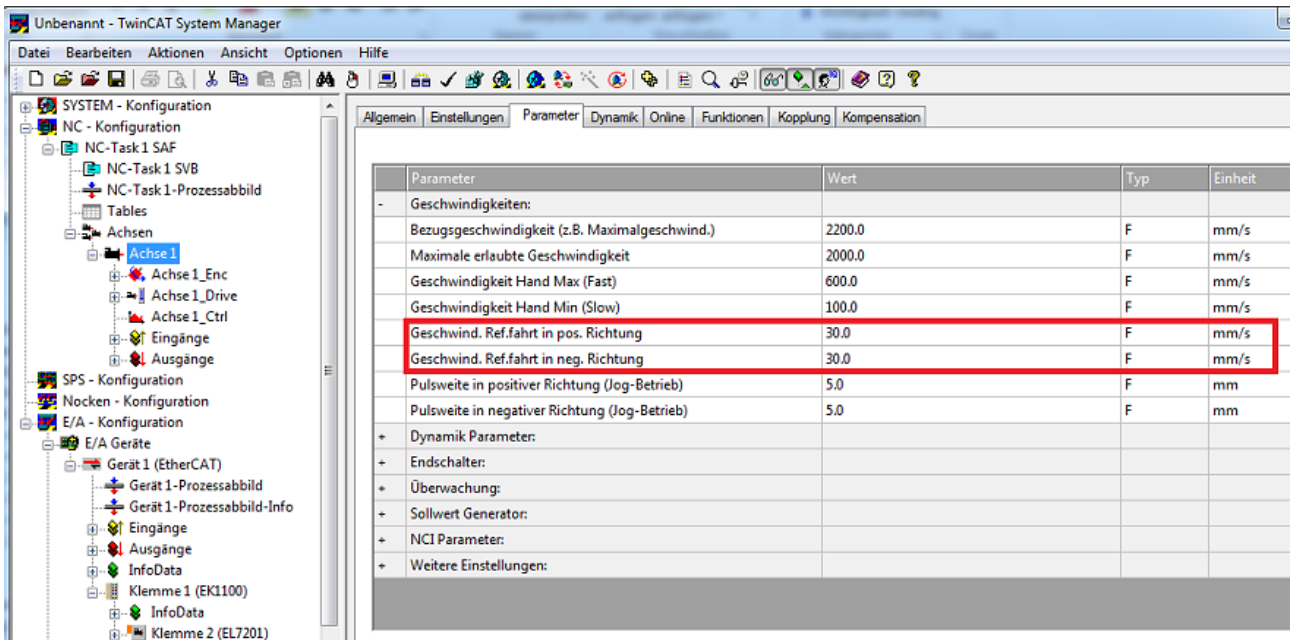


Fig. 132: Setting the reference velocity

## 6.2.7 NC settings

(Master TwinCAT 2.11 R3)

The data provided in this section as an example refer to an AM3121-0200-0001 servomotor from Beckhoff Automation. For other motors the values may vary, depending on the application.

**Table of contents**

- Definition of the unit [▶ 108]
- Selecting the maximum velocity [▶ 108]
- Dead time compensation [▶ 111]
- Setting the encoder mask [▶ 109]
- Scaling factor [▶ 110]
  - Calculation of the scaling factor [▶ 111]
  - Scaling output [▶ 111]
- Position lag monitoring [▶ 111]
- Commissioning the motor with the NC [▶ 112]

Several important parameters are required for the commissioning with the NC. These should be set as follows before commissioning. A fundamental factor for setting the following parameters is the unit in which the NC is set to operate. For the following parameters it was assumed that one revolution corresponds to 360°.

**Definition of the unit**

The unit can be defined in the *Settings* tab for the axis.

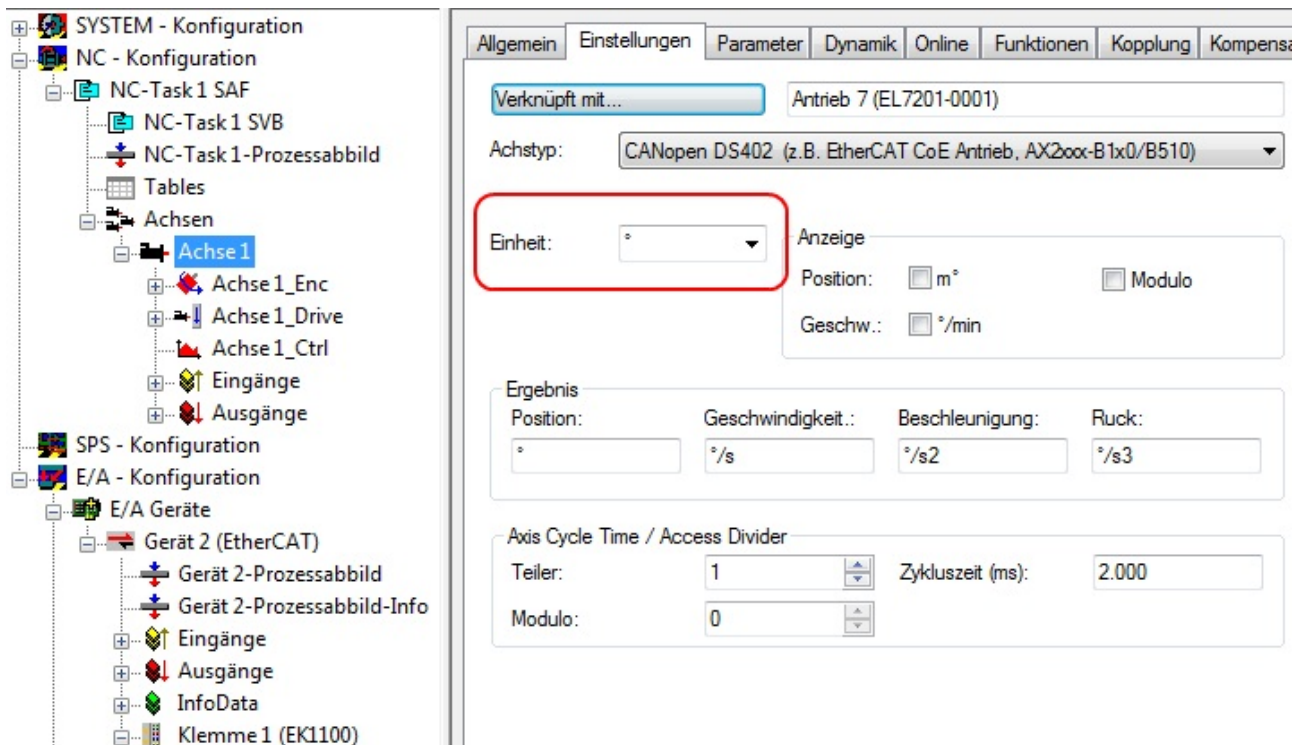


Fig. 133: Definition of the unit

**Selecting the maximum velocity**

The *maximum permitted velocity* is calculated based on the maximum motor speed (name plate) and the distance, in this case in relation to 360° per second.

$$v_{Bez} = \frac{v_{maxMotor} \times 360^\circ}{60 s} = \frac{2000 \frac{1}{min} \times 360^\circ}{60 s} = 12000 \frac{^\circ}{s}$$

$$v_{max} = \frac{v_{maxMotor} \times 360^\circ}{60 s} = \frac{2000 \frac{1}{min} \times 360^\circ}{60 s} = 12000 \frac{^\circ}{s}$$



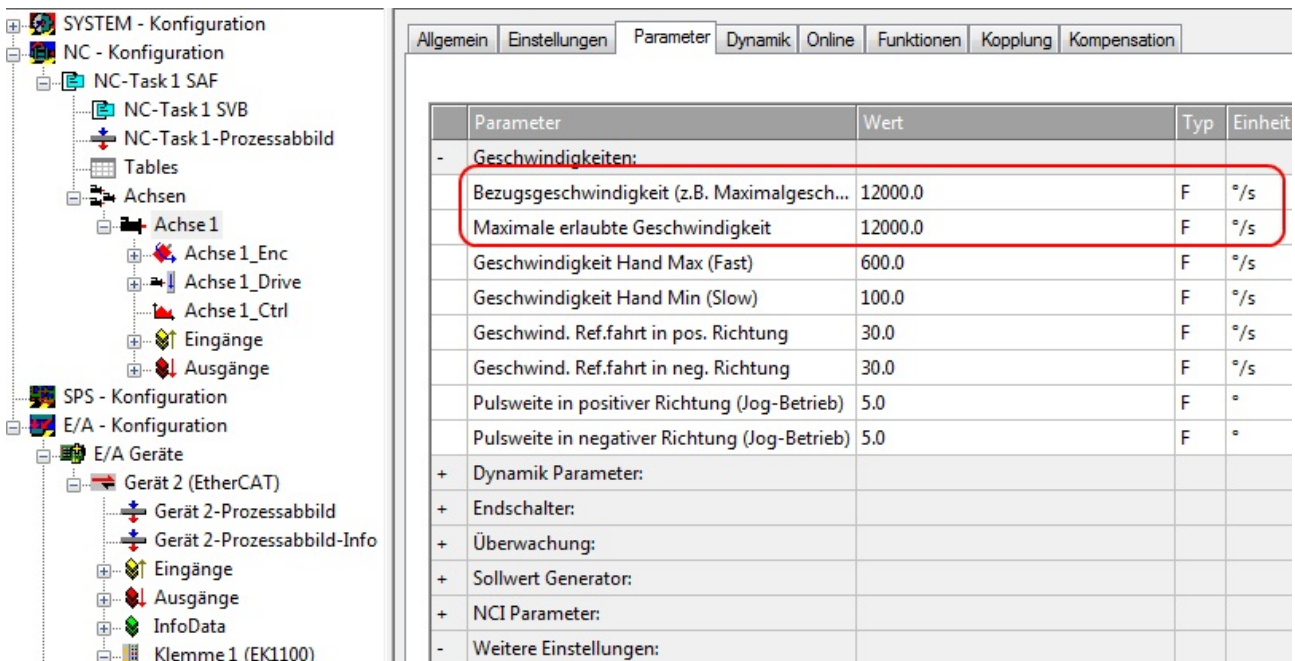


Fig. 134: Adjusting the reference velocity

The *reference velocity* matches the *maximum permitted velocity*.

Below that separate values for the maximum and minimum velocity for manual NC mode can be set.

**Setting the encoder mask**

The maximum values for the encoder mask can be set in the *Parameter* tab for the *Axis1\_ENC* encoder settings. The EL72x1 provides a maximum of 32 bits for the encoder.

The parameter Encoder Mask (maximum encoder value) can be used to set the maximum number of available bits. By default this is set to 0xFFFF FFFF, which corresponds to 32 bits (20 single-turn bits and 12 multi-turn bits). The calculation is based on the following equation.

$$GM_{max} = 2^{Singleturn\ Bits + Multiturn\ Bits} - 1 = 2^{20+12} - 1 = 4\ 294\ 967\ 295 \Rightarrow 0x\ FFFF\ FFFF$$

The parameter Encoder Sub Mask (absolute range maximum value) indicates how many bits of the maximum encoder value are single-turn bits. The default setting is 20 (and therefore 12 multi-turn bits). The calculation is based on the following equation.

$$GM_{ST} = 2^{Singleturn\ Bits} - 1 = 2^{20} - 1 = 1\ 048\ 575 \Rightarrow 0x\ 000F\ FFFF$$

Further calculation example with 13 single-turn bits and 8 multi-turn bits.

$$GM_{max} = 2^{Singleturn\ Bits + Multiturn\ Bits} - 1 = 2^{13+8} - 1 = 2\ 097\ 151 \Rightarrow 0x\ 001F\ FFFF$$

$$GM_{ST} = 2^{Singleturn\ Bits} - 1 = 2^{13} - 1 = 8\ 191 \Rightarrow 0x\ 0000\ 1FFF$$

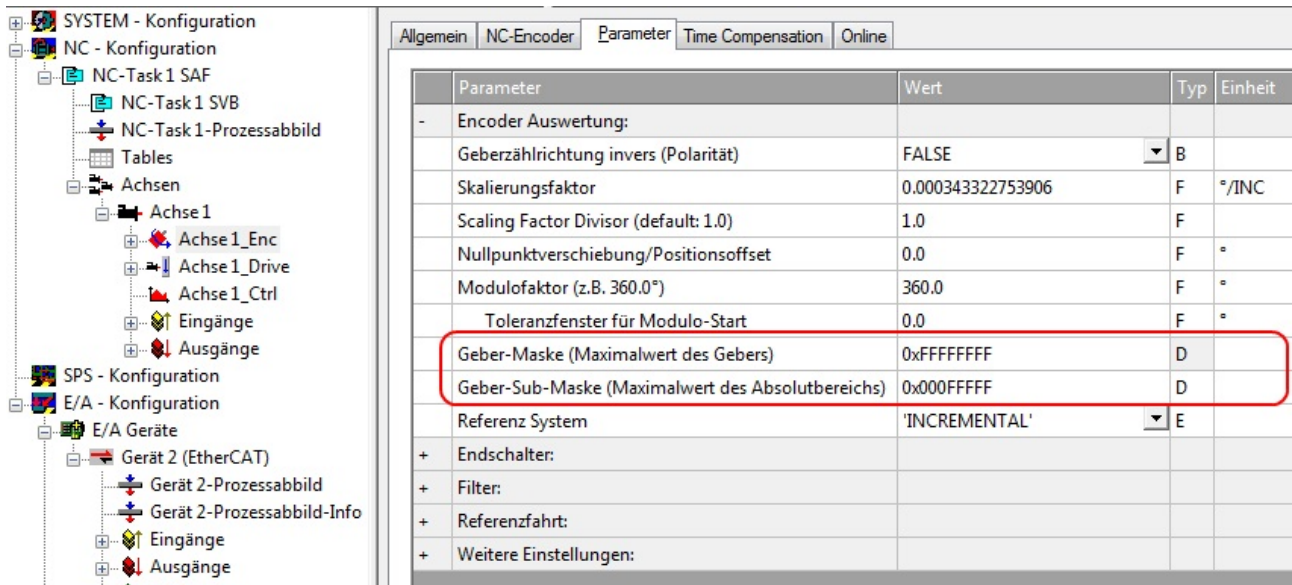


Fig. 135: Setting the encoder mask

**Scaling factor**

The scaling factor can be changed by selecting "Axis 1\_Enc" and tab "Parameter" in the NC (see *Setting the Scaling Factor*). The value can be calculated with the formulas specified below. The calculation is based on the assumption that one revolution corresponds to 360°.

The number of single-turn bits is taken into account in the calculation of the scaling factor. As indicated above, the default setting for the EL72x1 is 20 single-turn bits. This value is also used for calculating the scaling factor. If the single-turn bit value is changed, the scaling factor must be adjusted.

**Calculation of the scaling factor:**

$$SF = \frac{\text{Weg pro Umdrehung}}{2^{\text{Singelturn Bits}}} = \frac{360^\circ}{2^{20}} = 0,000343322753906 \text{ } ^\circ/\text{INC}$$

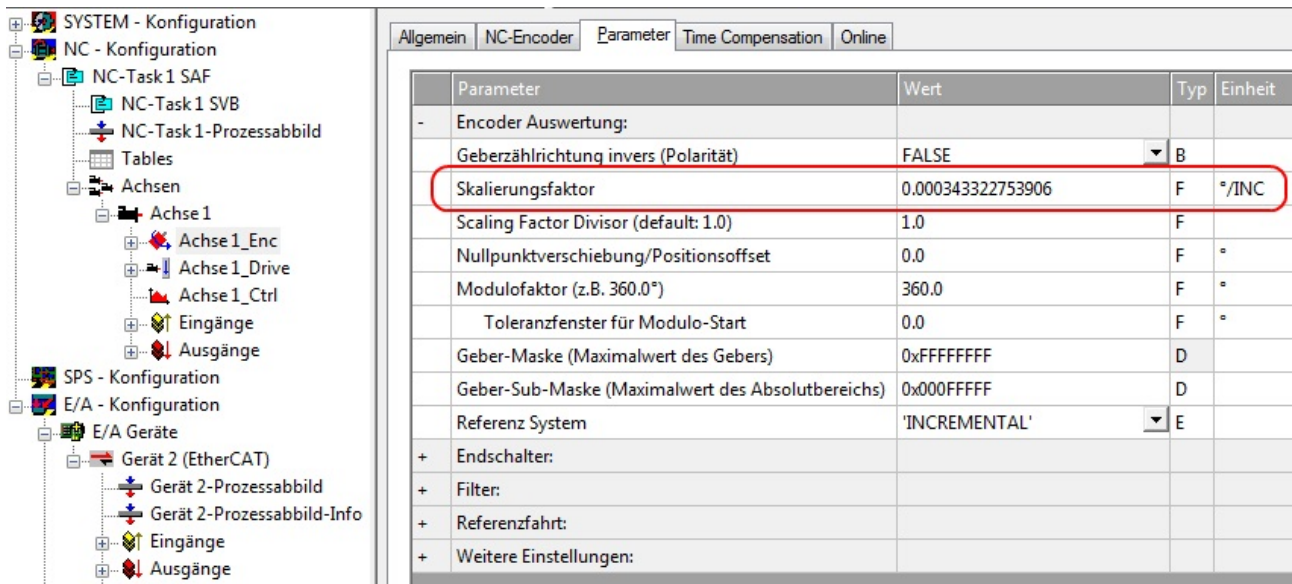


Fig. 136: Setting the Scaling Factor

### Dead time compensation

The dead time compensation can be adjusted on the *Time Compensation* tab of *Axis1\_ENC*. It should theoretically be 3 cycles of the NC cycle time, although in practice 4 cycles are preferable. Therefore, the settings of the parameters *Time Compensation Mode Encoder* should be ,ON (with velocity) )' and *Encoder Delay in Cycles* '4'.

Parameter	Offline Value	Online Value	Unit
- Time Compensation Mode En...	'ON (with velocity)'		
IO Time is absolute	FALSE		
Encoder Delay in Cycles	4		
Additional Encoder Delay	0		µs

Fig. 137: Dead time compensation parameter

### Scaling output

Enter the value 32 in the *Parameter* tab for the drive settings under *Output Scaling (Velocity)*.

Parameter	Wert	Typ	Einheit
- Ausgabeskalierung:			
Motor invers angeschlossen (Polarität)	FALSE	B	
Bezugsgeschwindigkeit (z.B. Maximalgeschwind.)	12000.0	F	*/s
bei Bezugsausgabe [0.0 ... 1.0]	1.0	F	
Ausgabeskalierung (Geschw.)	32.0	F	
+ Optionale Ausgabeskalierung:			
+ Weitere Einstellungen:			

Fig. 138: Output scaling

### Position lag monitoring

The position lag monitoring function checks whether the current position lag of an axis has exceeded the limit value. The position lag is the difference between the set value (control value) and the actual value reported back. If the terminal parameters are set inadequately, the position lag monitoring function may report an error when the axis is moved. During commissioning it may therefore be advisable to increase the limits of the *Position lag monitoring* slightly.



**Attention**

**Damage to equipment, machines and peripheral components possible!**

Setting the position lag monitoring parameters too high may result in damage to equipment, machines and peripheral components.

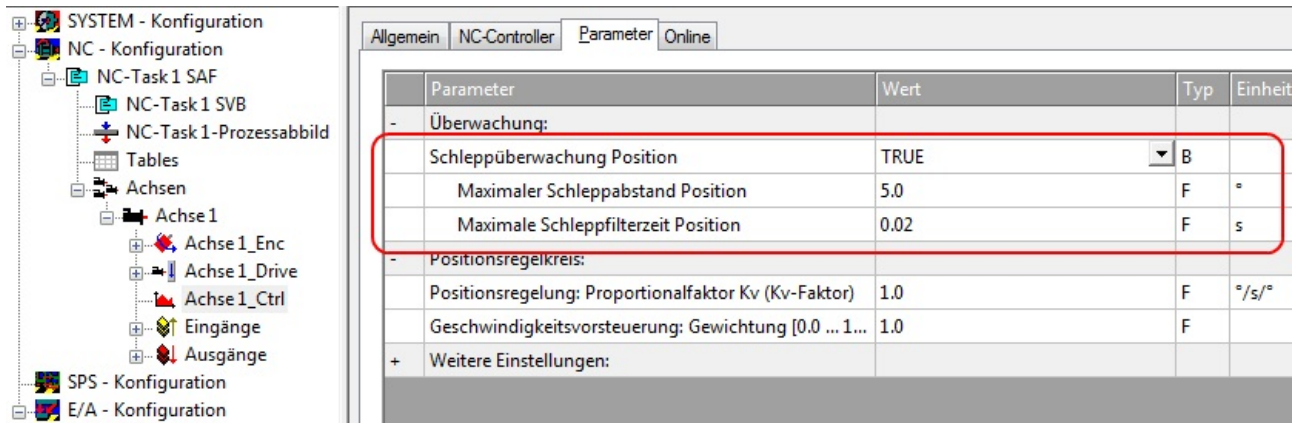


Fig. 139: Lag monitoring

**Commissioning the motor with the NC**

- Once the parameters are set, the motor is basically ready for operation. Individual further parameters have to be adapted to the respective application.
- To commission the axis, activate the configuration (Ctrl+Shift+F4), select the axis, select tab Online and enable the axis under Set.
- Set all tick marks and set Override to 100% (see Fig. *Enabling an axis*). The axis can then be moved.

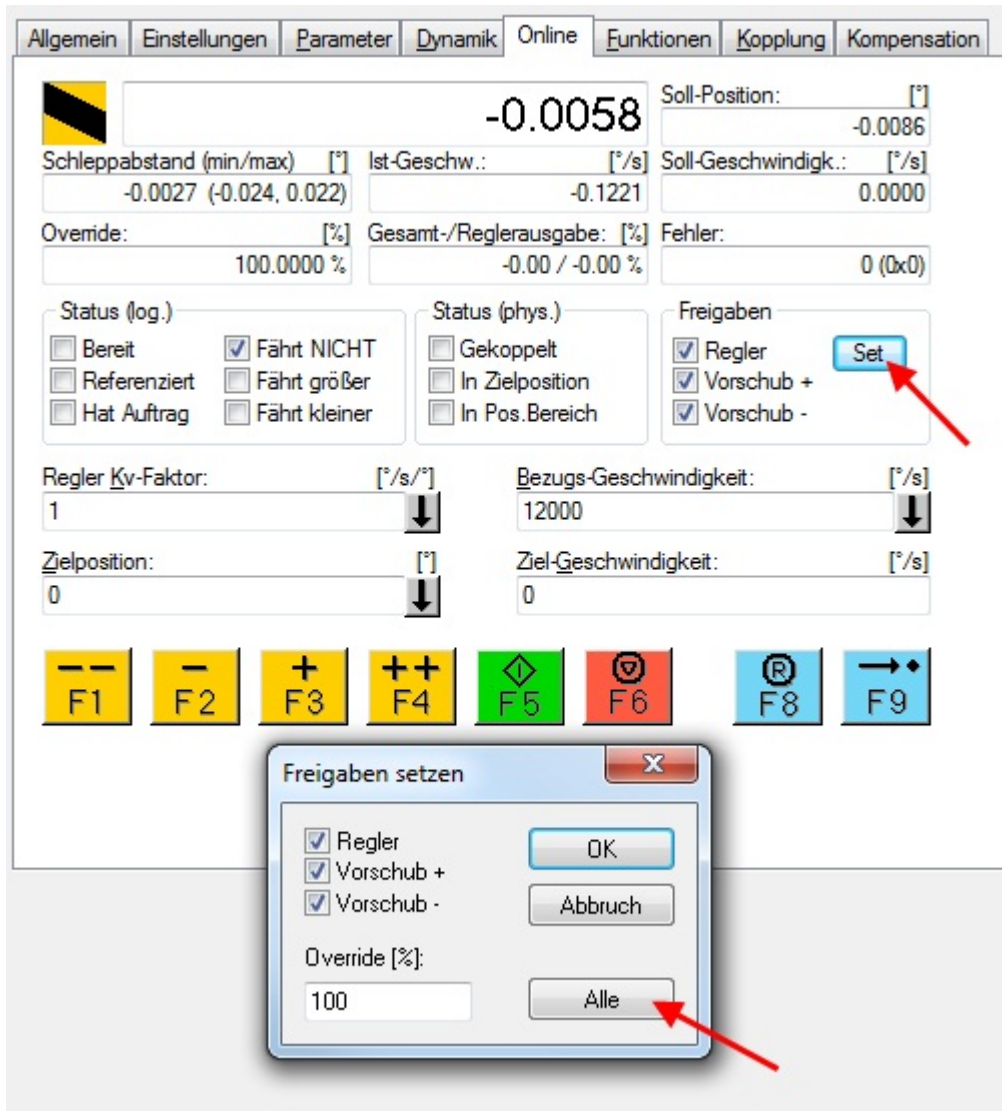


Fig. 140: Enabling an axis



You can now move the axis with the function keys F1, F2 (Backward) or F3, F4 (Forward). You can adjust the Kv factor in order to approach a suitable factor. Set the value to 0 initially in order to set the correct reference velocity. For calculating the reference velocity please refer to section "[Selecting the maximum velocity \[► 108\]](#)". The calculation provides a relatively precise value, although the value may have to be corrected slightly. To this end move the motor with a Kv factor of 0 until the actual velocity matches the setpoint velocity.

Alternatively you can control the axis via the Functions tab. An example is provided below.

- Select as Reversing Sequence as the start type.
- Enter the required *Target Position2*, e.g. 12000°.
- Enter the required Target Velocity, e.g. 12000°/s.
- Enter the required Target Position1, e.g. 0°.
- Enter the required *Idle Time*, e.g. 2 s.
- Select Start.

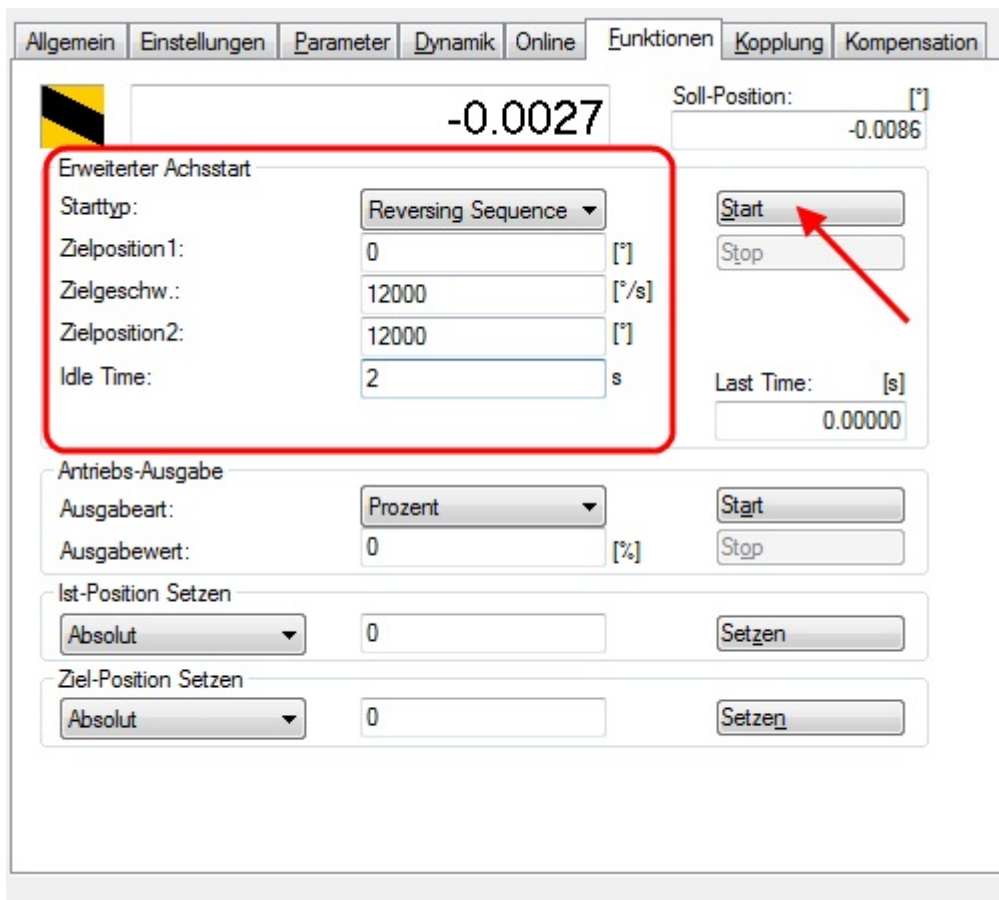


Fig. 141: Reversing Sequence

The motor now turns to position 2, remains there for 2 seconds and returns to position 1. This is repeated until Stop is pressed.

## 6.3 Operating modes

### 6.3.1 Overview

Operating modes CST, CSTCA, CSV and CSP are supported. The operating mode is set in the CoE list in index 0x7010:03 Modes of operation (MDP) or index 0x6060:0 Modes of operation (DS402). In the respective process data the user can additionally select the respective *Predefined PDO Assignment*. All required variables are then in the process data.

**CSV [▶ 114] - cyclic synchronous velocity (velocity control)**

In CSV mode the EL72x1-xxxx operates with the cyclic velocity interface. A defined velocity can be set via the *Target velocity* variable.

**CST [▶ 118] - cyclic synchronous torque (torque control)**

In CST mode the EL72x1-xxxx operates in the cyclic torque interface. A defined torque can be set via the *Target torque* variable.

**CSTCA [▶ 121] - cyclic synchronous torque with commutation angle (torque control with commutation angle)**

This operating mode is also intended for use with the cyclic torque interface. In addition the user can specify the commutation angle. The variable *Commutation angle* can be used to set an angle which is to be maintained with a defined torque set in variable *Target torque*.

**CSP [▶ 125] - cyclic synchronous position (position control)**

In the CSP operating mode the EL72x1-xxxx operates in the cyclic position interface. A defined position can be set via the *Target position* variable.

For further information on the three operating modes described above please refer to section "Commissioning without NC".

## 6.3.2 CSV

**CSV - cyclic synchronous velocity (velocity control)**

In CSV mode the EL72x1-xxxx operates with the cyclic velocity interface. A defined velocity can be set via the *Target velocity* variable.

**Step-by-Step**

- Add the terminal to the configuration as described in the chapter [TwinCAT configuration settings \[▶ 62\]](#) - manual or - [Online scan \[▶ 67\]](#).
- Link the terminal with the NC as described in the chapter [Integration in the NC configuration \[▶ 85\]](#).
- Import the motor XML file into the Startup directory as described in the chapter [Settings in the CoE \[▶ 92\]](#).
- Set the mode of operation in the CoE directory to *Cyclic synchronous velocity mode (CSV)*, *Fig. Selection of the mode of operation*.

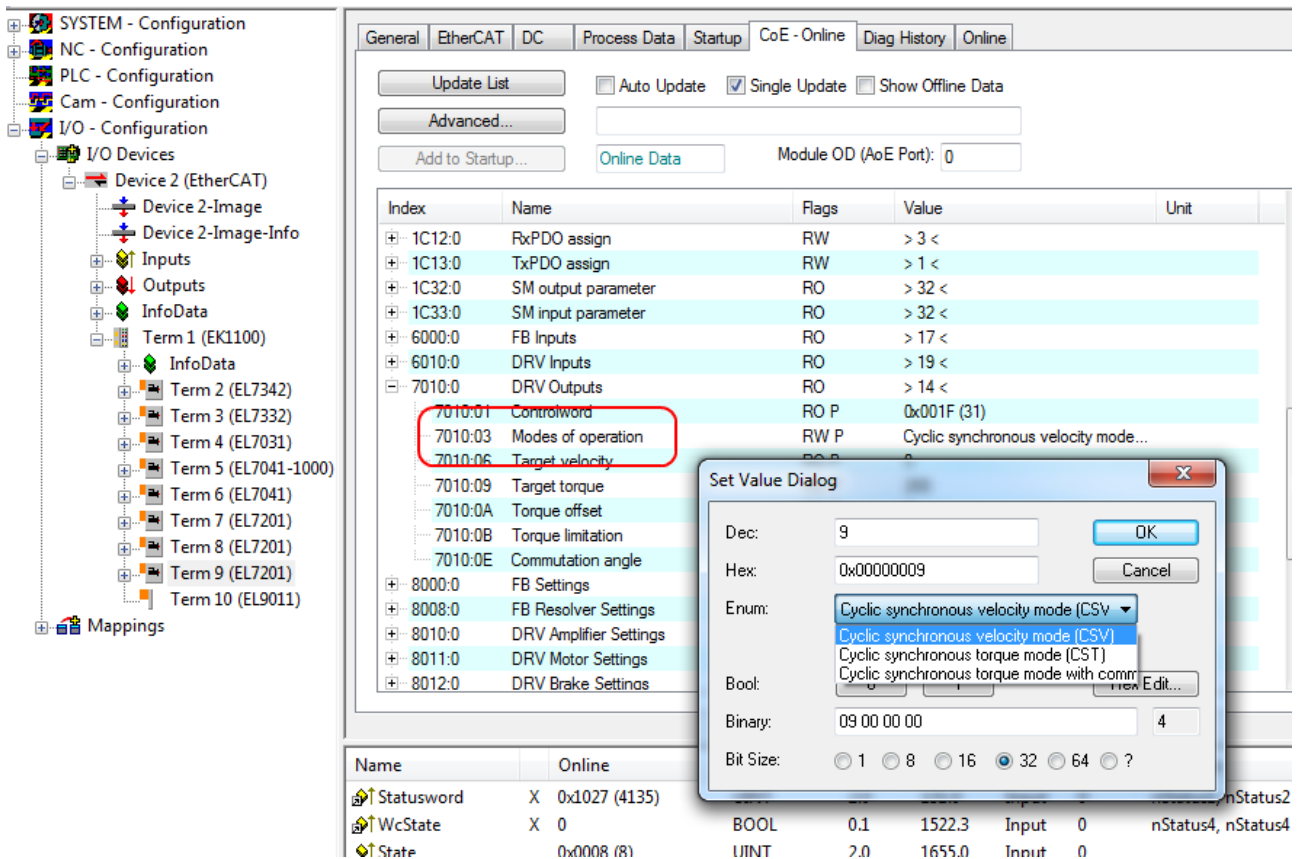


Fig. 142: Selection of the mode of operation

- Under Predefined PDO assignment, also select *Cyclic synchronous velocity mode (CSV)*, Fig. *Selecting a predefined PDO assignment*.

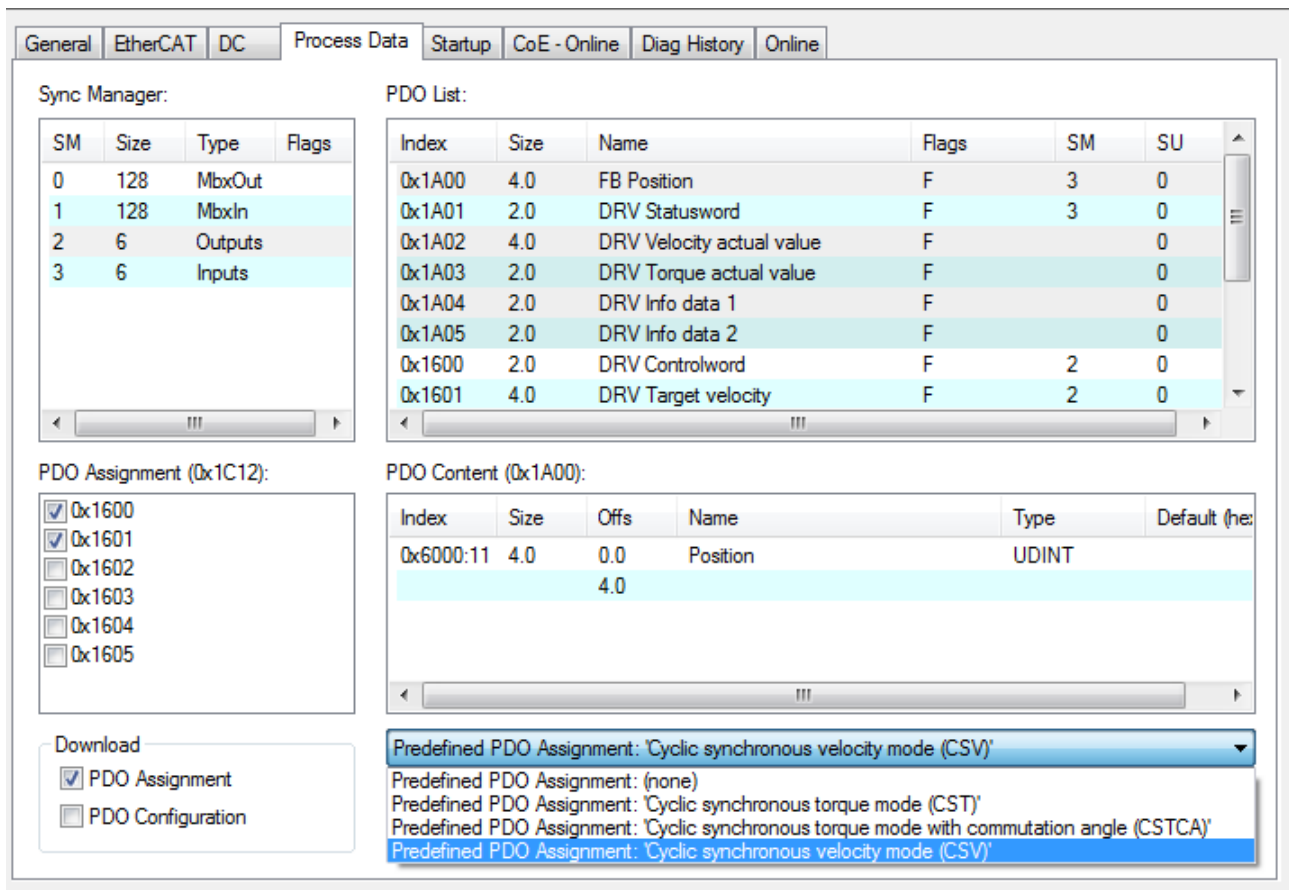


Fig. 143: Selecting a predefined PDO assignment

- Activate the configuration (Ctrl+Shift+F4).
- Run through the State Machine of the terminal. There are two ways to do this:
  - If you use the TwinCAT NC.  
The State Machine is run through automatically by the NC. You can enable the axis in the *Online* tab of the axis.  
Set all tick marks and set *Override* to 100% (see Fig. *Set enables*). The axis can then be moved.



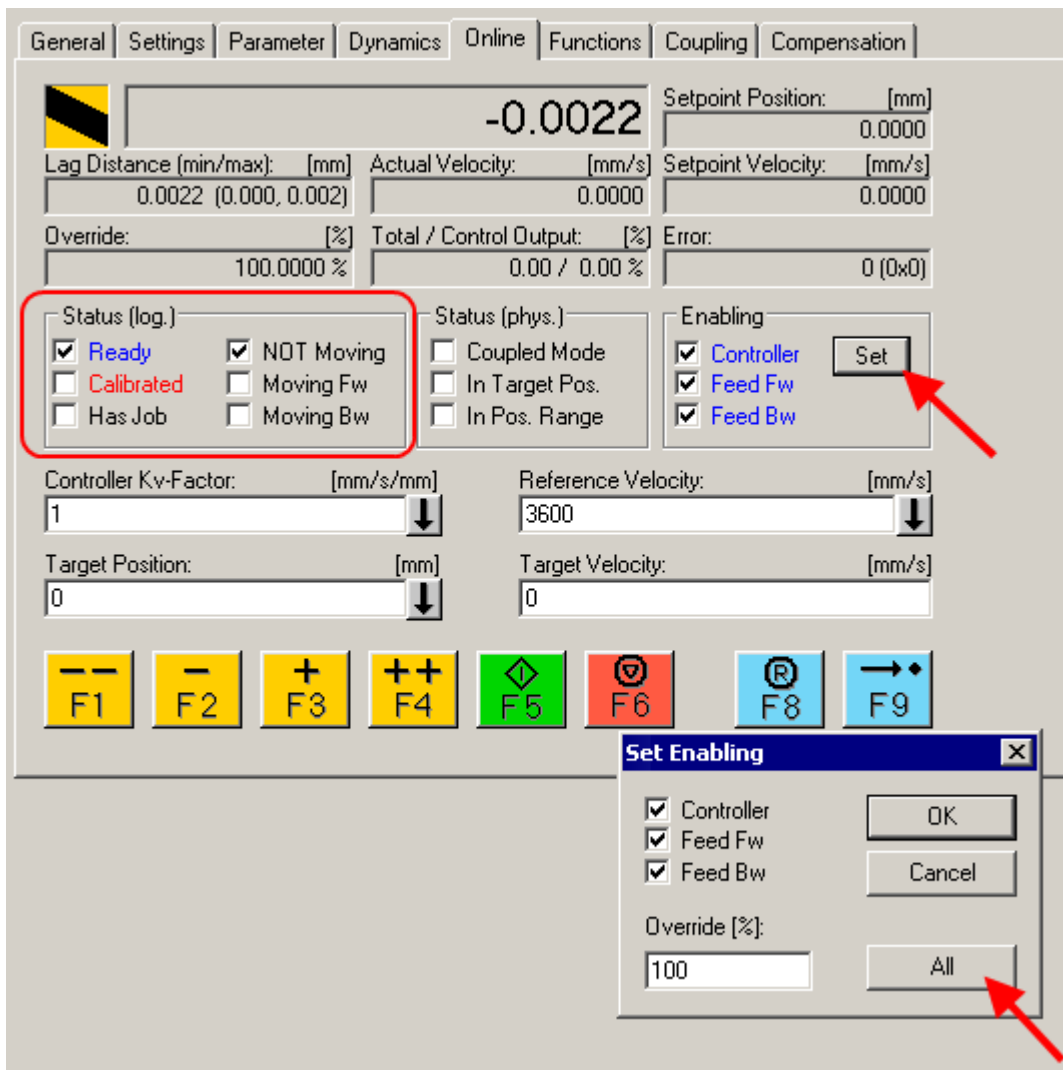


Fig. 144: Set enables

- If you don't use the TwinCAT NC. In this case you must run through the State Machine manually. To do this, follow the instructions in the chapter [Commissioning without the NC \[► 101\]](#).

- The cyclic variable *Target velocity* (Fig. *Torque specification*) can be used to specify a defined velocity. The value in the index 0x9010:14 (0x6090:0, DS402) *Velocity encoder resolution* corresponds to 1 rpm.

Name	Online	Type	Size	>Addr...	In/Out	User ID	Linked to
Position	X 0x00000000 (0)	UDINT	4.0	132.0	Input	0	nInData1 . Axis 10_Enc_I...
Statusword	X 0x0000 (0)	UINT	2.0	136.0	Input	0	nStatus1, nStatus2
WcState	X 1	BOOL	0.1	1522.3	Input	0	nStatus4, nStatus4
State	0x0042 (66)	UINT	2.0	1655.0	Input	0	
AdsAddr	AC 11 28 29 03 01 ...	AMSADDR...	8.0	1657.0	Input	0	
Chn0	0x00 (0)	USINT	1.0	1665.0	Input	0	
Chn1	0x01 (1)	USINT	1.0	1666.0	Input	0	
DcOutputShift	X 0x0009E854 (649300)	DINT	4.0	1667.0	Input	0	nDcOutputTime . Axis 1...
DcInputShift	X 0x003320AC (3350...)	DINT	4.0	1671.0	Input	0	nDcInputTime . Axis 10...
Controlword	X 0x0006 (6)	UINT	2.0	132.0	Output	0	nCtrl1, nCtrl2
Target velocity	0x00000000 (0)	DINT	4.0	134.0	Output	0	

Fig. 145: Torque specification

### 6.3.3 CST

#### CST - cyclic synchronous torque (torque control)

In CST mode the EL72x1-xxxx operates in the cyclic torque interface. A defined torque can be set via the *Target torque* variable.

#### Step-by-Step

- Add the terminal to the configuration as described in the chapter [TwinCAT configuration settings](#) [▶ 62] - manual or - [Online scan](#) [▶ 67].
- Link the terminal with the NC as described in the chapter [Integration in the NC configuration](#) [▶ 85].
- Import the motor XML file into the Startup directory as described in the chapter [Settings in the CoE](#) [▶ 92].
- Set the mode of operation in the CoE directory to *Cyclic synchronous torque mode (CST)*, Fig. [Selection of the mode of operation](#).

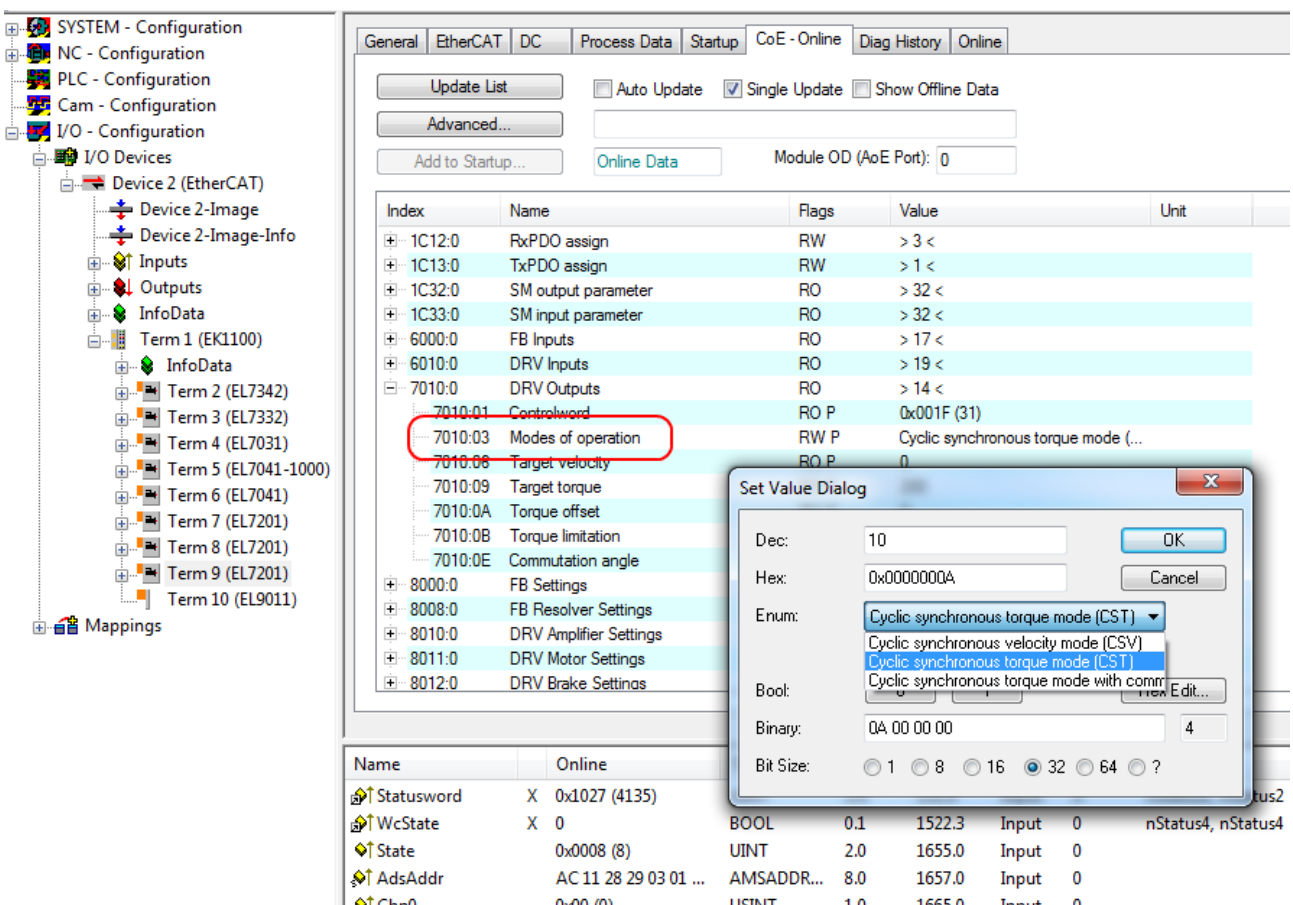


Fig. 146: Selection of the mode of operation

- Under Predefined PDO assignment, also select *Cyclic synchronous torque mode (CST)*, Fig. [Selecting a predefined PDO assignment](#).

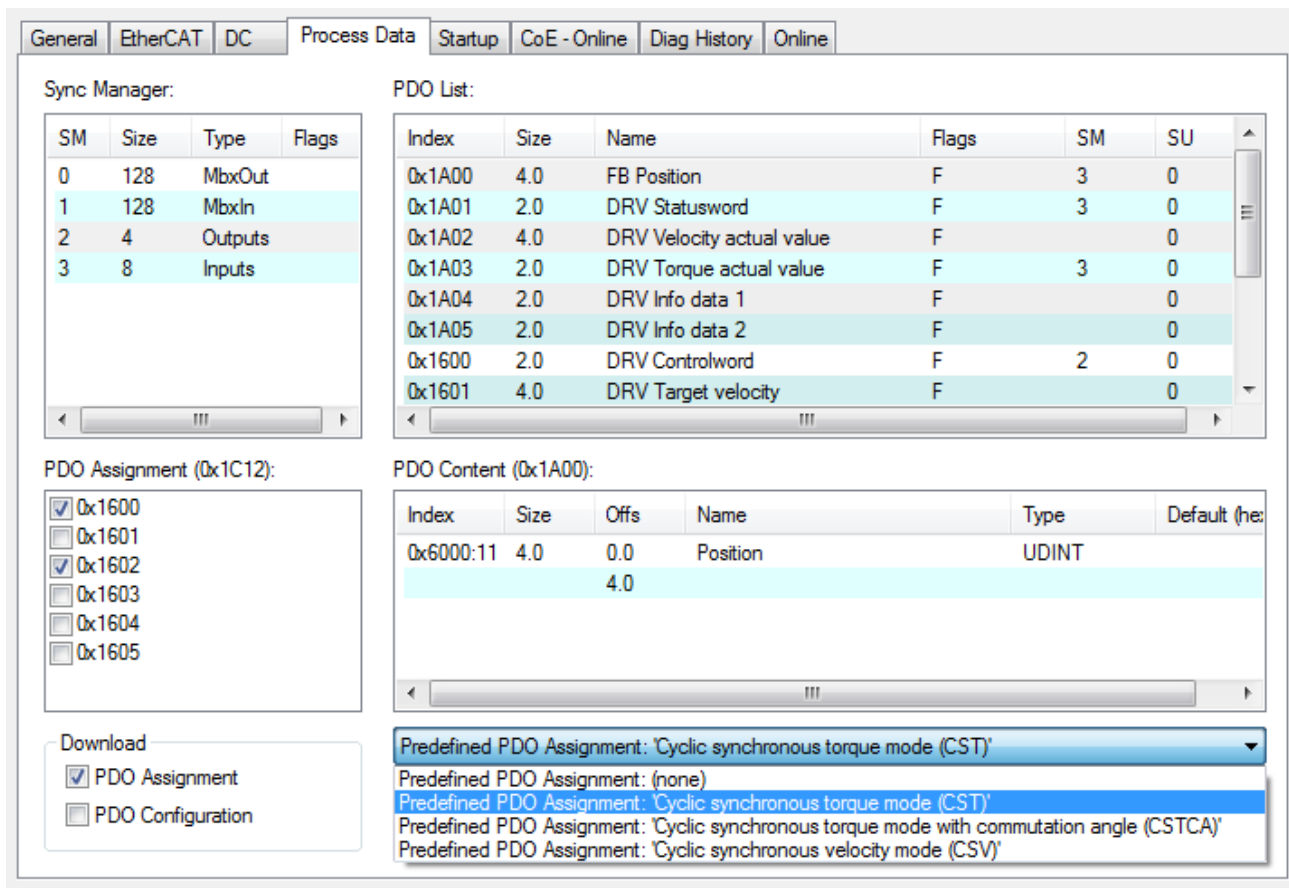


Fig. 147: Selecting a predefined PDO assignment

- Activate the configuration (Ctrl+Shift+F4).
- Run through the State Machine of the terminal. There are two ways to do this:
  - If you use the TwinCAT NC.  
The State Machine is run through automatically by the NC. You can enable the axis in the *Online* tab of the axis.  
Set all tick marks and set *Override* to 100% (see Fig. *Set enables*). The axis can then be moved.

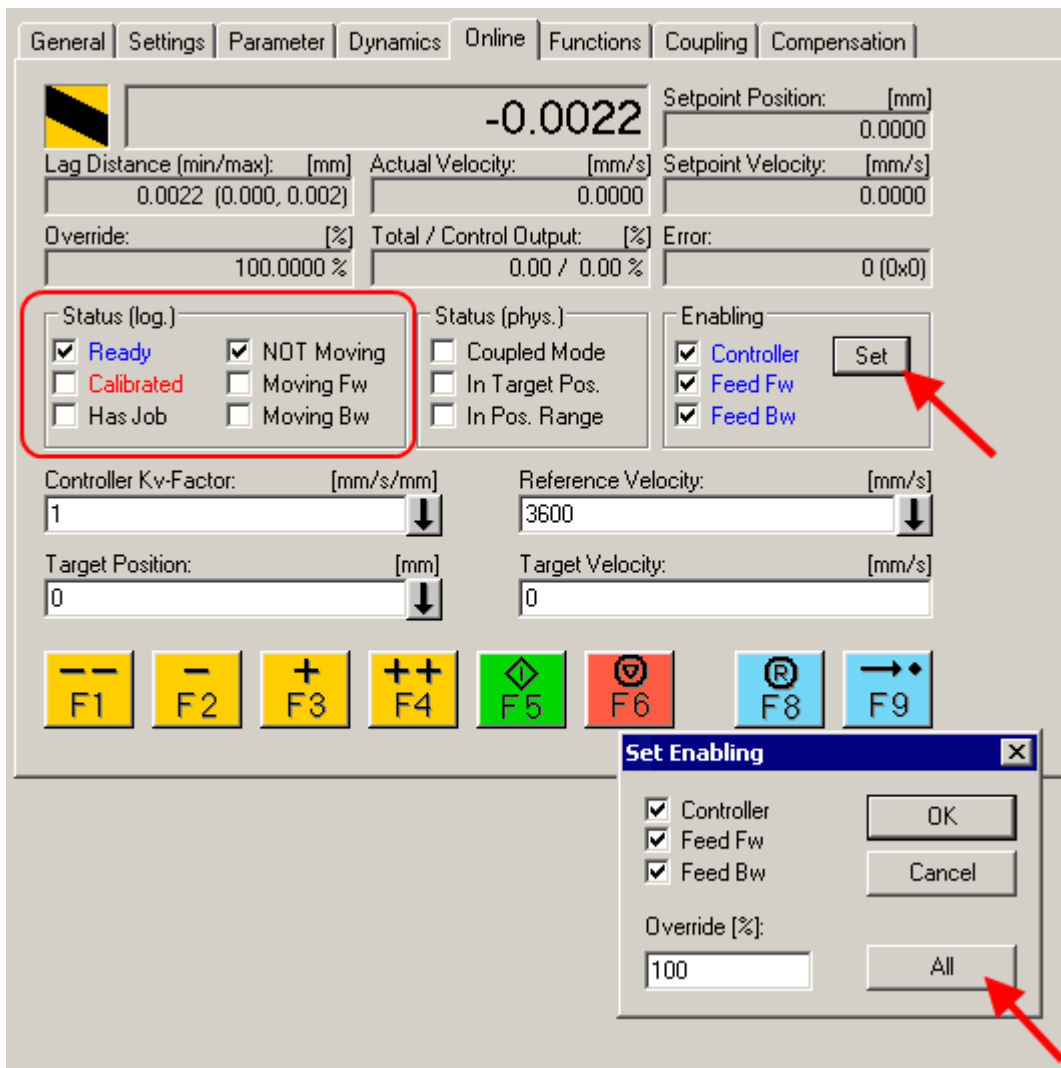


Fig. 148: Set enables

- If you don't use the TwinCAT NC. In this case you must run through the State Machine manually. To do this, follow the instructions in the chapter [Commissioning without the NC \[► 101\]](#).
- The cyclic variable *Target torque* (Fig. *Torque specification*) can be used to specify a defined torque. The value is specified in 1000ths of the *rated current* and the torque is calculated according to the following equation, where the *rated current* refers to the value in the index 0x8011:12 (*rated current*).

Name	Online	Type	Size	>Addr...	In/Out	User ID	Linked to
Position	X 0x00000000 (0)	UDINT	4.0	132.0	Input	0	nInData1 . Axis 10_Enc_I...
Statusword	X 0x0000 (0)	UINT	2.0	136.0	Input	0	nStatus1, nStatus2
Torque actual v...	0x0000 (0)	INT	2.0	138.0	Input	0	
WcState	X 1	BOOL	0.1	1522.3	Input	0	nStatus4, nStatus4
State	0x0042 (66)	UINT	2.0	1655.0	Input	0	
AdsAddr	AC 11 28 29 03 01 ...	AMSADDR...	8.0	1657.0	Input	0	
Chn0	0x00 (0)	USINT	1.0	1665.0	Input	0	
Chn1	0x01 (1)	USINT	1.0	1666.0	Input	0	
DcOutputShift	X 0x0009E854 (649300)	DINT	4.0	1667.0	Input	0	nDcOutputTime . Axis 1...
DcInputShift	X 0x003320AC (3350...	DINT	4.0	1671.0	Input	0	nDcInputTime . Axis 10_...
Controlword	X 0x0006 (6)	UINT	2.0	132.0	Output	0	nCtrl1, nCtrl2
Target torque	0x0000 (0)	INT	2.0	134.0	Output	0	

Fig. 149: Torque specification

### 6.3.4 CSTCA

#### CSTCA - cyclic synchronous torque with commutation angle (torque control with commutation angle)

This mode of operation is also intended for use with the cyclic torque interface. In addition the user can specify the commutation angle. The variable *Commutation angle* can be used to set an angle which is to be maintained with a defined torque set in variable *Target torque*.

#### Step-by-Step

- Add the terminal to the configuration as described in the chapter [TwinCAT configuration settings \[▶ 62\]](#) - manual or - [Online scan \[▶ 67\]](#).
- Link the terminal with the NC as described in the chapter [Integration in the NC configuration \[▶ 85\]](#).
- Import the motor XML file into the Startup directory as described in the chapter [Settings in the CoE \[▶ 92\]](#).
- Set the mode of operation in the CoE directory to *Cyclic synchronous torque mode with commutation angle (CSTCA)*, Fig. *Selection of the mode of operation*

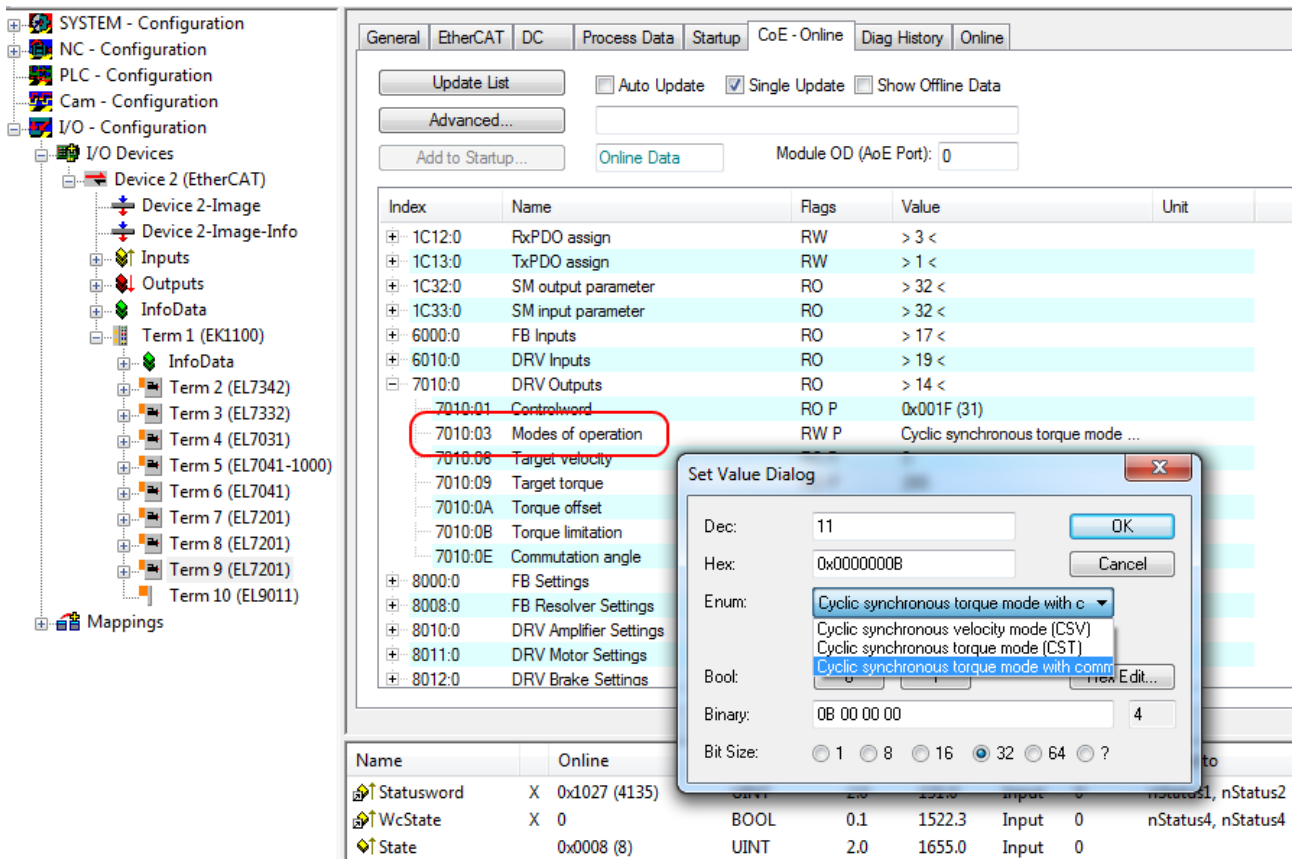


Fig. 150: Selection of the mode of operation

- Under Predefined PDO assignment, also select *Cyclic synchronous torque mode with commutation angle (CSTCA)*, Fig. *Selecting a predefined PDO assignment*.

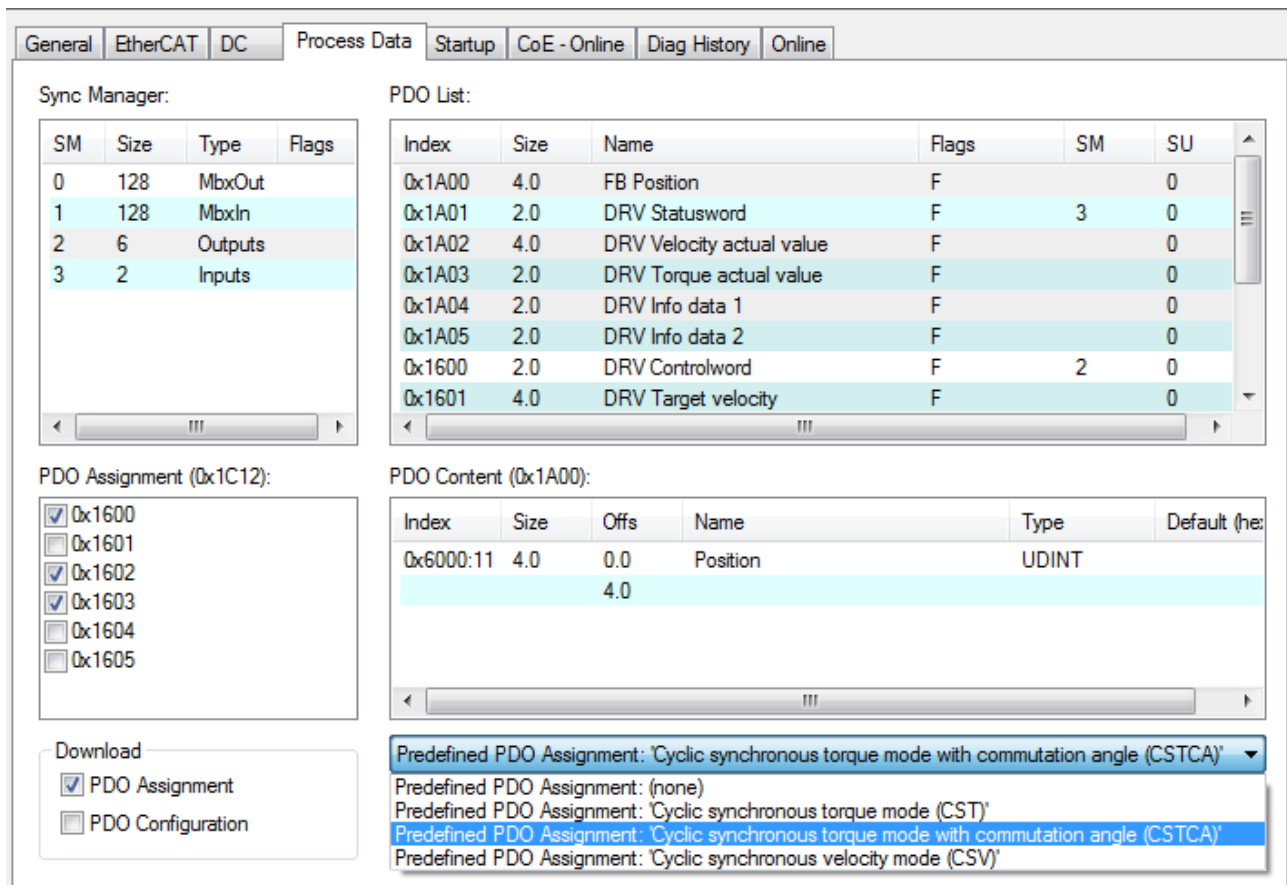


Fig. 151: Selecting a predefined PDO assignment

- Activate the configuration (Ctrl+Shift+F4).
- Run through the State Machine of the terminal. There are two ways to do this:
  - If you use the TwinCAT NC.  
The State Machine is run through automatically by the NC. You can enable the axis in the *Online* tab of the axis.  
Set all tick marks and set *Override* to 100% (see Fig. *Set enables*). The axis can then be moved.



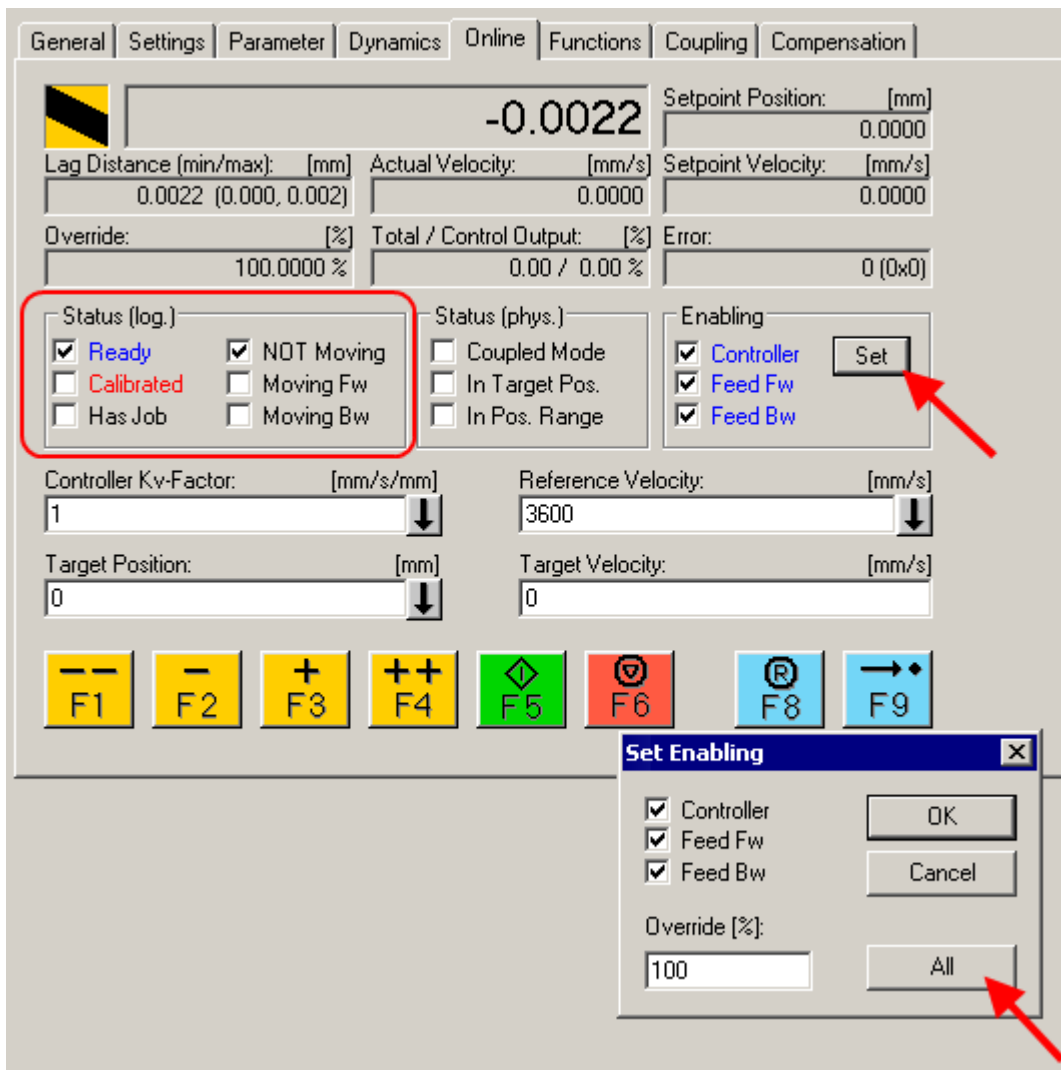


Fig. 152: Set enables

- If you don't use the TwinCAT NC. In this case you must run through the State Machine manually. To do this, follow the instructions in the chapter [Commissioning without the NC \[► 101\]](#).
- You can specify a defined torque via the cyclic variable *Target torque*. The value is specified in 1000ths of the *rated current* and the torque is calculated according to the following equation, where the rated current refers to the value in the index 0x8011:12 (*rated current*).

You can specify a defined angle via the cyclic variable *Commutation angle*. The value is specified in  $360^\circ/2^{16}$ .


Name	Online	Type	Size	> Addr...	In/Out	User ID	Linked to
Statusword	X 0x0000 (0)	UINT	2.0	132.0	Input	0	nStatus1, nStatus2
WcState	X 1	BOOL	0.1	1522.3	Input	0	nStatus4, nStatus4
State	0x0042 (66)	UINT	2.0	1655.0	Input	0	
AdsAddr	AC 11 28 29 03 01 ...	AMSADDR...	8.0	1657.0	Input	0	
Chn0	0x00 (0)	USINT	1.0	1665.0	Input	0	
Chn1	0x01 (1)	USINT	1.0	1666.0	Input	0	
DcOutputShift	X 0x0009E854 (649300)	DINT	4.0	1667.0	Input	0	nDcOutputTime . Axis 1...
DcInputShift	X 0x003320AC (3350...)	DINT	4.0	1671.0	Input	0	nDcInputTime . Axis 10...
Controlword	X 0x0006 (6)	UINT	2.0	132.0	Output	0	nCtrl1, nCtrl2
Target torque	0x0000 (0)	INT	2.0	134.0	Output	0	
Commutation angle	0x0000 (0)	UINT	2.0	136.0	Output	0	

Fig. 153: Specification of torque and commutation angle

### 6.3.5 CSP

#### CSP - cyclic synchronous position (position control)

In the CSP operating mode the EL72x1-xxxx operates in the cyclic position interface. A defined position can be set via the *Target position* variable.

 <b>Note</b>	<p><b>Minimum cycle time</b></p> <p>The cycle times in CSP mode with <math>2^n * 125 \mu s</math> (for <math>n = 1</math> to <math>8</math>) are:                  250 <math>\mu s</math>, 500 <math>\mu s</math>, 1 ms, 2 ms, 4 ms, 8 ms, 16 ms or 32 ms.</p>
--	--

#### Step-by-Step

- Add the terminal to the configuration as described in the chapter [TwinCAT configuration settings](#) [► 62] - manual or - [Online scan](#) [► 67].
- Link the terminal with the NC as described in the chapter [Integration in the NC configuration](#) [► 85].
- Configure the motor with the help of the automatic configuration (only OCT types), using the [Drive Manager](#) [► 88] or import the motor XML file into the Start-up directory as described in the chapter [Settings in the CoE](#) [► 92].
- Set the mode of operation in the CoE directory to *Cyclic synchronous position mode (CSP)*, [Fig. Selection of the mode of operation](#).

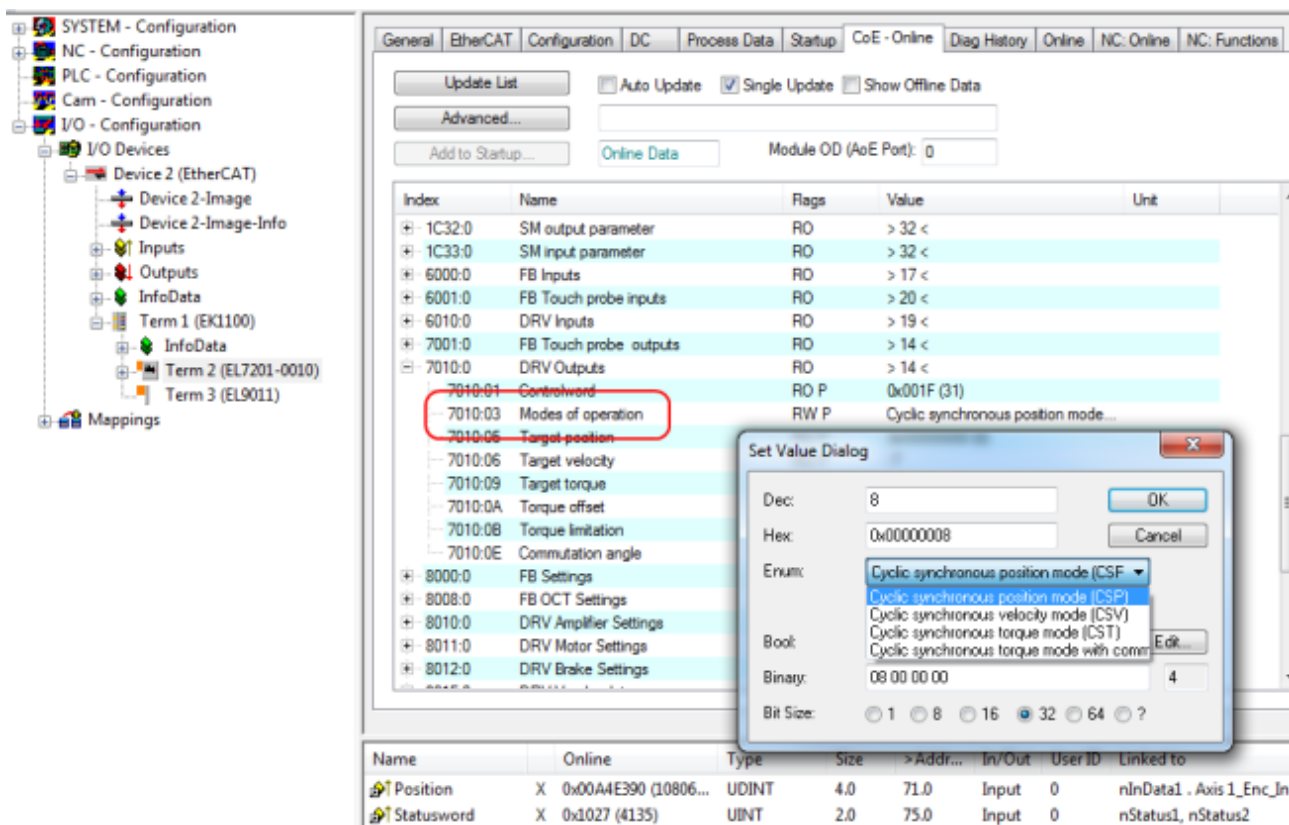


Fig. 154: Selection of the mode of operation

- Under Predefined PDO assignment, also select *Cyclic synchronous position mode (CSP)*, [Fig. Selecting a predefined PDO assignment](#).

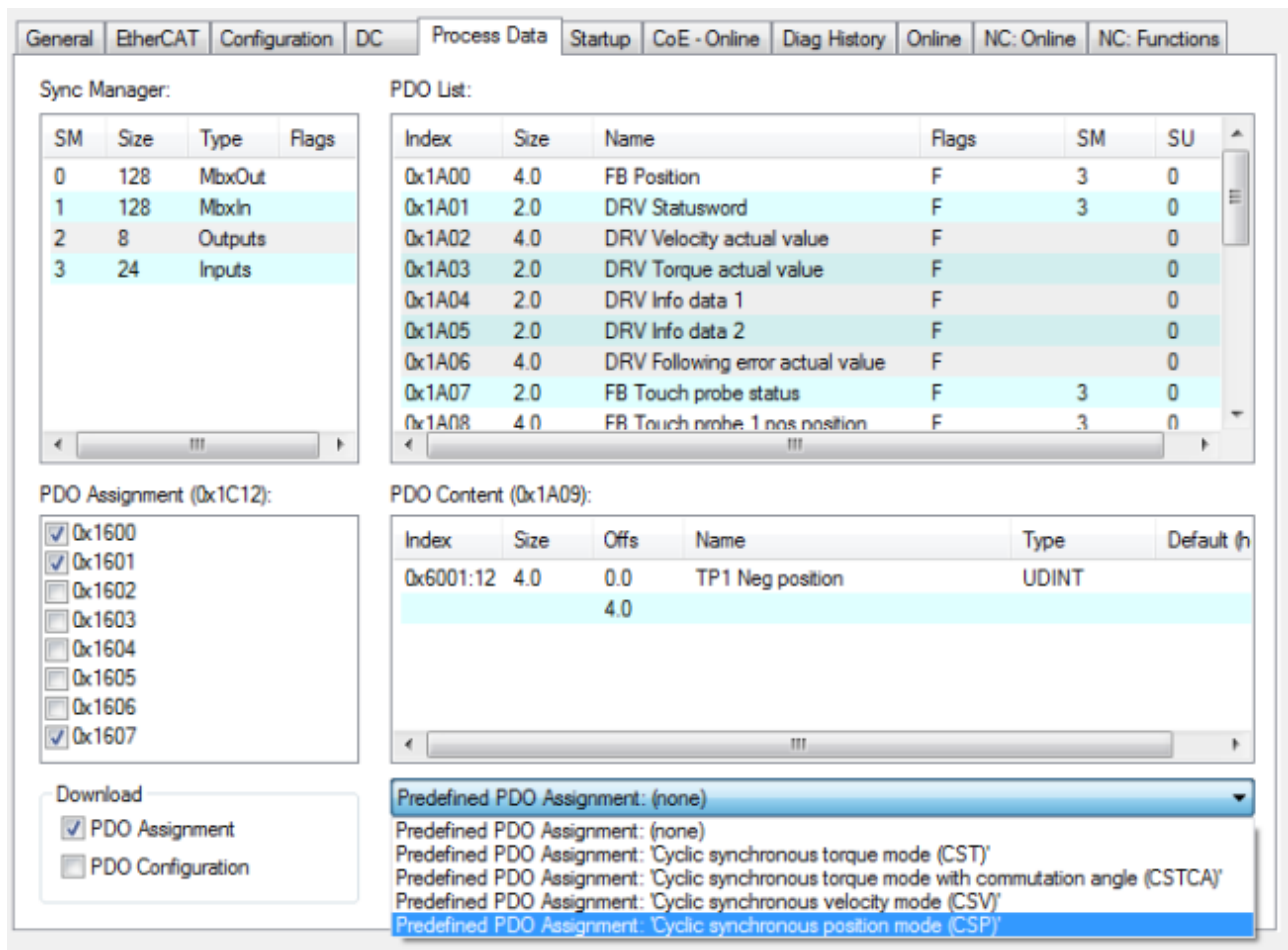


Fig. 155: Selecting a predefined PDO assignment

- Activate the configuration (Ctrl+Shift+F4).
- Run through the State Machine of the terminal. There are two ways to do this:
  - If you use the TwinCAT NC.  
The State Machine is run through automatically by the NC. You can enable the axis in the "Online" tab of the axis.  
Set all tick marks and set Override to 100% (see Fig. *Set enables*). The axis can then be moved.

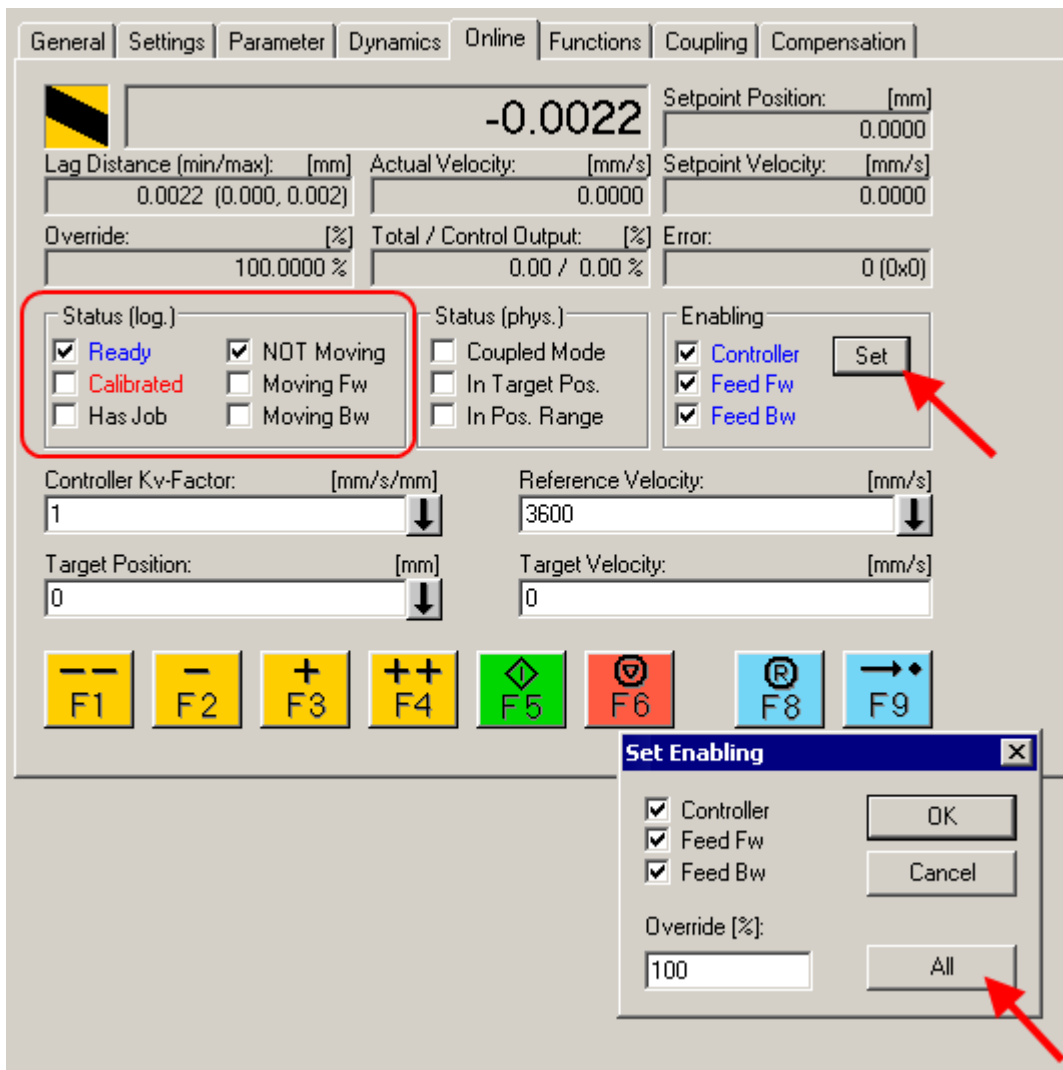


Fig. 156: Set enables

- If you don't use the TwinCAT NC. In this case you must run through the State Machine manually. To do this, follow the instructions in the chapter [Commissioning without the NC \[▶ 101\]](#).
- You can specify a defined position via the cyclic variable *Target position* (fig. *Position specification*). The value must be multiplied by the calculated [scaling factor \[▶ 110\]](#) in order to obtain the correct position.

Name	Online	Type	Size	>Addr...	In/Out	User ID	Linked to
Position	X 0x00A4BB64 (10795876)	UDINT	4.0	71.0	Input	0	nInData1 . Axis 1
Statusword	X 0x0021 (33)	UINT	2.0	75.0	Input	0	nStatus1, nStatu
WcState	X 0	BOOL	0.1	1522.3	Input	0	nStatus4, nStatu
InputToggle	X 1	BOOL	0.1	1524.3	Input	0	nStatus4, nStatu
State	0x0008 (8)	UINT	2.0	1550.0	Input	0	
AdsAddr	AC 11 28 29 03 01 EA 03	AMSADDR...	8.0	1552.0	Input	0	
Chn0	0x00 (0)	USINT	1.0	1560.0	Input	0	
Chn1	0x01 (1)	USINT	1.0	1561.0	Input	0	
DcOutputShift	X 0x0009CB6C (641900)	DINT	4.0	1562.0	Input	0	nDcOutputTime
DcInputShift	X 0x00333D94 (3358100)	DINT	4.0	1566.0	Input	0	nDcInputTime .
Controlword	X 0x0006 (6)	UINT	2.0	71.0	Output	0	nCtrl1, nCtrl2
Target position	0x00000000 (0)	UDINT	4.0	73.0	Output	0	

Fig. 157: Position specification

**Following error monitor**

Furthermore, there is an option in *CSP* mode to activate a following error monitor. The following error monitor is switched off on delivery. In all other modes this is not used and is ignored.

- The window of the following error monitor can be adjusted with the *Following error window* (Index 0x8010:50 MDP742 / Index 0x6065 DS402). The value set here – multiplied by the scaling factor – specifies by what position the actual position may differ from the set position, positively and negatively. The total accepted tolerance is thus twice as large as the position entered in the *Following error window* (see fig. *Following error window*).

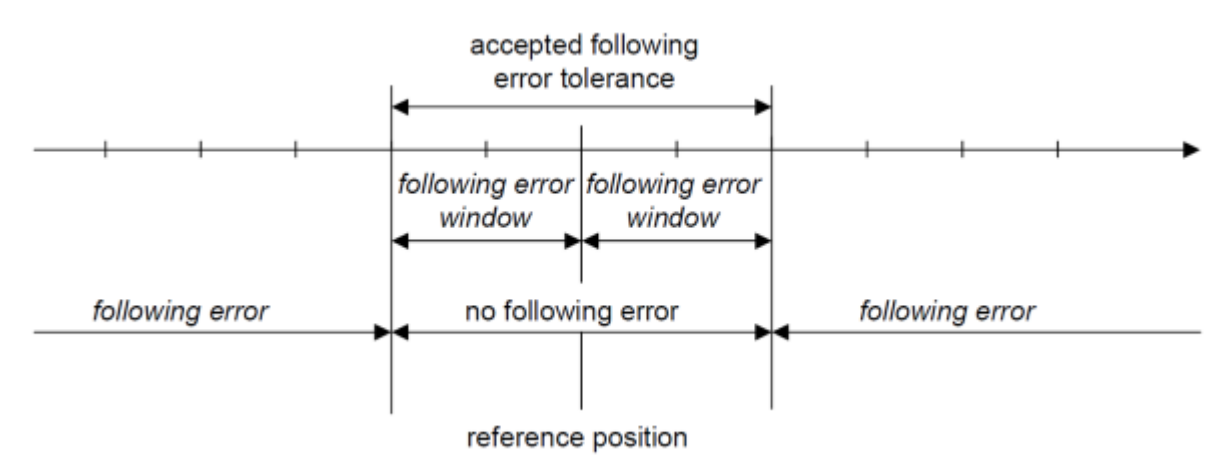


Fig. 158: Following error window

- The time (in ms) allowed for a following error exceedance can be set with the *Following error time out* (Index 0x8010:51 MDP742 / Index 0x6066 DS402). As soon as the target position is exceeded by more than the position entered in the *Following error window* for the time entered in the *Following error time out*, the terminal outputs an error and stops immediately.
- The current following error can be read in the *Following error actual value* (Index 0x6010:09 MDP742 / Index 0x60F4 DS402).

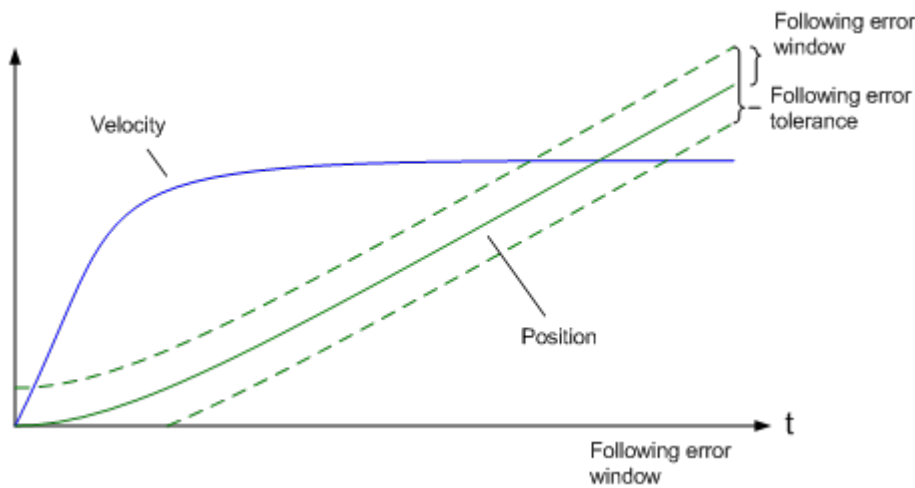


Fig. 159: Following error over time

The value 0xFFFFF (- 1) in the *Following error window* means that the following error monitor is switched off and corresponds to the delivery status.  
 The *Following error time out* is 0x0000 (0) on delivery.

## 6.4 Profile MDP 742 or DS 402

The EL72x1-000x supports the MDP 742 and DS 402 drive profiles. The profiles define the presentation of parameters for the EtherCAT Terminal and the index, under which the respective parameters are arranged in the object directory.

Both profiles contain the same parameters. They only differ in terms of the specified designations and the parameter index. The CoE objects in the MDP 742 profile (Modular Device Profile) are allocated in the way that is common for the Beckhoff EtherCAT Terminals.

The DS402 drive profile is specified in IEC61800-7-200 (CiA402). It uses a different object directory structure.

In both profiles, the drive state machine of the EL72x1-000x is based on the CiA402 [State Machine \[▶ 101\]](#), which means the functional behavior is identical.

The terminals delivered with the MDP 742 profile ex factory.

### Changing the profile

After a profile change an [EEPROM update \[▶ 179\]](#) is required. The corresponding [ESI description \[▶ 179\]](#) can then be loaded into the terminal.

Please note that the CoE object description and the process data are different for both profiles. The motor XML files that match the set profile must be used.



Note

#### Terminal designation MDP 742 and DS 402 profile

Take note that the profile change process described above lead to a change of the type designation of the Servo Motor Terminal in TwinCAT.

The TwinCAT System Manager provide one of these devices:

- Servo Motor Terminal with MDP742 profile: EL72x1[-0000]
- Servo Motor Terminal with DS402 profile: EL72x1-0001

## 6.5 MDP742 process data

### Table of contents

- Sync Manager [▶ 130]
- PDO Assignment [▶ 131]
- Predefined PDO Assignment [▶ 132]

### Sync Manager (SM)

Sync Manager (SM) The scope of the offered process data can be changed via the "Process Data" tab (see Fig. "Process Data tab SM2, EL72x1 (default), Process data tab SM3, EL72x1 (default)").

The screenshot displays the 'Process Data' tab of the Sync Manager. It features several panels:

- General Tab:** Includes 'General', 'EtherCAT', 'DC', 'Process Data' (selected), 'Startup', 'CoE - Online', 'Diag History', 'Online', 'NC: Online', and 'NC: Functions'.
- Sync Manager:** A table listing SMs with columns for SM, Size, Type, and Flags.
 

SM	Size	Type	Flags
0	128	MbxOut	
1	128	MbxIn	
2	6	Outputs	
3	6	Inputs	
- PDO List:** A table listing PDOs with columns for Index, Size, Name, Flags, SM, and SU.
 

Index	Size	Name	Flags	SM	SU
0x1A00	4.0	FB Position	F	3	0
0x1A01	2.0	DRV Statusword	F	3	0
0x1A02	4.0	DRV Velocity actual value	F		0
0x1A03	2.0	DRV Torque actual value	F		0
0x1A04	2.0	DRV Info data 1	F		0
0x1A05	2.0	DRV Info data 2	F		0
0x1600	2.0	DRV Controlword	F	2	0
0x1601	4.0	DRV Target velocity	F	2	0
0x1602	2.0	DRV Target torque	F		0
0x1603	2.0	DRV Commutation angle	F		0
- PDO Assignment (0x1C12):** A list of checkboxes for PDO indices: 0x1600, 0x1601, 0x1602, 0x1603, 0x1604, and 0x1605. 0x1600 and 0x1601 are checked.
- PDO Content (0x1600):** A table showing the content of the selected PDO.
 

Index	Size	Offs	Name	Type	Default
0x7010:01	2.0	0.0	Controlword	UINT	
		2.0			
- Download:** Includes checkboxes for 'PDO Assignment' (checked) and 'PDO Configuration'.
- Predefined PDO Assignment:** A dropdown menu set to 'Cyclic synchronous velocity mode (CSV)'.
- Buttons:** 'Load PDO info from device' and 'Sync Unit Assignment...'.

Fig. 160: Process Data tab SM2, EL72x1 (default)



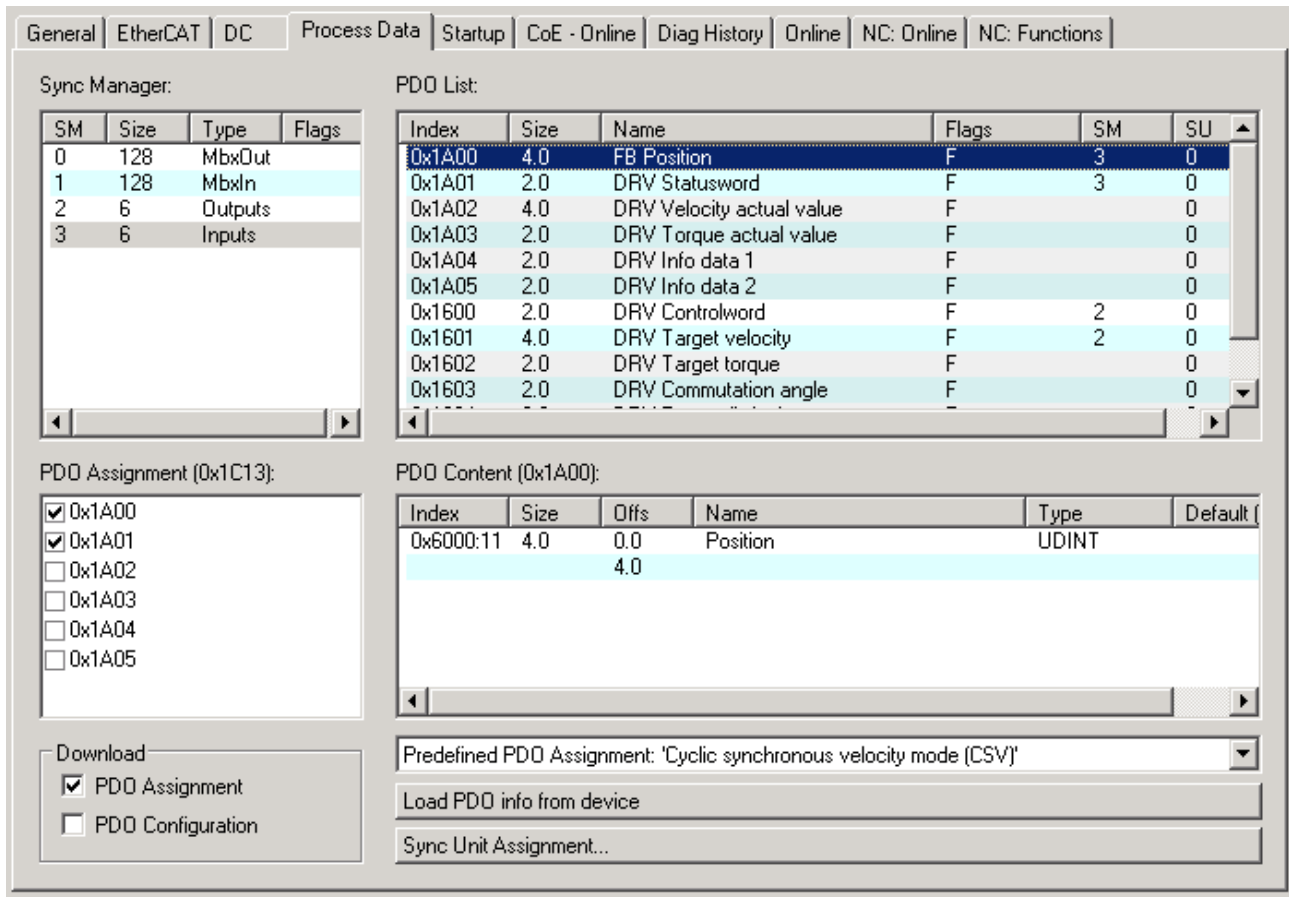


Fig. 161: Process Data tab SM3, EL72x1 (default)

**PDO Assignment**

In order to configure the process data, select the desired Sync Manager (SM 2 & 3 can be edited) in the upper left-hand "Sync Manager" box (see fig.). The process data assigned to this Sync Manager can then be switched on or off in the "PDO Assignment" box underneath. Restarting the EtherCAT system, or reloading the configuration in configuration mode (F4), causes the EtherCAT communication to restart, and the process data is transferred from the terminal.

SM2, PDO assignment 0x1C12			
Index	Size (byte.bit)	Name	PDO content
0x1600 (default)	2.0	DRV Controlword	Index <a href="#">0x7010:01</a> [ <a href="#">▶ 144</a> ]
0x1601 (default)	4.0	DRV Target velocity	Index <a href="#">0x7010:06</a> [ <a href="#">▶ 144</a> ]
0x1602	2.0	DRV Target torque	Index <a href="#">0x7010:09</a> [ <a href="#">▶ 144</a> ]
0x1603	2.0	DRV Commutation angle	Index <a href="#">0x7010:0E</a> [ <a href="#">▶ 144</a> ]
0x1604	2.0	DRV Torque limitation	Index <a href="#">0x7010:0B</a> [ <a href="#">▶ 144</a> ]
0x1605	2.0	DRV Torque offset	Index <a href="#">0x7010:0A</a> [ <a href="#">▶ 144</a> ]
0x1606	4.0	DRV Target position	Index <a href="#">0x7010:05</a> [ <a href="#">▶ 144</a> ]

SM3, PDO Assignment 0x1C13			
Index	Size (byte.bit)	Name	PDO content
0x1A00 (default)	4.0	FB Position	Index <a href="#">0x6000:11</a> [ <a href="#">▶ 142</a> ]
0x1A01 (default)	2.0	DRV Statusword	Index <a href="#">0x6010:01</a> [ <a href="#">▶ 143</a> ]
0x1A02	4.0	DRV Velocity actual value	Index <a href="#">0x6010:07</a> [ <a href="#">▶ 143</a> ]
0x1A03	2.0	DRV Torque actual value	Index <a href="#">0x6010:08</a> [ <a href="#">▶ 143</a> ]
0x1A04	2.0	DRV Info data 1	Index <a href="#">0x6010:12</a> [ <a href="#">▶ 143</a> ]

SM3, PDO Assignment 0x1C13			
Index	Size (byte.bit)	Name	PDO content
0x1A05	2.0	DRV Info data 2	Index <a href="#">0x6010:13</a> [ <a href="#">▶</a> <a href="#">143</a> ]
0x1A06	4.0	DRV Following error actual value	Index <a href="#">0x6010:09</a> [ <a href="#">▶</a> <a href="#">143</a> ]

Table 1: PDO assignment of sync managers, EL72x1

**Predefined PDO Assignment**

The "Predefined PDO Assignment" enables a simplified selection of the process data. The desired function is selected on the lower part of the "Process Data" tab. As a result, all necessary PDOs are automatically activated and the unnecessary PDOs are deactivated.

Three PDO assignments are available:

Name	SM2, PDO assignment	SM3, PDO assignment
Cyclic synchronous velocity mode (CSV)	<a href="#">0x1600</a> [ <a href="#">▶</a> <a href="#">147</a> ] (DRV Controlword) <a href="#">0x1601</a> [ <a href="#">▶</a> <a href="#">147</a> ] (DRV Target velocity)	<a href="#">0x1A00</a> [ <a href="#">▶</a> <a href="#">148</a> ] (FB Position) <a href="#">0x1A01</a> [ <a href="#">▶</a> <a href="#">148</a> ] (DRV Statusword)
Cyclic synchronous torque mode (CST)	<a href="#">0x1600</a> [ <a href="#">▶</a> <a href="#">147</a> ] (DRV Controlword) <a href="#">0x1602</a> [ <a href="#">▶</a> <a href="#">147</a> ] (DRV Target torque)	<a href="#">0x1A00</a> [ <a href="#">▶</a> <a href="#">148</a> ] (FB Position) <a href="#">0x1A01</a> [ <a href="#">▶</a> <a href="#">148</a> ] (DRV Statusword) <a href="#">0x1A03</a> [ <a href="#">▶</a> <a href="#">148</a> ] (DRV Torque actual value)
Cyclic synchronous torque mode with commutation angel (CSTCA)	<a href="#">0x1600</a> [ <a href="#">▶</a> <a href="#">147</a> ] (DRV Controlword) <a href="#">0x1603</a> [ <a href="#">▶</a> <a href="#">147</a> ](DRV Commutation angle)	<a href="#">0x1A01</a> [ <a href="#">▶</a> <a href="#">148</a> ] (DRV Statusword)
Cyclic synchronous position mode (CSP)	<a href="#">0x1600</a> [ <a href="#">▶</a> <a href="#">147</a> ] (DRV Controlword) <a href="#">0x1606</a> [ <a href="#">▶</a> <a href="#">148</a> ] (DRV Target position)	<a href="#">0x1A00</a> [ <a href="#">▶</a> <a href="#">148</a> ] (FB Position) <a href="#">0x1A01</a> [ <a href="#">▶</a> <a href="#">148</a> ] (DRV Statusword)

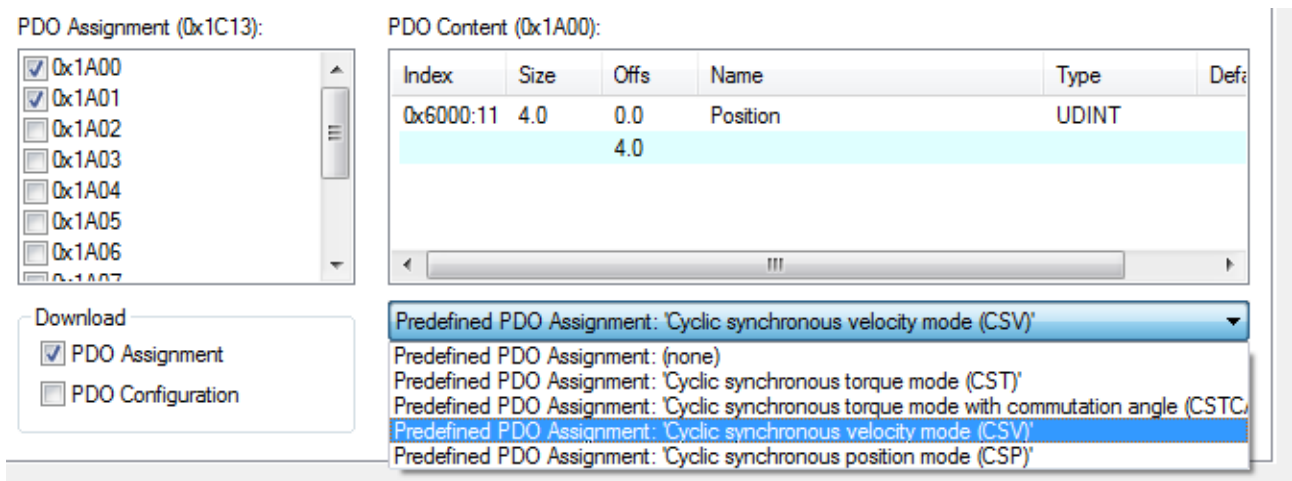


Fig. 162: Process data tab Predefined PDO Assignment, EL72x1

## 6.6 DS402 process data

### Table of contents

- Sync Manager [▶ 133]
- PDO Assignment [▶ 134]
- Predefined PDO Assignment [▶ 135]

### Sync Manager (SM)

Sync Manager (SM) The scope of the offered process data can be changed via the "Process Data" tab (see Fig. "Process Data tab SM2, EL72x1 (default), Process data tab SM3, EL72x1 (default)").

General | EtherCAT | DC | **Process Data** | Startup | CoE - Online | Diag History | Online

Sync Manager:

SM	Size	Type	Flags
0	128	MbxOut	
1	128	MbxIn	
2	6	Outputs	
3	6	Inputs	

PDO List:

Index	Size	Name	Flags	SM	SU
0x1A00	2.0	DS402 Statusword	F	3	0
0x1A01	4.0	DS402 Position actual value	F	3	0
0x1A02	4.0	DS402 Velocity actual value	F		0
0x1A03	2.0	DS402 Torque actual value	F		0
0x1600	2.0	DS402 Controlword	F	2	0
0x1601	4.0	DS402 Target velocity	F	2	0
0x1602	2.0	DS402 Target torque	F		0
0x1603	2.0	DS402 Commutation angle	F		0
0x1604	2.0	DS402 Torque limitation	F		0
0x1605	2.0	DS402 Torque offset	F		0

PDO Assignment (0x1C12):

- 0x1600
- 0x1601
- 0x1602
- 0x1603
- 0x1604
- 0x1605

PDO Content (0x1A00):

Index	Size	Offs	Name	Type	Default (hex)
0x6041:00	2.0	0.0	Statusword	UINT	
		2.0			

Download

- PDO Assignment
- PDO Configuration

Predefined PDO Assignment: 'Cyclic synchronous velocity mode (CSV)'

Load PDO info from device

Sync Unit Assignment...

Fig. 163: Process Data tab SM2, EL72x1 (default)

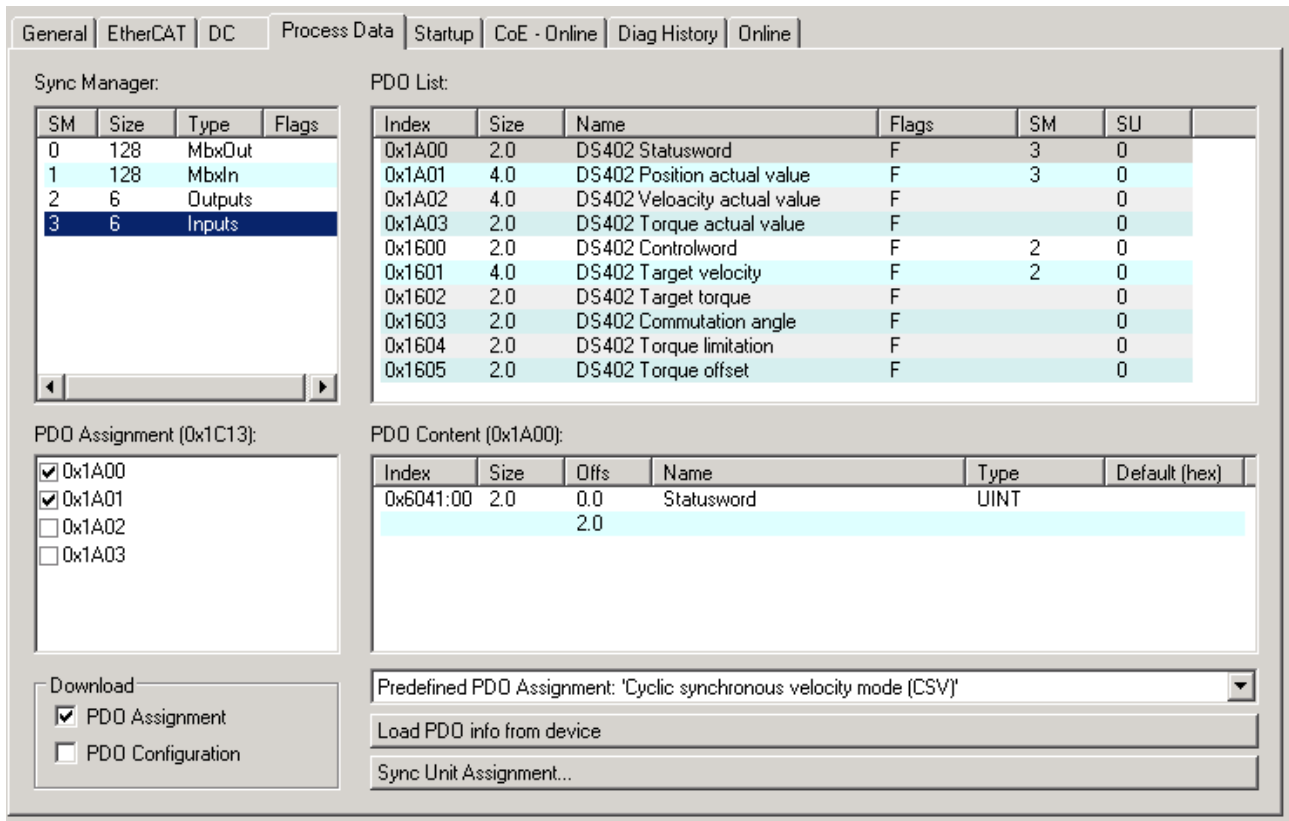


Fig. 164: Process Data tab SM3, EL72x1 (default)

**PDO Assignment**

In order to configure the process data, select the desired Sync Manager (SM 2 & 3 can be edited) in the upper left-hand "Sync Manager" box (see fig.). The process data assigned to this Sync Manager can then be switched on or off in the "PDO Assignment" box underneath. Restarting the EtherCAT system, or reloading the configuration in configuration mode (F4), causes the EtherCAT communication to restart, and the process data is transferred from the terminal.

SM2, PDO assignment 0x1C12			
Index	Size (byte.bit)	Name	PDO content
0x1600 (default)	2.0	DS402 Controlword	Index <a href="#">0x6040</a> [ <a href="#">▶ 158</a> ]
0x1601 (default)	4.0	DS402 Target velocity	Index <a href="#">0x60FF</a> [ <a href="#">▶ 161</a> ]
0x1602	2.0	DS402 Target torque	Index <a href="#">0x6071</a> [ <a href="#">▶ 159</a> ]
0x1603	2.0	DS402 Commutation angle	Index <a href="#">0x60EA</a> [ <a href="#">▶ 160</a> ]
0x1604	2.0	DS402 Torque limitation	Index <a href="#">0x6072</a> [ <a href="#">▶ 159</a> ]
0x1605	2.0	DS402 Torque offset	Index 0x2001:11
0x1606	4.0	DS402 Target position	Index <a href="#">0x607A</a> [ <a href="#">▶ 159</a> ]

SM3, PDO Assignment 0x1C13			
Index	Size (byte.bit)	Name	PDO content
0x1A00 (default)	4.0	DS402 Statusword	Index <a href="#">0x6041</a> [ <a href="#">▶ 158</a> ]
0x1A01 (default)	2.0	DS402 Position actual value	Index <a href="#">0x6064</a> [ <a href="#">▶ 158</a> ]
0x1A02	4.0	DS402 Velocity actual value	Index <a href="#">0x606C</a> [ <a href="#">▶ 159</a> ]
0x1A03	2.0	DS402 Torque actual value	Index <a href="#">0x6077</a> [ <a href="#">▶ 159</a> ]
0x1A04	4.0	DS402 Following error actual value	Index <a href="#">0x60F4</a> [ <a href="#">▶ 160</a> ]

Table 1: PDO assignment of sync managers, EL72x1

**Predefined PDO Assignment**

The "Predefined PDO Assignment" enables a simplified selection of the process data. The desired function is selected on the lower part of the "Process Data" tab. As a result, all necessary PDOs are automatically activated and the unnecessary PDOs are deactivated.

Three PDO assignments are available:

Name	SM2, PDO assignment	SM3, PDO assignment
Cyclic synchronous velocity mode (CSV)	0x1600 [▶ 163] (DRV Controlword) 0x1601 [▶ 163] (DRV Target velocity)	0x1A00 [▶ 164] (FB Position) 0x1A01 [▶ 164] (DRV Statusword)
Cyclic synchronous torque mode (CST)	0x1600 [▶ 163] (DRV Controlword) 0x1602 [▶ 163] (DRV Target torque)	0x1A00 [▶ 164] (FB Position) 0x1A01 [▶ 164] (DRV Statusword) 0x1A03 [▶ 164] (DRV Torque actual value)
Cyclic synchronous torque mode with commutation angel (CSTCA)	0x1600 [▶ 163] (DRV Controlword) 0x1603 [▶ 163] (DRV Commutation angle)	0x1A01 [▶ 164] ( DRV Statusword)
Cyclic synchronous position mode (CSP)	0x1600 [▶ 163] (DS402 Controlword) 0x1606 [▶ 164] (DS402 Target position)	0x1A00 [▶ 164] (DS402 Statusword) 0x1A01 [▶ 164] (DS402 Position actual value)

**PDO Assignment (0x1C13):**

- 0x1A00
- 0x1A01
- 0x1A02
- 0x1A03
- 0x1A04
- 0x1A05
- 0x1A06
- 0x1A07

Download

- PDO Assignment
- PDO Configuration

**PDO Content (0x1A00):**

Index	Size	Offs	Name	Type	Defa
0x6000:11	4.0	0.0	Position	UDINT	
		4.0			

Predefined PDO Assignment: 'Cyclic synchronous velocity mode (CSV)'

- Predefined PDO Assignment: (none)
- Predefined PDO Assignment: 'Cyclic synchronous torque mode (CST)'
- Predefined PDO Assignment: 'Cyclic synchronous torque mode with commutation angle (CSTCA)'
- Predefined PDO Assignment: 'Cyclic synchronous velocity mode (CSV)'
- Predefined PDO Assignment: 'Cyclic synchronous position mode (CSP)'

Fig. 165: Process data tab Predefined PDO Assignment, EL72x1

## 7 EL72x1-0000 (MDP742) - Object description and parameterization



Note

### EtherCAT XML Device Description

The display matches that of the CoE objects from the EtherCAT XML Device Description. We recommend downloading the latest XML file from the [download area of the Beckhoff website](#) and installing it according to installation instructions.



Note

### Parameterization via the CoE list (CAN over EtherCAT)

The terminal is parameterized via the CoE - Online tab (double-click on the respective object) or via the Process Data tab (allocation of PDOs).

Please note the following [general CoE information](#) [► 25] when using/manipulating the CoE parameters:

- Keep a **startup list** if components have to be replaced
- Differentiation between online/offline dictionary, existence of current XML description
- use "CoE reload" for resetting changes



Attention

### Risk of damage to the device!

We strongly advise not to change settings in the CoE objects while the axis is active, since this could impair the control.

## 7.1 Restore object

### Index 1011 Restore default parameters

Index (hex)	Name	Meaning	Data type	Flags	Default
1011:0	Restore default parameters	Maximum subindex	UINT8	RO	0x01 (1 <sub>dec</sub> )
1011:01	SubIndex 001	If this object is set to "0x6461666C" in the set value dialog, all backup objects are reset to their delivery state.	UINT32	RW	0x00000000 (0 <sub>dec</sub> )

## 7.2 Configuration data

### Index 8000 FB Settings

Index (hex)	Name	Meaning	Data type	Flags	Default
8000:0	FB Settings	Maximum subindex	UINT8	RO	0x13 (19 <sub>dec</sub> )
8000:01	Invert feedback direction	Inverting the count direction	BOOLEAN	RW	0x00 (0 <sub>dec</sub> )
8000:11	Device type	1: Resolver (cannot be changed)	UINT32	RO	0x00000001 (1 <sub>dec</sub> )
8000:12	Singleturn bits	Number of single- and multi-turn-bits [► 95]	UINT8	RW	0x14 (20 <sub>dec</sub> )
8000:13	Multiturn bits		UINT8	RW	0x0C (12 <sub>dec</sub> )

**Index 8008 FB Resolver Settings**

Index (hex)	Name	Meaning	Data type	Flags	Default
8008:0	FB Resolver Settings	Maximum subindex	UINT8	RO	0x14 (20 <sub>dec</sub> )
8008:01	Invert feedback direction	Inverting the count direction	BOOLEAN	RW	0x00 (0 <sub>dec</sub> )
8008:02	Enable automatic gain control	Activate <u>automatic gain adjustment</u> [► 95].	BOOLEAN	RW	0x01 (1 <sub>dec</sub> )
8008:11	Bandwidth	Resolver bandwidth [1 Hz]	UINT16	RW	0x01F4 (500 <sub>dec</sub> )
8008:12	Resolver gain adjustment	<u>Sine and cosine signal level adaptation</u> [► 95]	REAL32	RW	0x3F800000 (1065353216 <sub>dec</sub> )
8008:13	Resolver phase shift	Nominal resolver phase shift	INT8	RW	0x00 (0 <sub>dec</sub> )
8008:14	Observer feed-forward	Pre-control for speed monitor <b>Unit:</b> %	UINT8	RW	0x32 (50 <sub>dec</sub> )

**Index 8010 DRV Amplifier Settings**

Index (hex)	Name	Meaning	Data type	Flags	Default
8010:0	DRV Amplifier Settings	Maximum subindex	UINT8	RO	0x41 (65 <sub>dec</sub> )
8010:01	Enable TxPDOToggle	Show TxPDO toggle in status word (bit 10)	BOOLEAN	RW	0x00 (0 <sub>dec</sub> )
8010:02	Enable input cycle counter	A two bit counter is incremented with each process data cycle and switches to 0 after its maximum value of 3.  The low bit is displayed in bit 10 and the high bit is displayed in bit 14 of the status word.	BOOLEAN	RW	0x00 (0 <sub>dec</sub> )
8010:02	Enable output cycle counter	reserved	BOOLEAN	RW	0x00 (0 <sub>dec</sub> )
8010:11	Device type	1: Servo drive (cannot be changed)	UINT32	RO	0x00000001 (1 <sub>dec</sub> )
8010:12	Current loop integral time	Current controller integral action time (Tn) <b>Unit:</b> 0.1 ms	UINT16	RW	0x000A (10 <sub>dec</sub> )
8010:13	Current loop proportional gain	Proportional component of current controller <b>Unit:</b> 0.1 V/A	UINT16	RW	0x0064 (100 <sub>dec</sub> )
8010:14	Velocity loop integral time	Speed controller integral action time (Tn) <b>Unit:</b> 0.1 ms	UINT32	RW	0x00000032 (50 <sub>dec</sub> )
8010:15	Velocity loop proportional gain	Proportional component of velocity controller <b>Unit:</b> mA / (rad/s)	UINT32	RW	0x00000096 (150 <sub>dec</sub> )
8010:19	Nominal DC link voltage	Nominal DC link voltage <b>Unit:</b> mV	UINT32	RW	0x0000BB80 (48000 <sub>dec</sub> )
8010:1A	Min DC link voltage	Minimum DC link voltage <b>Unit:</b> mV	UINT32	RW	0x00004FB0 (20400 <sub>dec</sub> )
8010:1B	Max DC link voltage	Maximum DC link voltage <b>Unit:</b> mV	UINT32	RW	0x0000EA60 (60000 <sub>dec</sub> )
8010:29	Amplifier I <sup>2</sup> T warn level	I <sup>2</sup> T model warning threshold <b>Unit:</b> %	UINT8	RW	0x50 (80 <sub>dec</sub> )
8010:2A	Amplifier I <sup>2</sup> T error level	I <sup>2</sup> T model error threshold <b>Unit:</b> %	UINT8	RW	0x69 (105 <sub>dec</sub> )
8010:2B	Amplifier Temperature warn level	Overtemperature warning threshold <b>Unit:</b> 0.1 °C	UINT16	RW	0x02BC (700 <sub>dec</sub> )
8010:2C	Amplifier Temperature error level	Overtemperature error threshold <b>Unit:</b> 0.1 °C	UINT16	RW	0x0352 (850 <sub>dec</sub> )
8010:31	Velocity limitation	Velocity limitation <b>Unit:</b> rpm	UINT32	RW	0x00040000 (262144 <sub>dec</sub> )
8010:32	Short-Circuit Brake duration max	Max. duration of armature short circuit brake <b>Unit:</b> ms	UINT16	RW	0x03E8 (1000 <sub>dec</sub> )



**Index 8010 DRV Amplifier Settings**

Index (hex)	Name	Meaning	Data type	Flags	Default
8010:33	Stand still window	Standstill window <b>Unit:</b> rpm	UINT16	RW	0x0000 (0 <sub>dec</sub> )
8010:39	Select info data 1	Selection "Info data 1" Optional display of additional information in the cyclic process data. The following parameters are available. Torque current (filtered 1ms) DC link voltage [mV] PCB temperature [0,1 °C] Errors: Bit0: ADC Error Bit1: Overcurrent Bit2: Undervoltage Bit3: Overvoltage Bit4: Overtemperature Bit5: I2T Amplifier Bit6: I2T Motor Bit7: Encoder Bit8: Watchdog Warnings: Bit2: Undervoltage Bit3: Overvoltage Bit4: Overtemperature Bit5: I2T Amplifier Bit6: I2T Motor Bit7: Encoder	UINT8	RW	0x01 (1 <sub>dec</sub> )
8010:3A	Select info data 2	Selection "Info data 2" Optional display of additional information in the cyclic process data. The following parameters are available. Torque current (filtered 1ms) DC link voltage [mV] PCB temperature [0,1 °C] Errors: Bit0: ADC Error Bit1: Overcurrent Bit2: Undervoltage Bit3: Overvoltage Bit4: Overtemperature Bit5: I2T Amplifier Bit6: I2T Motor Bit7: Encoder Bit8: Watchdog Warnings: Bit2: Undervoltage Bit3: Overvoltage Bit4: Overtemperature Bit5: I2T Amplifier Bit6: I2T Motor Bit7: Encoder	UINT8	RW	0x01 (1 <sub>dec</sub> )
8010:41	Low-pass filter frequency	Low-pass filter frequency <b>Unit:</b> Hz  The following values can be set: 0 Hz = off 320 Hz 640 Hz	UINT16	RW	0x0140 (320 <sub>dec</sub> )
8010:49	Halt ramp deceleration	Halt ramp deceleration <b>Unit:</b> 0.1 rad / s <sup>2</sup>	UINT32	RW	0x0000F570 (62832 <sub>dec</sub> )
8010:50	Following error window	Following error monitor: Following error window <b>Unit:</b> the given value must be multiplied by the corresponding scaling factor  0xFFFFFFFF (-1 <sub>dec</sub> ) = following error monitor off Any other value = following error monitor on	UINT32	RW	0xFFFFFFFF (-1)
8010:51	Following error time out	Following error monitor: Timeout <b>Unit:</b> ms  If the following error is larger than the following error window for a time that exceeds the timeout, this leads to an error reaction	UINT16	RW	0x0000

Index (hex)	Name	Meaning	Data type	Flags	Default
8010:52	Fault reaction option code	Possible values: 0: Disable drive function, motor is free to rotate 1: Slow down on slow down ramp	UINT16	RW	0x0000 (0 <sub>dec</sub> )
8010:53	Position loop proportional gain	Proportional part of position controller <b>Unit:</b> mA / (rad/s)	UINT32	RW	0x00000000 (0 <sub>dec</sub> )
8010:54	Feature bits	The feature bit switches: Peak value → Bit 0 = 0 (default for EL7201-000x) RMS value → Bit 0 = 1 (default for EL7211-000x)  With the help of the fan cartridge ZB8610, it is possible to increase the output current of the EL7201-000x rated output current (2.8 A <sub>rms</sub> ) → Bit 1 = 0 (default) increased output current (4.5 <sub>rms</sub> ) → Bit 1 = 1  The following combination are possible: 0 <sub>dec</sub> → rated output current, interpretation as peak value 1 <sub>dec</sub> → rated output current, interpretation as RMS value 2 <sub>dec</sub> → increased output current, interpretation as peak value 3 <sub>dec</sub> → increased output current, interpretation as RMS value	UINT32	RW	0x00000000 (0 <sub>dec</sub> )

### Index 8011 DRV Motor Settings

Index (hex)	Name	Meaning	Data type	Flags	Default
8011:0	DRV Motor Settings	Maximum subindex	UINT8	RO	0x2D (45 <sub>dec</sub> )
8011:11	Max current	Peak current <b>Unit:</b> mA  The adjustable motor current values can be interpreted as a peak value or RMS value.  The feature bit (8010:54 [▶ 137]) switches: Peak value → Bit 0 = 0 (default for EL7201) RMS value → Bit 0 = 1 (default for EL7211)	UINT32	RW	0x00001770 (6000 <sub>dec</sub> )
8011:12	Rated current	Rated current <b>Unit:</b> mA  The adjustable motor current values can be interpreted as a peak value or RMS value.  The feature bit (8010:54 [▶ 137]) switches: Peak value → Bit 0 = 0 (default for EL7201) RMS value → Bit 0 = 1 (default for EL7211)	UINT32	RW	0x000003E8 (1000 <sub>dec</sub> )
8011:13	Motor pole pairs	Number of pole pairs	UINT8	RW	0x03 (3 <sub>dec</sub> )
8011:15	Commutation offset	Commutation offset (between electrical zero position and mechanical single-turn zero position) <b>Unit:</b> °	INT16	RW	0x0000 (0 <sub>dec</sub> )
8011:16	Torque constant	Torque constant <b>Unit:</b> mNm / A	UINT32	RW	0x00000000 (0 <sub>dec</sub> )
8011:18	Rotor moment of inertia	Mass moment of inertia of the motor <b>Unit:</b> g cm <sup>2</sup>	UINT32	RW	0x00000000 (0 <sub>dec</sub> )
8011:19	Winding inductance	Inductance <b>Unit:</b> 0.1 mH	UINT16	RW	0x000E (14 <sub>dec</sub> )
8011:1B	Motor speed limitation	Velocity limitation <b>Unit:</b> rpm	UINT32	RW	0x00040000 (262144 <sub>dec</sub> )
8011:29	I2T warn level	I2T model warning threshold <b>Unit:</b> %	UINT8	RW	0x50 (80 <sub>dec</sub> )
8011:2A	I2T error level	I2T model error threshold <b>Unit:</b> %	UINT8	RW	0x69 (105 <sub>dec</sub> )
8011:2D	Motor thermal time constant	Thermal time constant <b>Unit:</b> 0.1 s	UINT16	RW	0x0028 (40 <sub>dec</sub> )

**Index 8012 DRV Brake Settings**

Index (hex)	Name	Meaning	Data type	Flags	Default
8012:0	DRV Brake Settings	Maximum subindex	UINT8	RO	0x14 (20 <sub>dec</sub> )
8012:01	Manual override (release)	Manual release of the motor holding brake	BOOLEAN	RW	0x00 (0 <sub>dec</sub> )
8012:11	Release delay	Time the holding brake requires for opening (releasing) after the current was applied	UINT16	RW	0x0000 (0 <sub>dec</sub> )
8012:12	Application delay	Time the holding brake requires for closing (holding) after the current was switched off	UINT16	RW	0x0000 (0 <sub>dec</sub> )
8012:13	Emergency application timeout	<p>Time the amplifier waits, until the rotation speed reaches the stand still window after stop request (set rotation speed 0 or Torque off). If the set waiting time is exceeded, the holding brake is triggered independently of the rotation speed.</p> <p><b>Note:</b></p> <p>For rotatory axes and the setting „torque off“ in error case, this parameter has to be set at least to the „coast to the stop“ time of the axis.</p> <p>For suspended (hanging) axes and the setting „torque off“ in error case, this parameter has to be set to an appropriate short time, to prevent the axis/load from drop/fall.</p>	UINT16	RW	0x0000 (0 <sub>dec</sub> )
8012:14	Brake moment of inertia	<p>Mass moment of inertia of the brake</p> <p><b>Unit:</b> g cm<sup>2</sup></p>	UINT16	RW	0x0000 (0 <sub>dec</sub> )

## 7.3 Configuration data (vendor-specific)

**Index 801F DRV Vendor data**

Index (hex)	Name	Meaning	Data type	Flags	Default
801F:0	DRV Vendor data	Maximum subindex	UINT8	RO	0x14 (20 <sub>dec</sub> )
801F:11	Amplifier peak current	<p>Peak current of the amplifier</p> <p><b>Unit:</b> mA</p>	UINT32	RO	0x00001F40 (8000 <sub>dec</sub> )
801F:12	Amplifier rated current	<p>Rated current of the amplifier</p> <p><b>Unit:</b> mA</p>	UINT32	RO	0x00000FA0 (4000 <sub>dec</sub> )
801F:13	Amplifier thermal time constant	<p>Thermal time constant of the amplifier</p> <p><b>Unit:</b> 0.1 ms</p>	UINT16	RO	0x0023 (35 <sub>dec</sub> )
801F:14	Amplifier overcurrent threshold	<p>Threshold value for short-circuit detection</p> <p><b>Unit:</b> mA</p>	UINT32	RO	0x00002EE0 (12000 <sub>dec</sub> )
801F:15	Max rotary field frequency	Max. rotary field frequency in Hz	UINT16	RO	0x0257 (599 <sub>dec</sub> )

## 7.4 Command object

### Index FB00 DCM Command

Index (hex)	Name	Meaning	Data type	Flags	Default		
FB00:0	DCM Command	Max. subindex	UINT8	RO	0x03 (3 <sub>dec</sub> )		
FB00:01	Request	0x1000	Clear diag history	OCTET-STRING[2]	RW	{0}	
		0x1100	Get build number				Read out the build number
		0x1101	Get build date				Read out the build date
		0x1102	Get build time				Read out the build time
		0x8000	Software reset				Perform a software reset (hardware is re-initialized with the current CoE configuration; this otherwise happens only during the transition to INIT)
FB00:02	Status	0	Finished, no error, no response	UINT8	RO	0x00 (0 <sub>dec</sub> )	
		1	Finished, no error, response				Command terminated without error and with response
		2	Finished, error, no response				Command terminated with error and without response
		3	Finished, error, response				Command terminated with error and with response
		255	Executing				Command is being executed
FB00:03	Response	dependent on the request	OCTET-STRING[4]	RO	{0}		

## 7.5 Input data

### Index 6000 FB Inputs

Index (hex)	Name	Meaning	Data type	Flags	Default
6000:0	FB Inputs	Maximum subindex	UINT8	RO	0x11 (17 <sub>dec</sub> )
6000:0E	TxPDO State	True: position data not valid False: position data valid	BOOLEAN	RO	0x00 (0 <sub>dez</sub> )
6000:0F	Input Cycle Counter	Is incremented with each process data cycle and switches to 0 after its maximum value of 3.	BIT2	RO	0x00 (0 <sub>dez</sub> )
6000:11	Position	Position	UINT32	RO	0x00000000 (0 <sub>dec</sub> )

**Index 6010 DRV Inputs**

Index (hex)	Name	Meaning	Data type	Flags	Default
6010:0	DRV Inputs	Maximum subindex	UINT8	RO	0x13 (19 <sub>dec</sub> )
6010:01	Statusword	Statusword [► 101] Bit 0 : Ready to switch on Bit 1 : Switched on Bit 2 : Operation enabled Bit 3 : Fault Bit 4 : reserved Bit 5 : reserved Bit 6 : Switch on disabled Bit 7 : Warning Bit 8 + 9 : reserved Bit 10: TxPDOToggle (selection/deselection via 0x8010:01 [► 137]) Bit 11 : Internal limit active Bit 12 : (Target value ignored) Bit 13 - 15 : reserved	UINT16	RO	0x0000 (0 <sub>dec</sub> )
6010:03	Modes of operation display	Display of the operating mode	UINT8	RO	0x00 (0 <sub>dec</sub> )
6010:07	Velocity actual value	Display of the current velocity value <b>Unit:</b> see Index 0x9010:14 [► 145]	INT32	RO	0x00000000 (0 <sub>dec</sub> )
6010:08	Torque actual value	Display of current torque value The value is specified in 1000th of the <i>rated current</i> (0x8011:12 [► 140])  Formula for Index 8010:54 [► 137] = 0 : $M = ((\text{Torque actual value} / 1000) \times (\text{rated current} / \sqrt{2})) \times \text{torque constant (8011:16 [► 140])}$  Formula for Index 8010:54 [► 137] = 1 : $M = ((\text{Torque actual value} / 1000) \times \text{rated current}) \times \text{torque constant (8011:16 [► 140])}$	INT16	RO	0x0000 (0 <sub>dec</sub> )
6010:09	Following error actual value	Following error <b>Unit:</b> the given value must be multiplied by the corresponding <i>scaling factor</i> [► 110]	INT32	RO	0x00000000 (0 <sub>dec</sub> )
6010:12	Info data 1	Synchronous information (selection via subindex 0x8010:39)	UINT16	RO	0x0000 (0 <sub>dec</sub> )
6010:13	Info data 2	Synchronous information (selection via subindex 0x8010:3A)	UINT16	RO	0x0000 (0 <sub>dec</sub> )

## 7.6 Output data

### Index 7010 DRV Outputs

Index (hex)	Name	Meaning	Data type	Flags	Default
7010:0	DRV Outputs	Maximum subindex	UINT8	RO	0x0E (14 <sub>dec</sub> )
7010:01	Controlword	Controlword [► 101] Bit 0 : Switch on Bit 1 : Enable voltage Bit 2 : reserved Bit 3 : Enable operation Bit 4 - 6 : reserved Bit 7 : Fault reset Bit 8 - 15 : reserved	UINT16	RO	0x0000 (0 <sub>dec</sub> )
7010:03	Modes of operation	Setting the operating mode  0x08: Cyclic synchronous position mode (CSP) 0x09: Cyclic synchronous velocity mode (CSV) 0x0A: Cyclic synchronous torque mode (CST) 0x0B: Cyclic synchronous torque mode with commutation angle (CSTCA)	UINT8	RW	0x00 (0 <sub>dec</sub> )
7010:05	Target position	Configured target position <b>Unit:</b> the value must be multiplied by the corresponding scaling factor [► 110]	INT32	RW	0x00000000 (0 <sub>dec</sub> )
7010:06	Target velocity	Configured target velocity  The velocity scaling can be found in object 0x9010:14 [► 145] (Velocity encoder resolution)	INT32	RO	0x00000000 (0 <sub>dec</sub> )
7010:09	Target torque	Configured input value for torque monitoring The value is specified in 1000th of the <i>rated current</i> (0x8011:12 [► 140])  Formula for Index 8010:54 [► 137] = 0 : $M = ((\text{Torque actual value} / 1000) \times (\text{rated current} / \sqrt{2})) \times \text{torque constant} (8011:16 [► 140])$  Formula for Index 8010:54 [► 137] = 1 : $M = ((\text{Torque actual value} / 1000) \times \text{rated current}) \times \text{torque constant} (8011:16 [► 140])$	INT16	RO	0x0000 (0 <sub>dec</sub> )
7010:0A	Torque offset	Torque value offset The value is specified in 1000th of the <i>rated current</i> (0x8011:12 [► 140])  Formula for Index 8010:54 [► 137] = 0 : $M = ((\text{Torque actual value} / 1000) \times (\text{rated current} / \sqrt{2})) \times \text{torque constant} (8011:16 [► 140])$  Formula for Index 8010:54 [► 137] = 1 : $M = ((\text{Torque actual value} / 1000) \times \text{rated current}) \times \text{torque constant} (8011:16 [► 140])$	INT16	RO	0x0000 (0 <sub>dec</sub> )
7010:0B	Torque limitation	Torque threshold value for torque monitoring (bipolar limit) The value is specified in 1000th of the <i>rated current</i> (0x8011:12 [► 140])  Formula for Index 8010:54 [► 137] = 0 : $M = ((\text{Torque actual value} / 1000) \times (\text{rated current} / \sqrt{2})) \times \text{torque constant} (8011:16 [► 140])$  Formula for Index 8010:54 [► 137] = 1 : $M = ((\text{Torque actual value} / 1000) \times \text{rated current}) \times \text{torque constant} (8011:16 [► 140])$	UINT16	RW	0x7FFF (32767 <sub>dec</sub> )
7010:0E	Commutation angle	Commutation angle (for CSTCA mode) <b>Unit:</b> 360° / 2 <sup>16</sup>	UINT16	RO	0x0000 (0 <sub>dec</sub> )



## 7.7 Information / diagnosis data

### Index 10F3 Diagnosis History

Index (hex)	Name	Meaning	Data type	Flags	Default
10F3:0	Diagnosis History	Maximum subindex	UINT8	RO	0x37 (55 <sub>dec</sub> )
10F3:01	Maximum Messages	Maximum number of stored messages A maximum of 50 messages can be stored	UINT8	RO	0x32 (50 <sub>dec</sub> )
10F3:02	Newest Message	Subindex of the latest message	UINT8	RO	0x00 (0 <sub>dec</sub> )
10F3:03	Newest Acknowledged Message	Subindex of the last confirmed message	UINT8	RW	0x00 (0 <sub>dec</sub> )
10F3:04	New Messages Available	Indicates that a new message is available	BOOLEAN	RO	0x00 (0 <sub>dec</sub> )
10F3:05	Flags	not used	UINT16	RW	0x0000 (0 <sub>dec</sub> )
10F3:06	Diagnosis Message 001	Message 1	OCTET-STRING[28]	RO	{0}
...	...	...	...	...	...
10F3:37	Diagnosis Message 050	Message 50	OCTET-STRING[28]	RO	{0}

### Index 10F8 Actual Time Stamp

Index (hex)	Name	Meaning	Data type	Flags	Default
10F8:0	Actual Time Stamp	Time stamp	UINT64	RO	

### Index 9008 Resolver Info data

Index (hex)	Name	Meaning	Data type	Flags	Default
9008:0	FB Resolver Info data	Maximum subindex	UINT8	RO	0x12 (18 <sub>dec</sub> )
9008:12	Automatic resolver gain value	Current value for the sine and cosine signal level adaptation (only if "Enable automatic gain control" is active)	REAL32	RO	0x00000000 (0 <sub>dec</sub> )

### Index 9010 DRV Info data

Index (hex)	Name	Meaning	Data type	Flags	Default
9010:0	DRV Info data	Maximum subindex	UINT8	RO	0x14 (20 <sub>dec</sub> )
9010:11	Amplifier temperature	Internal terminal temperature <b>Unit:</b> 0.1 °C	UINT16	RO	0x0000 (0 <sub>dec</sub> )
9010:12	DC link voltage	DC link voltage <b>Unit:</b> mV	UINT32	RO	0x00000000 (0 <sub>dec</sub> )
9010:13	Supported drive modes	Information on supported operation modes (DS402: object 0x6502) Only modes CSV, CST and CSTCA are supported Bit 0: PP Bit 1: VL Bit 2: PV Bit 3: TQ Bit 4: R Bit 5: HM Bit 6: IP Bit 7: CSP Bit 8: CSV Bit 9: CST Bit 10: CSTCA Bit 11-15: reserved Bit 16-31: Manufacturer specific	UINT32	RO	0x00000700 (1792 <sub>dec</sub> )
9010:14	Velocity encoder resolution	Display of configured encoder increments/s and motor revolutions/s. The velocity encoder resolution is calculated according to the following formula:  Velocity Encoder Resolution = (encoder_increments / s) / (motor_revolutions / s)	UINT32	RO	0x00041893 (268435 <sub>dec</sub> )
9010:15	Position encoder resolution increments	Feedback increments per motor turn	UINT32	RO	0x00000000 (0 <sub>dec</sub> )

**Index 9018 DRV Info data**

Index (hex)	Name	Meaning	Data type	Flags	Default
9018:0	DRV Info data	Maximum subindex	UINT8	RO	0x11 (17 <sub>dec</sub> )
9018:11	Auxiliary voltage (10 V)	Auxiliary voltage <b>Unit:</b> mV	UINT322	RO	0x00000000 (0 <sub>dec</sub> )

**Index A010 DRV Amplifier Diag data**

Index (hex)	Name	Meaning	Data type	Flags	Default
A010:0	DRV Amplifier Diag data	Maximum subindex	UINT8	RO	0x11 (17 <sub>dec</sub> )
A010:11	Amplifier I2T temperature	I2T model load <b>Unit:</b> %	UINT8	RO	0x00 (0 <sub>dec</sub> )

**Index A011 DRV Motor Diag data**

Index (hex)	Name	Meaning	Data type	Flags	Default
A011:0	DRV Motor Diag data	Maximum subindex	UINT8	RO	0x11 (17 <sub>dec</sub> )
A011:11	Motor I2T temperature	I2T model load <b>Unit:</b> %	UINT8	RO	0x00 (0 <sub>dec</sub> )

**Index FB40 Memory interface**

Index (hex)	Name	Meaning	Data type	Flags	Default
FB40:0	Memory interface	Maximum subindex	UINT8	RO	0x03 (3 <sub>dec</sub> )
FB40:01	Address	reserved	UINT32	RW	0x00000000 (0 <sub>dec</sub> )
FB40:02	Length	reserved	UINT16	RW	0x0000 (0 <sub>dec</sub> )
FB40:03	Data	reserved	OCTET-STRING[8]	RW	{0}

## 7.8 Standard objects

The standard objects have the same meaning for all EtherCAT slaves.

**Index 1000 Device type**

Index (hex)	Name	Meaning	Data type	Flags	Default
1000:0	Device type	Device type of the EtherCAT slave: the Lo-Word contains the CoE profile used (5001). The Hi-Word contains the module profile according to the modular device profile.	UINT32	RO	0x00001389 (5001 <sub>dec</sub> )

**Index 1008 Device name**

Index (hex)	Name	Meaning	Data type	Flags	Default
1008:0	Device name	Device name of the EtherCAT slave	STRING	RO	EL72x1

**Index 1009 Hardware version**

Index (hex)	Name	Meaning	Data type	Flags	Default
1009:0	Hardware version	Hardware version of the EtherCAT slave	STRING	RO	00

**Index 100A Software version**

Index (hex)	Name	Meaning	Data type	Flags	Default
100A:0	Software version	Firmware version of the EtherCAT slave	STRING	RO	01

**Index 1018 Identity**

Index (hex)	Name	Meaning	Data type	Flags	Default
1018:0	Identity	Maximum subindex	UINT8	RO	0x04 (4 <sub>dec</sub> )
1018:01	Vendor ID	Vendor ID of the EtherCAT slave	UINT32	RO	0x00000002 (2 <sub>dec</sub> )
1018:02	Product code	Product code of the EtherCAT slave	UINT32	RO	0x1C213052 (471937106 <sub>dec</sub> )
1018:03	Revision	Revision number of the EtherCAT slave; the low word (bit 0-15) indicates the special terminal number, the high word (bit 16-31) refers to the device description	UINT32	RO	0x00110000 (1114112 <sub>dec</sub> )
1018:04	Serial number	Unique serial number	UINT32	RO	0x00000000 (0 <sub>dec</sub> )

**Index 10F0 Backup parameter handling**

Index (hex)	Name	Meaning	Data type	Flags	Default
10F0:0	Backup parameter handling	Information for standardized loading and saving of backup entries	UINT8	RO	0x01 (1 <sub>dec</sub> )
10F0:01	Checksum	Checksum across all backup entries of the EtherCAT slave	UINT32	RO	0x00000000 (0 <sub>dec</sub> )

**Index 1600 DRV RxPDO-Map Controlword**

Index (hex)	Name	Meaning	Data type	Flags	Default
1600:0	DRV RxPDO-Map Controlword	PDO Mapping RxPDO 1	UINT8	RO	0x01 (1 <sub>dec</sub> )
1600:01	SubIndex 001	1. PDO Mapping entry (object 0x7010 (DRV Outputs), entry 0x01 (Controlword))	UINT32	RO	0x7010:01, 16

**Index 1601 DRV RxPDO-Map Target velocity**

Index (hex)	Name	Meaning	Data type	Flags	Default
1601:0	DRV RxPDO-Map Target velocity	PDO Mapping RxPDO 2	UINT8	RO	0x01 (1 <sub>dec</sub> )
1601:01	SubIndex 001	1. PDO Mapping entry (object 0x7010 (DRV Outputs), entry 0x05 (Target position))	UINT32	RO	0x7010:06, 32

**Index 1602 DRV RxPDO-Map Target torque**

Index (hex)	Name	Meaning	Data type	Flags	Default
1602:0	DRV RxPDO-Map Target torque	PDO Mapping RxPDO 3	UINT8	RO	0x01 (1 <sub>dec</sub> )
1602:01	SubIndex 001	1. PDO Mapping entry (object 0x7010 (DRV Outputs), entry 0x09 (Target torque))	UINT32	RO	0x7010:09, 16

**Index 1603 DRV RxPDO-Map Commutation angle**

Index (hex)	Name	Meaning	Data type	Flags	Default
1603:0	DRV RxPDO-Map Commutation angle	PDO Mapping RxPDO 4	UINT8	RO	0x01 (1 <sub>dec</sub> )
1603:01	SubIndex 001	1. PDO Mapping entry (object 0x7010 (DRV Outputs), entry 0x0E (Commutation angle))	UINT32	RO	0x7010:0E, 16

**Index 1604 DRV RxPDO-Map Torque limitation**

Index (hex)	Name	Meaning	Data type	Flags	Default
1604:0	DRV RxPDO-Map Torque limitation	PDO Mapping RxPDO 5	UINT8	RO	0x01 (1 <sub>dec</sub> )
1604:01	SubIndex 001	1. PDO Mapping entry (object 0x7010 (DRV Outputs), entry 0x0B (Torque limitation))	UINT32	RO	0x7010:0B, 16

**Index 1605 DRV RxPDO-Map Torque offset**

Index (hex)	Name	Meaning	Data type	Flags	Default
1605:0	DRV RxPDO-Map Torque offset	PDO Mapping RxPDO 6	UINT8	RO	0x01 (1 <sub>dec</sub> )
1605:01	SubIndex 001	1. PDO Mapping entry (object 0x7010 (DRV Outputs), entry 0x0A (Torque offset))	UINT32	RO	0x7010:0A, 16

**Index 1606 DRV RxPDO-Map Target position**

Index (hex)	Name	Meaning	Data type	Flags	Default
1606:0	DRV RxPDO-Map Target position	PDO Mapping RxPDO 7	UINT8	RO	0x01 (1 <sub>dec</sub> )
1606:01	SubIndex 001	1. PDO Mapping entry (object 0x7010 (DRV Outputs), entry 0x0A (Torque offset))	UINT32	RO	0x7010:05, 32

**Index 1A00 FB TxPDO-Map Position**

Index (hex)	Name	Meaning	Data type	Flags	Default
1A00:0	FB TxPDO-Map Position	PDO Mapping TxPDO 1	UINT8	RO	0x01 (1 <sub>dec</sub> )
1A00:01	SubIndex 001	1. PDO Mapping entry (object 0x6041 (Statusword), entry 0x00 (Statusword))	UINT32	RO	0x6000:11, 32

**Index 1A01 DRV TxPDO-Map Statusword**

Index (hex)	Name	Meaning	Data type	Flags	Default
1A01:0	DRV TxPDO-Map Statusword	PDO Mapping TxPDO 2	UINT8	RO	0x01 (1 <sub>dec</sub> )
1A01:01	SubIndex 001	1. PDO Mapping entry (object 0x6010 (DRV Inputs), entry 0x01 (Statusword))	UINT32	RO	0x6010:01, 16

**Index 1A02 DRV TxPDO-Map Velocity actual value**

Index (hex)	Name	Meaning	Data type	Flags	Default
1A02:0	DRV TxPDO-Map Velocity actual value	PDO Mapping TxPDO 3	UINT8	RO	0x01 (1 <sub>dec</sub> )
1A02:01	SubIndex 001	1. PDO Mapping entry (object 0x6010 (DRV Inputs), entry 0x07 (Velocity actual value))	UINT32	RO	0x6010:07, 32

**Index 1A03 DRV TxPDO-Map Torque actual value**

Index (hex)	Name	Meaning	Data type	Flags	Default
1A03:0	DRV TxPDO-Map Torque actual value	PDO Mapping TxPDO 4	UINT8	RO	0x01 (1 <sub>dec</sub> )
1A03:01	SubIndex 001	1. PDO Mapping entry (object 0x6010 (DRV Inputs), entry 0x08 (Torque actual value))	UINT32	RO	0x6010:08, 16

**Index 1A04 DRV TxPDO-Map Info data 1**

Index (hex)	Name	Meaning	Data type	Flags	Default
1A04:0	DRV TxPDO-Map Info data 1	PDO Mapping TxPDO 5	UINT8	RO	0x01 (1 <sub>dec</sub> )
1A04:01	SubIndex 001	1. PDO Mapping entry (object 0x6010 (DRV Inputs), entry 0x12 (Info data 1))	UINT32	RO	0x6010:12, 16

**Index 1A05 DRV TxPDO-Map Info data 2**

Index (hex)	Name	Meaning	Data type	Flags	Default
1A05:0	DRV TxPDO-Map Info data 2	PDO Mapping TxPDO 6	UINT8	RO	0x01 (1 <sub>dec</sub> )
1A05:01	SubIndex 001	1. PDO Mapping entry (object 0x6010 (DRV Inputs), entry 0x13 (Info data 2))	UINT32	RO	0x6010:13, 16

**Index 1A06 DRV TxPDO-Map Following error actual value**

Index (hex)	Name	Meaning	Data type	Flags	Default
1A06:0	DRV TxPDO-Map Following error actual value	PDO Mapping TxPDO 7	UINT8	RO	0x01 (1 <sub>dec</sub> )
1A06:01	SubIndex 001	1. PDO Mapping entry (object 0x6010 (DRV Inputs), entry 0x01 (Statusword))	UINT32	RO	0x6010:09, 32

**Index 1C00 Sync manager type**

Index (hex)	Name	Meaning	Data type	Flags	Default
1C00:0	Sync manager type	Using the sync managers	UINT8	RO	0x04 (4 <sub>dec</sub> )
1C00:01	SubIndex 001	Sync-Manager Type Channel 1: Mailbox Write	UINT8	RO	0x01 (1 <sub>dec</sub> )
1C00:02	SubIndex 002	Sync-Manager Type Channel 2: Mailbox Read	UINT8	RO	0x02 (2 <sub>dec</sub> )
1C00:03	SubIndex 003	Sync-Manager Type Channel 3: Process Data Write (Outputs)	UINT8	RO	0x03 (3 <sub>dec</sub> )
1C00:04	SubIndex 004	Sync-Manager Type Channel 4: Process Data Read (Inputs)	UINT8	RO	0x04 (4 <sub>dec</sub> )

**Index 1C12 RxPDO assign**

Index (hex)	Name	Meaning	Data type	Flags	Default
1C12:0	RxPDO assign	PDO Assign Outputs	UINT8	RW	0x02 (2 <sub>dec</sub> )
1C12:01	Subindex 001	1. allocated RxPDO (contains the index of the associated RxPDO mapping object)	UINT16	RW	0x1600 (5632 <sub>dec</sub> )
1C12:02	Subindex 002	2. allocated RxPDO (contains the index of the associated RxPDO mapping object)	UINT16	RW	0x1601 (5633 <sub>dec</sub> )
1C12:03	SubIndex 003	3. allocated RxPDO (contains the index of the associated RxPDO mapping object)	UINT16	RW	0x0000 (0 <sub>dec</sub> )
1C12:04	SubIndex 004	4. allocated RxPDO (contains the index of the associated RxPDO mapping object)	UINT16	RW	0x0000 (0 <sub>dec</sub> )
1C12:05	SubIndex 005	5. allocated RxPDO (contains the index of the associated RxPDO mapping object)	UINT16	RW	0x0000 (0 <sub>dec</sub> )
1C12:06	SubIndex 006	6. allocated RxPDO (contains the index of the associated RxPDO mapping object)	UINT16	RW	0x0000 (0 <sub>dec</sub> )

**Index 1C13 TxPDO assign**

Index (hex)	Name	Meaning	Data type	Flags	Default
1C13:0	TxPDO assign	PDO Assign Inputs	UINT8	RW	0x02 (2 <sub>dec</sub> )
1C13:01	Subindex 001	1. allocated TxPDO (contains the index of the associated TxPDO mapping object)	UINT16	RW	0x1A00 (6656 <sub>dec</sub> )
1C13:02	Subindex 002	2. allocated TxPDO (contains the index of the associated TxPDO mapping object)	UINT16	RW	0x1A01 (6657 <sub>dec</sub> )
1C13:03	SubIndex 003	3. allocated TxPDO (contains the index of the associated TxPDO mapping object)	UINT16	RW	0x0000 (0 <sub>dec</sub> )
1C13:04	SubIndex 004	4. allocated TxPDO (contains the index of the associated TxPDO mapping object)	UINT16	RW	0x0000 (0 <sub>dec</sub> )
1C13:05	SubIndex 005	5. allocated TxPDO (contains the index of the associated TxPDO mapping object)	UINT16	RW	0x0000 (0 <sub>dec</sub> )
1C13:06	SubIndex 006	6. allocated TxPDO (contains the index of the associated TxPDO mapping object)	UINT16	RW	0x0000 (0 <sub>dec</sub> )

## Index 1C32 SM output parameter

Index (hex)	Name	Meaning	Data type	Flags	Default
1C32:0	SM output parameter	Synchronization parameters for the outputs	UINT8	RO	0x20 (32 <sub>dec</sub> )
1C32:01	Sync mode	Current synchronization mode: <ul style="list-style-type: none"> <li>3: DC-Mode - Synchronous with SYNC1 event</li> </ul>	UINT16	RW	0x0001 (1 <sub>dec</sub> )
1C32:02	Cycle time	Cycle time (in ns): <ul style="list-style-type: none"> <li>Free Run: Cycle time of the local timer</li> <li>Synchronous with SM 2 event: Master cycle time</li> <li>DC mode: SYNC0/SYNC1 Cycle Time</li> </ul>	UINT32	RW	0x000F4240 (1000000 <sub>dec</sub> )
1C32:03	Shift time	Time between SYNC0 event and output of the outputs (in ns, DC mode only)	UINT32	RO	0x00000000 (0 <sub>dec</sub> )
1C32:04	Sync modes supported	Supported synchronization modes: <ul style="list-style-type: none"> <li>Bit 0 = 1: free run is supported</li> <li>Bit 1 = 1: Synchronous with SM 2 event is supported</li> <li>Bit 2-3 = 01: DC mode is supported</li> <li>Bit 4-5 = 10: Output shift with SYNC1 event (only DC mode)</li> <li>Bit 14 = 1: dynamic times (measurement through writing of 0x1C32:08 [▶ 150])</li> </ul>	UINT16	RO	0xC007 (49159 <sub>dec</sub> )
1C32:05	Minimum cycle time	Minimum cycle time (in ns)	UINT32	RO	0x000249F0 (150000 <sub>dec</sub> )
1C32:06	Calc and copy time	Minimum time between SYNC0 and SYNC1 event (in ns, DC mode only)	UINT32	RO	0x00000000 (0 <sub>dec</sub> )
1C32:07	Minimum delay time		UINT32	RO	0x00000000 (0 <sub>dec</sub> )
1C32:08	Command	<ul style="list-style-type: none"> <li>0: Measurement of the local cycle time is stopped</li> <li>1: Measurement of the local cycle time is started</li> </ul> <p>The entries 0x1C32:03 [▶ 150], 0x1C32:05 [▶ 150], 0x1C32:06 [▶ 150], 0x1C32:09 [▶ 150], 0x1C33:03 [▶ 151], 0x1C33:06 [▶ 150], 0x1C33:09 [▶ 151] are updated with the maximum measured values. For a subsequent measurement the measured values are reset</p>	UINT16	RW	0x0000 (0 <sub>dec</sub> )
1C32:09	Maximum Delay time	Time between SYNC1 event and output of the outputs (in ns, DC mode only)	UINT32	RO	0x00000000 (0 <sub>dec</sub> )
1C32:0B	SM event missed counter	Number of missed SM events in OPERATIONAL (DC mode only)	UINT16	RO	0x0000 (0 <sub>dec</sub> )
1C32:0C	Cycle exceeded counter	Number of occasions the cycle time was exceeded in OPERATIONAL (cycle was not completed in time or the next cycle began too early)	UINT16	RO	0x0000 (0 <sub>dec</sub> )
1C32:0D	Shift too short counter	Number of occasions that the interval between SYNC0 and SYNC1 event was too short (DC mode only)	UINT16	RO	0x0000 (0 <sub>dec</sub> )
1C32:20	Sync error	The synchronization was not correct in the last cycle (outputs were output too late; DC mode only)	BOOLEAN	RO	0x00 (0 <sub>dec</sub> )

**Index 1C33 SM input parameter**

Index (hex)	Name	Meaning	Data type	Flags	Default
1C33:0	SM input parameter	Synchronization parameters for the inputs	UINT8	RO	0x20 (32 <sub>dec</sub> )
1C33:01	Sync mode	Current synchronization mode: <ul style="list-style-type: none"> <li>• 3: DC - Synchronous with SYNC1 Event</li> </ul>	UINT16	RW	0x0000 (0 <sub>dec</sub> )
1C33:02	Cycle time	as <a href="#">0x1C32:02</a> [ <a href="#">▶ 150</a> ]	UINT32	RW	0x0003D090 (250000 <sub>dec</sub> )
1C33:03	Shift time	Time between SYNC0 event and reading of the inputs (in ns, only DC mode)	UINT32	RO	0x00001C52 (7250 <sub>dec</sub> )
1C33:04	Sync modes supported	Supported synchronization modes: <ul style="list-style-type: none"> <li>• Bit 0: free run is supported</li> <li>• Bit 1: synchronous with SM 2 event is supported (outputs available)</li> <li>• Bit 1: synchronous with SM 3 event is supported (no outputs available)</li> <li>• Bit 2-3 = 01: DC mode is supported</li> <li>• Bit 4-5 = 01: input shift through local event (outputs available)</li> <li>• Bit 4-5 = 10: input shift with SYNC1 event (no outputs available)</li> <li>• Bit 14 = 1: dynamic times (measurement through writing of <a href="#">0x1C32:08</a> [<a href="#">▶ 150</a>] or <a href="#">0x1C33:08</a> [<a href="#">▶ 151</a>])</li> </ul>	UINT16	RO	0xC007 (49159 <sub>dec</sub> )
1C33:05	Minimum cycle time	as <a href="#">0x1C32:05</a> [ <a href="#">▶ 150</a> ]	UINT32	RO	0x0001E848 (125000 <sub>dec</sub> )
1C33:06	Calc and copy time	Time between reading of the inputs and availability of the inputs for the master (in ns, only DC mode)	UINT32	RO	0x00000000 (0 <sub>dec</sub> )
1C33:07	Minimum delay time		UINT32	RO	0x00001C52 (7250 <sub>dec</sub> )
1C33:08	Command	as <a href="#">0x1C32:08</a> [ <a href="#">▶ 150</a> ]	UINT16	RW	0x0000 (0 <sub>dec</sub> )
1C33:09	Maximum delay time	Time between SYNC1 event and reading of the inputs (in ns, only DC mode)	UINT32	RO	0x00001C52 (7250 <sub>dec</sub> )
1C33:0B	SM event missed counter	as <a href="#">0x1C32:11</a> [ <a href="#">▶ 150</a> ]	UINT16	RO	0x0000 (0 <sub>dec</sub> )
1C33:0C	Cycle exceeded counter	as <a href="#">0x1C32:12</a> [ <a href="#">▶ 150</a> ]	UINT16	RO	0x0000 (0 <sub>dec</sub> )
1C33:0D	Shift too short counter	as <a href="#">0x1C32:13</a> [ <a href="#">▶ 150</a> ]	UINT16	RO	0x0000 (0 <sub>dec</sub> )
1C33:20	Sync error	as <a href="#">0x1C32:32</a> [ <a href="#">▶ 150</a> ]	BOOLEAN	ROO	0x00 (0 <sub>dec</sub> )

**Index F000 Modular device profile**

Index (hex)	Name	Meaning	Data type	Flags	Default
F000:0	Modular device profile	General information for the modular device profile	UINT8	RO	0x02 (2 <sub>dec</sub> )
F000:01	Module index distance	Index spacing of the objects of the individual channels	UINT16	RO	0x0010 (16 <sub>dec</sub> )
F000:02	Maximum number of modules	Number of channels	UINT16	RO	0x0002 (2 <sub>dec</sub> )

**Index F008 Code word**

Index (hex)	Name	Meaning	Data type	Flags	Default
F008:0	Code word	see <a href="#">note</a> [ <a href="#">▶ 25</a> ]!	UINT32	RW	0x00000000 (0 <sub>dec</sub> )

**Index F010 Module list**

Index (hex)	Name	Meaning	Data type	Flags	Default
F010:0	Module list	Maximum subindex	UINT8	RW	0x02 (2 <sub>dec</sub> )
F010:01	SubIndex 001	Encoder profile number	UINT32	RW	0x00000201 (513 <sub>dec</sub> )
F010:02	SubIndex 002	Servo drive profile number	UINT32	RW	0x000002E6 (742 <sub>dec</sub> )



**Index F081 Download revision**

Index (hex)	Name	Meaning	Data type	Flags	Default
F081:0	Download revision	Max. Subindex	UINT8	RO	0x01 (1 <sub>dec</sub> )
F010:01	Revision number	Configured revision of the terminal, <a href="#">see note ▶ 921</a>	UINT32	RW	0x00000000 (0 <sub>dec</sub> )

## 8 EL72x1-0001 (DS402) - Object description and parameterization



Note

### EtherCAT XML Device Description

The display matches that of the CoE objects from the EtherCAT XML Device Description. We recommend downloading the latest XML file from the [download area of the Beckhoff website](#) and installing it according to installation instructions.



Note

### Parameterization via the CoE list (CAN over EtherCAT)

The terminal is parameterized via the CoE - Online tab (double-click on the respective object) or via the Process Data tab (allocation of PDOs).

Please note the following [general CoE information](#) [▶ 25] when using/manipulating the CoE parameters:

- Keep a startup list if components have to be replaced
- Differentiation between online/offline dictionary, existence of current XML description
- use "CoE reload" for resetting changes



Attention

### Risk of damage to the device!

We strongly advise not to change settings in the CoE objects while the axis is active, since this could impair the control.

## 8.1 Configuration data

### Index 2002 Amplifier Settings

Index (hex)	Name	Meaning	Data type	Flags	Default
2002:0	Amplifier Settings	Maximum subindex	UINT8	RO	0x41 (65 <sub>dec</sub> )
2002:11	Device type	1: Servo drive (cannot be changed)	UINT32	RO	0x00000001 (1 <sub>dec</sub> )
2002:12	Current loop integral time	Current controller integral action time (Tn) <b>Unit:</b> 0.1 ms	UINT16	RW	0x000A (10 <sub>dec</sub> )
2002:13	Current loop proportional gain	Proportional component of current controller <b>Unit:</b> 0.1 V/A	UINT16	RW	0x0064 (100 <sub>dec</sub> )
2002:14	Velocity loop integral time	Speed controller integral action time (Tn) <b>Unit:</b> 0.1 ms	UINT32	RW	0x00000032 (50 <sub>dec</sub> )
2002:15	Velocity loop proportional gain	Proportional component of velocity controller <b>Unit:</b> mA / (rad/s)	UINT32	RW	0x00000096 (150 <sub>dec</sub> )
2002:19	Nominal DC link voltage	Nominal DC link voltage <b>Unit:</b> mV	UINT32	RW	0x0000BB80 (48000 <sub>dec</sub> )
2002:1A	Min DC link voltage	Minimum DC link voltage <b>Unit:</b> mV	UINT32	RW	0x00001A90 (6800 <sub>dec</sub> )
2002:1B	Max DC link voltage	Maximum DC link voltage <b>Unit:</b> mV	UINT32	RW	0x0000EA60 (60000 <sub>dec</sub> )
2002:29	Amplifier I2T warn level	I <sup>2</sup> T model warning threshold <b>Unit:</b> %	UINT8	RW	0x50 (80 <sub>dec</sub> )
2002:2A	Amplifier I2T error level	I <sup>2</sup> T model error threshold <b>Unit:</b> %	UINT8	RW	0x69 (105 <sub>dec</sub> )
2002:2B	Amplifier temperature warn level	Overtemperature warning threshold <b>Unit:</b> 0.1 °C	UINT16	RW	0x0320 (800 <sub>dec</sub> )
2002:2C	Amplifier temperature error level	Overtemperature error threshold <b>Unit:</b> 0.1 °C	UINT16	RW	0x03E8 (1000 <sub>dec</sub> )
2002:31	Velocity limitation	Velocity limitation <b>Unit:</b> rpm	UINT32	RW	0x00040000 (262144 <sub>dec</sub> )
2002:32	Short circuit brake duration max	Max. duration of armature short circuit brake <b>Unit:</b> ms	UINT16	RW	0x03E8 (1000 <sub>dec</sub> )
2002:33	Stand still window	Standstill window <b>Unit:</b> rpm	UINT16	RW	0x0000 (0 <sub>dec</sub> )
2002:41	Low-pass filter frequency	Low-pass filter frequency <b>Unit:</b> Hz  The following values can be set: 0 Hz = off 320 Hz 640 Hz	UINT16	RW	0x0140 (320 <sub>dec</sub> )
2002:49	Halt ramp deceleration	Halt ramp deceleration <b>Unit:</b> 0.1 rad / s <sup>2</sup>	UINT32	RW	0x0000F570 (62832 <sub>dec</sub> )
2002:53	Position loop proportional gain	Proportional part of position controller <b>Unit:</b> mA / (rad/s)	UINT32	RW	0x00000000 (0 <sub>dec</sub> )
2002:54	Feature bits	The feature bit switches: Peak value → Bit 0 = 0 (default for EL7201-000x) RMS value → Bit 0 = 1 (default for EL7211-000x)  With the help of the fan cartridge ZB8610, it is possible to increase the output current of the EL7201-000x rated output current (2.8 A <sub>rms</sub> ) → Bit 1 = 0 (default) increased output current (4.5 <sub>rms</sub> ) → Bit 1 = 1  The following combination are possible: 0 <sub>dec</sub> → rated output current, interpretation as peak value 1 <sub>dec</sub> → rated output current, interpretation as RMS value 2 <sub>dec</sub> → increased output current, interpretation as peak value 3 <sub>dec</sub> → increased output current, interpretation as RMS value	UINT32	RW	0x00000000 (0 <sub>dec</sub> )

**Index 2003 Motor Settings**

Index (hex)	Name	Meaning	Data type	Flags	Default
2003:0	Motor Settings	Maximum subindex	UINT8	RO	0x2D (45 <sub>dec</sub> )
2003:11	Max current	Peak current <b>Unit:</b> mA  The adjustable motor current values can be interpreted as a peak value or RMS value.  The feature bit (2002:54 [▶ 154]) switches: Peak value → Bit 0 = 0 (default for EL7201) RMS value → Bit 0 = 1 (default for EL7201)	UINT32	RW	0x00001770 (6000 <sub>dec</sub> )
2003:13	Motor pole pairs	Number of pole pairs	UINT8	RW	0x03 (3 <sub>dec</sub> )
2003:15	Commutation offset	Commutation offset (between electrical zero position and mechanical single-turn zero position) <b>Unit:</b> °	INT16	RW	0x0000 (0 <sub>dec</sub> )
2003:16	Torque constant	Torque constant <b>Unit:</b> mNm / A	UINT32	RW	0x00000000 (0 <sub>dec</sub> )
2003:18	Rotor moment of inertia	Mass moment of inertia of the motor <b>Unit:</b> g cm <sup>2</sup>	UINT32	RW	0x00000000 (0 <sub>dec</sub> )
2003:19	Winding inductance	Inductance <b>Unit:</b> 0.1 mH	UINT16	RW	0x000E (14 <sub>dec</sub> )
2003:29	Motor I2T warn level	I2T model warning threshold <b>Unit:</b> %	UINT8	RW	0x50 (80 <sub>dec</sub> )
2003:2A	Motor I2T error level	I2T model error threshold <b>Unit:</b> %	UINT8	RW	0x69 (105 <sub>dec</sub> )
2003:2D	Motor thermal time constant	Thermal time constant <b>Unit:</b> 0.1 s	UINT16	RW	0x0028 (40 <sub>dec</sub> )

**Index 2004 Brake Settings**

Index (hex)	Name	Meaning	Data type	Flags	Default
2004:0	Brake Settings	Maximum subindex	UINT8	RO	0x14 (20 <sub>dec</sub> )
2004:01	Manual override (release)	Release the motor holding brake manually	BOOLEAN	RW	0x00 (0 <sub>dec</sub> )
2004:11	Release delay	This object describes the time that the holding brake needs to open (to be released) after voltage is applied	UINT16	RW	0x0000 (0 <sub>dec</sub> )
2004:12	Application delay	This object describes the time that the holding brake needs to close (to be applied) after voltage is removed	UINT16	RW	0x0000 (0 <sub>dec</sub> )
2004:13	Emergency application timeout	Time the amplifier waits, until the rotation speed reaches the stand still window after stop request (set rotation speed 0 or Torque off). If the set waiting time is exceeded, the holding brake is triggered independently of the rotation speed.  <b>Note:</b>  For rotatory axes and the setting „torque off“ in error case, this parameter has to be set at least to the „coast to the stop“ time of the axis.  For suspended (hanging) axes and the setting „torque off“ in error case, this parameter has to be set to an appropriate short time, to prevent the axis/load from drop/fall.	UINT16	RW	0x0000 (0 <sub>dec</sub> )
2004:14	Brake moment of inertia	Mass moment of inertia of the brake <b>Unit:</b> g cm <sup>2</sup>	UINT16	RW	0x0000 (0 <sub>dec</sub> )

**Index 2010 Feedback Settings**

Index (hex)	Name	Meaning	Data type	Flags	Default
2010:0	Feedback Settings	Maximum subindex	UINT8	RO	0x13 (19 <sub>dec</sub> )
2010:01	Invert feedback direction	Inverting the count direction	BOOLEAN	RW	0x00 (0 <sub>dec</sub> )
2010:11	Device type	1: Resolver (cannot be changed)	UINT32	RO	0x00000001 (1 <sub>dec</sub> )
2010:12	Singleturn bits	Number of single- and multi-turn-bits [▶ 95]	UINT8	RW	0x14 (20 <sub>dec</sub> )
2010:13	Multiturn bits		UINT8	RW	0x0C (12 <sub>dec</sub> )

## Index 2018 Resolver Settings

Index (hex)	Name	Meaning	Data type	Flags	Default
2018:0	Resolver Settings	Maximum subindex	UINT8	RO	0x14 (20 <sub>dec</sub> )
2018:01	Invert feedback direction	Inverting the count direction	BOOLEAN	RW	0x00 (0 <sub>dec</sub> )
2018:02	Enable automatic gain control	Activate <a href="#">automatic gain adjustment</a> [► 95]	BOOLEAN	RW	0x01 (1 <sub>dec</sub> )
2018:11	Bandwidth	Resolver bandwidth [1 Hz]	UINT16	RW	0x01F4 (500 <sub>dec</sub> )
2018:12	Resolver gain adjustment	<a href="#">Sine and cosine signal level adaptation</a> [► 95]	REAL32	RW	0x3F800000 (1065353216 <sub>dec</sub> )
2018:13	Resolver phase shift	Nominal resolver phase shift	INT8	RW	0x00 (0 <sub>dec</sub> )
2018:14	Observer feed-forward	Pre-control for speed monitor <b>Unit:</b> %	UINT8	RW	0x32 (50 <sub>dec</sub> )

## 8.2 Configuration data (vendor-specific)

### Index 2020 Vendor data

Index (hex)	Name	Meaning	Data type	Flags	Default
2020:0	Vendor data	Maximum subindex	UINT8	RO	0x14 (20 <sub>dec</sub> )
2020:11	Amplifier peak current	Peak current of the amplifier <b>Unit:</b> mA	UINT32	RO	0x00001F40 (8000 <sub>dec</sub> )
2020:12	Amplifier rated current	Rated current of the amplifier <b>Unit:</b> mA	UINT32	RO	0x0000FA0 (4000 <sub>dec</sub> )
2020:13	Amplifier thermal time constant	Thermal time constant of the amplifier <b>Unit:</b> 0.1 ms	UINT16	RO	0x0023 (35 <sub>dec</sub> )
2020:14	Amplifier overcurrent threshold	Threshold value for short-circuit detection <b>Unit:</b> mA	UINT32	RO	0x00002EE0 (12000 <sub>dec</sub> )
2020:15	Max rotary field frequency	Max rotary field frequency <b>Unit:</b> Hz	UINT16	RW	0x0257 (599 <sub>dec</sub> )

## 8.3 Command object

### Index FB00 Command

Index (hex)	Name	Meaning	Data type	Flags	Default		
FB00:0	DCM Command	Max. subindex	UINT8	RO	0x03 (3 <sub>dec</sub> )		
FB00:01	Request	0x1000	Clear diag history	Clear the Diag History	OCTET-STRING[2]	RW	{0}
		0x1100	Get build number	Read out the build number			
		0x1101	Get build date	Read out the build date			
		0x1102	Get build time	Read out the build time			
		0x8000	Software reset	Perform a software reset (hardware is re-initialized with the current CoE configuration; this otherwise happens only during the transition to INIT)			
FB00:02	Status	0	Finished, no error, no response	Command terminated without error and without response	UINT8	RO	0x00 (0 <sub>dec</sub> )
		1	Finished, no error, response	Command terminated without error and with response			
		2	Finished, error, no response	Command terminated with error and without response			
		3	Finished, error, response	Command terminated with error and with response			
		255	Executing	Command is being executed			
FB00:03	Re-sponse	dependent on the request	OCTET-STRING[4]	RO	{0}		

## 8.4 Input/output data

### Index 2001 Outputs

Index (hex)	Name	Meaning	Data type	Flags	Default
2001:0	Outputs	Maximum subindex	UINT8	RO	0x11 (17 <sub>dec</sub> )
2001:11	Torque offset	<p>Torque value offset The value is specified in 1000th of the <i>rated current</i></p> <p>Formula for Index 2002:54 [▶ 154] = 0 :  <math>M = ((\text{Torque actual value} / 1000) \times (\text{rated current} / \sqrt{2})) \times \text{torque constant (2003:16 [▶ 155])}</math></p> <p>Formula for Index 2002:54 [▶ 154] = 1 :  <math>M = ((\text{Torque actual value} / 1000) \times \text{rated current}) \times \text{torque constant (2003:16 [▶ 155])}</math></p>	INT16	RO	0x0000 (0 <sub>dec</sub> )

### Index 603E TxPDO Data invalid

Index (hex)	Name	Meaning	Data type	Flags	Default
603E:0	TxPDO Data invalid	Max. Subindex	UINT8	RO	0x02 (2 <sub>dec</sub> )
603E:02	Position actual value	<p>0: The current position is valid                      1: The current position is invalid</p>	BOOLEAN	RO P	0

**Index 6040 Controlword**

Index (hex)	Name	Meaning	Data type	Flags	Default
6040:0	Controlword	DS402 Controlword [► 101] Bit 0 : Switch on Bit 1 : Enable voltage Bit 2 : reserved Bit 3 : Enable operation Bit 4 - 6 : reserved Bit 7 : Fault reset Bit 8 - 15 : reserved	UINT16	RO	0x0000 (0 <sub>dec</sub> )

**Index 6041 Statusword**

Index (hex)	Name	Meaning	Data type	Flags	Default
6041:0	Statusword	DS402 Statusword [► 101] Bit 0 : Ready to switch on Bit 1 : Switched on Bit 2 : Operation enabled Bit 3 : Fault Bit 4 : reserved Bit 5 : reserved Bit 6 : Switch on disabled Bit 7 : Warning Bit 8 + 9 : reserved Bit 10: TxPDOToggle (selection/deselection via 0x60DA [► 160]) Bit 11 : Internal limit active Bit 12 : (Target value ignored) Bit 13 - 15 : reserved	UINT16	RO	0x0000 (0 <sub>dec</sub> )

**Index 605E Fault reaction option code**

Index (hex)	Name	Meaning	Data type	Flags	Default
605E:0	Fault reaction option code	0: Disable drive function, motor is free to rotate 1: Slow down by slow down ramp	ENUM16BIT	RW	0

**Index 6060 Modes of operation**

Index (hex)	Name	Meaning	Data type	Flags	Default
6060:0	Modes of operation	This object shall indicate the requested operation mode  0x08: Cyclic synchronous position mode (CSP) 0x09: Cyclic synchronous velocity mode (CSV) 0x0A: Cyclic synchronous torque mode (CST) 0x0B: Cyclic synchronous torque mode with commutation angle (CSTCA)	UINT8	RW	0x00 (0 <sub>dec</sub> )

**Index 6061 Modes of operation display**

Index (hex)	Name	Meaning	Data type	Flags	Default
6061:0	Modes of operation display	This object shall provide the actual operation mode	UINT8	RO	0x00 (0 <sub>dec</sub> )

**Index 6064 Position actual value**

Index (hex)	Name	Meaning	Data type	Flags	Default
6064:0	Position actual value	Position	UINT32	RO	0x00000000 (0 <sub>dec</sub> )

**Index 6065 Following error window**

Index (hex)	Name	Meaning	Data type	Flags	Default
6065:0	Following error window			RW	



**Index 6066 Following error time out**

Index (hex)	Name	Meaning	Data type	Flags	Default
6066:0	Following error time out			RW	

**Index 606C Velocity actual value**

Index (hex)	Name	Meaning	Data type	Flags	Default
606C:0	Velocity actual value	This object shall provide the actual velocity value	INT32	RO	0x00000000 (0 <sub>dec</sub> )

**Index 6071 Target torque**

Index (hex)	Name	Meaning	Data type	Flags	Default
6071:0	Target torque	This object shall indicate the configured input value for the torque controller. The value is specified in 1000th of the <i>rated current</i> Formula:	INT16	RO	0x0000 (0 <sub>dec</sub> )

**Index 6072 Max torque**

Index (hex)	Name	Meaning	Data type	Flags	Default
6072:0	Max torque	This object limits the target torque for the torque controller (bipolar limit). The value is specified in 1000th of the <i>rated current</i> Formula:	UINT16	RW	0x7FFF (32767 <sub>dec</sub> )

**Index 6075 Motor rated current**

Index (hex)	Name	Meaning	Data type	Flags	Default
6075:0	Motor rated current	Rated motor current <b>Unit:</b> mA	UINT32	RW	0x000003E8 (1000 <sub>dec</sub> )

**Index 6077 Torque actual value**

Index (hex)	Name	Meaning	Data type	Flags	Default
6077:0	Torque actual value	This object shall provide the actual value of the torque. The value is specified in 1000th of the <i>rated current</i> Formula:	INT16	RO	0x0000 (0 <sub>dec</sub> )

**Index 6079 DC link circuit voltage**

Index (hex)	Name	Meaning	Data type	Flags	Default
6079:0	DC link circuit voltage	DC link voltage <b>Unit:</b> mV	UINT32	RO	0x00000000 (0 <sub>dec</sub> )

**Index 607A Target position**

Index (hex)	Name	Meaning	Data type	Flags	Default
607A:0	Target position	Objects represents absolute position. <b>Unit:</b> the given value must be multiplied by the corresponding <i>scaling factor</i> [►_110]	INT32	RO	0x00000000 (0 <sub>dec</sub> )

**Index 6080 Max motor speed**

Index (hex)	Name	Meaning	Data type	Flags	Default
6080:0	Max motor speed	Velocity limitation <b>Unit:</b> rpm	UINT32	RW	0x00040000 (262144 <sub>dec</sub> )

**Index 608F Position encoder resolution**

Index (hex)	Name	Meaning	Data type	Flags	Default
608F:0	Position encoder resolution	This object shall indicate the configured encoder increments and number of motor revolutions. The position encoder resolution shall be calculated by the following formula:	UINT8	RO	0x02 (2 <sub>dec</sub> )
608F:01	SubIndex 001	Encoder increments	UINT32	RO	0x00000000 (0 <sub>dec</sub> )
608F:02	SubIndex 002	Motor revolutions	UINT32	RO	0x00000000 (0 <sub>dec</sub> )

**Index 6090 Velocity Encoder Resolution**

Index (hex)	Name	Meaning	Data type	Flags	Default
6090:0	Velocity Encoder Resolution	Display of configured encoder increments/s and motor revolutions/s.  The velocity encoder resolution is calculated according to the following formula:  Velocity Encoder Resolution = (encoder_increments / s) / (motor_revolutions / s)	UINT32	RO	0x00041893 (268435 <sub>dec</sub> )

**Index 60C2 Interpolation time period**

Index (hex)	Name	Meaning	Data type	Flags	Default
60C2:0	Interpolation time period	Maximum subindex	UINT8	RO	0x02 (2 <sub>dec</sub> )
60C2:01	Interpolation time period value	This object shall indicate the configured interpolation cycle time. The interpolation time period (sub-index 0x01) value shall be given in 10 <sup>(interpolation time index)</sup> (second).	UINT8	RO	0x00 (0 <sub>dec</sub> )
60C2:02	Interpolation time index	The interpolation time index (sub-index 0x02) shall be dimensionless.	INT8	RO	0x00 (0 <sub>dec</sub> )

**Index 60D9 Supported functions**

Index (hex)	Name	Meaning	Data type	Flags	Default
60D9:0	Supported functions	This object shall provide information on the supported functions in the device.	UINT32	RO	0x00000000 (0 <sub>dec</sub> )

**Index 60DA Function settings**

Index (hex)	Name	Meaning	Data type	Flags	Default
60DA:0	Function settings	This object shall enable/disable supported functions in the device. Bit 0: Enable TxPDOToggle-Bit in Statusword: Bit 10 Bit 1: Enable input cycle counter in Statusword: Bit 13 Bit 2-31: reserved	UINT32	RW	0x00000000 (0 <sub>dec</sub> )

**Index 60EA Commutation angle**

Index (hex)	Name	Meaning	Data type	Flags	Default
60EA:0	Commutation angle	Electrical commutation angle (for the CSTCA mode) Unit: 5.49 * 10 <sup>-3</sup> °	UINT16	RO	0x0000 (0 <sub>dec</sub> )

**Index 60F4 Following error actual value**

Index (hex)	Name	Meaning	Data type	Flags	Default
60F4:0	Following error actual value	Following error <b>Unit:</b> the given value must be multiplied by the corresponding scaling factor [► 110]	INT32	RO	0x00000000 (0 <sub>dec</sub> )

**Index 60FF Target velocity**

Index (hex)	Name	Meaning	Data type	Flags	Default
60FF:0	Target velocity	This object shall indicate the configured target velocity The velocity scaling can be found in object 0x6090 (Velocity encoder resolution)	INT32	RO	0x00000000 (0 <sub>dec</sub> )

**Index 6502 Supported drive modes**

Index (hex)	Name	Meaning	Data type	Flags	Default
6502:0	Supported drive modes	This object shall provide information on the supported drive modes. (DS402 Object 0x6502) Only modes CSV, CST and CSTCA are supported  Bit 0 : PP Bit 1 : VL Bit 2: PV Bit 3: TQ Bit 4: R Bit 5: HM Bit 6: IP Bit 7: CSP Bit 8: CSV Bit 9: CST Bit 10: CSTCA Bit 11-15: reserved Bit 16-31: Manufacturer specific	UINT32	RO	0x00000000 (0 <sub>dec</sub> )

**Also see about this**

- 📖 Configuration data [▶ 154]
- 📖 Configuration data [▶ 155]
- 📖 Configuration data [▶ 154]
- 📖 Configuration data [▶ 155]
- 📖 Configuration data [▶ 154]
- 📖 Configuration data [▶ 155]

## 8.5 Information / diagnosis data

**Index 10F3 Diagnosis History**

Index (hex)	Name	Meaning	Data type	Flags	Default
10F3:0	Diagnosis History	Maximum subindex	UINT8	RO	0x37 (55 <sub>dec</sub> )
10F3:01	Maximum Messages	Maximum number of stored messages A maximum of 50 messages can be stored	UINT8	RO	0x00 (0 <sub>dec</sub> )
10F3:02	Newest Message	Subindex of the latest message	UINT8	RO	0x00 (0 <sub>dec</sub> )
10F3:03	Newest Acknowledged Message	Subindex of the last confirmed message	UINT8	RW	0x00 (0 <sub>dec</sub> )
10F3:04	New Messages Available	Indicates that a new message is available	BOOLEAN	RO	0x00 (0 <sub>dec</sub> )
10F3:05	Flags	not used	UINT16	RW	0x0000 (0 <sub>dec</sub> )
10F3:06	Diagnosis Message 001	Message 1	OCTET-STRING[28]	RO	{0}
...	...	...			
10F3:37	Diagnosis Message 050	Message 50	OCTET-STRING[28]	RO	{0}

**Index 10F8 Actual Time Stamp**

Index (hex)	Name	Meaning	Data type	Flags	Default
10F8:0	Actual Time Stamp	Time stamp	UINT64	RO	

**Index 2030 Amplifier Diag data**

Index (hex)	Name	Meaning	Data type	Flags	Default
2030:0	Amplifier Diag data	Maximum subindex	UINT8	RO	0x11 (17 <sub>dec</sub> )
2030:11	Amplifier I2T temperature	I2T model load <b>Unit:</b> %	UINT8	RO	0x00 (0 <sub>dec</sub> )

**Index 2031 Motor Diag data**

Index (hex)	Name	Meaning	Data type	Flags	Default
2031:0	Motor Diag data	Maximum subindex	UINT8	RO	0x11 (17 <sub>dec</sub> )
2031:11	Motor I2T temperature	I2T model load <b>Unit:</b> %	UINT8	RO	0x00 (0 <sub>dec</sub> )

**Index 2040 Amplifier Info data**

Index (hex)	Name	Meaning	Data type	Flags	Default
2040:0	Amplifier Info data	Maximum subindex	UINT8	RO	0x12 (18 <sub>dec</sub> )
2040:11	Amplifier temperature	Internal terminal temperature <b>Unit:</b> 0.1 °C	UINT16	RO	0x0000 (0 <sub>dec</sub> )
2040:12	DC link voltage	DC link voltage <b>Unit:</b> mV	UINT32	RO	0x00000000 (0 <sub>dec</sub> )

**Index 2041 Info data**

Index (hex)	Name	Meaning	Data type	Flags	Default
2041:0	Info data	Maximum subindex	UINT8	RO	0x11 (17 <sub>dec</sub> )
2041:11	Auxiliary voltage (10 V)	Auxiliary voltage <b>Unit:</b> mV	UINT32	RO	0x00000000 (0 <sub>dec</sub> )

**Index 2058 Resolver info data**

Index (hex)	Name	Meaning	Data type	Flags	Default
2058:0	Resolver info data	Maximum subindex	UINT8	RO	0x12 (18 <sub>dec</sub> )
2058:12	Automatic resolver gain value	Index 9008 Current value for the sine and cosine signal level adaptation (only if "Enable automatic gain control" is active")	REAL32	RO	0x01F80000 (33030144 <sub>dec</sub> )

**Index FB40 Memory interface**

Index (hex)	Name	Meaning	Data type	Flags	Default
FB40:0	Memory interface	Maximum subindex	UINT8	RO	0x03 (3 <sub>dec</sub> )
FB40:01	Address	reserved	UINT32	RW	0x00000000 (0 <sub>dec</sub> )
FB40:02	Length	reserved	UINT16	RW	0x0000 (0 <sub>dec</sub> )
FB40:03	Data	reserved	OCTET-STRING[8]	RW	{0}

## 8.6 Standard objects

The standard objects have the same meaning for all EtherCAT slaves.

**Index 1000 Device type**

Index (hex)	Name	Meaning	Data type	Flags	Default
1000:0	Device type	Device type of the EtherCAT slave: the Lo-Word contains the CoE profile used (5001). The Hi-Word contains the module profile according to the modular device profile.	UINT32	RO	0x00000192 (402 <sub>dec</sub> )

**Index 1001 Error register**

Index (hex)	Name	Meaning	Data type	Flags	Default
1001:0	Error register		UINT8	RO	0x00 (0 <sub>dec</sub> )

**Index 1008 Device name**

Index (hex)	Name	Meaning	Data type	Flags	Default
1008:0	Device name	Device name of the EtherCAT slave	STRING	RO	EL72x1-0001

**Index 1009 Hardware version**

Index (hex)	Name	Meaning	Data type	Flags	Default
1009:0	Hardware version	Hardware version of the EtherCAT slave	STRING	RO	00

**Index 100A Software version**

Index (hex)	Name	Meaning	Data type	Flags	Default
100A:0	Software version	Firmware version of the EtherCAT slave	STRING	RO	01

**Index 1018 Identity**

Index (hex)	Name	Meaning	Data type	Flags	Default
1018:0	Identity	Information for identifying the slave	UINT8	RO	0x04 (4 <sub>dec</sub> )
1018:01	Vendor ID	Vendor ID of the EtherCAT slave	UINT32	RO	0x00000002 (2 <sub>dec</sub> )
1018:02	Product code	Product code of the EtherCAT slave	UINT32	RO	0x1C213052 (471937106 <sub>dec</sub> )
1018:03	Revision	Revision number of the EtherCAT slave; the low word (bit 0-15) indicates the special terminal number, the high word (bit 16-31) refers to the device description	UINT32	RO	0x00110001 (1114113 <sub>dec</sub> )
1018:04	Serial number	Unique serial number	UINT32	RO	0x00000000 (0 <sub>dec</sub> )

**Index 1600 DS402 RxPDO-Map Controlword**

Index (hex)	Name	Meaning	Data type	Flags	Default
1600:0	DS402 RxPDO-Map Controlword	PDO Mapping RxPDO 1	UINT8	RO	0x01 (1 <sub>dec</sub> )
1600:01	SubIndex 001	1. PDO Mapping entry (object 0x6040 (Controlword), entry 0x00 (Controlword))	UINT32	RO	0x6040:00, 16

**Index 1601 DS402 RxPDO-Map Target velocity**

Index (hex)	Name	Meaning	Data type	Flags	Default
1601:0	DS402 RxPDO-Map Target velocity	PDO Mapping RxPDO 2	UINT8	RO	0x01 (1 <sub>dec</sub> )
1601:01	SubIndex 001	1. PDO Mapping entry (object 0x60FF (Target velocity), entry 0x00 (Target velocity))	UINT32	RO	0x60FF:00, 32

**Index 1602 DS402 RxPDO-Map Target torque**

Index (hex)	Name	Meaning	Data type	Flags	Default
1602:0	DS402 RxPDO-Map Target torque	PDO Mapping RxPDO 3	UINT8	RO	0x01 (1 <sub>dec</sub> )
1602:01	SubIndex 001	1. PDO Mapping entry (object 0x6071 (Target torque), entry 0x00 (Target torque))	UINT32	RO	0x6071:00, 16

**Index 1603 DS402 RxPDO-Map Commutation angle**

Index (hex)	Name	Meaning	Data type	Flags	Default
1603:0	DS402 RxPDO-Map Commutation angle	PDO Mapping RxPDO 4	UINT8	RO	0x01 (1 <sub>dec</sub> )
1603:01	SubIndex 001	1. PDO Mapping entry (object 0x60EA (Commutation angle), entry 0x00 (Commutation angle))	UINT32	RO	0x60EA:00, 16

**Index 1604 DS402 RxPDO-Map Torque limitation**

Index (hex)	Name	Meaning	Data type	Flags	Default
1604:0	DS402 RxPDO-Map Torque limitation	PDO Mapping RxPDO 5	UINT8	RO	0x01 (1 <sub>dec</sub> )
1604:01	SubIndex 001	1. PDO Mapping entry (object 0x6072 (Max torque), entry 0x00 (Max torque))	UINT32	RO	0x6072:00, 16

**Index 1605 DS402 RxPDO-Map Torque offset**

Index (hex)	Name	Meaning	Data type	Flags	Default
1605:0	DS402 RxPDO-Map Torque offset	PDO Mapping RxPDO 6	UINT8	RO	0x01 (1 <sub>dec</sub> )
1605:01	SubIndex 001	1. PDO Mapping entry (object 0x2001 (Outputs), entry 0x11 (Torque offset))	UINT32	RO	0x2001:11, 16

**Index 1606 DS402 RxPDO-Map Target position**

Index (hex)	Name	Meaning	Data type	Flags	Default
1606:0	DS402 RxPDO-Map Target position	PDO Mapping RxPDO 7	UINT8	RO	0x01 (1 <sub>dec</sub> )
1606:01	SubIndex 001	1. PDO Mapping entry	UINT32	RO	0x607A:00, 32

**Index 1A00 DS402 TxPDO-Map Statusword**

Index (hex)	Name	Meaning	Data type	Flags	Default
1A00:0	DS402 TxPDO-Map Statusword	PDO Mapping TxPDO 1	UINT8	RO	0x01 (1 <sub>dec</sub> )
1A00:01	SubIndex 001	1. PDO Mapping entry (object 0x6041 (Statusword), entry 0x00 (Statusword))	UINT32	RO	0x6041:00, 16

**Index 1A01 DS402 TxPDO-Map Position actual value**

Index (hex)	Name	Meaning	Data type	Flags	Default
1A01:0	DS402 TxPDO-Map Position actual value	PDO Mapping TxPDO 2	UINT8	RO	0x01 (1 <sub>dec</sub> )
1A01:01	SubIndex 001	1. PDO Mapping entry (object 0x6064 (Position actual value), entry 0x00 (Position actual value))	UINT32	RO	0x6064:00, 32

**Index 1A02 DS402 TxPDO-Map Velocity actual value**

Index (hex)	Name	Meaning	Data type	Flags	Default
1A02:0	DS402 TxPDO-Map Velocity actual value	PDO Mapping TxPDO 3	UINT8	RO	0x01 (1 <sub>dec</sub> )
1A02:01	SubIndex 001	1. PDO Mapping entry (object 0x606C (Velocity actual value), entry 0x00 (Velocity actual value))	UINT32	RO	0x606C:00, 32

**Index 1A03 DS402 TxPDO-Map Torque actual value**

Index (hex)	Name	Meaning	Data type	Flags	Default
1A03:0	DS402 TxPDO-Map Torque actual value	PDO Mapping TxPDO 4	UINT8	RO	0x01 (1 <sub>dec</sub> )
1A03:01	SubIndex 001	1. PDO Mapping entry (object 0x6077 (Torque actual value), entry 0x00 (Torque actual value))	UINT32	RO	0x6077:00, 16

**Index 1A04 DS402 TxPDO-Map Following error actual value**

Index (hex)	Name	Meaning	Data type	Flags	Default
1A04:0	DS402 TxPDO-Map Following error actual value	PDO Mapping TxPDO 5	UINT8	RO	0x01 (1 <sub>dec</sub> )
1A04:01	SubIndex 001	1. PDO Mapping entry	UINT32	RO	0x60F4:00, 32

**Index 1C00 Sync manager type**

Index (hex)	Name	Meaning	Data type	Flags	Default
1C00:0	Sync manager type	Using the sync managers	UINT8	RO	0x04 (4 <sub>dec</sub> )
1C00:01	SubIndex 001	Sync-Manager Type Channel 1: Mailbox Write	UINT8	RO	0x01 (1 <sub>dec</sub> )
1C00:02	SubIndex 002	Sync-Manager Type Channel 2: Mailbox Read	UINT8	RO	0x02 (2 <sub>dec</sub> )
1C00:03	SubIndex 003	Sync-Manager Type Channel 3: Process Data Write (Outputs)	UINT8	RO	0x03 (3 <sub>dec</sub> )
1C00:04	SubIndex 004	Sync-Manager Type Channel 4: Process Data Read (Inputs)	UINT8	RO	0x04 (4 <sub>dec</sub> )

**Index 1C12 RxPDO assign**

Index (hex)	Name	Meaning	Data type	Flags	Default
1C12:0	RxPDO assign	PDO Assign Outputs	UINT8	RW	0x02 (2 <sub>dec</sub> )
1C12:01	SubIndex 001	1. allocated RxPDO (contains the index of the associated RxPDO mapping object)	UINT16	RW	0x1600 (5632 <sub>dec</sub> )
1C12:02	SubIndex 002	2. allocated RxPDO (contains the index of the associated RxPDO mapping object)	UINT16	RW	0x1601 (5633 <sub>dec</sub> )
1C12:03	SubIndex 003	3. allocated RxPDO (contains the index of the associated RxPDO mapping object)	UINT16	RW	0x0000 (0 <sub>dec</sub> )
1C12:04	SubIndex 004	4. allocated RxPDO (contains the index of the associated RxPDO mapping object)	UINT16	RW	0x0000 (0 <sub>dec</sub> )
1C12:05	SubIndex 005	5. allocated RxPDO (contains the index of the associated RxPDO mapping object)	UINT16	RW	0x0000 (0 <sub>dec</sub> )
1C12:06	SubIndex 006	6. allocated RxPDO (contains the index of the associated RxPDO mapping object)	UINT16	RW	0x0000 (0 <sub>dec</sub> )

**Index 1C13 TxPDO assign**

Index (hex)	Name	Meaning	Data type	Flags	Default
1C13:0	TxPDO assign	PDO Assign Inputs	UINT8	RW	0x02 (2 <sub>dec</sub> )
1C13:01	SubIndex 001	1. allocated TxPDO (contains the index of the associated TxPDO mapping object)	UINT16	RW	0x1A00 (6656 <sub>dec</sub> )
1C13:02	SubIndex 002	2. allocated TxPDO (contains the index of the associated TxPDO mapping object)	UINT16	RW	0x1A01 (6657 <sub>dec</sub> )
1C13:03	SubIndex 003	3. allocated TxPDO (contains the index of the associated TxPDO mapping object)	UINT16	RW	0x0000 (0 <sub>dec</sub> )
1C13:04	SubIndex 004	4. allocated TxPDO (contains the index of the associated TxPDO mapping object)	UINT16	RW	0x0000 (0 <sub>dec</sub> )



## Index 1C32 SM output parameter

Index (hex)	Name	Meaning	Data type	Flags	Default
1C32:0	SM output parameter	Synchronization parameters for the outputs	UINT8	RO	0x20 (32 <sub>dec</sub> )
1C32:01	Sync mode	Current synchronization mode: <ul style="list-style-type: none"> <li>3: DC-Mode - Synchronous with SYNC1 event</li> </ul>	UINT16	RW	0x0000 (0 <sub>dec</sub> )
1C32:02	Cycle time	Cycle time (in ns): <ul style="list-style-type: none"> <li>Free Run: Cycle time of the local timer</li> <li>Synchronous with SM 2 event: Master cycle time</li> <li>DC mode: SYNC0/SYNC1 Cycle Time</li> </ul>	UINT32	RW	0x0003D090 (250000 <sub>dec</sub> )
1C32:03	Shift time	Time between SYNC0 event and output of the outputs (in ns, DC mode only)	UINT32	RO	0x00000000 (0 <sub>dec</sub> )
1C32:04	Sync modes supported	Supported synchronization modes: <ul style="list-style-type: none"> <li>Bit 0 = 1: free run is supported</li> <li>Bit 1 = 1: Synchronous with SM 2 event is supported</li> <li>Bit 2-3 = 01: DC mode is supported</li> <li>Bit 4-5 = 10: Output shift with SYNC1 event (only DC mode)</li> <li>Bit 14 = 1: dynamic times (measurement through writing of 0x1C32:08 [▶ 166])</li> </ul>	UINT16	RO	0xC007 (49159 <sub>dec</sub> )
1C32:05	Minimum cycle time	Minimum cycle time (in ns)	UINT32	RO	0x0001E848 (125000 <sub>dec</sub> )
1C32:06	Calc and copy time	Minimum time between SYNC0 and SYNC1 event (in ns, DC mode only)	UINT32	RO	0x00000000 (0 <sub>dec</sub> )
1C32:07	Minimum delay time		UINT32	RO	0x00000000 (0 <sub>dec</sub> )
1C32:08	Command	<ul style="list-style-type: none"> <li>0: Measurement of the local cycle time is stopped</li> <li>1: Measurement of the local cycle time is started</li> </ul> <p>The entries 0x1C32:03 [▶ 166], 0x1C32:05 [▶ 166], 0x1C32:06 [▶ 166], 0x1C32:09 [▶ 166], 0x1C33:03 [▶ 167], 0x1C33:06 [▶ 166], 0x1C33:09 [▶ 167] are updated with the maximum measured values. For a subsequent measurement the measured values are reset</p>	UINT16	RW	0x0000 (0 <sub>dec</sub> )
1C32:09	Maximum delay time	Time between SYNC1 event and output of the outputs (in ns, DC mode only)	UINT32	RO	0x00000000 (0 <sub>dec</sub> )
1C32:0B	SM event missed counter	Number of missed SM events in OPERATIONAL (DC mode only)	UINT16	RO	0x0000 (0 <sub>dec</sub> )
1C32:0C	Cycle exceeded counter	Number of occasions the cycle time was exceeded in OPERATIONAL (cycle was not completed in time or the next cycle began too early)	UINT16	RO	0x0000 (0 <sub>dec</sub> )
1C32:0D	Shift too short counter	Number of occasions that the interval between SYNC0 and SYNC1 event was too short (DC mode only)	UINT16	RO	0x0000 (0 <sub>dec</sub> )
1C32:20	Sync error	The synchronization was not correct in the last cycle (outputs were output too late; DC mode only)	BOOLEAN	RO	0x00 (0 <sub>dec</sub> )

**Index 1C33 SM input parameter**

Index (hex)	Name	Meaning	Data type	Flags	Default
1C33:0	SM input parameter	Synchronization parameters for the inputs	UINT8	RO	0x20 (32 <sub>dec</sub> )
1C33:01	Sync mode	Current synchronization mode: <ul style="list-style-type: none"> <li>• 3: DC - Synchronous with SYNC1 Event</li> </ul>	UINT16	RW	0x0000 (0 <sub>dec</sub> )
1C33:02	Cycle time	as <a href="#">0x1C32:02</a> [ <a href="#">▶ 166</a> ]	UINT32	RW	0x0003D090 (250000 <sub>dec</sub> )
1C33:03	Shift time	Time between SYNC0 event and reading of the inputs (in ns, only DC mode)	UINT32	RO	0x00001C52 (7250 <sub>dec</sub> )
1C33:04	Sync modes supported	Supported synchronization modes: <ul style="list-style-type: none"> <li>• Bit 0: free run is supported</li> <li>• Bit 1: synchronous with SM 2 event is supported (outputs available)</li> <li>• Bit 1: synchronous with SM 3 event is supported (no outputs available)</li> <li>• Bit 2-3 = 01: DC mode is supported</li> <li>• Bit 4-5 = 01: input shift through local event (outputs available)</li> <li>• Bit 4-5 = 10: input shift with SYNC1 event (no outputs available)</li> <li>• Bit 14 = 1: dynamic times (measurement through writing of <a href="#">0x1C32:08</a> [<a href="#">▶ 166</a>] or <a href="#">0x1C33:08</a> [<a href="#">▶ 167</a>])</li> </ul>	UINT16	RO	0xC007 (49159 <sub>dec</sub> )
1C33:05	Minimum cycle time	as <a href="#">0x1C32:05</a> [ <a href="#">▶ 166</a> ]	UINT32	RO	0x0001E848 (125000 <sub>dec</sub> )
1C33:06	Calc and copy time	Time between reading of the inputs and availability of the inputs for the master (in ns, only DC mode)	UINT32	RO	0x00000000 (0 <sub>dec</sub> )
1C33:07	Minimum delay time		UINT32	RO	0x00001C52 (7250 <sub>dec</sub> )
1C33:08	Command	as <a href="#">0x1C32:08</a> [ <a href="#">▶ 166</a> ]	UINT16	RW	0x0000 (0 <sub>dec</sub> )
1C33:09	Maximum delay time	Time between SYNC1 event and reading of the inputs (in ns, only DC mode)	UINT32	RO	0x00001C52 (7250 <sub>dec</sub> )
1C33:0B	SM event missed counter	as <a href="#">0x1C32:11</a> [ <a href="#">▶ 166</a> ]	UINT16	RO	0x0000 (0 <sub>dec</sub> )
1C33:0C	Cycle exceeded counter	as <a href="#">0x1C32:12</a> [ <a href="#">▶ 166</a> ]	UINT16	RO	0x0000 (0 <sub>dec</sub> )
1C33:0D	Shift too short counter	as <a href="#">0x1C32:13</a> [ <a href="#">▶ 166</a> ]	UINT16	RO	0x0000 (0 <sub>dec</sub> )
1C33:20	Sync error	as <a href="#">0x1C32:32</a> [ <a href="#">▶ 166</a> ]	BOOLEAN	RO	0x00 (0 <sub>dec</sub> )

**Index F008 Code word**

Index (hex)	Name	Meaning	Data type	Flags	Default
F008:0	Code word	see <a href="#">note</a> [ <a href="#">▶ 25</a> ]!	UINT32	RW	0x00000000 (0 <sub>dec</sub> )

**Index FB00 Command**

Index (hex)	Name	Meaning	Data type	Flags	Default
FB00:0	Command	Maximum subindex	UINT8	RO	0x03 (3 <sub>dec</sub> )
FB00:01	Request	reserved	OCTET-STRING[2]	RW	{0}
FB00:02	Status	reserved	UINT8	RO	0x00 (0 <sub>dec</sub> )
FB00:03	Response	reserved	OCTET-STRING[4]	RO	{0}

## 9 Error correction

### 9.1 Diagnostics – basic principles of diag messages

*DiagMessages* designates a system for the transmission of messages from the EtherCAT Slave to the EtherCAT Master/TwinCAT. The messages are stored by the device in its own CoE under 0x10F3 and can be read by the application or the System Manager. An error message referenced via a code is output for each event stored in the device (warning, error, status change).

#### Definition

The *DiagMessages* system is defined in the ETG (EtherCAT Technology Group) in the guideline ETG.1020, chapter 13 "Diagnosis handling". It is used so that pre-defined or flexible diagnostic messages can be conveyed from the EtherCAT Slave to the Master. In accordance with the ETG, the process can therefore be implemented supplier-independently. Support is optional. The firmware can store up to 250 *DiagMessages* in its own CoE.

Each *DiagMessage* consists of

- Diag Code (4-byte)
- Flags (2-byte; info, warning or error)
- Text ID (2-byte; reference to explanatory text from the ESI/XML)
- Timestamp (8-byte, local slave time or 64-bit Distributed Clock time, if available)
- Dynamic parameters added by the firmware

The *DiagMessages* are explained in text form in the ESI/XML file belonging to the EtherCAT device: on the basis of the Text ID contained in the *DiagMessage*, the corresponding plain text message can be found in the languages contained in the ESI/XML. In the case of Beckhoff products these are usually German and English.

Via the entry *NewMessagesAvailable* the user receives information that new messages are available.


*DiagMessages* can be confirmed in the device: the last/latest unconfirmed message can be confirmed by the user.

In the CoE both the control entries and the history itself can be found in the CoE object 0x10F3:

Index	Name	Flags	Value
1018:0	Identity	RO	> 4 <
10F0:0	Backup parameter handling	RO	> 1 <
10F3:0	Diagnosis History	RO	> 55 <
10F3:01	Maximum Messages	RO	0x32 (50)
10F3:02	Newest Message	RO	0x15 (21)
10F3:03	Newest Acknowledged Message	R/W	0x14 (20)
10F3:04	New Messages Available	RO	FALSE
10F3:05	Flags	R/W	0x0000 (0)
10F3:06	Diagnosis Message 001	RO	00 E0 A4 08 10 00 03 00 60 1F 0D 00 00 00 00 00 06 00 00 00 06 00 00 00 06 00 FF 00
10F3:07	Diagnosis Message 002	RO	00 E0 A4 08 10 00 02 00 00 6A 18 00 00 00 00 00 06 00 00 00 06 00 00 00 06 00 00 00
10F3:08	Diagnosis Message 003	RO	00 E0 A4 08 10 00 03 00 40 D8 67 02 00 00 00 00 06 00 00 00 06 00 03 00 06 00 00 00
10F3:09	Diagnosis Message 004	RO	00 E0 A4 08 12 00 00 81 E0 89 47 03 00 00 00 00 06 00 04 44 06 00 00 00 06 00 00 00

Fig. 166: *DiagMessages* in the CoE

The subindex of the latest *DiagMessage* can be read under x10F3:02.

 <b>Note</b>	<p><b>Support for commissioning</b></p> <p>The DiagMessages system is to be used above all during the commissioning of the plant. The diagnostic values e.g. in the StatusWord of the device (if available) are helpful for on-line diagnosis during the subsequent continuous operation.</p>
--	---

**TwinCAT System Manager implementation**

From TwinCAT 2.11 DiagMessages, if available, are displayed in the device’s own interface. Operation (collection, confirmation) also takes place via this interface.

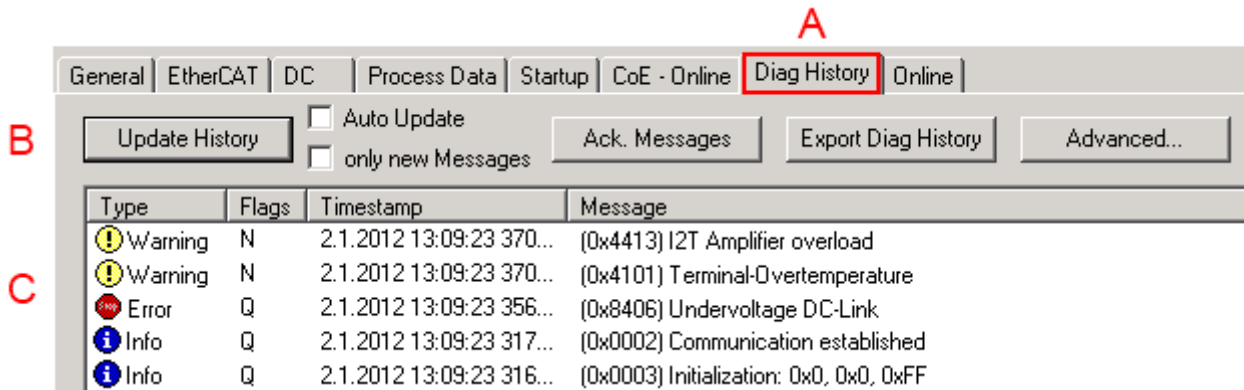


Fig. 167: Implementation of the DiagMessage system in the TwinCAT System Manager

The operating buttons (B) and the history read out (C) can be seen on the Diag History tab (A). The components of the message:

- Info/Warning/Error
- Acknowledge flag (N = unconfirmed, Q = confirmed)
- Time stamp
- Text ID
- Plain text message according to ESI/XML data

The meanings of the buttons are self-explanatory.

**DiagMessages within the ADS Logger/Eventlogger**

Since TwinCAT 3.1 build 4022 DiagMessages send by the terminal are shown by the TwinCAT ADS Logger. Given that DiagMessages are represented IO- comprehensive at one place, commissioning will be simplified. In addition, the logger output could be stored into a data file – hence DiagMessages are available long-term for analysis.

**Reading messages into the PLC**

- In preparation -

**Interpretation**

**Time stamp**

The time stamp is obtained from the local clock of the terminal at the time of the event. The time is usually the distributed clock time (DC) from register x910.

Please note: When EtherCAT is started, the DC time in the reference clock is set to the same time as the local IPC/TwinCAT time. From this moment the DC time may differ from the IPC time, since the IPC time is not adjusted. Significant time differences may develop after several weeks of operation without a EtherCAT restart. As a remedy, external synchronization of the DC time can be used, or a manual correction calculation can be applied, as required: The current DC time can be determined via the EtherCAT master or from register x901 of the DC slave.

**Structure of the Text ID**

The structure of the MessageID is not subject to any standardization and can be supplier-specifically defined. In the case of Beckhoff EtherCAT devices (EL, EP) it usually reads according to **xyzz**:

<b>x</b>	<b>y</b>	<b>zz</b>
0: Systeminfo 2: reserved 1: Info 4: Warning 8: Error	0: System 1: General 2: Communication 3: Encoder 4: Drive 5: Inputs 6: I/O general 7: reserved	Error number

Example: Message 0x4413 --> Drive Warning Number 0x13

**Overview of text IDs**

Specific Text IDs should be specified in the device documentation.

Text ID	Type	Place	Text Message	Additional comment
0x0001	Information	System	No error	No error
0x0002	Information	System	Communication established	Connection established
0x0003	Information	System	Initialization: 0x%X, 0x%X, 0x%X	General information; parameters depend on event. See device documentation for interpretation.
0x1000	Information	System	Information: 0x%X, 0x%X, 0x%X	General information; parameters depend on event. See device documentation for interpretation.
0x1012	Information	System	EtherCAT state change Init - PreOp	
0x1021	Information	System	EtherCAT state change PreOp - Init	
0x1024	Information	System	EtherCAT state change PreOp - Safe-Op	
0x1042	Information	System	EtherCAT state change SafeOp - PreOp	
0x1048	Information	System	EtherCAT state change SafeOp - Op	
0x1084	Information	System	EtherCAT state change Op - SafeOp	
0x1100	Information	General	Detection of operation mode completed: 0x%X, %d	Detection of the mode of operation ended
0x1135	Information	General	Cycle time o.k.: %d	Cycle time OK
0x1157	Information	General	Data manually saved (Idx: 0x%X, SubIdx: 0x%X)	Data saved manually
0x1158	Information	General	Data automatically saved (Idx: 0x%X, SubIdx: 0x%X)	Data saved automatically
0x1159	Information	General	Data deleted (Idx: 0x%X, SubIdx: 0x%X)	Data deleted
0x117F	Information	General	Information: 0x%X, 0x%X, 0x%X	Information
0x1201	Information	Communication	Communication re-established	Communication to the field side restored This message appears, for example, if the voltage was removed from the power contacts and re-applied during operation
0x1300	Information	Encoder	Position set: %d, %d	Position set - StartInputhandler
0x1303	Information	Encoder	Encoder Supply ok	Encoder power supply unit OK
0x1304	Information	Encoder	Encoder initialization successfully, channel: %X	Encoder initialization successfully completed
0x1305	Information	Encoder	Sent command encoder reset, channel: %X	Send encoder reset command
0x1400	Information	Drive	Drive is calibrated: %d, %d	Drive is calibrated
0x1401	Information	Drive	Actual drive state: 0x%X, %d	Current drive status
0x1705	Information		CPU usage returns in normal range (< 85%%)	Processor load is back in the normal range
0x1706	Information		Channel is not in saturation anymore	Channel is no longer in saturation
0x1707	Information		Channel is not in overload anymore	Channel is no longer overloaded
0x170A	Information		No channel range error anymore	A measuring range error is no longer active
0x170C	Information		Calibration data saved	Calibration data were saved
0x170D	Information		Calibration data will be applied and saved after sending the command "0x5AFE"	Calibration data are not applied and saved until the command "0x5AFE" is sent

Text ID	Type	Place	Text Message	Additional comment
0x2000	Information	System	%s: %s	
0x2001	Information	System	%s: Network link lost	Network connection lost
0x2002	Information	System	%s: Network link detected	Network connection found
0x2003	Information	System	%s: no valid IP Configuration - Dhcp client started	Invalid IP configuration
0x2004	Information	System	%s: valid IP Configuration (IP: %d.%d.%d.%d) assigned by Dhcp server %d.%d.%d.%d	Valid IP configuration, assigned by the DHCP server
0x2005	Information	System	%s: Dhcp client timed out	DHCP client timeout
0x2006	Information	System	%s: Duplicate IP Address detected (%d.%d.%d.%d)	Duplicate IP address found
0x2007	Information	System	%s: UDP handler initialized	UDP handler initialized
0x2008	Information	System	%s: TCP handler initialized	TCP handler initialized
0x2009	Information	System	%s: No more free TCP sockets available	No free TCP sockets available.



Text ID	Type	Place	Text Message	Additional comment
0x4000	Warning		Warning: 0x%X, 0x%X, 0x%X	General warning; parameters depend on event. See device documentation for interpretation.
0x4001	Warning	System	Warning: 0x%X, 0x%X, 0x%X	
0x4002	Warning	System	%s: %s Connection Open (IN:%d OUT:%d API:%dms) from %d.%d.%d.%d successful	
0x4003	Warning	System	%s: %s Connection Close (IN:%d OUT:%d) from %d.%d.%d.%d successful	
0x4004	Warning	System	%s: %s Connection (IN: %d OUT:%d) with %d.%d.%d timed out	
0x4005	Warning	System	%s: %s Connection Open (IN:%d OUT:%d) from %d.%d.%d.%d denied (Error: %u)	
0x4006	Warning	System	%s: %s Connection Open (IN:%d OUT:%d) from %d.%d.%d.%d denied (Input Data Size expected: %d Byte(s) received: %d Byte(s))	
0x4007	Warning	System	%s: %s Connection Open (IN:%d OUT:%d) from %d.%d.%d.%d denied (Output Data Size expected: %d Byte(s) received: %d Byte(s))	
0x4008	Warning	System	%s: %s Connection Open (IN:%d OUT:%d) from %d.%d.%d.%d denied (RPI:%dms not supported -> API:%dms)	
0x4101	Warning	General	Terminal-Overtemperature	Overtemperature. The internal temperature of the terminal exceeds the parameterized warning threshold
0x4102	Warning	General	Discrepancy in the PDO-Configuration	The selected PDOs do not match the set operating mode.  Sample: Drive operates in velocity mode, but the velocity PDO is but not mapped in the PDOs.
0x417F	Warning	General	Warning: 0x%X, 0x%X, 0x%X	
0x428D	Warning	General	Challenge is not Random	
0x4300	Warning	Encoder	Subincrements deactivated: %d, %d	Sub-increments deactivated (despite activated configuration)
0x4301	Warning	Encoder	Encoder-Warning	General encoder error
0x4400	Warning	Drive	Drive is not calibrated: %d, %d	Drive is not calibrated
0x4401	Warning	Drive	Starttype not supported: 0x%X, %d	Start type is not supported
0x4402	Warning	Drive	Command rejected: %d, %d	Command rejected
0x4405	Warning	Drive	Invalid modulo subtype: %d, %d	Modulo sub-type invalid
0x4410	Warning	Drive	Target overrun: %d, %d	Target position exceeded
0x4411	Warning	Drive	DC-Link undervoltage (Warning)	The DC link voltage of the terminal is lower than the parameterized minimum voltage. Activation of the output stage is prevented
0x4412	Warning	Drive	DC-Link overvoltage (Warning)	The DC link voltage of the terminal is higher than the parameterized maximum voltage. Activation of the output stage is prevented
0x4413	Warning	Drive	I2T-Model Amplifier overload (Warning)	- The amplifier is being operated outside the specification - The I2T-model of the amplifier is incorrectly parameterized


Text ID	Type	Place	Text Message	Additional comment
0x4414	Warning	Drive	I2T-Model Motor over-load (Warning)	- The motor is being operated outside the parameterized rated values - The I2T-model of the motor is incorrectly parameterized
0x4415	Warning	Drive	Speed limitation active	The maximum speed is limited by the parameterized objects (e.g. velocity limitation, motor speed limitation). This warning is output if the set velocity is higher than one of the parameterized limits
0x4416	Warning	Drive	Step lost detected at position: 0x%X%X	Step loss detected
0x4417	Warning	Drive	Motor overtemperature	The internal temperature of the motor exceeds the parameterized warning threshold
0x4418	Warning	Drive	Limit: Current	Limit: current is limited
0x4419	Warning	Drive	Limit: Amplifier I2T-model exceeds 100%%	The threshold values for the maximum current were exceeded.
0x441A	Warning	Drive	Limit: Motor I2T-model exceeds 100%%	Limit: Motor I2T-model exceeds 100%
0x441B	Warning	Drive	Limit: Velocity limitation	The threshold values for the maximum speed were exceeded.
0x441C	Warning	Drive	STO while the axis was enabled	An attempt was made to activate the axis, despite the fact that no voltage is present at the STO input.
0x4600	Warning	General IO	Wrong supply voltage range	Supply voltage not in the correct range
0x4610	Warning	General IO	Wrong output voltage range	Output voltage not in the correct range
0x4705	Warning		Processor usage at %d %%	Processor load at %d %%
0x470A	Warning		EtherCAT Frame missed (change Settings or DC Operation Mode or Sync0 Shift Time)	EtherCAT frame missed (change DC Operation Mode or Sync0 Shift Time under Settings)

Text ID	Type	Place	Text Message	Additional comment
0x8000	Error	System	%s: %s	
0x8001	Error	System	Error: 0x%X, 0x%X, 0x%X	General error; parameters depend on event. See device documentation for interpretation.
0x8002	Error	System	Communication aborted	Communication aborted
0x8003	Error	System	Configuration error: 0x%X, 0x%X, 0x%X	General; parameters depend on event. See device documentation for interpretation.
0x8004	Error	System	%s: Unsuccessful FwdOpen-Response received from %d.%d.%d.%d (%s) (Error: %u)	
0x8005	Error	System	%s: FwdClose-Request sent to %d.%d.%d.%d (%s)	
0x8006	Error	System	%s: Unsuccessful FwdClose-Response received from %d.%d.%d.%d (%s) (Error: %u)	
0x8007	Error	System	%s: Connection with %d.%d.%d.%d (%s) closed	
0x8100	Error	General	Status word set: 0x%X, %d	Error bit set in the status word
0x8101	Error	General	Operation mode incompatible to PDO interface: 0x%X, %d	Mode of operation incompatible with the PDO interface
0x8102	Error	General	Invalid combination of Inputs and Outputs PDOs	Invalid combination of input and output PDOs
0x8103	Error	General	No variable linkage	No variables linked
0x8104	Error	General	Terminal-Overtemperature	The internal temperature of the terminal exceeds the parameterized error threshold. Activation of the terminal is prevented
0x8105	Error	General	PD-Watchdog	Communication between the fieldbus and the output stage is secured by a Watchdog. The axis is stopped automatically if the fieldbus communication is interrupted. - The EtherCAT connection was interrupted during operation - The Master was switched to Config mode during operation
0x8135	Error	General	Cycle time has to be a multiple of 125 µs	The IO or NC cycle time divided by 125 µs does not produce a whole number
0x8136	Error	General	Configuration error: invalid sampling rate	Configuration error: Invalid sampling rate
0x8137	Error	General	Electronic type plate: CRC error	Content of the external name plate memory invalid.
0x8140	Error	General	Sync Error	Real-time violation
0x8141	Error	General	Sync%X Interrupt lost	Sync%X Interrupt lost
0x8142	Error	General	Sync Interrupt asynchronous	Sync Interrupt asynchronous
0x8143	Error	General	Jitter too big	Jitter limit violation
0x817F	Error	General	Error: 0x%X, 0x%X, 0x%X	
0x8200	Error	Communication	Write access error: %d, %d	Error while writing
0x8201	Error	Communication	No communication to field-side (Auxiliary voltage missing)	- There is no voltage applied to the power contacts - A firmware update has failed
0x8281	Error	Communication	Ownership failed: %X	
0x8282	Error	Communication	To many Keys founded	
0x8283	Error	Communication	Key Creation failed: %X	
0x8284	Error	Communication	Key loading failed	
0x8285	Error	Communication	Reading Public Key failed: %X	
0x8286	Error	Communication	Reading Public EK failed: %X	
0x8287	Error	Communication	Reading PCR Value failed: %X	

Text ID	Type	Place	Text Message	Additional comment
0x8288	Error	Communication	Reading Certificate EK failed: %X	
0x8289	Error	Communication	Challenge could not be hashed: %X	
0x828A	Error	Communication	Tickstamp Process failed	
0x828B	Error	Communication	PCR Process failed: %X	
0x828C	Error	Communication	Quote Process failed: %X	
0x82FF	Error	Communication	Bootmode not activated	Boot mode not activated
0x8300	Error	Encoder	Set position error: 0x%X, %d	Error while setting the position
0x8301	Error	Encoder	Encoder increments not configured: 0x%X, %d	Encoder increments not configured
0x8302	Error	Encoder	Encoder error	The amplitude of the resolver is too small
0x8303	Error	Encoder	Encoder supply error	Encoder power supply unit error
0x8304	Error	Encoder	Encoder communication error, channel: %X	Encoder communication error
0x8305	Error	Encoder	EnDat2.2 is not supported, channel: %X	EnDat2.2 is not supported
0x8306	Error	Encoder	Delay time, tolerance limit exceeded, 0x%X, channel: %X	Runtime measurement, tolerance exceeded
0x8307	Error	Encoder	Delay time, maximum value exceeded, 0x%X, channel: %X	Runtime measurement, maximum value exceeded
0x8308	Error	Encoder	Unsupported ordering designation, 0x%X, channel: %X (only 02 and 22 is supported)	Wrong EnDat order ID
0x8309	Error	Encoder	Encoder CRC error, channel: %X	Encoder CRC error
0x830A	Error	Encoder	Temperature %X could not be read, channel: %X	Temperature cannot be read
0x8400	Error	Drive	Incorrect drive configuration: 0x%X, %d	Drive incorrectly configured
0x8401	Error	Drive	Limiting of calibration velocity: %d, %d	Limitation of the calibration velocity
0x8402	Error	Drive	Emergency stop activated: 0x%X, %d	Emergency stop activated
0x8403	Error	Drive	ADC Error	Error during current measurement in the ADC
0x8404	Error	Drive	Overcurrent	Overcurrent in phase U, V or W
0x8405	Error	Drive	Invalid modulo position: %d	Modulo position invalid
0x8406	Error	Drive	DC-Link undervoltage (Error)	The DC link voltage of the terminal is lower than the parameterized minimum voltage. Activation of the output stage is prevented
0x8407	Error	Drive	DC-Link overvoltage (Error)	The DC link voltage of the terminal is higher than the parameterized maximum voltage. Activation of the output stage is prevented
0x8408	Error	Drive	I2T-Model Amplifier overload (Error)	- The amplifier is being operated outside the specification - The I2T-model of the amplifier is incorrectly parameterized
0x8409	Error	Drive	I2T-Model motor overload (Error)	- The motor is being operated outside the parameterized rated values - The I2T-model of the motor is incorrectly parameterized
0x840A	Error	Drive	Overall current threshold exceeded	Total current exceeded
0x8415	Error	Drive	Invalid modulo factor: %d	Modulo factor invalid
0x8416	Error	Drive	Motor overtemperature	The internal temperature of the motor exceeds the parameterized error threshold. The motor stops immediately. Activation of the output stage is prevented.
0x8417	Error	Drive	Maximum rotating field velocity exceeded	Rotary field speed exceeds the value specified for dual use (EU 1382/2014).




Text ID	Type	Place	Text Message	Additional comment
0x841C	Error	Drive	STO while the axis was enabled	An attempt was made to activate the axis, despite the fact that no voltage is present at the STO input.
0x8550	Error	Inputs	Zero crossing phase %X missing	Zero crossing phase %X missing
0x8551	Error	Inputs	Phase sequence Error	Wrong direction of rotation
0x8552	Error	Inputs	Overcurrent phase %X	Overcurrent phase %X
0x8553	Error	Inputs	Overcurrent neutral wire	Overcurrent neutral wire
0x8581	Error	Inputs	Wire broken Ch %D	Wire broken Ch %d
0x8600	Error	General IO	Wrong supply voltage range	Supply voltage not in the correct range
0x8601	Error	General IO	Supply voltage to low	Supply voltage too low
0x8602	Error	General IO	Supply voltage to high	Supply voltage too high
0x8603	Error	General IO	Over current of supply voltage	Overcurrent of supply voltage
0x8610	Error	General IO	Wrong output voltage range	Output voltage not in the correct range
0x8611	Error	General IO	Output voltage to low	Output voltage too low
0x8612	Error	General IO	Output voltage to high	Output voltage too high
0x8613	Error	General IO	Over current of output voltage	Overcurrent of output voltage
0x8700	Error		Channel/Interface not calibrated	Channel/interface not synchronized
0x8701	Error		Operating time was manipulated	Operating time was manipulated
0x8702	Error		Oversampling setting is not possible	Oversampling setting not possible
0x8703	Error		No slave controller found	No slave controller found
0x8704	Error		Slave controller is not in Bootstrap	Slave controller is not in bootstrap
0x8705	Error		Processor usage to high (>= 100%%)	Processor load too high (>= 100%%)
0x8706	Error		Channel in saturation	Channel in saturation
0x8707	Error		Channel overload	Channel overload
0x8708	Error		Overloadtime was manipulated	Overload time was manipulated
0x8709	Error		Saturationtime was manipulated	Saturation time was manipulated
0x870A	Error		Channel range error	Measuring range error for the channel
0x870B	Error		no ADC clock	No ADC clock available
0xFFFF	Information		Debug: 0x%X, 0x%X, 0x%X	Debug: 0x%X, 0x%X, 0x%X

## 9.2 Notes on Diag Messages associated with Motor Terminals

 <b>Note</b>	<p><b>„Ack. Message“ Button</b></p> <p>The ‚Ack. Message‘ button has no effect on the Drive State Machine of the Motor terminals, pressing the button does not make an axis reset.</p> <p>The Drive State Machine has no influence on the error list, an axis reset also does not remove any entries from the error list, however, this can be done by pressing the ‚Ack. Message‘ button.</p>
--	--

## 10 Appendix

### 10.1 UL notice

	<p><b>Application</b> Beckhoff EtherCAT modules are intended for use with Beckhoff's UL Listed EtherCAT System only.</p>
	<p><b>Examination</b> For cULus examination, the Beckhoff I/O System has only been investigated for risk of fire and electrical shock (in accordance with UL508 and CSA C22.2 No. 142).</p>
	<p><b>For devices with Ethernet connectors</b> Not for connection to telecommunication circuits.</p>

#### Basic principles


Two UL certificates are met in the Beckhoff EtherCAT product range, depending upon the components:

- UL certification according to UL508  
Devices with this kind of certification are marked by this sign:



Almost all current EtherCAT products (as at 2010/05) are UL certified without restrictions.

- UL certification according to UL508 with limited power consumption  
The current consumed by the device is limited to a max. possible current consumption of 4 A. Devices with this kind of certification are marked by this sign:

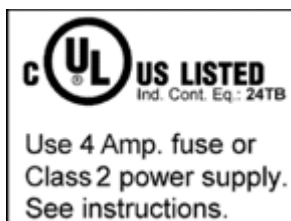

Almost all current EtherCAT products (as at 2010/05) are UL certified without restrictions.

#### Application

If terminals certified *with restrictions* are used, then the current consumption at 24 V<sub>DC</sub> must be limited accordingly by means of supply

- from an isolated source protected by a fuse of max. 4A (according to UL248) or
- from a voltage supply complying with *NEC class 2*.  
A voltage source complying with *NEC class 2* may not be connected in series or parallel with another *NEC class 2* compliant voltage supply!

These requirements apply to the supply of all EtherCAT bus couplers, power adaptor terminals, Bus Terminals and their power contacts.

## 10.2 EtherCAT AL Status Codes


For detailed information please refer to the [EtherCAT system description](#).

## 10.3 Firmware compatibility

Beckhoff EtherCAT devices are delivered with the latest available firmware version. Compatibility of firmware and hardware is mandatory; not every combination ensures compatibility. The overview below shows the hardware versions on which a firmware can be operated.

### Note

- It is recommended to use the newest possible firmware for the respective hardware
- Beckhoff is not under any obligation to provide customers with free firmware updates for delivered products.

 <b>Attention</b>	<p><b>Risk of damage to the device!</b></p> <p>Pay attention to the instructions for firmware updates on the separate page. If a device is placed in BOOTSTRAP mode for a firmware update, it does not check when downloading whether the new firmware is suitable. This can result in damage to the device! Therefore, always make sure that the firmware is suitable for the hardware version!</p>
---	--

EL7201-0000				
Hardware (HW)	Firmware (FW)	Revision no.	Release date	
00	00	EL7201-0000-0016	2010/06	
02 - 07*	01	EL7201-0000-0017	2012/01	
	02		2012/02	
	03			2012/04
			EL7201-0000-0018	2012/08
			EL7201-0000-0019	2013/04
	04		EL7201-0000-0020	2014/06
05*		EL7201-0000-0021	2015/03	

EL7211-0000			
Hardware (HW)	Firmware (FW)	Revision no.	Release date
07*	04	EL7211-0000-0020	2014/06
	05*	EL7201-0000-0021	2015/03

\*) This is the current compatible firmware/hardware version at the time of the preparing this documentation. Check on the Beckhoff web page whether more up-to-date [documentation](#) is available.

## 10.4 Firmware Update EL/ES/EM/EPxxxx

This section describes the device update for Beckhoff EtherCAT slaves from the EL/ES, EM, EK and EP series. A firmware update should only be carried out after consultation with Beckhoff support.

### Storage locations

An EtherCAT slave stores operating data in up to 3 locations:

- Depending on functionality and performance EtherCAT slaves have one or several local controllers for processing I/O data. The corresponding program is the so-called **firmware** in \*.efw format.
- In some EtherCAT slaves the EtherCAT communication may also be integrated in these controllers. In this case the controller is usually a so-called **FPGA** chip with \*.rbf firmware.



- In addition, each EtherCAT slave has a memory chip, a so-called **ESI-EEPROM**, for storing its own device description (ESI: EtherCAT Slave Information). On power-up this description is loaded and the EtherCAT communication is set up accordingly. The device description is available from the download area of the Beckhoff website at (<http://www.beckhoff.de>). All ESI files are accessible there as zip files.

Customers can access the data via the EtherCAT fieldbus and its communication mechanisms. Acyclic mailbox communication or register access to the ESC is used for updating or reading of these data.

The TwinCAT System Manager offers mechanisms for programming all 3 parts with new data, if the slave is set up for this purpose. Generally the slave does not check whether the new data are suitable, i.e. it may no longer be able to operate if the data are unsuitable.

### Simplified update by bundle firmware

The update using so-called **bundle firmware** is more convenient: in this case the controller firmware and the ESI description are combined in a \*.efw file; during the update both the firmware and the ESI are changed in the terminal. For this to happen it is necessary

- for the firmware to be in a packed format: recognizable by the file name, which also contains the revision number, e.g. ELxxx-xxx\_REV0016\_SW01.efw
- for password=1 to be entered in the download dialog. If password=0 (default setting) only the firmware update is carried out, without an ESI update.
- for the device to support this function. The function usually cannot be retrofitted; it is a component of many new developments from year of manufacture 2016.

Following the update, its success should be verified

- ESI/Revision: e.g. by means of an online scan in TwinCAT ConfigMode/FreeRun – this is a convenient way to determine the revision
- Firmware: e.g. by looking in the online CoE of the device



#### Attention

#### Risk of damage to the device!

Note the following when downloading new device files

- Firmware downloads to an EtherCAT device must not be interrupted
- Flawless EtherCAT communication must be ensured. CRC errors or LostFrames must be avoided.
- The power supply must adequately dimensioned. The signal level must meet the specification.

In the event of malfunctions during the update process the EtherCAT device may become unusable and require re-commissioning by the manufacturer.

## 10.4.1 Device description ESI file/XML



#### Attention

#### Attention regarding update of the ESI description/EEPROM

Some slaves have stored calibration and configuration data from the production in the EEPROM. These are irretrievably overwritten during an update.

The ESI device description is stored locally on the slave and loaded on start-up. Each device description has a unique identifier consisting of slave name (9 characters/digits) and a revision number (4 digits). Each slave configured in the System Manager shows its identifier in the EtherCAT tab:

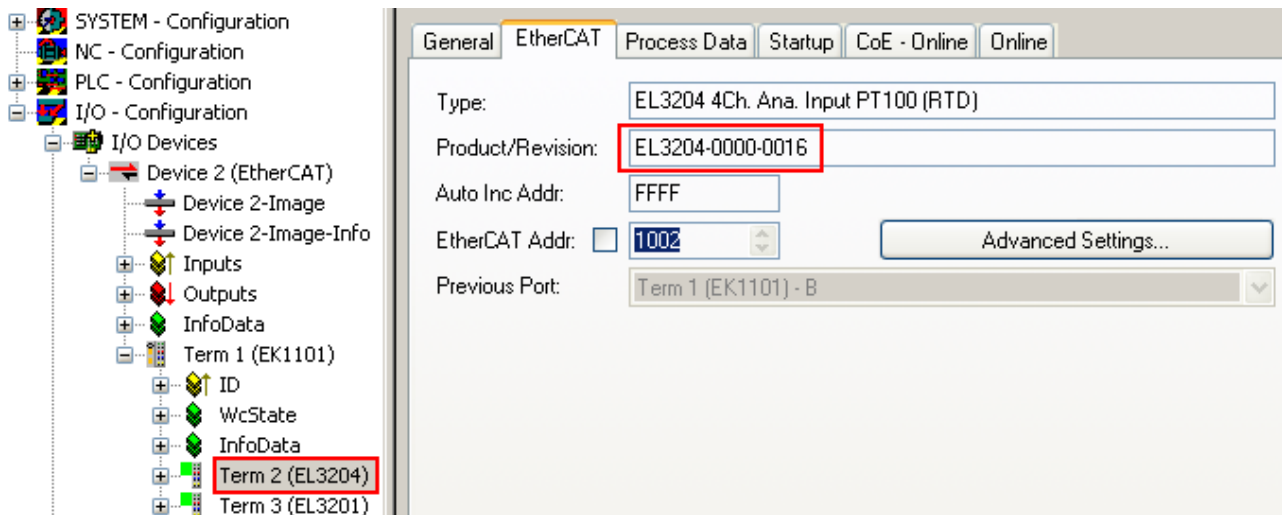



Fig. 168: Device identifier consisting of name EL3204-0000 and revision -0016

The configured identifier must be compatible with the actual device description used as hardware, i.e. the description which the slave has loaded on start-up (in this case EL3204). Normally the configured revision must be the same or lower than that actually present in the terminal network.

For further information on this, please refer to the [EtherCAT system documentation](#).

 <b>Note</b>	<p><b>Update of XML/ESI description</b></p> <p>The device revision is closely linked to the firmware and hardware used. Incompatible combinations lead to malfunctions or even final shutdown of the device. Corresponding updates should only be carried out in consultation with Beckhoff support.</p>
---	--

**Display of ESI slave identifier**

The simplest way to ascertain compliance of configured and actual device description is to scan the EtherCAT boxes in TwinCAT mode Config/FreeRun:

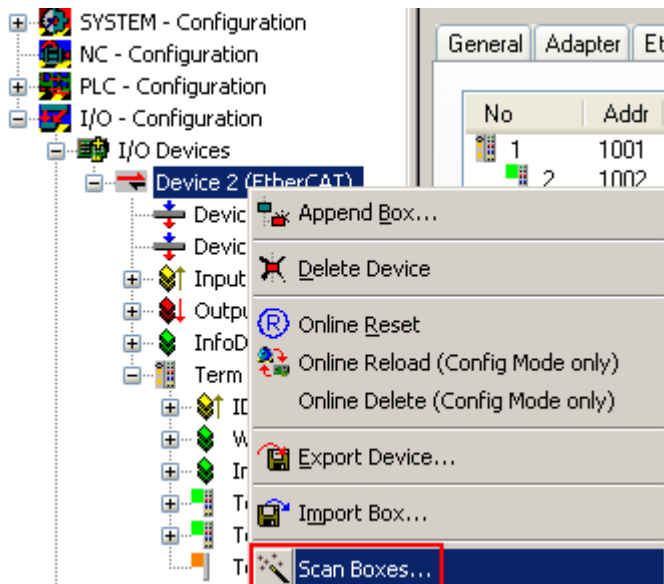


Fig. 169: Scan the subordinate field by right-clicking on the EtherCAT device

If the found field matches the configured field, the display shows



Fig. 170: Configuration is identical

otherwise a change dialog appears for entering the actual data in the configuration.

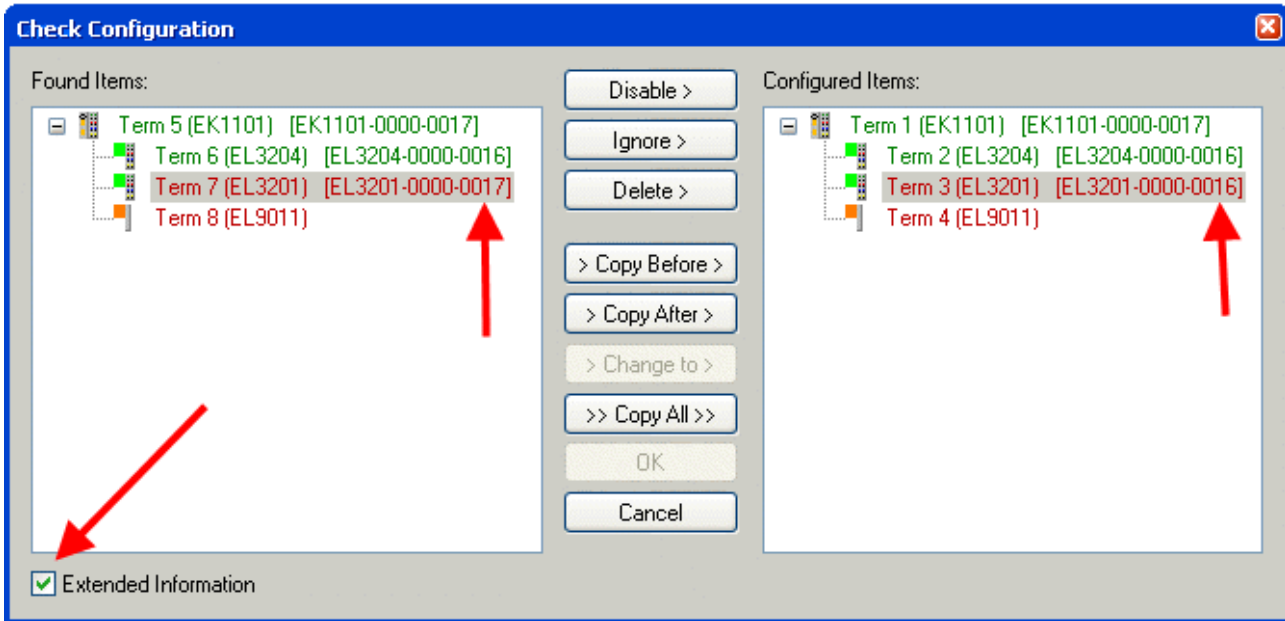


Fig. 171: Change dialog

In this example in Fig. *Change dialog*, an EL3201-0000-**0017** was found, while an EL3201-0000-**0016** was configured. In this case the configuration can be adapted with the *Copy Before* button. The *Extended Information* checkbox must be set in order to display the revision.

### Changing the ESI slave identifier

The ESI/EEPROM identifier can be updated as follows under TwinCAT:

- Trouble-free EtherCAT communication must be established with the slave.
- The state of the slave is irrelevant.
- Right-clicking on the slave in the online display opens the *EEPROM Update* dialog, Fig. *EEPROM Update*

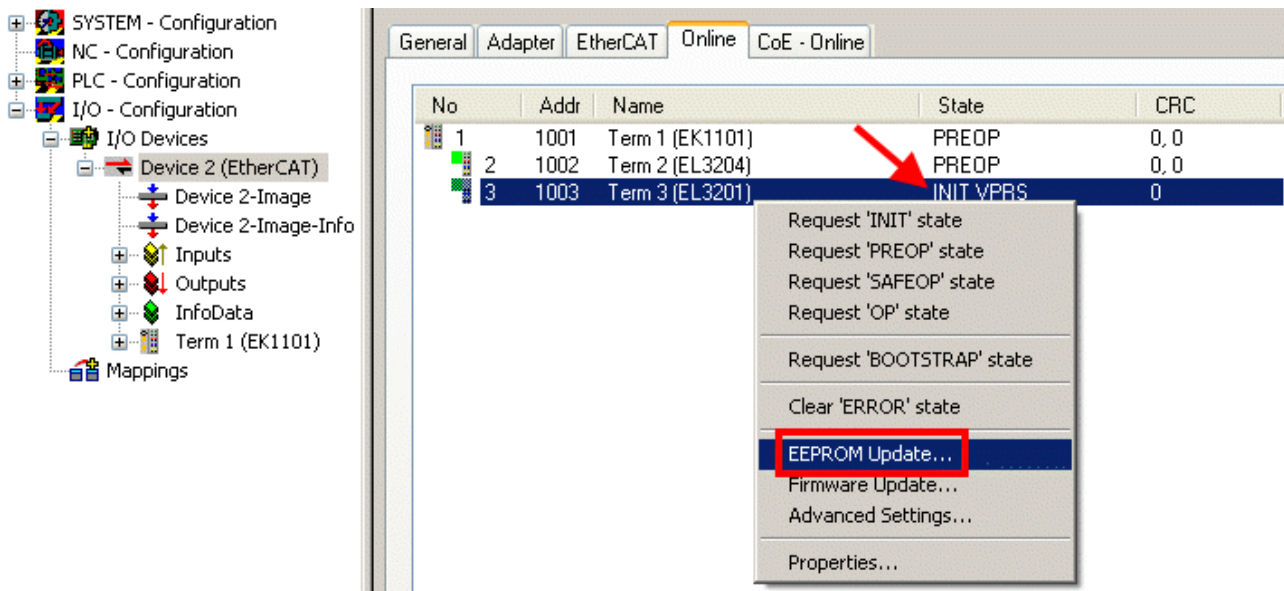


Fig. 172: EEPROM Update

The new ESI description is selected in the following dialog, see Fig. *Selecting the new ESI*. The checkbox *Show Hidden Devices* also displays older, normally hidden versions of a slave.

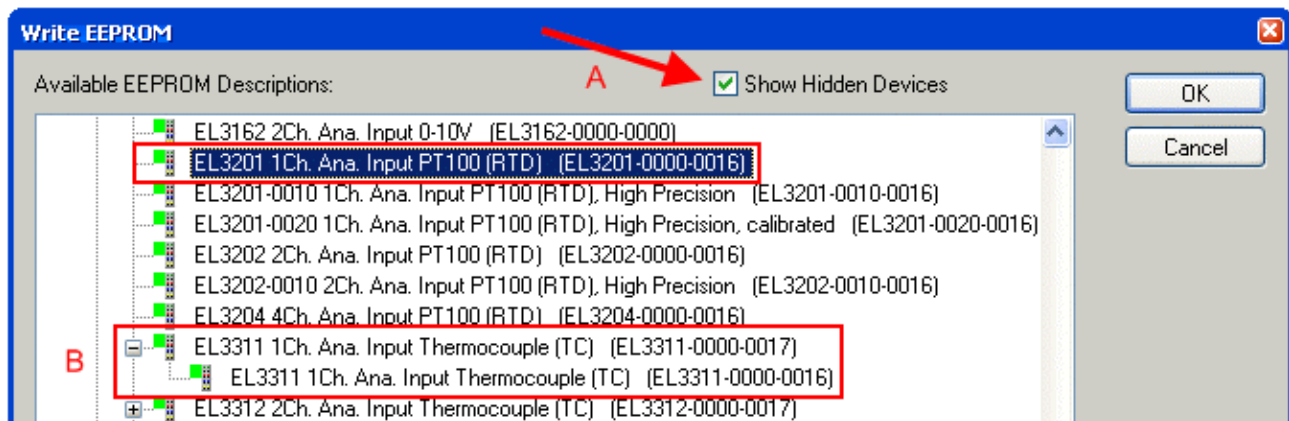



Fig. 173: Selecting the new ESI

A progress bar in the System Manager shows the progress. Data are first written, then verified.

 <b>Note</b>	<p><b>The change only takes effect after a restart.</b></p> <p>Most EtherCAT devices read a modified ESI description immediately or after startup from the INIT. Some communication settings such as distributed clocks are only read during power-on. The EtherCAT slave therefore has to be switched off briefly in order for the change to take effect.</p>
--	--

## 10.4.2 Firmware explanation

### Determining the firmware version

### Determining the version on laser inscription

Beckhoff EtherCAT slaves feature serial numbers applied by laser. The serial number has the following structure: **KK YY FF HH**


KK - week of production (CW, calendar week)  
 YY - year of production  
 FF - firmware version  
 HH - hardware version

Example with ser. no.: 12 10 03 02:

12 - week of production 12  
 10 - year of production 2010  
 03 - firmware version 03  
 02 - hardware version 02

### Determining the version via the System Manager

The TwinCAT System Manager shows the version of the controller firmware if the master can access the slave online. Click on the E-Bus Terminal whose controller firmware you want to check (in the example terminal 2 (EL3204)) and select the tab *CoE Online* (CAN over EtherCAT).

  
**Note**


#### CoE Online and Offline CoE

Two CoE directories are available:

- **online**: This is offered in the EtherCAT slave by the controller, if the EtherCAT slave supports this. This CoE directory can only be displayed if a slave is connected and operational.
- **offline**: The EtherCAT Slave Information ESI/XML may contain the default content of the CoE. This CoE directory can only be displayed if it is included in the ESI (e.g. "Beckhoff EL5xxx.xml").

The Advanced button must be used for switching between the two views.

In Fig. *Display of EL3204 firmware version* the firmware version of the selected EL3204 is shown as 03 in CoE entry 0x100A.

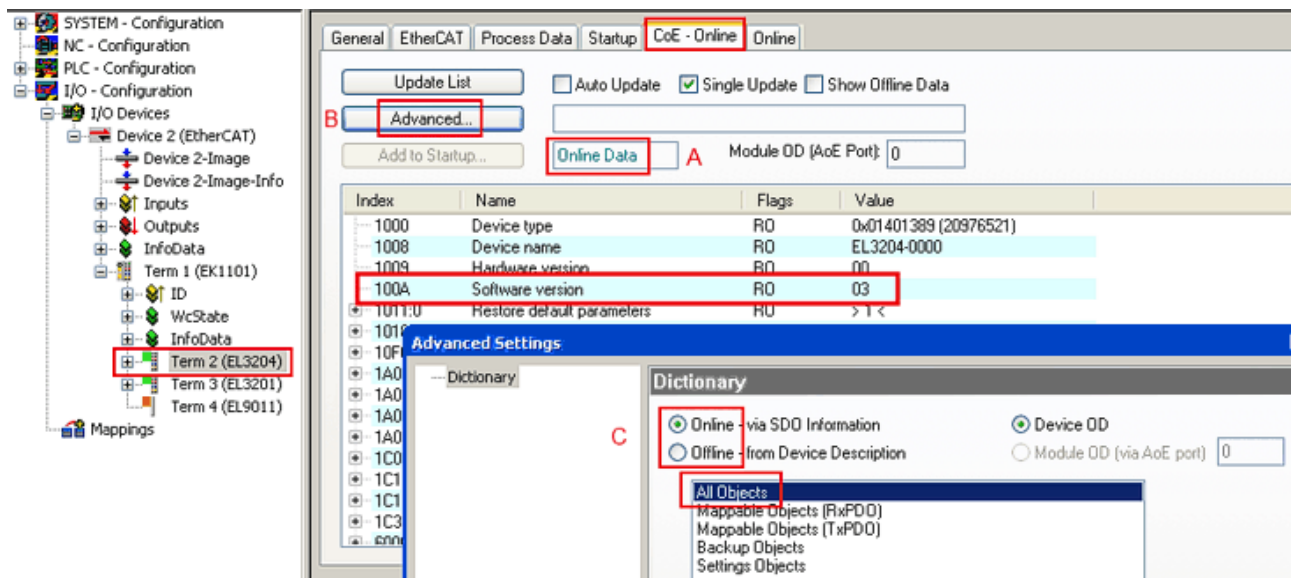


Index	Name	Flags	Value
1000	Device type	RO	0x01401389 (20976521)
1008	Device name	RO	EL3204-0000
1009	Hardware version	RO	00
100A	Software version	RO	03
1011:0	Restore default parameters	RU	> 1 <

Fig. 174: Display of EL3204 firmware version

In (A) TwinCAT 2.11 shows that the Online CoE directory is currently displayed. If this is not the case, the Online directory can be loaded via the *Online* option in Advanced Settings (B) and double-clicking on *AllObjects*.

### 10.4.3 Updating controller firmware \*.efw

  
**Note**

#### CoE directory

The Online CoE directory is managed by the controller and stored in a dedicated EEPROM, which is generally not changed during a firmware update.

Switch to the *Online* tab to update the controller firmware of a slave, see Fig. *Firmware Update*.

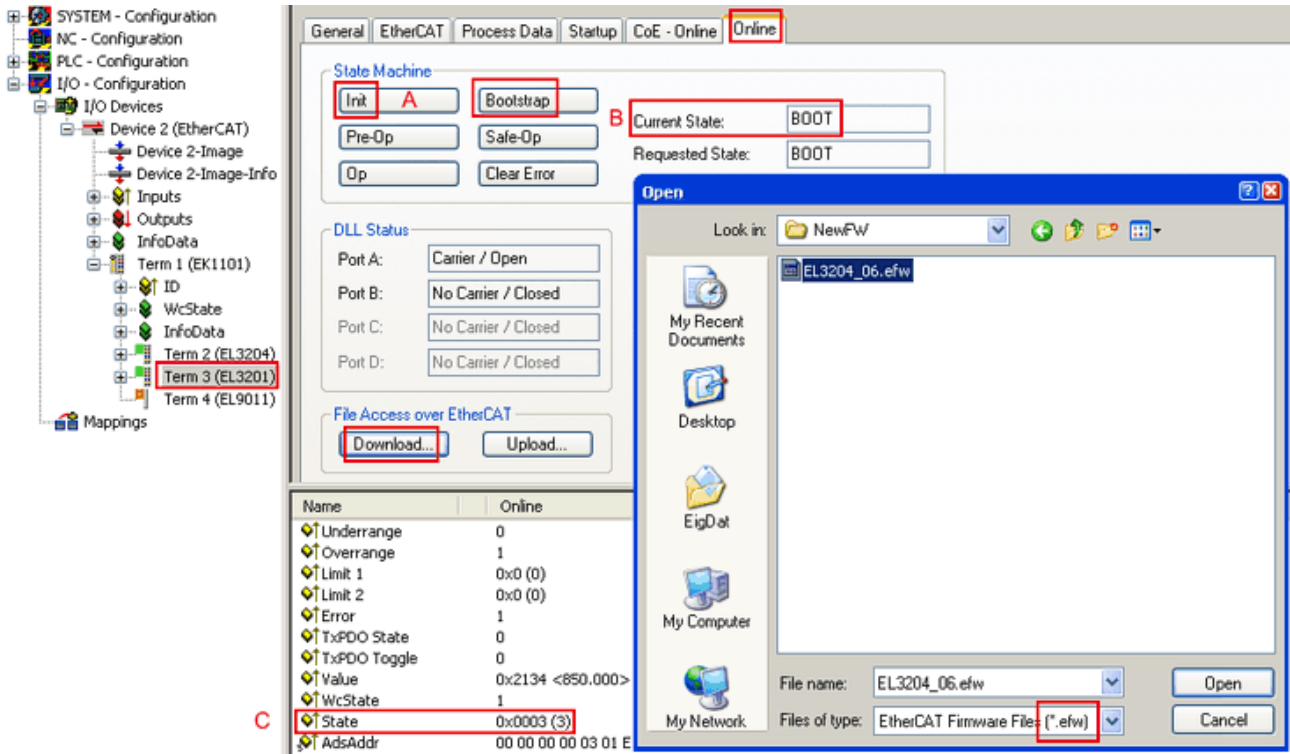



Fig. 175: Firmware Update

Proceed as follows, unless instructed otherwise by Beckhoff support. Valid for TwinCAT 2 and 3 as EtherCAT master.

- Switch TwinCAT system to ConfigMode/FreeRun with cycle time  $\geq 1$  ms (default in ConfigMode is 4 ms). A FW-Update during real time operation is not recommended.




- Switch EtherCAT Master to PreOP

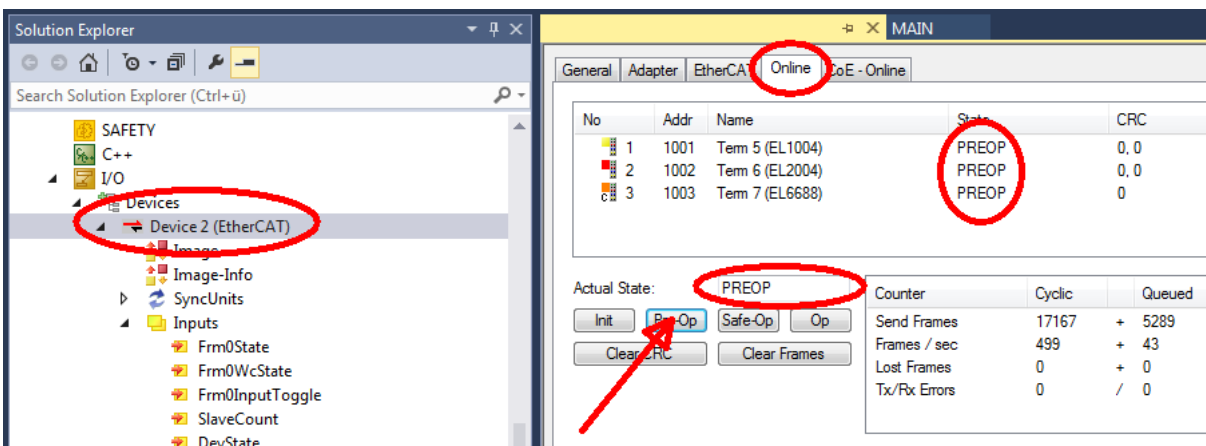

- Switch slave to INIT (A)

- Switch slave to BOOTSTRAP
- Check the current status (B, C)
- Download the new \*efw file (wait until it ends). A pass word will not be necessary usually.

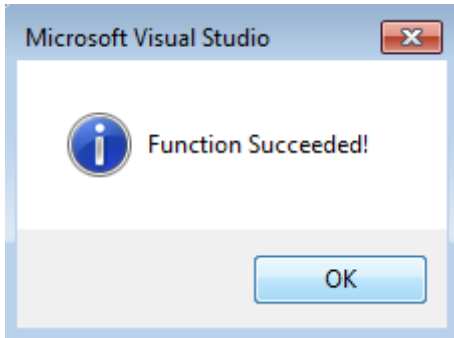

- After the download switch to INIT, then PreOP
- Switch off the slave briefly (don't pull under voltage!)
- Check within CoE 0x100A, if the FW status was correctly overtaken.

#### 10.4.4 FPGA firmware \*.rbf

If an FPGA chip deals with the EtherCAT communication an update may be accomplished via an \*.rbf file.

- Controller firmware for processing I/O signals
- FPGA firmware for EtherCAT communication (only for terminals with FPGA)

The firmware version number included in the terminal serial number contains both firmware components. If one of these firmware components is modified this version number is updated.

##### Determining the version via the System Manager

The TwinCAT System Manager indicates the FPGA firmware version. Click on the Ethernet card of your EtherCAT strand (Device 2 in the example) and select the *Online* tab.

The *Reg:0002* column indicates the firmware version of the individual EtherCAT devices in hexadecimal and decimal representation.



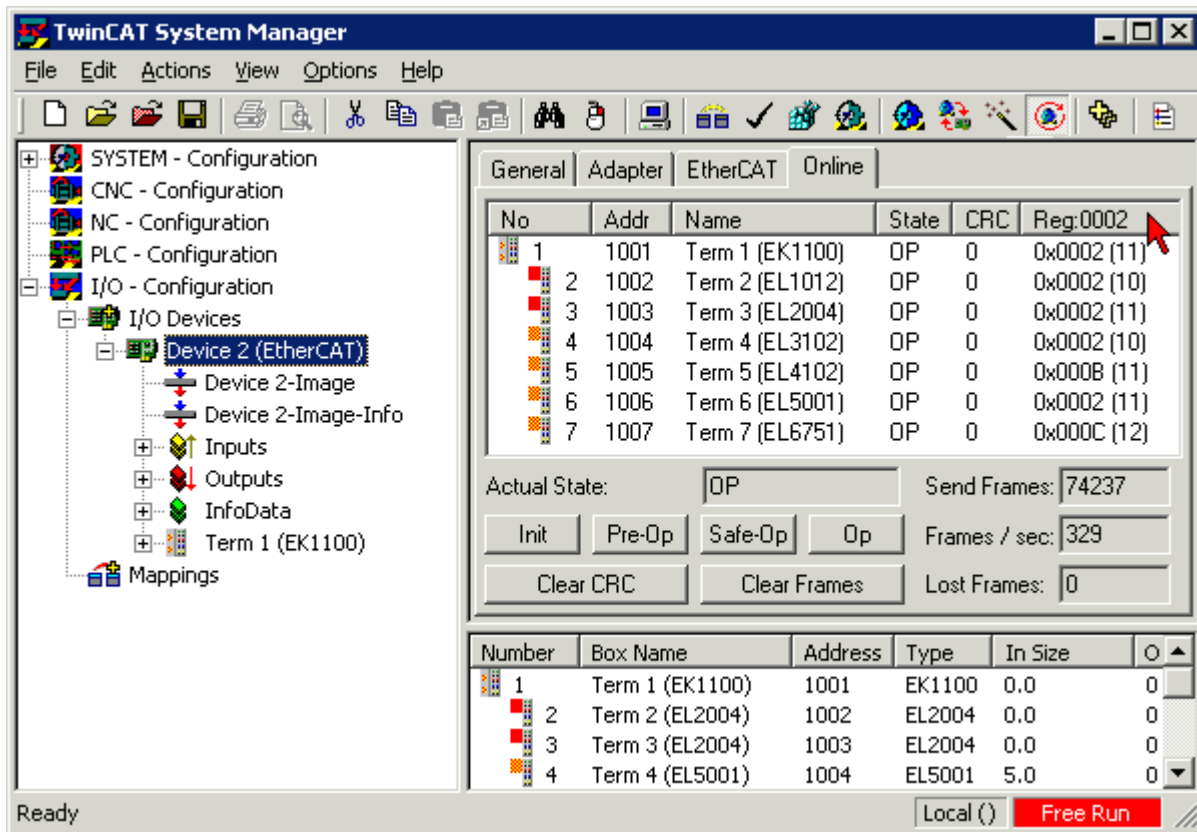


Fig. 176: FPGA firmware version definition

If the column *Reg:0002* is not displayed, right-click the table header and select *Properties* in the context menu.

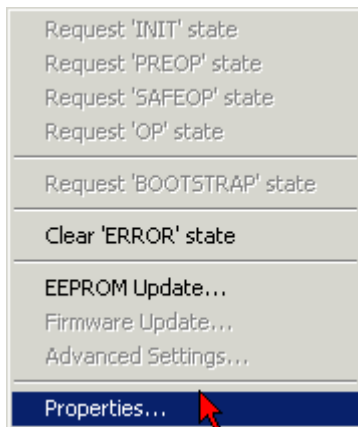


Fig. 177: Context menu *Properties*

The *Advanced Settings* dialog appears where the columns to be displayed can be selected. Under *Diagnosis/Online View* select the *'0002 ETxxxx Build'* check box in order to activate the FPGA firmware version display.

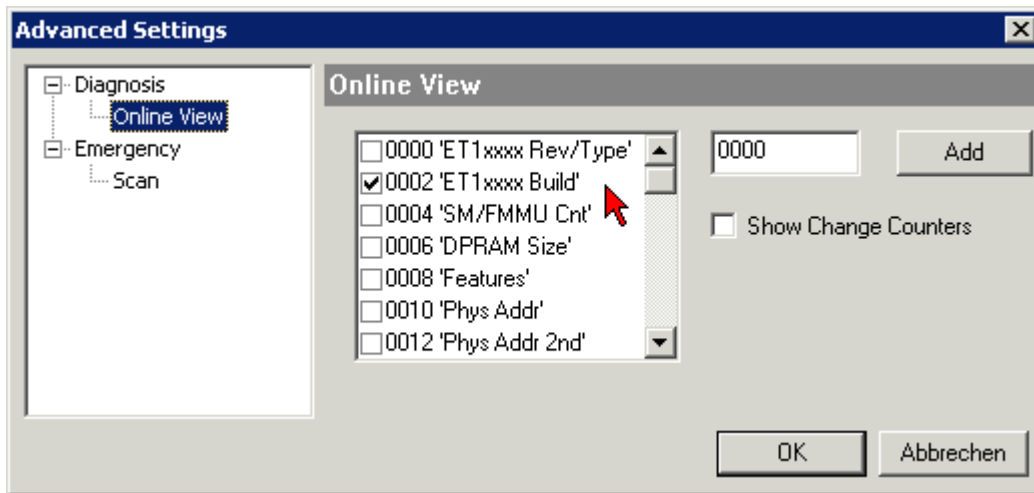


Fig. 178: Dialog *Advanced Settings*

### Update

For updating the FPGA firmware

- of an EtherCAT coupler the coupler must have FPGA firmware version 11 or higher;
- of an E-Bus Terminal the terminal must have FPGA firmware version 10 or higher.


Older firmware versions can only be updated by the manufacturer!

### Updating an EtherCAT device


The following sequence order have to be met if no other specifications are given (e.g. by the Beckhoff support):

- Switch TwinCAT system to ConfigMode/FreeRun with cycle time  $\geq 1$  ms (default in ConfigMode is 4 ms). A FW-Update during real time operation is not recommended.


- In the TwinCAT System Manager select the terminal for which the FPGA firmware is to be updated (in the example: Terminal 5: EL5001) and click the *Advanced Settings* button in the *EtherCAT* tab:

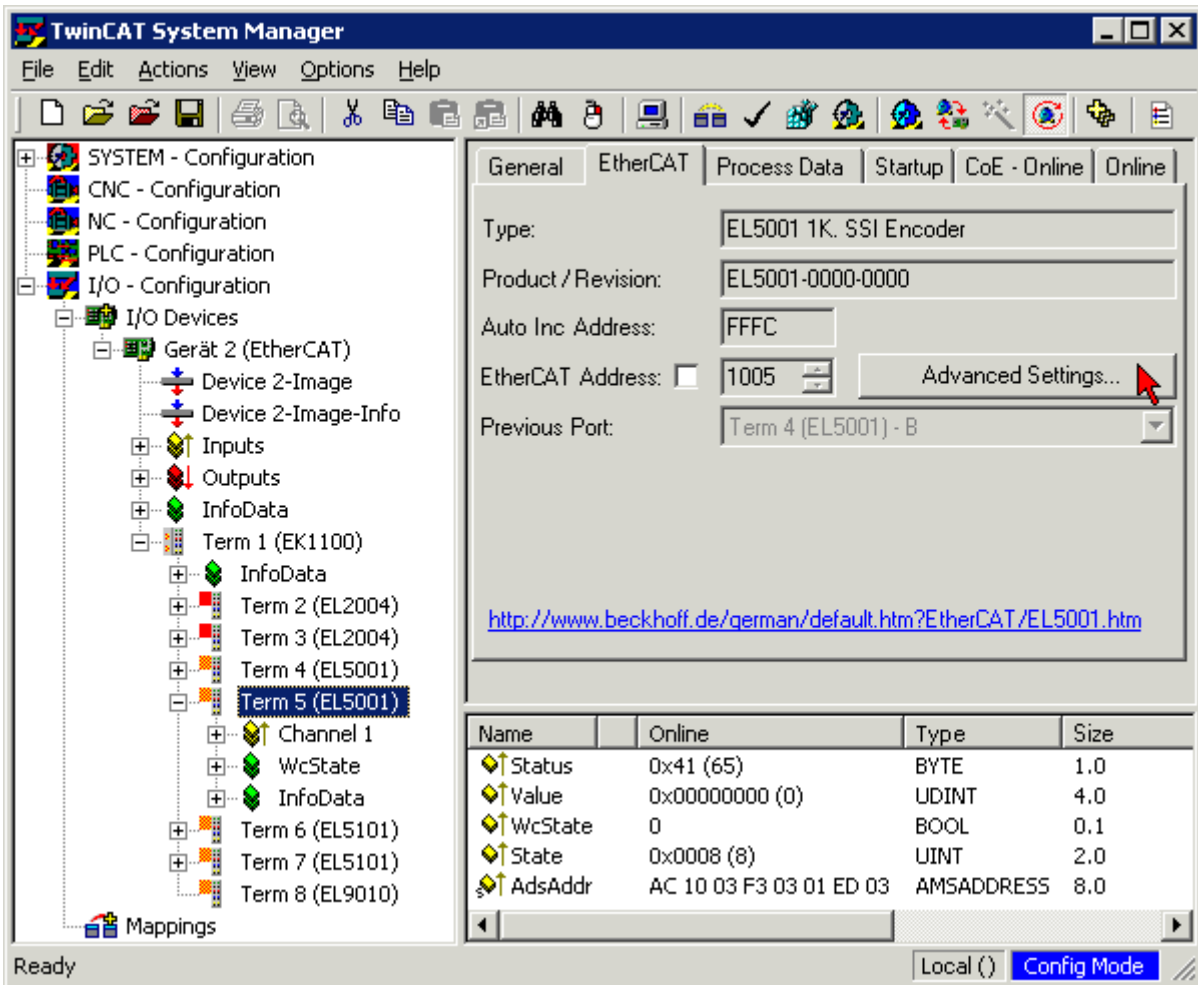

- The *Advanced Settings* dialog appears. Under *ESC Access/E<sup>2</sup>PROM/FPGA* click on *Write FPGA* button:

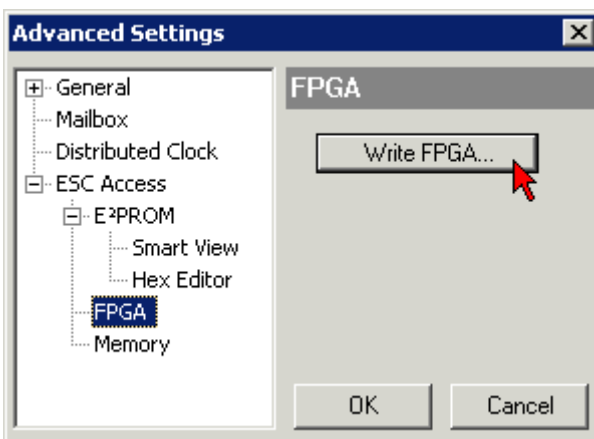

- Select the file (\*.rbf) with the new FPGA firmware, and transfer it to the EtherCAT device:

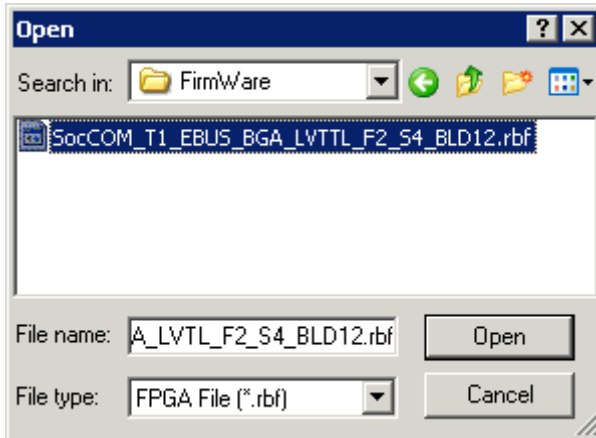

- Wait until download ends
- Switch slave current less for a short time (don't pull under voltage!). In order to activate the new FPGA firmware a restart (switching the power supply off and on again) of the EtherCAT device is required.
- Check the new FPGA status

**Attention****Risk of damage to the device!**

A download of firmware to an EtherCAT device must not be interrupted in any case! If you interrupt this process by switching off power supply or disconnecting the Ethernet link, the EtherCAT device can only be recommissioned by the manufacturer!

### 10.4.5 Simultaneous updating of several EtherCAT devices

The firmware and ESI descriptions of several devices can be updated simultaneously, provided the devices have the same firmware file/ESI.

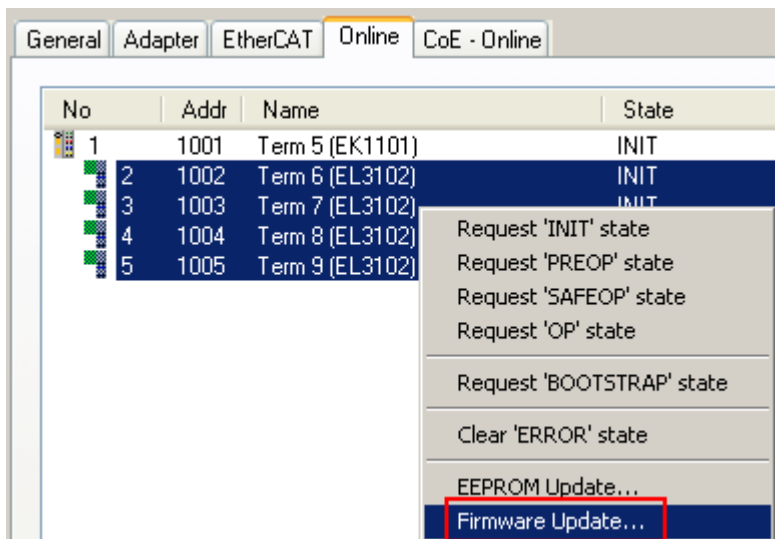


Fig. 179: Multiple selection and firmware update

Select the required slaves and carry out the firmware update in BOOTSTRAP mode as described above.

## 10.5 Restoring the delivery state

To restore the delivery state for backup objects in ELxxxx terminals, the CoE object Restore default parameters, *SubIndex 001* can be selected in the TwinCAT System Manager (Config mode) (see Fig. *Selecting the Restore default parameters PDO*)

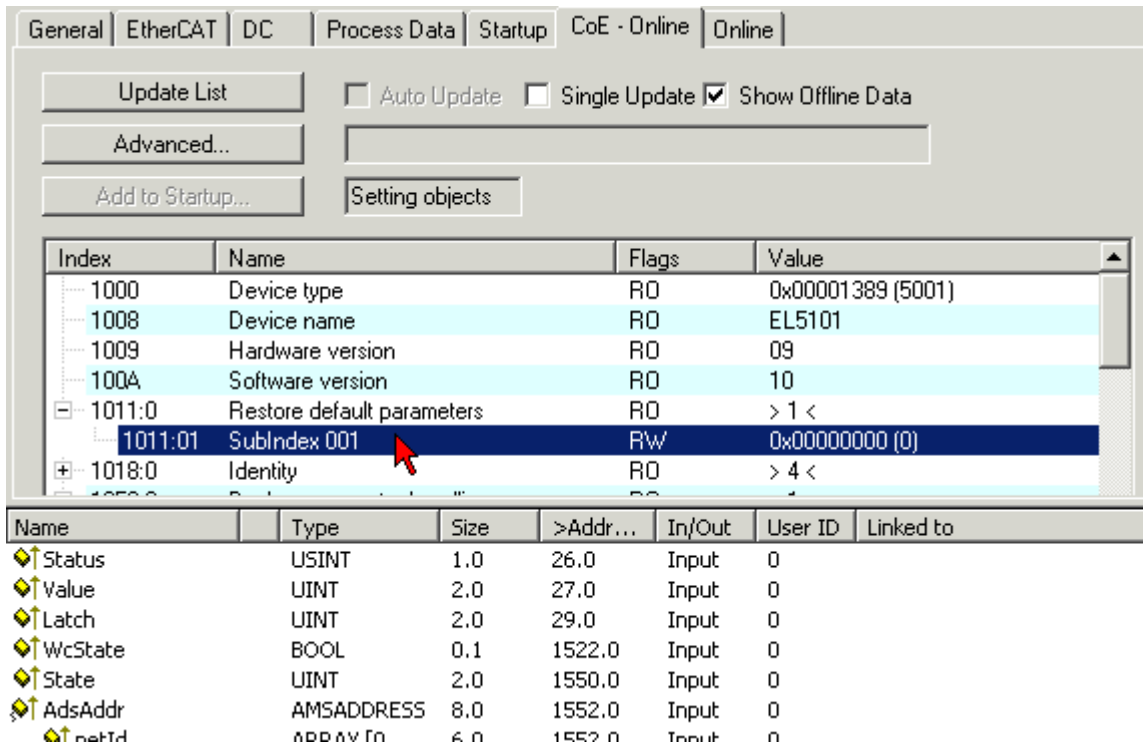


Fig. 180: Selecting the *Restore default parameters* PDO

Double-click on SubIndex 001 to enter the Set Value dialog. Enter the value **1684107116** in field *Dec* or the value **0x64616F6C** in field *Hex* and confirm with *OK* (Fig. *Entering a restore value in the Set Value dialog*). All backup objects are reset to the delivery state.

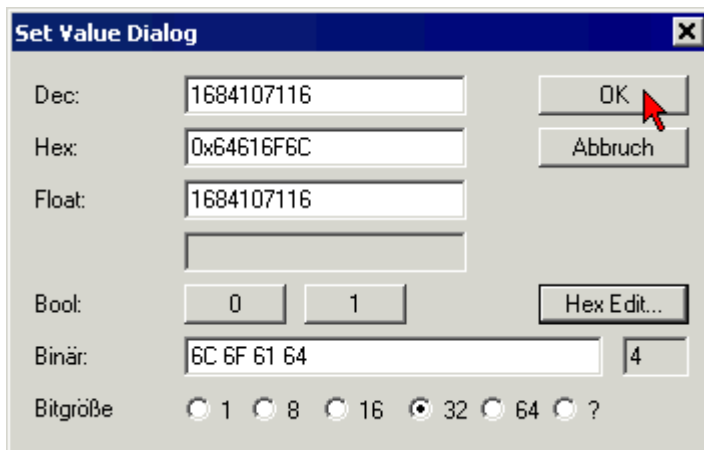


Fig. 181: Entering a restore value in the Set Value dialog



**Note**

**Alternative restore value**

In some older terminals the backup objects can be switched with an alternative restore value: Decimal value: 1819238756, Hexadecimal value: 0x6C6F6164An incorrect entry for the restore value has no effect.

## 10.6 Support and Service

Beckhoff and their partners around the world offer comprehensive support and service, making available fast and competent assistance with all questions related to Beckhoff products and system solutions.

### Beckhoff's branch offices and representatives

Please contact your Beckhoff branch office or representative for local support and service on Beckhoff products!

The addresses of Beckhoff's branch offices and representatives round the world can be found on her internet pages:

<http://www.beckhoff.com>

You will also find further documentation for Beckhoff components there.

### Beckhoff Headquarters

Beckhoff Automation GmbH & Co. KG

Huelshorstweg 20  
33415 Verl  
Germany

Phone:	+49(0)5246/963-0
Fax:	+49(0)5246/963-198
e-mail:	info@beckhoff.com

### Beckhoff Support

Support offers you comprehensive technical assistance, helping you not only with the application of individual Beckhoff products, but also with other, wide-ranging services:

- support
- design, programming and commissioning of complex automation systems
- and extensive training program for Beckhoff system components

Hotline:	+49(0)5246/963-157
Fax:	+49(0)5246/963-9157
e-mail:	support@beckhoff.com

### Beckhoff Service

The Beckhoff Service Center supports you in all matters of after-sales service:

- on-site service
- repair service
- spare parts service
- hotline service

Hotline:	+49(0)5246/963-460
Fax:	+49(0)5246/963-479
e-mail:	service@beckhoff.com

# Table of figures

Fig. 1	EL5021 EL terminal, standard IP20 IO device with serial/ batch number and revision ID (since 2014/01).....	11
Fig. 2	EK1100 EtherCAT coupler, standard IP20 IO device with serial/ batch number.....	11
Fig. 3	CU2016 switch with serial/ batch number.....	12
Fig. 4	EL3202-0020 with serial/ batch number 26131006 and unique ID-number 204418 .....	12
Fig. 5	EP1258-00001 IP67 EtherCAT Box with batch number/ date code 22090101 and unique serial number 158102.....	12
Fig. 6	EP1908-0002 IP67 EtherCAT Safety Box with batch number/ date code 071201FF and unique serial number 00346070 .....	12
Fig. 7	EL2904 IP20 safety terminal with batch number/ date code 50110302 and unique serial number 00331701.....	13
Fig. 8	ELM3604-0002 terminal with unique ID number (QR code) 100001051 and serial/ batch number 44160201.....	13
Fig. 9	EL7201 .....	14
Fig. 10	EL7211 .....	14
Fig. 11	Three synchronous motor coils, each offset by 120° .....	17
Fig. 12	Limitation to the rated motor current .....	19
Fig. 13	System manager current calculation .....	21
Fig. 14	EtherCAT tab -> Advanced Settings -> Behavior -> Watchdog .....	22
Fig. 15	States of the EtherCAT State Machine.....	24
Fig. 16	"CoE Online " tab .....	26
Fig. 17	Startup list in the TwinCAT System Manager .....	27
Fig. 18	Offline list.....	28
Fig. 19	Online list .....	29
Fig. 20	Attaching on mounting rail .....	31
Fig. 21	Disassembling of terminal.....	32
Fig. 22	Power contact on left side.....	33
Fig. 23	Standard wiring.....	35
Fig. 24	Pluggable wiring .....	35
Fig. 25	High Density Terminals.....	36
Fig. 26	Mounting a cable on a terminal connection .....	36
Fig. 27	Correct positioning.....	38
Fig. 28	Incorrect positioning.....	38
Fig. 29	Recommended distances of installation position for operating without fan .....	39
Fig. 30	Recommended distances for installation position for operation with fan .....	40
Fig. 31	Other installation positions, example 1 .....	40
Fig. 32	Other installation positions, example 2 .....	41
Fig. 33	Shield busbar.....	42
Fig. 34	Shield busbar clamp .....	43
Fig. 35	Shield connection .....	43
Fig. 36	Note .....	45
Fig. 37	EL7201-000x - LEDs .....	46
Fig. 38	EL7201-000x connection .....	47
Fig. 39	EL7211-000x - LEDs .....	48
Fig. 40	EL7211-000x connection .....	49
Fig. 41	Connection resolver and motor cable.....	50



Fig. 42	System Manager “Options” (TwinCAT 2).....	52
Fig. 43	Call up under VS Shell (TwinCAT 3) .....	52
Fig. 44	Overview of network interfaces .....	52
Fig. 45	EtherCAT device properties(TwinCAT 2): click on „Compatible Devices...“ of tab “Adapter” .....	53
Fig. 46	Windows properties of the network interface.....	53
Fig. 47	Exemplary correct driver setting for the Ethernet port .....	54
Fig. 48	Incorrect driver settings for the Ethernet port .....	55
Fig. 49	TCP/IP setting for the Ethernet port .....	56
Fig. 50	Identifier structure .....	57
Fig. 51	OnlineDescription information window (TwinCAT 2) .....	58
Fig. 52	Information window OnlineDescription (TwinCAT 3) .....	58
Fig. 53	File OnlineDescription.xml created by the System Manager .....	59
Fig. 54	Indication of an online recorded ESI of EL2521 as an example .....	59
Fig. 55	Information window for faulty ESI file (left: TwinCAT 2; right: TwinCAT 3).....	59
Fig. 56	Using the ESI Updater (>= TwinCAT 2.11).....	61
Fig. 57	Using the ESI Updater (TwinCAT 3).....	61
Fig. 58	Append EtherCAT device (left: TwinCAT 2; right: TwinCAT 3) .....	62
Fig. 59	Selecting the EtherCAT connection (TwinCAT 2.11, TwinCAT 3).....	62
Fig. 60	Selecting the Ethernet port .....	62
Fig. 61	EtherCAT device properties (TwinCAT 2) .....	63
Fig. 62	Appending EtherCAT devices (left: TwinCAT 2; right: TwinCAT 3).....	63
Fig. 63	Selection dialog for new EtherCAT device .....	64
Fig. 64	Display of device revision .....	64
Fig. 65	Display of previous revisions .....	65
Fig. 66	Name/revision of the terminal.....	65
Fig. 67	EtherCAT terminal in the TwinCAT tree (left: TwinCAT 2; right: TwinCAT 3).....	66
Fig. 68	Differentiation local/target system (left: TwinCAT 2; right: TwinCAT 3).....	67
Fig. 69	Scan Devices (left: TwinCAT 2; right: TwinCAT 3).....	67
Fig. 70	Note for automatic device scan (left: TwinCAT 2; right: TwinCAT 3).....	68
Fig. 71	Detected Ethernet devices .....	68
Fig. 72	Example default state .....	68
Fig. 73	Installing EthetCAT terminal with revision -1018 .....	69
Fig. 74	Detection of EtherCAT terminal with revision -1019.....	69
Fig. 75	Scan query after automatic creation of an EtherCAT device (left: TwinCAT 2; right: TwinCAT 3) .....	70
Fig. 76	Manual triggering of a device scan on a specified EtherCAT device (left: TwinCAT 2; right: TwinCAT 3).....	70
Fig. 77	Scan progressexemplary by TwinCAT 2 .....	70
Fig. 78	Config/FreeRun query (left: TwinCAT 2; right: TwinCAT 3).....	70
Fig. 79	Displaying of “Free Run” and “Config Mode” toggling right below in the status bar .....	70
Fig. 80	TwinCAT can also be switched to this state by using a button (left: TwinCAT 2; right: TwinCAT 3) .....	70
Fig. 81	Online display example .....	71
Fig. 82	Faulty identification .....	71
Fig. 83	Identical configuration (left: TwinCAT 2; right: TwinCAT 3).....	72
Fig. 84	Correction dialog .....	72
Fig. 85	Name/revision of the terminal.....	73

Fig. 86	Correction dialog with modifications .....	74
Fig. 87	Dialog "Change to Compatible Type..." (left: TwinCAT 2; right: TwinCAT 3).....	74
Fig. 88	TwinCAT 2 Dialog Change to Alternative Type .....	74
Fig. 89	Branch element as terminal EL3751 .....	75
Fig. 90	"General" tab.....	75
Fig. 91	„EtherCAT“ tab.....	76
Fig. 92	"Process Data" tab.....	77
Fig. 93	Configuring the process data.....	78
Fig. 94	„Startup“ tab.....	79
Fig. 95	"CoE – Online" tab .....	80
Fig. 96	Dialog "Advanced settings" .....	81
Fig. 97	„Online“ tab .....	81
Fig. 98	"DC" tab (Distributed Clocks).....	83
Fig. 99	Download revision in Start-up list .....	83
Fig. 100	Axis detected .....	85
Fig. 101	Adding a new task .....	86
Fig. 102	Adding a new axis.....	86
Fig. 103	Selecting and confirming the axis type .....	87
Fig. 104	Linking the axis with the terminal.....	87
Fig. 105	Selecting the right terminal .....	87
Fig. 106	Automatic linking of all main variables .....	88
Fig. 107	Selecting the connected voltage.....	89
Fig. 108	Selecting the connected motor .....	89
Fig. 109	List of available motors .....	90
Fig. 110	Confirmation of the automatic NC settings parameters .....	90
Fig. 111	Adapting the scaling .....	91
Fig. 112	Adapting Tn .....	92
Fig. 113	Adapting Kp .....	92
Fig. 114	Importing the motor XML file.....	93
Fig. 115	Selecting the correct motor XML file.....	94
Fig. 116	CoE parameters of the motor XML file .....	94
Fig. 117	Multi-turn / single-turn bits .....	95
Fig. 118	Resolver gain adjustment .....	95
Fig. 119	Selection of the target platform.....	97
Fig. 120	Selecting the MAC address .....	97
Fig. 121	Changing the PLC path .....	98
Fig. 122	Required libraries.....	98
Fig. 123	Global variables .....	98
Fig. 124	Local variables.....	99
Fig. 125	Program code .....	100
Fig. 126	Visualization.....	101
Fig. 127	DS402 State Machine.....	103
Fig. 128	Online homing in the NC.....	105
Fig. 129	Configuration of the MC_Home block.....	106
Fig. 130	Extraction from the functional description for MC_Home .....	106
Fig. 131	Selection of the reference modes in the NC .....	107

Fig. 132	Setting the reference velocity .....	107
Fig. 133	Definition of the unit .....	108
Fig. 134	Adjusting the reference velocity .....	109
Fig. 135	Setting the encoder mask .....	110
Fig. 136	Setting the Scaling Factor .....	110
Fig. 137	Dead time compensation parameter .....	111
Fig. 138	Output scaling .....	111
Fig. 139	Lag monitoring .....	112
Fig. 140	Enabling an axis .....	112
Fig. 141	Reversing Sequence .....	113
Fig. 142	Selection of the mode of operation .....	115
Fig. 143	Selecting a predefined PDO assignment .....	116
Fig. 144	Set enables .....	117
Fig. 145	Torque specification .....	117
Fig. 146	Selection of the mode of operation .....	118
Fig. 147	Selecting a predefined PDO assignment .....	119
Fig. 148	Set enables .....	120
Fig. 149	Torque specification .....	121
Fig. 150	Selection of the mode of operation .....	122
Fig. 151	Selecting a predefined PDO assignment .....	123
Fig. 152	Set enables .....	124
Fig. 153	Specification of torque and commutation angle .....	124
Fig. 154	Selection of the mode of operation .....	125
Fig. 155	Selecting a predefined PDO assignment .....	126
Fig. 156	Set enables .....	127
Fig. 157	Position specification .....	128
Fig. 158	Following error window .....	128
Fig. 159	Following error over time .....	129
Fig. 160	Process Data tab SM2, EL72x1 (default) .....	130
Fig. 161	Process Data tab SM3, EL72x1 (default) .....	131
Fig. 162	Process data tab Predefined PDO Assignment, EL72x1 .....	132
Fig. 163	Process Data tab SM2, EL72x1 (default) .....	133
Fig. 164	Process Data tab SM3, EL72x1 (default) .....	134
Fig. 165	Process data tab Predefined PDO Assignment, EL72x1 .....	135
Fig. 166	DiagMessages in the CoE .....	168
Fig. 167	Implementation of the DiagMessage system in the TwinCAT System Manager .....	169
Fig. 168	Device identifier consisting of name EL3204-0000 and revision -0016 .....	181
Fig. 169	Scan the subordinate field by right-clicking on the EtherCAT device .....	181
Fig. 170	Configuration is identical .....	182
Fig. 171	Change dialog .....	182
Fig. 172	EEPROM Update .....	183
Fig. 173	Selecting the new ESI .....	183
Fig. 174	Display of EL3204 firmware version .....	184
Fig. 175	Firmware Update .....	185
Fig. 176	FPGA firmware version definition .....	187
Fig. 177	Context menu Properties .....	187

---

Fig. 178 Dialog Advanced Settings .....	188
Fig. 179 Multiple selection and firmware update .....	190
Fig. 180 Selecting the Restore default parameters PDO.....	191
Fig. 181 Entering a restore value in the Set Value dialog.....	191