


ITEM 113207 CMS-RH-AYA-03VL

| Description | Technical data | Accessories | Downloads |
|-------------|----------------|-------------|-----------|
|-------------|----------------|-------------|-----------|

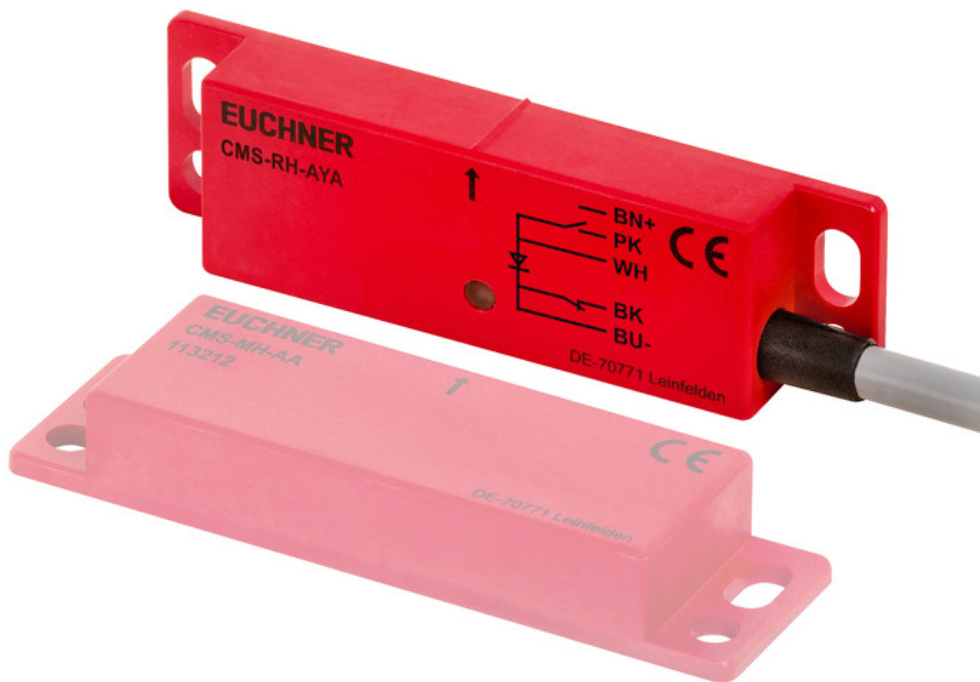


Features

- › Cube-shaped version 87.5 x 25 mm
- › Hard-wired encapsulated cable made of PVC, 3 m

Important: Actuators must be ordered separately!

Alignment of read head and actuator

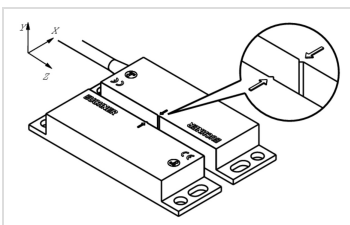

› Figure


Operating diagrams, design A

in compliance with

EN ISO 13849-1:2015; EN 50178:1997; EN 60204-1:2006/A1:2009; EN ISO 14119:2013; EN 61000-6-2:2005; EN 61000-6-3:2007/A1:2011; EN 60947-5-3:2013

[1] During mounting it is to be ensured the marking arrows on actuator and read head are opposite each other.

Dimension drawing

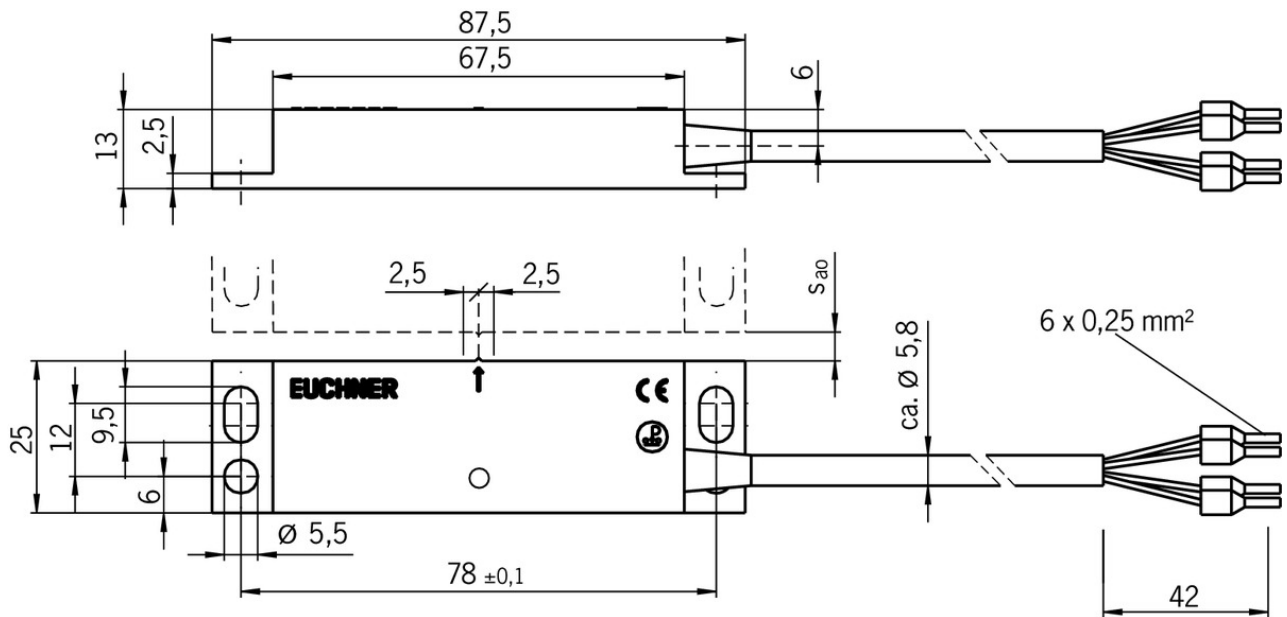

Actuator

Actuator CMS with Hall sensors - design A



113212 CMS-MH-AA






Features

- › Cube-shaped version 88 x 25 mm

Instructions




Betriebsanleitung Leseköpfe/Betätiger mit Hallsensoren für Auswertegeräte CMS

Doc. no. Version Language Download

| | | | | |
|--|---------|----------|---|---|
| Betriebsanleitung Leseköpfe/Betätiger mit Hallsensoren für Auswertegeräte CMS Operating Instructions Read Heads/Actuators with Hall Sensors for Evaluation Units CMS Manual de instrucciones de las cabezas de lectura/actuadores con sensores Hall para unidades de evaluación CMS Mode d'emploi des têtes de lecture/actionneurs avec capteurs à effet Hall pour analyseurs CMS | 2113226 | 05-06/18 |     |  0.9 MB |
|--|---------|----------|---|---|

Catalogs

Unempfindlich gegen Vibrationen – die neuen CMS-Leseköpfe

| | Doc. no. | Version | Language | Download |
|---|----------|----------|--|--|
| Unempfindlich gegen Vibrationen – die neuen CMS-Leseköpfe Insensitive to vibrations – the new CMS read heads | 115118 | 02-04/17 |   |  0.3 MB |