## **WICLOYOUIC**



Operating instructions

#### SyncBox2

Unit for synchronisation of ultrasonic sensors from the zws range

### **Description of product**

The SyncBox2 is able to synchronise up to 50 ultrasonic sensors from the zws range.

One of 4 different repetition rates can be set via one push-button and the control input.


#### Assembly

■ Connect the sync connection on the ultrasonic sensors with the sync output of the SyncBox2.

#### Synchronising sensors

■ Adjust the setting as shown in the diagram »Set repetition rate« and Fig. 1.



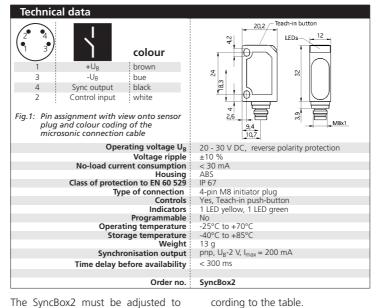

The SyncBox2 must be adjusted to the sensor range of the ultrasonic sensors connected. If sensors with different ranges are to be synchronised, the setting of the sensor with the widest range must be selected.

■ Determine the repetition rate ac-

Setting the repetition rate

- Teach-in for repetition rate range as shown in the diagram »Teach-in repetition rate«.
- Set the repetition rate via the control input.

# Teach-in repetition rate range Setting the repetition rate range Depress push-button for c. 3 s until both LEDs flash simultaneously green LED: yellow LED: on: repetition rate range off: repetition rate range To change depress the push-button for the repetition rate range for c. 1 s Wait for 10 s Normal operation

#### Maintenance

The SyncBox2 is maintenance-free.

#### Factory setting

■ Repetition rate set to 10 ms.

 $C \in$ 

2004/108/FC

set repetition rate									
	Sensor modell	Repetition rate at	Repetition rate	Voltage at the	LED green	LED yellow			
		the sync output	range	control input					
11	zws-7	2 ms	В	+Ub	on	short flashing			
11	zws-15//5ms.a	5 ms	Α	+Ub	on	on			
18	zws-15, zws-24, zws-25	10 ms	Α	GND / open	on	off			
11 11 11	zws-70	14 ms	В	GND / open	on	flashing			

microsonic GmbH / Phoenixseestraße 7 / 44263 Dortmund / Germany / T +49 231 975151-0 / F +49 231 975151-51 / E info@microsonic.de / W microsonic.de
The content of this document is subject to technical changes. Specifications in this document are presented in a descriptive way only. They do not warrant any product features.

## wictorouic



#### Operating instructions

## SvncBox2

Unit for synchronisation of ultrasonic sensors from the zws range

#### **Description of product**

The SyncBox2 is able to synchronise up to 50 ultrasonic sensors from the zws range


One of 4 different repetition rates can be set via one push-button and the control input.

#### Assembly

■ Connect the sync connection on the ultrasonic sensors with the sync output of the SyncBox2.


### Synchronising sensors

Adjust the setting as shown in the diagram »Set repetition rate« and Fig. 1.

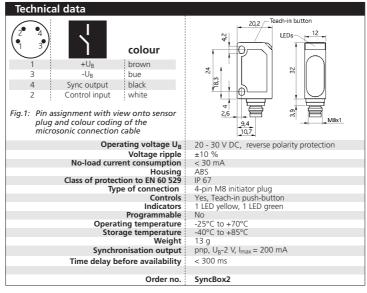

The SyncBox2 must be adjusted to the sensor range of the ultrasonic sensors connected. If sensors with different ranges are to be synchronised, the setting of the sensor with the widest range must be selected.

- Determine the repetition rate according to the table.
- Teach-in for repetition rate range as shown in the diagram »Teach-in repetition rate«.
- Set the repetition rate via the control input.

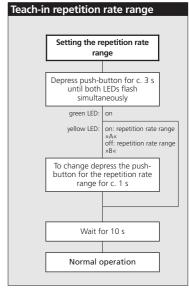

#### Factory setting

■ Repetition rate set to 10 ms.

#### Maintenance

CE

The SyncBox2 is maintenance-free.

## Setting the repetition rate

				•		2004/108/EC				
Set repetition rate										
	Sensor modell	Repetition rate at the sync output	Repetition rate range	Voltage at the control input	LED green	LED yellow				
11	zws-7	2 ms	В	+Ub	on	short flashing				
11	zws-15//5ms.a	5 ms	Α	+Ub	on	on				
11	zws-15, zws-24, zws-25	10 ms	Α	GND / open	on	off				
1000 100 100	7\A/S_7N	1/1 ms	R	GND / open	on	flashing				