









## **Model Number**

### SLC60-1200

with 2 separate fail-safe semiconductor outputs

### **Features**

- Sensing range up to 15 m
- Resolution 60 mm
- · Protective field height up to 1800 mm
- Self-monitoring (type 4 according to IEC/EN 61496-1)
- Master/Slave detection, Plug and Play
- Start/Restart disable
- Degree of protection IP67
- Integrated function display
- · Pre-fault indication
- Safety outputs OSSD in potential-separated semiconductor design or with monitored, compelled connection NC-contacts
- Optional with relay monitor (Option 129)
- Optional with ATEX certificates for zone 2 and 22 and degree of protection IP66 (Option 133)

## **Accessories**


# PG SLC-1200

Protective glass panes for SLC series


## **BA SLC**

laser alignment aid for safety light cutrtains series SLC

### **Dimensions**

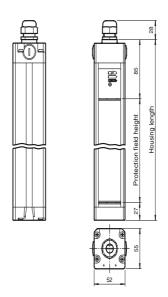

## **Electrical connection**

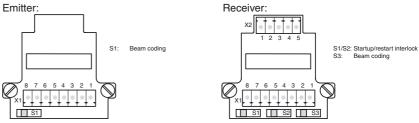

Terminal	Emitter	Receiver SLCR (semiconductor output)	Receiver SLCR/129 (Relay monitor)
X1:1	Functional earth	Functional earth	Functional earth
X1:2		Test (input)	Relay monitor
X1:3		0 V OSSD	0 V OSSD
X1:4		24 V OSSD	24 V OSSD
X1:5		OSSD2 (output)	OSSD2 (output)
X1:6		OSSD1 (output)	OSSD1 (output)
X1:7	0 V AC/DC	0 V DC	0 V DC
X1:8	24 V AC/DC	24 V DC	24 V DC
X2:1		Start release (output)	Start release (output)
X2:2		Status OSSD (output)	Status OSSD (output)
X2:3	Not placed on board	n.c.	n.c.
X2:4		n.c.	n.c.
x2:5		Startup readiness (input)	Startup readiness (input)

www.pepperl-fuchs.com

PEPPERL+FUCHS
SENSING YOUR NEEDS

117606\_eng.xml


Date of issue: 2017-12-11


UL approval CCC approval


TÜV approval

ΤÜV

CCC approval / marking not required for products rated  $\leq$ 36 V

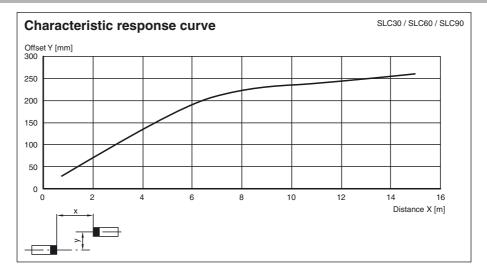

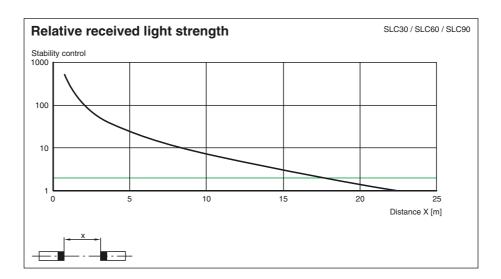

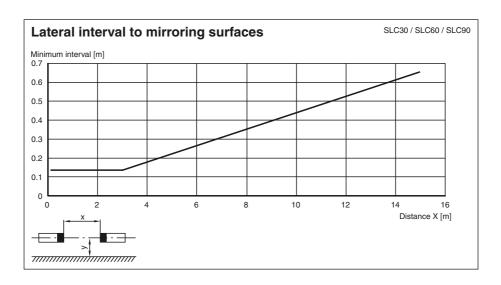

## **Notes**

#### Master slave mode

FEPPERL+FUCHS

or

SLC ..-../31 (relay)

Slave: SLC..-...-S

Using slaves makes it possible to lengthen protective fields or to form protective fields that lie in more than just one level. When you select slaves that can be connected, you should take into consideration that the maximum number of 96 light rays must not be exceeded.

There are slaves for transmitters and receivers. These may simply be connected to the master light curtain. As many as 2 slaves may be connected respectively to the transmitter and receiver unit.

#### Installation:

- 1 The end cap should be screwed off for the light curtain (without cable gland).
- 2 The plug-in jumper on the connectors of the printed circuit board, which is now visible, should be removed.
- 3 The slave is designed so that the cap located on the cable connector can be plugged directly onto the open end of the light curtain with the printed circuit board.
- 4 After you have screwed on the connection cap, the system is complete.

## System accessories

- Mounting set SLC
- Test rods SLC14/SLC30/SLC60
- Protective glass pieces for SLC (to protect the optically functional surface)
- · Lateral screwed connection SLC
- · Profile alignment aid
- Laser alignment aid SLC
- Mirror for SLC (for securing hazardous areas on multiple sides)
- Ground pillar UC SLP/SLC
- Housing for pillar Enclosure UC SLP/SLC
- Collision protector Damping UC SLP/SLC