35












## **Dimensions**

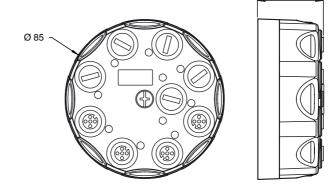

# **Model number**

### VBA-4E-G11-I-F

G11 analog module 4 analog current inputs

### **Features**

- Addressing jack
- Function display for bus, internal and external sensor power supply, inputs
- Supply for inputs from AS-Interface or auxiliary voltage
- Degree of protection IP68 / IP69K
- Accuracy ± 0.1 %
- Integrated shielding
- Channel-specific input monitoring

#### **Function**

The VBA-4E-G11-I-F analog module has four analog current inputs with a range of 0 mA ... 20 mA or 4 mA ... 20 mA.


The power supply to the measurement value generators takes place depending on the position of the internal slide switch, via AS-Interface or through auxiliary voltage. The choice of input supply is displayed via the INT/EXT LED.

Measured value conversion and data transfer is provided asynchronously according to the AS-Interface profile 7.3. The resolution of the analog values is 1 µA with a value range of 0 to 20000 or 4000 to 20000. Network interference can be eliminated with a configurable filter (50 Hz/60 Hz) in the A/D converter.


## Note:

An overload of the internal input supply is also reported to the AS-Interface master via the 'peripheral fault' function. Communication via the AS-Interface continues.

# **Electrical connection**

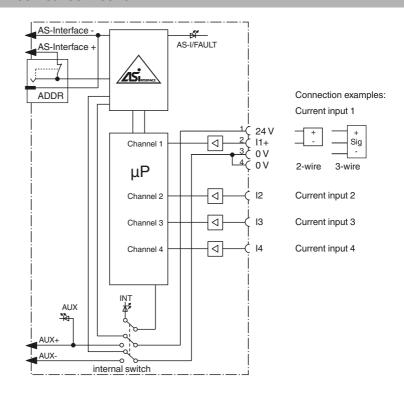

# **Indicating / Operating means**

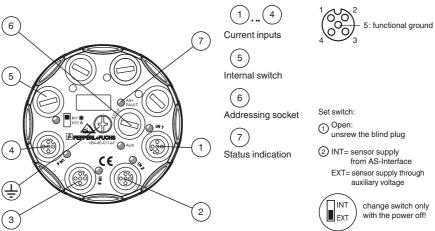



change switch only

**Technical data** 

General specifications		
Slave type		Standard slave
AS-Interface specification		V3.0
Required master specification		≥ V2.1
UL File Number		E223772
Functional safety related parame	eters	
MTTF <sub>d</sub>		180 a
Mission Time (T <sub>M</sub> )		20 a
Diagnostic Coverage (DC)		0 %
Indicators/operating means		
LED AS-i/FAULT		Status display; multi-colour LED Green: normal operation Red: communication fault Flashing yellow/red: address 0 Flashing green/red: peripheral fault
LED ANALOG		status of input signal; LED yellow off: not active on: signal within measurement range flashing: signal outside of measurement range
LED AUX		ext. auxiliary voltage U <sub>AUX</sub> ; dual LED green/red green: voltage OK red: reverse voltage
LED INT/EXT		status display input supply; LED green green: input supply from AS-Interface off: input supply from auxiliary voltage
Electrical specifications		
Auxiliary voltage (output)	$U_{AUX}$	20 30 V DC PELV
Rated operating voltage	U <sub>e</sub>	26.5 31.6 V from AS-Interface
Rated operating current	l <sub>e</sub>	≤ 60 mA (without sensors) / max. 200 mA
Protection class		III
Surge protection		$U_{AUX}, U_{in} \\ :$ Over voltage category III, safe isolated power supplied (PELV)
Input		
Number/Type		4 Inputs 0/4 20 mA
Supply		from AS-Interface (switch position INT, default settings) or auxil ary voltage $U_{\rm EXT}$ (switch position EXT)
Current loading capacity		$\leq$ 140 mA from AS-Interface; overload and short-circuit resistan $\leq$ 600 mA from external auxiliary voltage $U_{AUX}$ , overload and short-circuit protected
Input resistance		≤ 70 Ω
Accuracy		0.1 % of full-scale value
Resolution		16 Bit
Temperature influence		0.0025 %/K of input signal range
Directive conformity		
Electromagnetic compatibility		
Directive 2014/30/EU		EN 62026-2:2013
Standard conformity		
Degree of protection		EN 60529:2000
Fieldbus standard		EN 62026-2:2013
Input		EN 61131-2:2007
Emitted interference		EN 61000-6-4:2007
AS-Interface		EN 62026-2:2013
Noise immunity		EN 61000-6-2:2005, EN 61326-1:2006, EN 62026-2:2013
Programming instructions		
Profile		S-7.3.E
IO code		7
ID code		3
ID1 code		F
ID2 code		E
Data bits (function via AS-Interfac	ce)	The transfer of the data value is based on AS-Interface Profile $7.3.$
Bonnes and the state of the sta	- 40 "	formation.

## **Accessories**

## VAZ-V1-B3

Blind plug for M12 sockets

# V1-G-42-0,3M-PUR-ABG-V1-W-Y

Connecting cable, M12 to M12, PUR cable, 4-pin, bridged, shielded

## VBP-HH1-V3.0-KIT

AS-Interface Handheld with accessory

### VAZ-PK-1,5M-V1-G

Adapter cable module/hand-held programming device

### VAZ-FK-S-BK-SEAL

AS-Interface flat cable seal

FPEPPERL+FUCHS

Parameter bits (programmable via AS-i) function

50/60 Hz filter

P0=1, enabled P0=0, disabled

(if > 1 mA)

Message of peripheral error P2=1, peripheral error is reported P2=0, peripheral error is not reported

-25 ... 70 °C (-13 ... 158 °F) -25 ... 85 °C (-13 ... 185 °F)

85 %, noncondensing

P3=1, wire break detection active, automatic channel detection

P3=0, wire break detection deactivated, all 4 channels active

P0

P1 P2

Р3

**Ambient conditions** Ambient temperature

Storage temperature Relative humidity

Climatic conditions	For indoor use only
Altitude	≤ 2000 m above MSL
Pollution degree	3
Mechanical specifications	
Degree of protection	IP68 / IP69K
Connection	AS-Interface/U <sub>AUX</sub> : cable piercing method, flat cable yellow/flat cable black Inputs: M12 round connector
Material	
Housing	PBT PC
Mounting screw	Stainless steel 1.4305 / AISI 303
Mass	200 g
Tightening torque, housing screws	1.8 Nm
Tightening torque, cable gland	0.4 Nm
Mounting	Mounting plate

## **Notes**


Do not connect inputs and outputs, which are supplied via the module from AS-interface or via auxiliary power, with power supply and signal circuits with external potentials.

#### Connecting instruction

Use shielded cable to connect the sensors.

#### **Mounting instructions**

Screw the device onto a level mounting surface using two M4 attachment screws. The functional earth of the M12 round connectors is connected with the metal insert in the base via the tightened central screw. Make sure that the metal insert is connected to protective earth via the mounting screws. The mounting screws are not included.

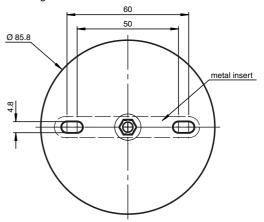

Screw a blind plug onto spare connections to ensure the protection category.

#### **Channel activation**

When delivered, all input channels are disabled, the wire break detection and automatic channel detection are active. An input channel is activated when an input signal 1 mA ... 23 mA is applied. An activated input channel remains active after a restart.

If the wire break detection is disabled, all four input channels are active.