



Model Number

PMI14V-F166-U

Features

- Analog output 0 ... 10 V
- Measuring range 0 ... 14 mm
- Scaleable measurement range programmable via cable

Technical data

General specifications

Switching element function	Analog voltage output
Object distance	0.5 ... 2 mm
Measurement range	0 ... 14 mm

Nominal ratings

Operating voltage U_B	18 ... 30 V DC
Reverse polarity protection	reverse polarity protected
Linearity error	± 0.3 mm
Repeat accuracy R	± 0.05 mm
Resolution	33 μ m
Temperature drift	± 0.3 mm (With a target distance of 0.5 mm)
No-load supply current I_0	≤ 20 mA

Functional safety related parameters

MTTF _d	830 a
Mission Time (T _M)	20 a
Diagnostic Coverage (DC)	0 %

Analog output

Output type	1 voltage output: 0 ... 10 V
Load resistor	$\geq 1000 \Omega$
Short-circuit protection	current limit

Ambient conditions

Ambient temperature	-10 ... 70 °C (14 ... 158 °F)
Storage temperature	-20 ... 70 °C (-4 ... 158 °F)

Mechanical specifications

Connection type	5 x 0.14 mm ² , screened 2 m PUR cable
Degree of protection	IP65
Material	
Housing	Zinc die-casting, nickel-plated cover, PBT
Target	mild steel, e. g. 1.0037, SR235JR (formerly St37-2)
Mass	95 g


Compliance with standards and directives

Standard conformity	
Standards	EN 60947-5-2:2007 IEC 60947-5-2:2007 EN 60947-5-7:2003


Approvals and certificates

UL approval	cULus Listed, Class 2 Power Source, Type 1 enclosure
-------------	--

Dimensions

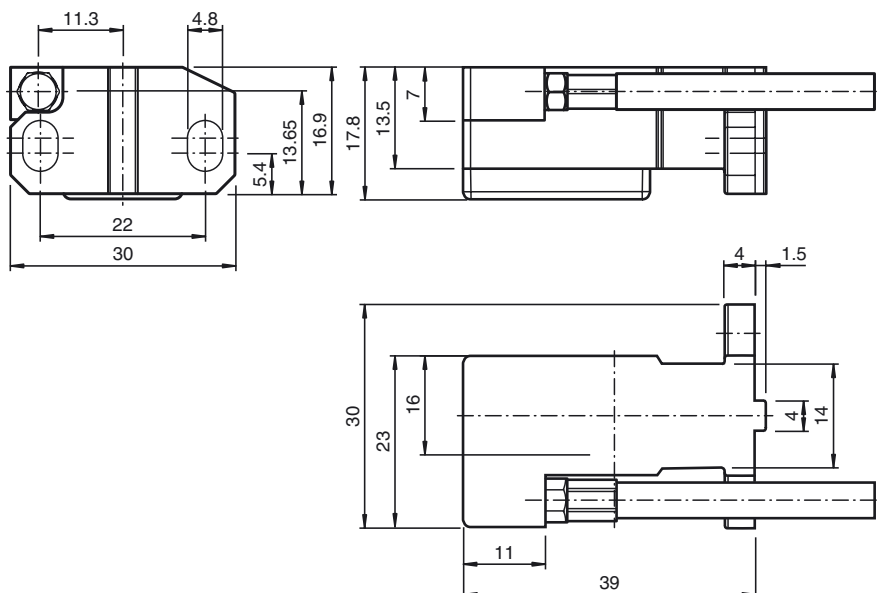


Electrical Connection

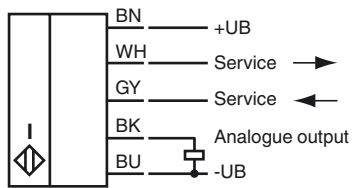

Additional Information

dimensions for the target object:

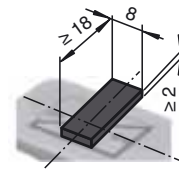

Accessories

BT-F90-W

Damping element for sensors of type F90, F112, and F166; side hole

BT-F90-G

Damping element for sensors of type F90, F112, and F166; front hole

PMI14V-Teach

Programming unit

Information on Operation

Safety Information



Warnung

This product must not be used in applications in which the safety of persons depends on the function of the device.

This product is not a safety component as specified in the EU Machinery Directive.

Actuator

The linear position measurement system is optimally aligned to the geometry of Pepperl+Fuchs actuators.

Using Your Own Actuators

Generally speaking, it is possible for you to use your own actuators. The specified measurement accuracy of the sensor will be achieved only if the actuator has the following properties:

- Material: construction steel such as S235JR+AR (previously St37)
- Dimensions (L x W x H): $\geq 18 \text{ mm} \times 8 \text{ mm} \times \geq 2 \text{ mm}$
- The active surface of the actuator must protrude across the entire sensor width.

Note:

The width of the actuator must be precisely 8 mm. If the width of the actuator deviates from this value, the position values will differ.

Programming the 2 Scaling Positions

You can teach 2 scaling positions using the PMI14V-Teach programming unit. The programming unit is connected directly between the sensor and the power supply. The teach-in process is generally only possible in the first 6 minutes of the sensor being switched on. After that point, programming is blocked and is only possible again once the power supply has been interrupted.

The sensor linearizes the voltage path characteristic curve between the 2 taught scaling positions. The first scaling position is always taught as 0 V and the second scaling position as 10 V. If the measurement flag leaves the measuring range of the sensor, the sensor always emits 10 V. Each taught scaling position is based on half of the width (center) of the damping element. During the teach-in, the sensor always emits the default values: 0 V for 0 mm and 10 V for 14 mm.

Teach-in Process

Switching the Sensor to Programming Mode

1. Connect the programming unit between the sensor and the power supply.
 2. Press and hold the key on the programming unit for approx. 1.5 seconds.
- >> The LED S2 on the programming unit flashes (2 Hz).

Scaling Position 1

Prerequisite: LED S2 is flashing.

1. Position the damping element in the required first teach-in position.
2. Press the button again.

>> The sensor teaches in scaling position 1. If the teach-in process was successful, LED S2 lights up for approx. 2 seconds and flashes for teach-in of scaling position 2.

Scaling Position 2

Prerequisite: LED S2 is flashing.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0001
fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411
fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
fa-info@sg.pepperl-fuchs.com

1. Position the damping element in the required second teach-in position.
2. Press the button again.

>> The sensor teaches in scaling position 2. If the teach-in process was successful, LED S2 lights up for approx. 2 seconds. The sensor then returns to its normal operating state.

Reset to Default Settings

1. Press and hold the button for approx. 6.5 seconds.
- >> The sensor is reset to its default settings. The programming unit confirms this by flashing quickly (8 Hz).

Faults during Teach-in

If a teach-in process fails for any reason, LED S2 flashes quickly (16 Hz) for approx. 1.5 seconds. The cause for this may be that the teach-in attempt was conducted outside the measuring range.

The teach-in process is canceled when the power supply is interrupted or if no button is pressed for 410 seconds.

In both cases, the existing positions remain saved.