Features

- 1-channel signal conditioner
- 24 V DC supply (Power Rail)
- Current and voltage input
- 2 relay contact outputs
- Programmable high/low alarm
- Configurable via DIP switches and potentiometer
- Terminal blocks with test sockets

Function

This signal conditioner provides the galvanic isolation beetween field circuits and control circuits.
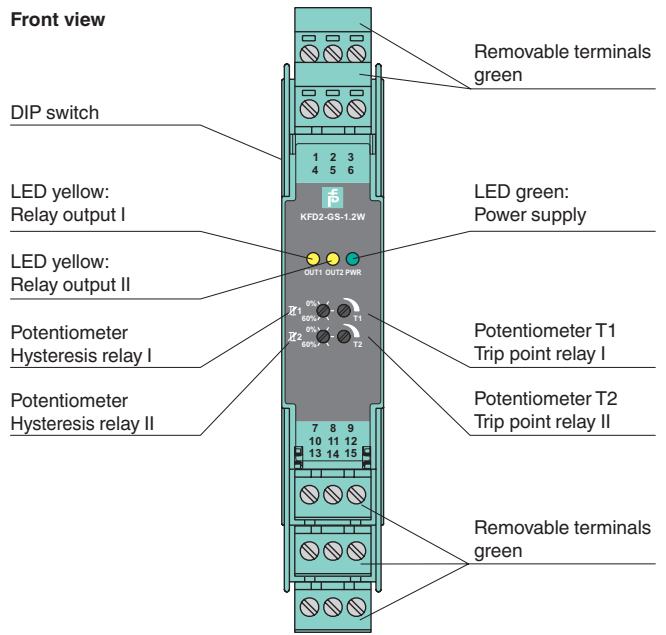
The device is a trip amplifier with two trip points. Trip points, hysteresis and mode of operation can be set independently for both relay outputs.

0/4 mA ... 20 mA-, 0/1 V ... 5 V- or 0/2 V ... 10 V signals can be connected at the input.
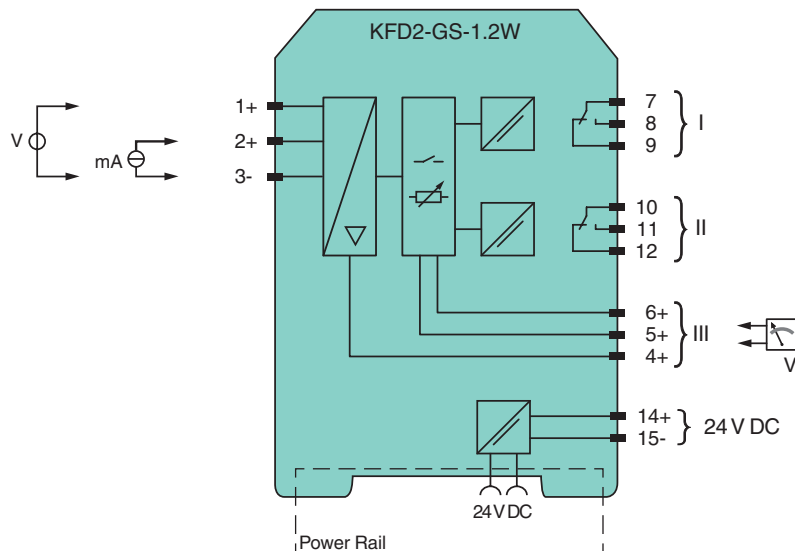
The device actuates the relay output when it reaches the adjusted trip points.

The device is easily configured by the use of DIP switches and potentiometers.

Assembly

Front view

- Removable terminals green
- DIP switch
- LED yellow: Relay output I
- LED yellow: Relay output II
- Potentiometer Hysteresis relay I
- Potentiometer Hysteresis relay II
- LED green: Power supply
- Potentiometer T1 Trip point relay I
- Potentiometer T2 Trip point relay II
- Removable terminals green

CE

Connection

KFD2-GS-1.2W

- 1+
- 2+
- 3-
- V
- mA
- 7 8 9 } I
- 10 11 12 } II
- 6+ 5+ 4+ } III
- V
- 14+ 15- } 24 V DC
- 24 V DC
- Power Rail

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

PEPPERL+FUCHS
PROTECTING YOUR PROCESS

General specifications		
Signal type		Analog input
Supply		
Connection		Power Rail or terminals 14+, 15-
Rated voltage	U_r	20 ... 30 V DC
Rated current	I_r	< 50 mA
Power consumption		< 1.5 W
Input		
Connection side		field side
Measurement range		terminals 1+, 3-: voltage 0/1 ... 5 V, load ≥ 50 kΩ or voltage 0/2 ... 10 V, load ≥ 100 kΩ
		terminals 2+, 3-: current 0/4 ... 20 mA ; load ≤ 50 Ω
Output		
Connection side		control side
Output I, II		terminals 7, 8, 9; 10, 11, 12
Contact loading		250 V AC / 4 A / cos φ > 0.7; 40 V DC / 2 A resistive load
Output III		device configuration : terminals 4, 5, 6
Transfer characteristics		
Deviation		≤ 1 %
Influence of ambient temperature		0.01 % / K of adjusted trip value
Input delay		200 ms
Galvanic isolation		
Input/Output		reinforced insulation according to IEC/EN 61010-1, rated insulation voltage 300 V_{eff}
Input/power supply		reinforced insulation according to IEC/EN 61010-1, rated insulation voltage 300 V_{eff}
Output/power supply		reinforced insulation according to IEC/EN 61010-1, rated insulation voltage 300 V_{eff}
Indicators/settings		
Display elements		LEDs
Control elements		DIP-switch
		potentiometer
Configuration		via DIP switches
		via potentiometer
Labeling		space for labeling at the front
Directive conformity		
Electromagnetic compatibility		
Directive 2014/30/EU		EN 61326-1:2013 (industrial locations)
Low voltage		
Directive 2014/35/EU		EN 61010-1:2010
Conformity		
Degree of protection		IEC 60529
Protection against electrical shock		EN 61010-1:2010
Ambient conditions		
Ambient temperature		-20 ... 60 °C (-4 ... 140 °F)
Mechanical specifications		
Degree of protection		IP20
Connection		screw terminals
Mass		approx. 120 g
Dimensions		20 x 124 x 115 mm (0.8 x 4.9 x 4.5 inch) , housing type B2
Mounting		on 35 mm DIN mounting rail acc. to EN 60715:2001
General information		
Supplementary information		Observe the certificates, declarations of conformity, instruction manuals, and manuals where applicable. For information see www.pepperl-fuchs.com.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
www.pepperl-fuchs.com

USA: +1 330 486 0002
pa-info@us.pepperl-fuchs.com

Germany: +49 621 776 2222
pa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091
pa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS
PROTECTING YOUR PROCESS

2

Function

Internal signal voltage

The device converts the input signals at terminals 1, 2, and 3 into a proportional internal voltage U_{int} between 0 V and 10 V. This conversion allows reaction-free verification of the input signal. The voltage is output at terminals 4+ and 3-.

Internal voltage U_{int}

10 V		
5 V		
0 V		

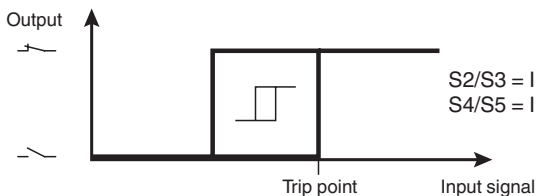| 0 mA	10 mA	20 mA	Input signal
0 V	5 V	10 V	
0 V	2.5 V	5 V	
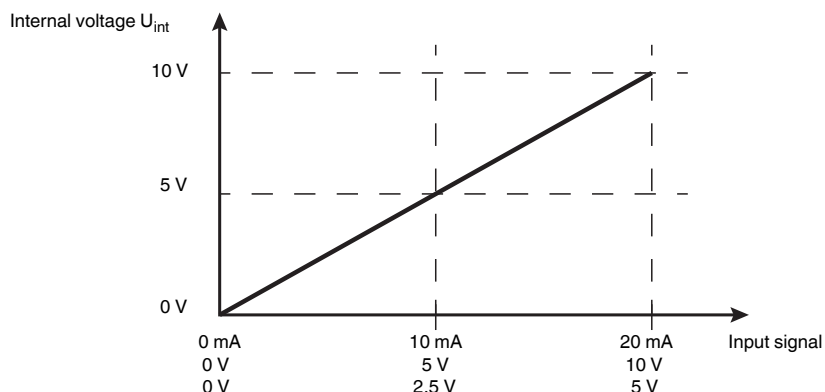
Trip points

The potentiometers T1 and T2 convert the set trip points into a proportional switching voltage U_{pot} between 0 V and 10 V. The voltage range corresponds to a range of 0 % to 100 %. This voltage can be measured at terminals 3, 5, and 6.
- Relay output I: Terminals 5+, 3-
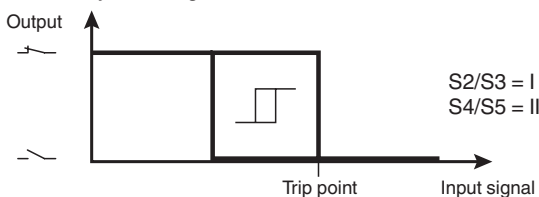- Relay output II: Terminals 6+, 3-

The trip point, hysteresis, mode of operation and type of alarm (high or low alarm) can be selected for each relay.

High alarm means that the switching state of the relay changes when the set trip point is exceeded. This state comes to an end if the value falls below a lower limit. The difference between these two values corresponds to the hysteresis, which can be set on the front panel. With a low alarm, the alarm signal is output at values below the trip point.
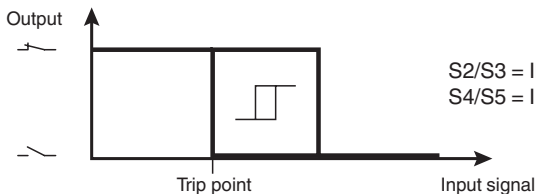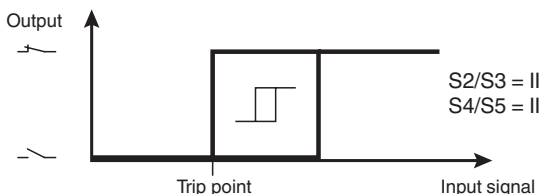
High alarm/relay energized

Output

Trip point   Input signal

S2/S3 = I
S4/S5 = I

High alarm/relay de-energized

Output

Trip point   Input signal

S2/S3 = I
S4/S5 = II

Low alarm/relay energized

Output

Trip point   Input signal

S2/S3 = II
S4/S5 = I

Low alarm/relay de-energized

Output

Trip point   Input signal

S2/S3 = II
S4/S5 = II

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group	USA: +1 330 486 0002	Germany: +49 621 776 2222	Singapore: +65 6779 9091
www.pepperl-fuchs.com	pa-info@us.pepperl-fuchs.com	pa-info@de.pepperl-fuchs.com	pa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS
PROTECTING YOUR PROCESS

Configuration

DIP switch function

Set the DIP switch according to the required function.

S6	[■]	Pos. I: trip point I responds to both relay
S5	[■]	
S4	[■]	Mode of operation
S3	[■]	
S2	[■]	High/low alarm
S1	[■]	Input range

I   II
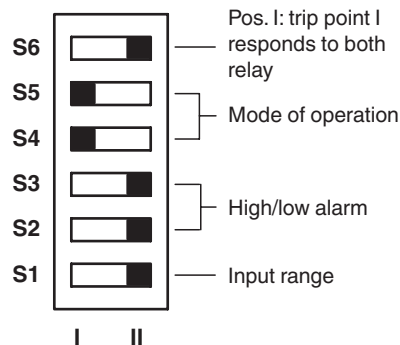
Switch	Position	Function
S6	I	Trip point I addresses both relay
	II	Relay I independent of relay II
S5	I	Relay II energized in case of alarm
	II	Relay II de-energized in case of alarm
S4	I	Relay I energized in case of alarm
	II	Relay I de-energized in case of alarm
S3	I	High alarm relay II
	II	Low alarm relay II
S2	I	High alarm relay I
	II	Low alarm relay I
S1	I	Input ranges 0/1 V to 5 V or 0/4 mA to 20 mA
	II	Input ranges 0/2 V to 10 V or 0/4 mA to 20 mA

Setting the trip points with no input signal

The trip points can be set using the potentiometers T1 and T2 and the proportional switching voltage U_{pot} at terminals 5+, 3- (relay I) and terminals 6+, 3- (relay II). This is done using a voltage meter (measuring range 10 V). There must be no input signal at this point. Select the trip points in the unit of the input signal or in %.

Input signal in mA, trip point TP in mA
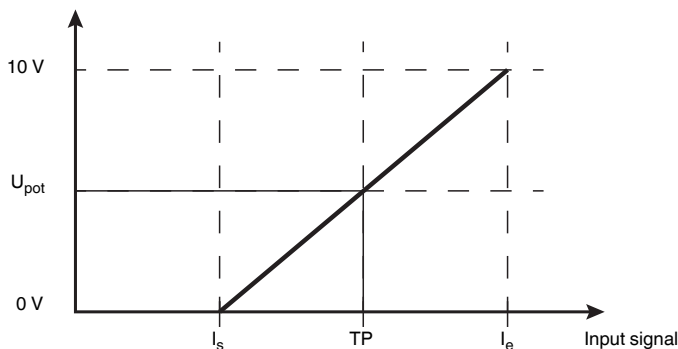
I_s = Starting point
TP = Trip point
I_e = End point
U_{pot} = Proportional switching voltage

The proportional switching voltage U_{pot} is calculated using the following formula:

$U_{pot} = 10 \text{ V} \times (TP - I_s)/(I_e - I_s)$

Example:

Trip point TP: 13 mA
I_s: 4 mA
I_e: 20 mA

$U_{pot} = 10 \text{ V} \times (13 \text{ mA} - 4 \text{ mA})/(20 \text{ mA} - 4 \text{ mA}) = 5.6 \text{ V}$

Input signal in mA, trip point TP in %

The proportional switching voltage U_{pot} is calculated using the following formula:

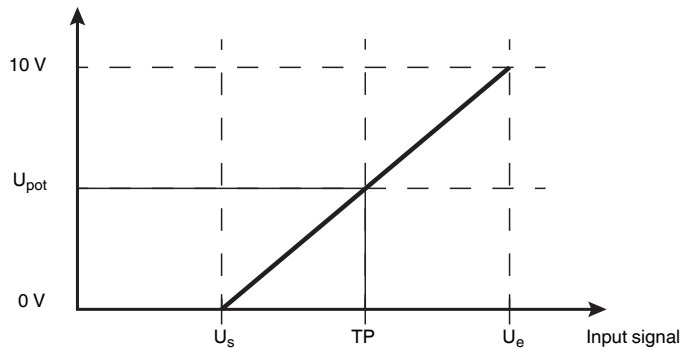$U_{pot} = 1 \text{ V}/2 \text{ mA} \times (TP/100 \times (I_e - I_s) + I_s)$

Example:

Trip point TP: 75 %
I_s: 4 mA
I_e: 20 mA

$U_{pot} = 1 \text{ V}/2 \text{ mA} \times (75 \text{ \%}/100 \text{ \%} \times (20 \text{ mA} - 4 \text{ mA}) + 4 \text{ mA}) = 8 \text{ V}$

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group | USA: +1 330 486 0002 | Germany: +49 621 776 2222 | Singapore: +65 6779 9091
www.pepperl-fuchs.com | pa-info@us.pepperl-fuchs.com | pa-info@de.pepperl-fuchs.com | pa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS
PROTECTING YOUR PROCESS

4

Input signal in V, trip point TP in V

U_s = Starting point
TP = Trip point
U_e = End point
U_{pot} = Proportional switching voltage

The proportional switching voltage U_{pot} is calculated using the following formula:

$U_{pot} = 10\ V \times (TP - U_s)/(U_e - U_s)$

Example:

Trip point TP: 7 V
U_s: 2 V
U_e: 10 V
$U_{pot} = 10\ V \times (7\ V - 2\ V)/(10\ V - 2\ V) = 6.25\ V$

Input signal in V, trip point TP in %

The proportional switching voltage U_{pot} is calculated using the following formula:

$U_{pot} = TP/100 \times (U_e - U_s) + U_s$

Example:

Trip point TP: 45 %
U_s: 2 V
U_e: 10 V
$U_{pot} = 45\ \%/100\ \% \times (10\ V - 2\ V) + 2\ V = 5.6\ V$

Setting the trip points with an input signal

The trip points can be adjusted to the input signal using potentiometers T1 and T2. No measuring device is required.

For low alarm:
1. Turn the potentiometer counterclockwise as far as it will go to the left (15 turns).
2. Turn the potentiometer clockwise until the output is tripped. Each turn changes the trip point by about 7 %.
3. Set the hysteresis. This does not change the trip point.

For high alarm:
1. Turn the potentiometer clockwise as far as it will go to the right (15 turns)
2. Turn the potentiometer counterclockwise until the output is tripped. Each turn changes the trip point by around 7 %.
3. Set the hysteresis. This does not change the trip point.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".
Pepperl+Fuchs Group   USA: +1 330 486 0002   Germany: +49 621 776 2222   Singapore: +65 6779 9091
www.pepperl-fuchs.com   pa-info@us.pepperl-fuchs.com   pa-info@de.pepperl-fuchs.com   pa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS
PROTECTING YOUR PROCESS

5

Accessories

Power feed module KFD2-EB2

The power feed module is used to supply the devices with 24 V DC via the Power Rail. The fuse-protected power feed module can supply up to 150 individual devices depending on the power consumption of the devices. Collective error messages received from the Power Rail activate a galvanically-isolated mechanical contact.

Power Rail UPR-03

The Power Rail UPR-03 is a complete unit consisting of the electrical insert and an aluminium profile rail 35 mm x 15 mm. To make electrical contact, the devices are simply engaged.

Profile Rail K-DUCT with Power Rail

The profile rail K-DUCT is an aluminum profile rail with Power Rail insert and two integral cable ducts for system and field cables. Due to this assembly no additional cable guides are necessary.

⚠️ *Power Rail and Profile Rail must not be fed via the device terminals of the individual devices!*

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".
Pepperl+Fuchs Group   USA: +1 330 486 0002   Germany: +49 621 776 2222   Singapore: +65 6779 9091
www.pepperl-fuchs.com   pa-info@us.pepperl-fuchs.com pa-info@de.pepperl-fuchs.com   pa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS
PROTECTING YOUR PROCESS   **6**