Features

- 1-channel isolated barrier
- 24 V DC supply (Power Rail)
- Strain gauge input (full or half bridge)
- Output 0 mA ... \pm 20 mA or 0 V ... \pm 10 V
- 2 relay contact outputs
- Programmable high/low alarm
- Configurable by PACTware or keypad
- RS-485 interface
- Line fault detection (LFD)

Function

This isolated barrier is used for intrinsic safety applications.

The device is used with strain gauges, load cells and resistance measuring bridges.

Designed to provide 5 V excitation voltage, this barrier's high quality A/D converter allows it to be used with those devices requiring 10 V.

Up to four 350 Ω strain gauges connected in parallel may be powered and evaluated.


The device is easily configured by the use of keypad or with the PACTware configuration software.

The current measurement for tare, zero point, and final value can be entered in this manner.

A fault is signalized by LEDs acc. to NAMUR NE44 and a separate collective error message output.


For additional information, refer to the manual and www.pepperl-fuchs.com.

Assembly

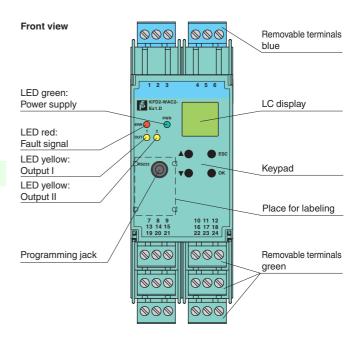



Connection

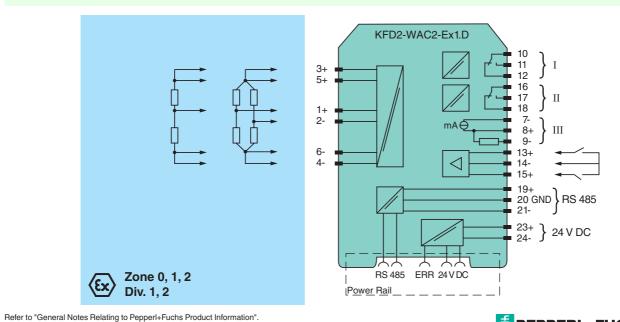

USA: +1 330 486 0002 pa-info@us.pepperl-fuchs.com Germany: +49 621 776 2222 pa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 pa-info@sg.pepperl-fuchs.com



1

General specifications	
General specifications	Analog input
Signal type	Analog input
Supply Connection	Power Deil er terminale 02 - 04
	Power Rail or terminals 23+, 24-
Rated voltage U _r	20 35 V DC
Ripple	within the supply tolerance
Power consumption	≤3 W
Interface	
	Power Rail or terminals 19+, 20 GND, 21-
Туре	RS-485
Programming interface	programming socket
Field circuit	
Connection	terminals 1+, 2-, 3+, 4-, 5+, 6-
Lead resistance	\leq 25 Ω per line
Input I	
Connection	terminals 1+, 2-
Sensor supply	15V
Connection	terminals 3+, 4- (supply); 5+, 6- (signal)
Short-circuit current	50 mA
Load	\geq 116 Ω up to 5V, \geq 85 Ω up to 4V
Input	
Connection side	field side
Connection	Input I: terminals 1+, 2-; Input II: terminals 13+, 14-; Input III: terminals 15+, 14-
Programmable Tare	0 500 % of span
Input I	Signal, analog
Input signal	-100 100 mV
Input resistance	> 1 M Ω for voltage measurement
Input II, III	tare adjustment, calibration and zero
Open circuit voltage/short-circuit current	18 V / 5 mA
Active/Passive	l > 4 mA/l < 1.5 mA
Output	
Connection side	control side
Connection	Output I: terminals 10, 11, 12; Output II: terminals 16, 17, 18; Output III: terminals 7-, 8+, 9-
Output I, II	Relay output
Contact loading	253 V AC/2 A/500 VA/cos φ min. 0.7; 40 V DC/2 A resistive load
Mechanical life	2 x 10 ⁷ switching cycles
Output III	Analog output
Current range	-20 20 mA
Load	≤ 550 Ω
Analog voltage output	0 \pm 10 V; output resistance 500 Ω (bridge between terminal 7 and 9)
Analog current output	0 ± 20 mA or 4 20 mA; load 0 550 Ω (terminals 7 and 8)
Line fault detection	downscale -21.5 mA (-10.75 V) or 2 mA (1 V), upscale 21.5 mA (10.75 V)
Collective error message	Power Rail
Transfer characteristics	
Deviation	
Resolution/accuracy	\leq ± 0.05 % incl. non-linearity and hysteresis
Temperature effect	$\leq \pm 0.01$ %/K
Reaction time	300 850 ms
Galvanic isolation	
Input I/other circuits	reinforced insulation according to IEC/EN 61010-1, rated insulation voltage 300 V _{eff}
Output I, II against eachother	reinforced insulation according to IEC/EN 61010-1, rated insulation voltage 300 V_{eff}
Output I, II/other circuits	reinforced insulation according to IEC/EN 61010-1, rated insulation voltage 300 V_{eff}
Output III/Input II, III	not available
Output III/Programming socket	not available
Other circuits from each other	functional insulation, rated insulation voltage 50 V _{eff}
Indicators/settings	Tanonan moulanon, rated moulanon voltage ou veff
-	LEDs , display
Display elements	
Control elements	Control panel
Configuration	via operating buttons via PACTware
Labeling	space for labeling at the front
Directive conformity	
Electromagnetic compatibility	
Directive 2014/30/EU	EN 61326-1:2013 (industrial locations)

Refer to "General Notes Relating to Pepperl+Fuchs Product Information". Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0002 pa-info@us.pepperl-fuchs.com

Germany: +49 621 776 2222 pa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 pa-info@sg.pepperl-fuchs.com



Low voltage		
Directive 2014/35/EU		EN 61010-1:2010
Conformity		
Electromagnetic compatibility		NE 21:2006
Degree of protection		IEC 60529:2001
Ambient conditions		
Ambient temperature		-20 60 °C (-4 140 °F)
Mechanical specifications		
Degree of protection		IP20
Connection		screw terminals
Mass		approx. 250 g
Dimensions		40 x 119 x 115 mm (1.6 x 4.7 x 4.5 inch) , housing type C3
Mounting		on 35 mm DIN mounting rail acc. to EN 60715:2001
Data for application in connection		
with hazardous areas		
EU-Type Examination Certificate		TÜV 04 ATEX 2531
Marking		 (☆) II (1)G [Ex ia Ga] IIC (☆) II (1)D [Ex ia Da] IIIC (☆) I (M1) [Ex ia Ma] I
Supply		Power Rail or terminals 23+, 24- non-intrinsically safe
Maximum safe voltage	Um	40 V DC (Attention! U _m is no rated voltage.)
Input I		terminals 1+, 2- Ex ia IIC, Ex iaD
Voltage	Uo	14 V
Current	I _o	238 mA
Power	Po	833 mW (linear characteristic)
Input II and III		terminals 13+, 14-; 15+, 14- non-intrinsically safe
Maximum safe voltage	Um	40 V DC (Attention! U _m is no rated voltage.)
Output I, II		terminals 10, 11, 12; 16, 17, 18 non-intrinsically safe
Maximum safe voltage	Um	253 V AC / 40 V DC (Attention! U _m is no rated voltage.)
Contact loading		253 V AC/2 A/500 VA/cos ϕ min. 0.7; 40 V DC/2 A resistive load
Output III		terminals 7-, 8+, 9- non-intrinsically safe
Maximum safe voltage	$U_m U_m$	40 V DC (Attention! U _m is no rated voltage.)
Interface		RS 485 programming jack
Maximum safe voltage	U _m	40 V DC (Attention! U _m is no rated voltage.)
Galvanic isolation		
Input I/other circuits		safe electrical isolation acc. to IEC/EN 60079-11, voltage peak value 375 V
Directive conformity		
Directive 2014/34/EU		EN 60079-0:2012+A11:2013, EN 60079-11:2012
International approvals		
FM approval		
Control drawing		116-0302 (cFMus)
UL approval		E223772
IECEx approval		IECEx TUN 06.0005
Approved for		[Ex ia Ga] IIC, [Ex ia Da] IIIC, [Ex ia Ma] I
General information		
Supplementary information		Observe the certificates, declarations of conformity, instruction manuals, and manuals where applicable. For information see www.pepperl-fuchs.com.

Supplementary information

Single or parallel connection of strain gauges with resulting resistance between 116 Ω ... 10 k Ω can be connected and will provide a 4 mA ... 20 mA output and 2 relay outputs as well as an RS 485 interface in the safe area.

The device supports the transmission of measured values via the RS 485 interface. In this mode of operation, input signal range may be transmitted with 26 Bit resolution with up to 31 signal converters connected to the Power Rail UPR-05 or via terminals 19, 20 and 21.

RS 485 communication may be done via the Power Rail when using power feed modules with bus access, e. g. KFD2-EB2.R4A.B or via the terminals 19, 20 and 21 of one module. The device is addressed via keypad and display or with a PC with PACTware and adapter K-ADP-USB.

For additional information, refer to the manual and www.pepperl-fuchs.com.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group

Germany: +49 621 776 2222 pa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 pa-info@sg.pepperl-fuchs.com



Accessories

Power feed module KFD2-EB2

The power feed module is used to supply the devices with 24 V DC via the Power Rail. The fuse-protected power feed module can supply up to 150 individual devices depending on the power consumption of the devices. A galvanically isolated mechanical contact uses the Power Rail to transmit collective error messages.

Power Rail UPR-05

The Power Rail UPR-05 is a complete unit consisting of the electrical inset and an aluminium profile rail 35 mm x 15 mm. To make electrical contact, the devices are simply engaged.

Profile Rail K-DUCT with Power Rail

The profile rail K-DUCT is an aluminum profile rail with Power Rail insert and two integral cable ducts for system and field cables. Due to this assembly no additional cable guides are necessary.



Power Rail and Profile Rail must not be fed via the device terminals of the individual devices!

