

Model Number

OMT300-R200-IEP-IO-0,3M-V31

Distance sensor

with fixed cable and 4-pin, M8 connector

Features

- Medium design with versatile • mounting options
- Space-saving distance sensors in ٠ small standardized design
- Multi Pixel Technology (MPT) exact • and precise signal evaluation
- IO-link interface for service and process data
- Analog output 4 ... 20 mA

Product information


The optical sensors in the series are the first devices to offer an end-to-end solution in a medium-sized standard design-from the thru-beam sensor through to the measuring distance sensor. As a result of this design, the sensors are able to perform practically all standard automation tasks.

The entire series enables sensors to communicate via IO-Link.

The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

Multi Pixel Technology (MPT) ensures that the standard sensors are flexible and can be adapted to the application

environment.

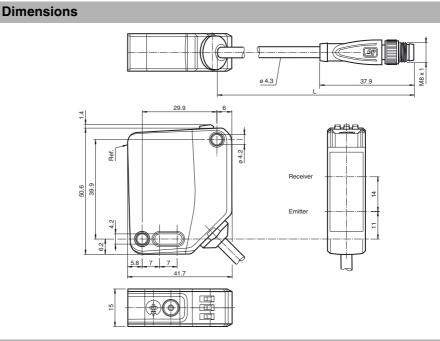

Electrical connection





Pinout






Indicators/operating means

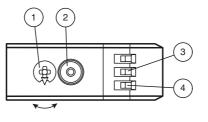

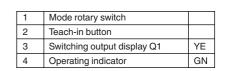



Q1B	Switching output/switch point B			
Q1A	Switching output/switch point A			
Q2A Analog output/value A				
Q2B	Analog output/value B			
0	Keylock			
	Q1A Q2A Q2B			

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Technical data

General specifications

Measurement range

LED risk group labelling

Diameter of the light spot

Diagnostic Coverage (DC)

Indicators/operating means Operation indicator

Functional safety related parameters

Angle of divergence

Ambient light limit

Function indicator

Control elements

Control elements

Operating voltage

Protection class

Device profile

Transfer rate **IO-Link Revision**

Min. cvcle time

Process data witdh

SIO mode support

Compatible master port type

Device ID

Switching type

Signal output

Switching voltage Switching current

Usage category

Response time

Recovery time

Product standard

Warm up time

Linearity error

Repeat accuracy

Ambient conditions

Ambient temperature

Storage temperature

Mechanical specifications Housing width Housing height Housing depth Degree of protection Connection Material

Communication interface

Measurement accuracy Temperature drift

Voltage drop

Analog output

Output type Load resistor

Conformity

Output

Ripple

Interface Interface type

Electrical specifications

No-load supply current

UB

10

Ш

А

 U_{d}

Resolution

MTTF_d Mission Time (T_M)

Reference target

Angle deviation

Light source

Light type

100 ... 300 mm standard white, 100 mm x 100 mm I FD modulated visible red light exempt group max. +/- 1.5 approx. 8 mm at a distance of 300 mm 1.8 EN 60947-5-2 : 45000 Lux 0.1 mm 520 a 20 a 0% LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode LED vellow: constantly on - switch output active constantly off - switch output inactive Teach-In key 5-step rotary switch for operating modes selection 18 ... 30 V DC max. 10 % < 25 mA at 24 V supply voltage IO-Link (via C/Q = pin 4) Identification and diagnosis Smart Sensor type 0/type 3.3 COM 2 (38.4 kBaud) 1.1 3 ms Process data input 4 byte Process data output 2 bits ves 0x111905 (1120517) The default setting is: C/Q - Pin4: NPN normally open, PNP normally closed, IO-Link I¿Pin2: analog output 4...20 mA

15 mm
50.6 mm
41.7 mm
IP67 / IP69 / IP69K
fixed cable 300 mm with M8 x 1 male connector; 4-pin

1 push-pull output , 1 analog output , short-circuit-proof, reverse

polarity protection, surge-proof

max. 100 mA , resistive load

1 current output: 4 ... 20 mA

> 1 k Ω voltage output ; \leq 470 Ω current output

max 30 V DC

 ≤ 1.5 V DC

2 ms

IEC 61131-9

0.05 %/K

5 min

0.5 %

EN 60947-5-2

< 0.5 % , see table 1

10 ... 50 °C (50 ... 122 °F)

-40 ... 70 °C (-40 ... 158 °F)

DC-12 and DC-13

2 ms , see table 1

Accessories

IO-Link-Master02-USB

IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

V31-GM-2M-PUR Female cordset, M8, 4-pin, PUR cable

V31-WM-2M-PUR

Female cordset, M8, 4-pin, PUR cable

Other suitable accessories can be found at www.pepperl-fuchs.com

2

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



l n'		tar		2	0.10		or
-	ь	La	-	Э	51	6	UI.

Housing		PC (Pc	olycarbonate	e)			
Optical face		PMMA					
Mass		approx	. 41 g				
Cable length		0.3 m					
Approvals and certific	ates						
UL approval		E870	56 , cULus L	isted , class 2	power supp	y , type rating 1	
CCC approval		CCC	approval / m	arking not rec	uired for pro	ducts rated ≤36 \	V
Table 1: Informa	tion on I	Measure	d Value	Filters			
Measured value	Measured value filter						
Filter	1-way	2-way	4-way	16-way	64-way	256-way	
			•		4.0.0	= 1 0	
Response time (ms)	2	4	8	32	128	512	
Repeatability (%)		< 0.5 %					

Settings

Teach-In (TI)

Use the rotary switch for switching signal Q1 to select the relevant switching threshold A and/or B to teach in.

• The yellow LEDs indicate the current state of the selected output.


To teach in a switching threshold, press and hold the "TI" button for approximately 1 s, until the yellow and green LEDs flash in phase. Teach-in starts when the "TI" button is released.

- Teach-in successful: the yellow and green LEDs flash alternately at 2.5 Hz.
- Teach-in unsuccessful: the yellow and green LEDs quickly flash alternately at 8 Hz.


After an unsuccessful Teach-in, the sensor continues to operate with the previous valid setting after the relevant visual fault signal is issued.

Set switching mode: you can define different switching modes by teaching in the relevant distance data for switching thresholds A and B.

1. Single point mode:



2. Window mode:



Teach in switching thresholds: you can teach in or overwrite a taught-in switching threshold at any time. To do this, press the "TI" button again.

Reset a value: you can reset a taught-in value. To do this, press the "TI" button for > 4 s, until the yellow and green LEDs go out. The reset process itself starts when the "TI" button is released.

• Reset successful: the yellow and green LEDs flash alternately at 2.5 Hz.

Minimum and maximum values for the analog output Q2 are taught in and deleted in the same way as those for the switching output.

- The following applies:
- A = Minimum voltage/current
- B = Maximum voltage/current

Resetting to Factory Settings

To revert back to factory settings, press the "TI" button for > 10 s with the rotary switch set to position "O," until the yellow and green LEDs go out at the same time. The reset process itself starts when the "TI" button is released.

• Reset to factory settings successful: the yellow and green LEDs light up at the same time. The sensor then continues to operate with factory settings.

OMT-IEP

- Factory setting for switching signal Q1:
- Switching signal is high active, window mode
- Analog output: current output, 4 mA ... 20 mA absolute mode

OMT-UEP

- Factory setting for switching signal Q1:
- Switching signal is high active, window mode
- Analog output: voltage output, 0 V ... 10 V absolute mode

Analog output

www.pepperl-fuchs.com

The analog output type can be configured as voltage or current output via IO-Link. The following output types are available:

 Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 G

USA: +1 330 486 0001 Germany: +49 621 776 4411 fa-info@us.pepperl-fuchs.com fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



- Analog output 0 mA ...20 mA
- Analog output 4 mA ...20 mA
- Analog output 0 V ...10 V

The following operating modes are available:


- Absolute mode (default setting)
- Normalized mode
- Rising slope
- Falling slope

The following substitute values can optionally be configured:


- · No substitute values used (default setting)
- Substitute value for "no measured value" used
- · Substitute value for "no measured value" and "Measuring overrange" used

The sensor's tolerances are based on the digital process data.


Absolute mode (default setting, A and B = deleted)

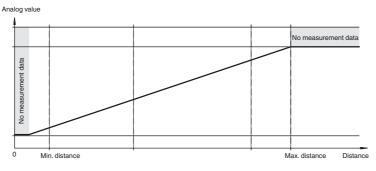

Normal mode (A and B without teach-in / deleted)

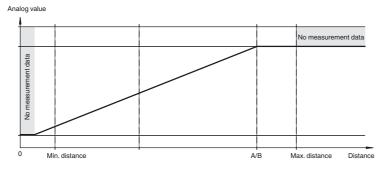

Rising slope (A < B)

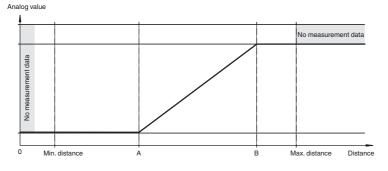


Pepperl+Fuchs Group www.pepperl-fuchs.com

4



Falling slope (A > B)

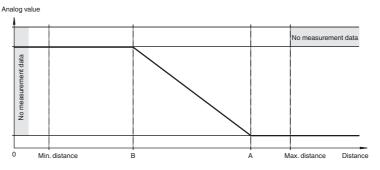

Configuration via IO-Link interface

Setting different operating modes via the IO-Link interface

The devices are equipped with an IO-Link interface as standard for diagnostics and parameterization tasks to ensure optimum adjustment of the sensors to the relevant application.

Single point mode operating mode (one switch point):

- "Detection of objects irrespective of type and color in a defined detection range. Objects in the background are suppressed.
- "The switch point corresponds exactly to the set point.

active detection range	
	Background suppression

Window mode operating mode (two switch points):

- Detection of objects irrespective of type and color in a defined detection range. Reliable detection when object leaves the detection range.
- Window mode with two switch points.

C	
Foreground suppression	Background suppression

datastis

Center window mode operating mode (one switch point):

- Detection of objects irrespective of type and color in a defined detection range. Sets a defined window around a given object. Objects outside this window are not detected.
- Window mode with one switch point.

Release date: 2018-10-25 08:39 Date of issue: 2018-10-25 295670-100260 end.xml

www.pepperl-fuchs.com

acti	detection range	
Foreground suppression	Background supp	ression

Two point mode operating mode (hysteresis operating mode):

fa-info@us.pepperl-fuchs.com

• Detection of objects irrespective of type and color between a defined switch-on and switch-off point.

	a	ctive detection range		
Output	V	Hysteresis	Outpu	t
Inactive operating m Evaluation of switch 	ode: hing signals is deactivated	ł.		
The associated IOD	D device description file	e can be found in the dowr	nload area at www.pep	perl-fuchs.com
Refer to "General Notes Relati Pepperl+Fuchs Group	ng to Pepperl+Fuchs Product Infor USA: +1 330 486 0001	mation". Germany: +49 621 776 4411	Singapore: +65 6779 9091	PEPPER

fa-info@de.pepperl-fuchs.com

fa-info@sg.pepperl-fuchs.com

