



 $\epsilon$ 





## **Model Number**

#### OMT550-R201-UEP-IO-V1

Distance sensor with 4-pin, M12 x 1 connector

### **Features**

- Medium design with versatile mounting options
- Space-saving distance sensors in small standardized design
- Multi Pixel Technology (MPT) exact and precise signal evaluation
- IO-link interface for service and process data
- · Analog output 0 ... 10 V DC

## **Product information**


The optical sensors in the series are the first devices to offer an end-to-end solution in a medium-sized standard design—from the thru-beam sensor through to the measuring distance sensor. As a result of this design, the sensors are able to perform practically all standard automation tasks.

The entire series enables sensors to communicate via IO-Link.


The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

Multi Pixel Technology (MPT) ensures that the standard sensors are flexible and can be adapted to the application

## **Dimensions**

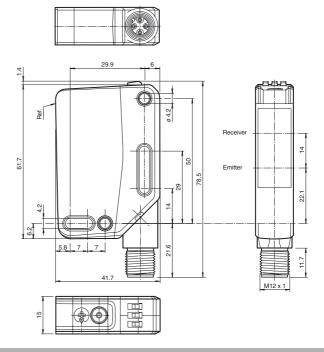


### **Electrical connection**



#### **Pinout**



## Indicators/operating means



		0	
2	В		D 0
Q2	۷	,	. 21

	Г
Q1B	Switching output/switch point B
Q1A	Switching output/switch point A
Q2A	Analog output/value A

Mode rotary switch

Operating indicator

Analog output/value B

Keylock

Switching output display Q1

Teach-in button

2

3

Q2B

environment.

www.pepperl-fuchs.com

ΥE

GN

Technical data		
Technical data		
General specifications		100 550 mm
Measurement range Reference target		100 550 mm standard white, 100 mm x 100 mm
Light source		LED
Light type		modulated visible red light
LED risk group labelling		exempt group
Angle deviation		max. +/- 1.5 °
Diameter of the light spot		approx. 20 mm at a distance of 550 mm
Angle of divergence		2.5°
Ambient light limit Resolution		EN 60947-5-2 : 45000 Lux 0.1 mm
Functional safety related parame	tore	0.1111111
MTTF <sub>d</sub>	ICIS	520 a
Mission Time (T <sub>M</sub> )		20 a
Diagnostic Coverage (DC)		0 %
Indicators/operating means		
Operation indicator  Function indicator		LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode LED yellow:
		constantly on - switch output active constantly off - switch output inactive
Control elements		Teach-In key
Control elements Electrical specifications		5-step rotary switch for operating modes selection
Operating voltage	U <sub>B</sub>	18 30 V DC
Ripple	ОВ	max. 10 %
No-load supply current	I <sub>0</sub>	< 25 mA at 24 V supply voltage
Protection class	Ü	III
Interface		
Interface type		IO-Link ( via C/Q = pin 4 )
Device profile		Identification and diagnosis Smart Sensor type 0/type 3.3
Transfer rate IO-Link Revision		COM 2 (38.4 kBaud) 1.1
Min. cycle time		3 ms
Process data witdh		Process data input 4 byte
SIO mode support		Process data output 2 bits yes
Device ID		0x111913 (1120531)
Compatible master port type		A
Output		
Switching type		The default setting is: C/Q - Pin4: NPN normally open, PNP normally closed, IO-Link U—Pin2: analog output 0 10 V
Signal output		1 push-pull output , 1 analog output , short-circuit-proof, reverse polarity protection, surge-proof
Switching voltage		max. 30 V DC
Switching current		max. 100 mA , resistive load
Usage category Voltage drop	U <sub>d</sub>	DC-12 and DC-13 ≤ 1.5 V DC
Response time	d	2 ms , see table 1
Analog output		
Output type		1 voltage output: 0 10 V
Load resistor		> 1 k $\Omega$ voltage output ; $\leq$ 470 $\Omega$ current output
Recovery time		2 ms
Conformity		
Communication interface		IEC 61131-9
Product standard		EN 60947-5-2
Measurement accuracy Temperature drift		0.05 %/K
Warm up time		5 min
Repeat accuracy		≤ 1 % , see table 1
Linearity error		0.75 %
Ambient conditions		
Ambient temperature		10 50 °C (50 122 °F)
Storage temperature		-40 70 °C (-40 158 °F)
Mechanical specifications Housing width		15 mm
Housing width Housing height		15 mm 61.7 mm
Housing depth		41.7 mm
Degree of protection		IP67 / IP69 / IP69K
Connection		4-pin, M12 x 1 connector, 90° rotatable

## Accessories

## V1-G-2M-PUR

Female cordset, M12, 4-pin, PUR cable

## V1-W-2M-PUR

Female cordset, M12, 4-pin, PUR cable

## IO-Link-Master02-USB

IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

Other suitable accessories can be found at www.pepperl-fuchs.com



Material	
Housing	PC (Polycarbonate)
Optical face	PMMA
Mass	approx. 37 g
Approvals and certificates	
UL approval	E87056, cULus Listed, class 2 power supply, type rating 1
CCC approval	CCC approval / marking not required for products rated ≤36 V

#### **Table 1: Information on Measured Value Filters**

Measured value filter							
Filter	1-way	2-way	4-way	16-way	64-way	256-way	
Response time (ms)	2	4	8	32	128	512	
Repeatability (%)		< 1 %					

# **Settings**

## Teach-In (TI)

Use the rotary switch for switching signal Q1 to select the relevant switching threshold A and/or B to teach in.

· The yellow LEDs indicate the current state of the selected output.


To teach in a switching threshold, press and hold the "TI" button for approximately 1 s, until the yellow and green LEDs flash in phase. Teach-in starts when the "TI" button is released.

- Teach-in successful: the yellow and green LEDs flash alternately at 2.5 Hz.
- Teach-in unsuccessful: the yellow and green LEDs quickly flash alternately at 8 Hz.


After an unsuccessful Teach-in, the sensor continues to operate with the previous valid setting after the relevant visual fault signal is issued.

Set switching mode: you can define different switching modes by teaching in the relevant distance data for switching thresholds A and B.

1. Single point mode:



#### 2. Window mode:



Teach in switching thresholds: you can teach in or overwrite a taught-in switching threshold at any time. To do this, press the "TI" button again.

Reset a value: you can reset a taught-in value. To do this, press the "TI" button for > 4 s, until the yellow and green LEDs go out. The reset process itself starts when the "TI" button is released.

• Reset successful: the yellow and green LEDs flash alternately at 2.5 Hz.

Minimum and maximum values for the analog output Q2 are taught in and deleted in the same way as those for the switching output. The following applies:

A = Minimum voltage/current

B = Maximum voltage/current

#### **Resetting to Factory Settings**

To revert back to factory settings, press the "TI" button for > 10 s with the rotary switch set to position "O," until the yellow and green LEDs go out at the same time. The reset process itself starts when the "TI" button is released.

· Reset to factory settings successful: the yellow and green LEDs light up at the same time. The sensor then continues to operate with factory settings.

#### **OMT-IEP**

295670-100273 eng.xml

issue: 2019-02-11

Date of

2019-02-11 11:04

date:

- · Factory setting for switching signal Q1: Switching signal is high active, window mode
- Analog output: current output, 4 mA ... 20 mA absolute mode

## OMT-UEP

- · Factory setting for switching signal Q1: Switching signal is high active, window mode
- Analog output: voltage output, 0 V ... 10 V absolute mode

# **Analog output**

The analog output type can be configured as voltage or current output via IO-Link. The following output types are available:

- Analog output 0 mA ...20 mA
- Analog output 4 mA ...20 mA
- Analog output 0 V ...10 V

The following operating modes are available:


- · Absolute mode (default setting)
- Normalized mode
- Rising slope
- Falling slope

The following substitute values can optionally be configured:


- No substitute values used (default setting)
- Substitute value for "no measured value" used
- Substitute value for "no measured value" and "Measuring overrange" used

The sensor's tolerances are based on the digital process data.


## Absolute mode (default setting, A and B = deleted)

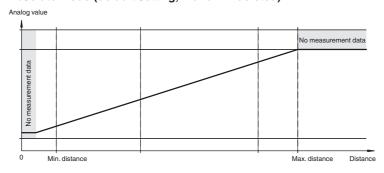

# Normal mode ( A and B without teach-in / deleted)

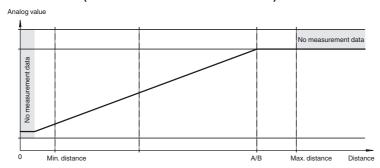


## Rising slope (A < B)

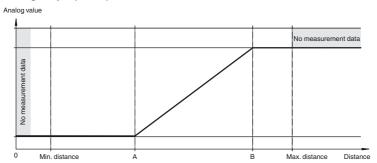

FPEPPERL+FUCHS

## Falling slope (A > B)

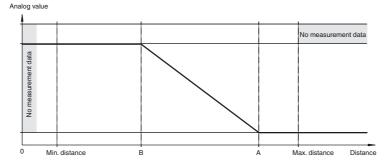

#### Configuration via IO-Link interface

## Setting different operating modes via the IO-Link interface

The devices are equipped with an IO-Link interface as standard for diagnostics and parameterization tasks to ensure optimum adjustment of the sensors to the relevant application.

## Single point mode operating mode (one switch point):

- "Detection of objects irrespective of type and color in a defined detection range. Objects in the background are suppressed.
- "The switch point corresponds exactly to the set point.




## Window mode operating mode (two switch points):

- · Detection of objects irrespective of type and color in a defined detection range. Reliable detection when object leaves the detection range.
- · Window mode with two switch points.




## Center window mode operating mode (one switch point):

- Detection of objects irrespective of type and color in a defined detection range. Sets a defined window around a given object. Objects outside
  this window are not detected.
- · Window mode with one switch point.



## Two point mode operating mode (hysteresis operating mode):

• Detection of objects irrespective of type and color between a defined switch-on and switch-off point.



### Inactive operating mode:

• Evaluation of switching signals is deactivated.

The associated IODD device description file can be found in the download area at www.pepperl-fuchs.com.