# **Distance sensor**

# OMT300-R201-IEP-IO-0,3M-V1



CE IO-Link

# **Model Number**

# OMT300-R201-IEP-IO-0,3M-V1

#### Distance sensor

with fixed cable and M12 connector, 4-pin

#### **Features**

- Medium design with versatile • mounting options
- Space-saving distance sensors in ٠ small standardized design
- Multi Pixel Technology (MPT) exact • and precise signal evaluation
- IO-link interface for service and process data
- Analog output 4 ... 20 mA

## **Product information**


The optical sensors in the series are the first devices to offer an end-to-end solution in a medium-sized standard design-from the thru-beam sensor through to the measuring distance sensor. As a result of this design, the sensors are able to perform practically all standard automation tasks.


The entire series enables sensors to communicate via IO-Link.

The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

Multi Pixel Technology (MPT) ensures that the standard sensors are flexible and can be adapted to the application

environment.

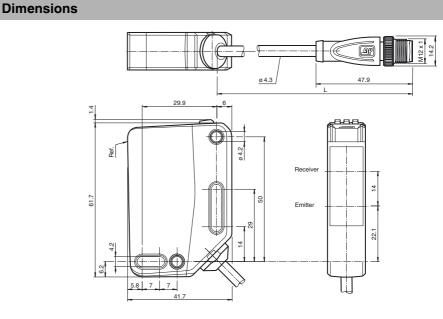




## **Electrical connection**








# Indicators/operating means





1	Mode rotary switch	
2	Teach-in button	
3	Switching output display Q1	YE
4	Operating indicator	GN

Q1B	Switching output/switch point B
Q1A	Switching output/switch point A
Q2A	Analog output/value A
Q2B	Analog output/value B
0	Keylock

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001

Pepperl+Fuchs Group www.pepperl-fuchs.com fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



fa-info@de.pepperl-fuchs.com

# Technical data

General specifications		100 000
Measurement range Reference target		100 300 mm standard white, 100 mm x 100 mm
Light source		LED
Light type		modulated visible red light
LED risk group labelling		exempt group
Angle deviation		max. +/- 1.5 °
Diameter of the light spot		approx. 8 mm at a distance of 300 mm
Angle of divergence		1.8 °
Ambient light limit		EN 60947-5-2 : 45000 Lux
Resolution		0.1 mm
Functional safety related para	meters	
MTTFd		520 a
Mission Time (T <sub>M</sub> )		20 a
Diagnostic Coverage (DC)		0 %
Indicators/operating means		
Operation indicator Function indicator		LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode LED yellow:
Control elements		constantly on - switch output active constantly off - switch output inactive
Control elements		Teach-In key 5-step rotary switch for operating modes selection
		o stop rotary switch for operating modes selection
Electrical specifications	11.	18 30 V DC
Operating voltage	UB	max. 10 %
Ripple No-load supply current	I <sub>0</sub>	< 25 mA at 24 V supply voltage
Protection class	0	
Interface		
		$ O $ Link (via $C/O = \min A$ )
Interface type Device profile		IO-Link ( via C/Q = pin 4 ) Identification and diagnosis
•		Smart Sensor type 0/type 3.3
Transfer rate		COM 2 (38.4 kBaud)
IO-Link Revision		1.1
Min. cycle time		3 ms
Process data witdh		Process data input 4 byte Process data output 2 bits
SIO mode support		yes
Device ID		0x111915 (1120533)
Compatible master port type		A
Output		
Switching type		The default setting is: C/Q - Pin4: NPN normally open, PNP normally closed, IO-Lin I—Pin2: analog output 420 mA
Signal output		1 push-pull output , 1 analog output , short-circuit-proof, rever polarity protection, surge-proof
Switching voltage		max. 30 V DC
Switching current		max. 100 mA , resistive load
Usage category		DC-12 and DC-13
Voltage drop	U <sub>d</sub>	≤ 1.5 V DC
Response time		2 ms , see table 1
Analog output		
Output type		1 current output: 4 20 mA
Load resistor		> 1 k $\Omega$ voltage output ; $\leq$ 470 $\Omega$ current output
Recovery time		2 ms
Conformity		
Communication interface		IEC 61131-9
Product standard		EN 60947-5-2
Measurement accuracy		
Temperature drift		0.05 %/K
Warm up time		5 min
Repeat accuracy		< 0.5 % , see table 1
Linearity error		0.5 %
Ambient conditions		
Ambient temperature		10 50 °C (50 122 °F)
Storage temperature		-40 70 °C (-40 158 °F)
Mechanical specifications		
Housing width		15 mm
Housing height		61.7 mm
Housing depth		41.7 mm
riousing deptil		IP67 / IP69 / IP69K
Degree of protection		
		300 mm fixed cable with M12 x 1, 4-pin connector

V1-G-2M-PUR Female cordset, M12, 4-pin, PUR cable

V1-W-2M-PUR Female cordset, M12, 4-pin, PUR cable

#### IO-Link-Master02-USB

IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

Other suitable accessories can be found at www.pepperl-fuchs.com

2

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 m fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Housing		PC (P	olycarbonate	)		
Optical face		PMMA	4			
Mass		appro	x. 55 g			
Cable length		0.3 m				
Approvals and certific	ates					
UL approval	UL approval E87056, cULus Listed, class 2 power supply, type rating 1					
CCC approval CCC approval / marking not required for products rated ≤36 V Table 1: Information on Measured Value Filters						
			u vulue			
Measured value		lieucuit	u vulue	r inter 3		
		2-way	4-way	16-way	64-way	256-way
Measured value t Filter Response time (ms)	filter				64-way 128	256-way 512
Filter	filter 1-way	2-way	4-way	16-way	,	,

# Settings

#### Teach-In (TI)

Use the rotary switch for switching signal Q1 to select the relevant switching threshold A and/or B to teach in.

• The yellow LEDs indicate the current state of the selected output.


To teach in a switching threshold, press and hold the "TI" button for approximately 1 s, until the yellow and green LEDs flash in phase. Teach-in starts when the "TI" button is released.

- Teach-in successful: the yellow and green LEDs flash alternately at 2.5 Hz.
- Teach-in unsuccessful: the yellow and green LEDs quickly flash alternately at 8 Hz.


After an unsuccessful Teach-in, the sensor continues to operate with the previous valid setting after the relevant visual fault signal is issued.

Set switching mode: you can define different switching modes by teaching in the relevant distance data for switching thresholds A and B.

1. Single point mode:

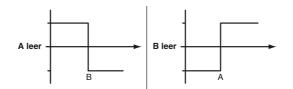

2. Window mode:

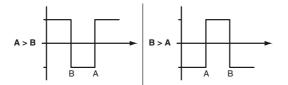

Teach in switching thresholds: you can teach in or overwrite a taught-in switching threshold at any time. To do this, press the "TI" button again.

Reset a value: you can reset a taught-in value. To do this, press the "TI" button for > 4 s, until the yellow and green LEDs go out. The reset process itself starts when the "TI" button is released.

• Reset successful: the yellow and green LEDs flash alternately at 2.5 Hz.

Minimum and maximum values for the analog output Q2 are taught in and deleted in the same way as those for the switching output.

- The following applies:
- A = Minimum voltage/current
- B = Maximum voltage/current

#### **Resetting to Factory Settings**

To revert back to factory settings, press the "TI" button for > 10 s with the rotary switch set to position "O," until the yellow and green LEDs go out at the same time. The reset process itself starts when the "TI" button is released.

• Reset to factory settings successful: the yellow and green LEDs light up at the same time. The sensor then continues to operate with factory settings.

OMT-IEP

- Factory setting for switching signal Q1:
- Switching signal is high active, window mode
- Analog output: current output, 4 mA ... 20 mA absolute mode

OMT-UEP

- Factory setting for switching signal Q1:
- Switching signal is high active, window mode
- Analog output: voltage output, 0 V ... 10 V absolute mode

# Analog output

www.pepperl-fuchs.com

The analog output type can be configured as voltage or current output via IO-Link. The following output types are available:

 Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 G

USA: +1 330 486 0001 Germany: +49 621 776 4411 fa-info@us.pepperl-fuchs.com fa-info@de.pepperl-fuchs.com Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



- Analog output 0 mA ...20 mA
- Analog output 4 mA ...20 mA
- Analog output 0 V ...10 V

The following operating modes are available:


- · Absolute mode (default setting)
- Normalized mode
- Rising slope
- Falling slope

The following substitute values can optionally be configured:


- · No substitute values used (default setting)
- · Substitute value for "no measured value" used
- · Substitute value for "no measured value" and "Measuring overrange" used

The sensor's tolerances are based on the digital process data.


#### Absolute mode (default setting, A and B = deleted)

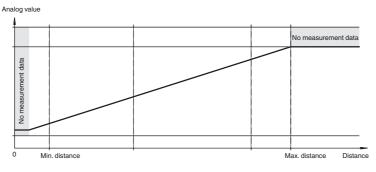

#### Normal mode ( A and B without teach-in / deleted)

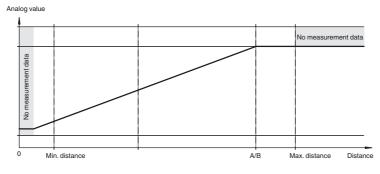

## Rising slope (A < B)

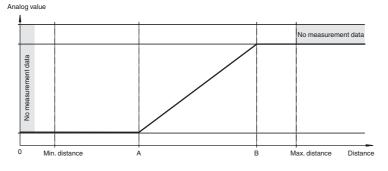


Pepperl+Fuchs Group www.pepperl-fuchs.com

4



#### Falling slope (A > B)

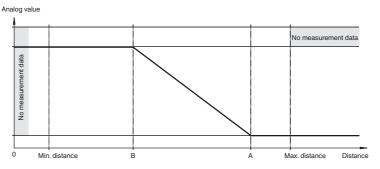

#### **Configuration via IO-Link interface**

#### Setting different operating modes via the IO-Link interface

The devices are equipped with an IO-Link interface as standard for diagnostics and parameterization tasks to ensure optimum adjustment of the sensors to the relevant application.

# Single point mode operating mode (one switch point):

- "Detection of objects irrespective of type and color in a defined detection range. Objects in the background are suppressed.
- "The switch point corresponds exactly to the set point.

active detec	tion range
	Background
	suppression

# Window mode operating mode (two switch points):

- Detection of objects irrespective of type and color in a defined detection range. Reliable detection when object leaves the detection range.
- Window mode with two switch points.

active detection range				
Foreground suppression	Background suppression			

datastis

## Center window mode operating mode (one switch point):

- Detection of objects irrespective of type and color in a defined detection range. Sets a defined window around a given object. Objects outside this window are not detected.
- · Window mode with one switch point.

active c	etection range
Foreground suppression	Background suppression

#### Two point mode operating mode (hysteresis operating mode):

fa-info@us.pepperl-fuchs.com

• Detection of objects irrespective of type and color between a defined switch-on and switch-off point.

	a	ictive detection range		
Output	¥	Hysteresis	Outpu	t
Inactive operating mo • Evaluation of switch	ode: ing signals is deactivated	ł.		
The associated IODD	device description file	e can be found in the dowr	nload area at <b>www.pep</b>	perl-fuchs.com
Refer to "General Notes Relating	g to Pepperl+Fuchs Product Infor USA: +1 330 486 0001	mation". Germany: +49 621 776 4411	Singapore: +65 6779 9091	<b>PEPPER</b>

fa-info@de.pepperl-fuchs.com

fa-info@sg.pepperl-fuchs.com



www.pepperl-fuchs.com