E223176 "For use in NFPA 79 Applications only", if UL







Model Number

ENA36IL-S***-Analog

Features

- Very small housing
- High climatic resistance
- 4 Bit multiturn
- Models with analog voltage or current output
- Surge and reverse polarity protection

Description

This absolute encoder with internal magnetic sampling is available with an analog voltage output or an analog current output. Depending on the model, the analog output provides a voltage value or a current value corresponding to the shaft setting The encoder can be easily programmed by means of electrical inputs and push buttons.

_				
10	2 h	110	al d	212
16	71111	110.4		a

UL File Number

General specifications	
Detection type	magnetic sampling
Device type	Absolute encoders
Measurement range	min. 0 22.5 ° max. 65566 x 360 ° factory setting: 16 x 360"
Resolution	17 Bit (13 bits/revolution)

marking is marked on the product **Electrical specifications**

Operating voltage U_B 8 ... 32 V DC

typ. 15 mA (with voltage output) Current consumption typ. 20 mA (with current output)

Input 1 lower limit of measurement range Input type

Signal voltage High 8 ... 32 V DC

Signal duration Input 2

Input type upper limit of measurement range Signal voltage

High 8 ... 32 V DC Signal duration

Analog output Output type analog voltage output or analog current output (see type

code) Default setting rising ramp at ccw rotation

Linearity error ≤ 0.15 % Load resistor min. 5000 Ω (with voltage output) , min. 500 Ω (with current

output); Max. value for supply voltage 8 V. For higher supply voltage lower load resistance can be used.

Connection Connector M12 connector, 5 pin Cable Ø6 mm, 4 x 2 x 0.14 mm², 1 m

Standard conformity acc. DIN EN 60529 Degree of protection

Connection side cable models: IP54 connector models: IP65

Shaft side Climatic testing DIN EN 60068-2-3, no moisture condensation

Emitted interference EN 61000-6-4:2007 EN 61000-6-2:2005 Noise immunity

Shock resistance DIN EN 60068-2-27, 100 g, 6 ms Vibration resistance DIN EN 60068-2-6, 10 g, 10 ... 1000 Hz

Ambient conditions Operating temperature cable, flexing: -5 ... 70 °C (23 ... 158 °F),

cable, fixed: -30 ... 70 °C (-22 ... 158 °F) connector models: -40 ... 85 °C (-40 ... 185 °F) Storage temperature cable models: -30 ... 70 °C (-22 ... 158 °F)

connector models: -30 ... 85 °C (-22 ... 185 °F)

Relative humidity 98 %, no moisture condensation

Mechanical specifications Material Housing nickel-plated steel Flange Aluminum Shaft Stainless steel approx. 150 g, with cable Mass max. 12000 min ⁻¹ Rotational speed Moment of inertia 30 gcm² Starting torque < 3 Ncm Shaft load


20 N Axial Radial 40 N


Approvals and certificates


cULus Listed, General Purpose, Class 2 Power Source, if UL approval


UL marking is marked on the product.

Dimensions

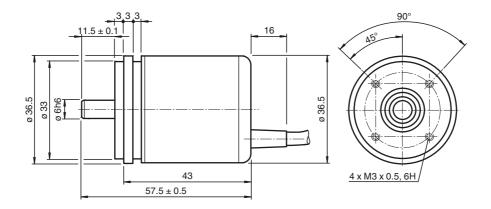

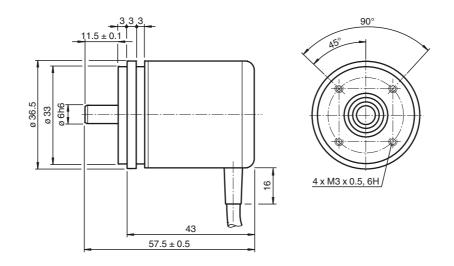

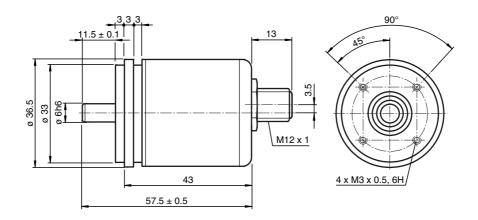

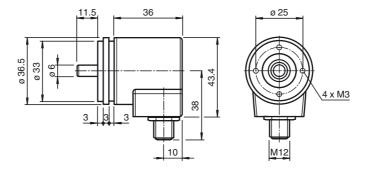

Electrical connection					
Signal	Wire end	M12 connector			
Analog output	Green	1			
+V _s (encoder)	Red	2			
GND (encoder)	Yellow	3			
Set 2	White	4			
Set 1	Brown	5			
Shielding	Screen	Housing			
Pinout	-	2 (5) 4			

Description of rotary encoder functions

Default Settings

	Lower measuring range limit	Mid measuring range	Upper measuring range limit
Singleturn absolute rotary encoder	0	180°	360°
Multiturn absolute rotary encoder	0	8 x 360°	16 x 360°

Programming Encoders with No Operating Buttons

Scaling the measuring range

Use signal inputs "Set 1" and "Set 2" to scale the measuring range (minimum measuring range: 22.5°).

- 1. Connect signal inputs "Set 1" and "Set 2" simultaneously to +U_B for 15 seconds. The programming mode is activated now.
- 2. Turn the rotary encoder shaft to position 1 (lower measuring range limit).
- 3. Connect signal input "Set 1" to a high-potential source (+ $U_{B\,min} \le high\ potential \le +U_{B\,max}$) for 1 second.
- 4. Connect signal input "Set 1" to ground
- $5. \quad \text{Turn the rotary encoder shaft to position 2 (upper measuring range limit)}.$
- 6. Connect signal input "Set 2" to a high-potential source (+ $U_{B \, min} \leq high \, potential \leq +U_{B \, max}$) for 1 second.
- 7. Connect signal input "Set 2" to ground

The analog output is now scaled to the programmed measuring range and the rotary encoder will operate in normal mode.

Resetting to the Default Setting

1. Connect the two signal inputs ("Set 1" and "Set 2") to a high-potential source ($+U_{B min} \le high potential \le +U_{B max}$) for 1 second.

The measuring range is then reset to the default setting.

Programming Encoders with Operating Buttons

Scaling the measuring range

Use operating buttons "Lim1" and "Lim2" to scale the measuring range (minimum measuring range: 22.5°).

- 1. Press the two operating buttons ("Lim1" and "Lim2") simultaneously. Both LEDs will light up. Press and hold the operating buttons for 15 seconds until the two LEDs start to flash. The rotary encoder is now in programming mode.
- 2. Turn the rotary encoder shaft to position 1 (lower measuring range limit).
- 3. Press and hold operating button "Lim1" for 1 second. The green LED will now light up permanently.
- 4. Turn the rotary encoder shaft to position 2 (upper measuring range limit).
- 5. Press and hold operating button "Lim2" for 1 second.



2019-01-30

Date of issue:

2019-01-30 13:21

Release date:

The analog output is now scaled to the programmed measuring range and the rotary encoder will operate in normal mode. Only the green LED will light up.

Resetting to the Default Setting


1. Press the two operating buttons ("Lim1" and "Lim2") simultaneously. Both LEDs will light up. Press and hold the operating buttons for 30 seconds. After 15 seconds, the two LEDs will start to flash.

When the green LED goes out and the yellow LED lights up permanently, the measuring range is reset to the default setting.

Status LEDs


The rotary encoder is equipped with two status LEDs. These LEDs have three possible states: off, flashing, or on. The LEDs use different combinations of these states to indicate the status of the rotary encoder.

Yellow LED	Green LED	Description
On	Off	Rotary encoder operation using default settings
Off	On	Rotary encoder operation using scaled measuring range (customer- specific setting)
On	On	Programming mode initiated (temporary state)
Flashes	Flashes	Rotary encoder in programming mode
On	Flashes	Position 2 set, waiting for position 1
Flashes	On	Position 1 set, waiting for position 2



Analog Output Properties

Depending on its design, the rotary encoder projects the current angular position of the rotary encoder shaft in an analog current or voltage value. The following graphic shows the values the output accepts at the various angular positions:

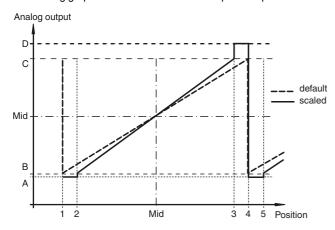

Legend:


Encoder type ¹⁾		Angular position						
		1	2	Mid	3	4	5	
Singleturn	Factory default setting	0°	-	180°	-	360°	-	
	Scaled	0°	Lower measuring range limit	-	Upper measuring range limit	360°	Lower measuring range limit	
Multiturn	Factory default setting	0°	-	2 ⁴ x 180°	-	2 ⁴ x 360°		
	Scaled ²⁾	0°	Lower measuring range limit	-	Upper measuring range limit	2 ⁿ x 360°	Lower measuring range limit	

n = whole number from 1 to 16

- 1) See model number
- 2) Overflow at 360°, 720°, 1440°, 2880°, 5760°, etc. depending on the scale set.

Encoder output type	Analog output value						
	Α	В	Mid	С	D		
0 V 5 V	-	0 V	2.5 V	5 V	-		
0.5 V 4.5 V	0.25 V	0.5 V	2.5 V	4.5 V	4.75 V		
0 V 10 V	-	0 V	5 V	10 V	-		
0.5 V 9.5 V	0.25 V	0.5 V	5 V	9.5 V	9.75 V		
4 mA 20 mA	3.6 mA	4 mA	12 mA	20 mA	22 mA		
0 mA 20 mA	-	0 mA	10 mA	20 mA	-		

Model number

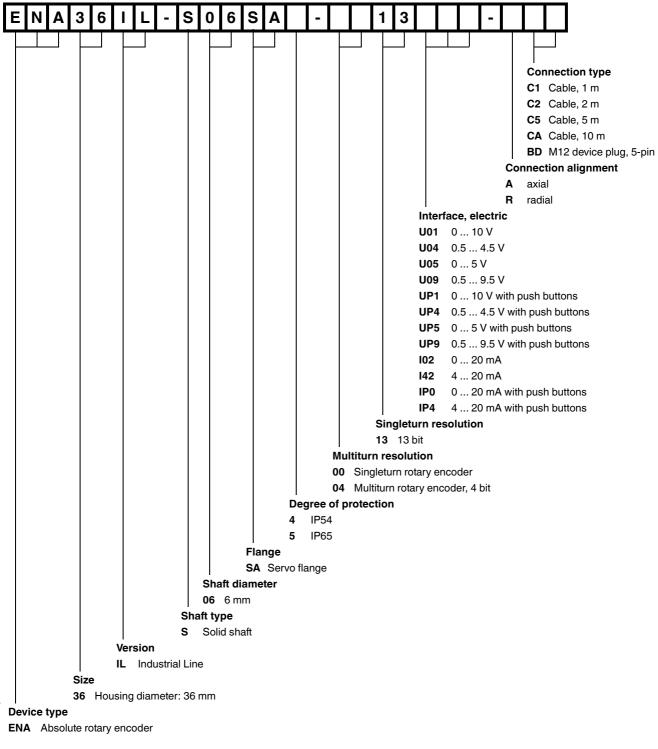

Release date: 2019-01-30 13:21 Date of issue: 2019-01-30 t186711_eng.xml