

### OY410024

### **OPTICAL SENSORS • LIGHT BARIERS**

The multi-function light barriers are through-beam sensors where multiple beams are integrated. In case of interruption of only one beam, the switching output of the receiver changes its state. The devices are used where standard through-beam sensors with only one beam are not sufficient. There are devices with beam spacing of 20, 40, 60 or 120mm and different heights available. An integrated fuzzy logic controls the transmitting power automatically.



## **MECHANICAL DATA**

Ambient temperature	-5 °C 50 °C
Cable length	0.3 m
Cover material	Plastic
Degree of protection (IP)	IP65
Housing material	Aluminium
Material of optical surface	PMMA
Number of wires	4
Protected field height	938 mm
Sensor height	980 mm
Sensor length	20.5 mm
Sensor width	40 mm

#### **FLECTRICAL DATA**

LLLCTRICAL DATA	
Cascadable	No
Clock control possible	No
No-load current, receiver	100 mA
No-load current, transmitter	100 mA
Number of pins	4
Number of pins, receiver	4
Number of pins, transmitter	4
Override possible	No
Rated control supply voltage Us at DC	21.6 V 26.4 V
Reaction time	6 ms
Reverse polarity protection	Yes
Short-circuit-proof	Yes
Suitable for safety functions	No
Suppression possible	No
Type of analog output	0 V 10 V / 4 mA 20 mA
Type of electrical connection	Cable with connector
Voltage type	DC
With monitoring function of downstream devices	No



## **ELECTRICAL DATA**

With muting function	No
With restart lock	No


## **OPTICAL DATA**

Min. distance	0.3 m
Protected field range	4 m
Resolution of the light curtain	12 mm

### **OTHER DATA**

Explosion protection category for dust	None
Explosion protection category for gas	None
Reduced resolution	No
Scope of delivery of the one-way system	Transmitter and receiver
With beam coding	No


## **CONNECTION**

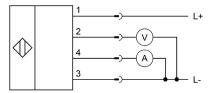

**Colors:** 1 = BN (brown), 2 = WH (white), 3 = BU (blue), 4 = BK (black)

**Functions:** 1 = L+, 2 = 0-10V, 3 = L-, 4 = 4-20mA

## **DIMENSIONAL DRAWING**

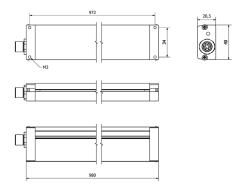

## **INSTALLATION**



Mounting / Installation may only be carried out by a qualified electrician!

## **DISPOSAL**



# **SAFETY WARNINGS**

Before initial operation, please make sure to follow all safety instructions that may be provided in the product information!

