Frequency voltage current converter

KFU8-FSSP-1.D-Y322444



CE

Model Number

KFU8-FSSP-1.D-Y322444

Frequency voltage current converter 40 kHz version

Features

- Limit frequency 40 kHz
- Voltage or current ouptput •
- Incrementing output ٠ (Spacing factor 1 ... 9999)
- 2-, 3-, 4-wire sensors and rotary encoder can be connected
- Auxiliary power output for sensors
- Connection via Power Rail •
- Period measurement ٠
- Display: Input in Hz or 1/min, output in V or mA
- adjustable updating of indication (0,001 ... 2,5 s)

Technical data		
Functional safety related param	eters	
MTTF _d		100 a
Supply		
Rated voltage	U,	20 30 V DC
Fusing	•	external fusing 4 A
Power consumption		< 5 W
Indicators/operating means		
Туре		4-digit, 7-segment red display, 7 mm digit height
Display interval		0.002 9999 Hz or 0.01 9999 min ⁻¹
Parameter assignment		keypad-driven menu
Input 2		
Switching point		high: 16 30 V DC; max.10 mA; $R_i \cong$ 3 kOhm low: 0 6 V DC
Connection		terminals 7+, 13- sensor supply terminals 14, 15 NPN/PNP input (galvanically isolated)
Connectable sensor types		2-, 3-, or 4-wire proximity switches and incremental rotary enco- der
Sensor supply		Rated voltage - 1.5 V non-stabilised; \leq 30 mA short-circuit protected
Output		
Analog voltage output		0 10 V DC; 2 10 V DC; 30 mA max.; resolution: 12 mV; R_{j} \cong 330 Ω (terminal 5+, 6-)
Analog current output		0 20 mA; 4 20 mA; resolution: 25 μ A; R_i \leq 600 Ω (terminal 4- , 5+)
Digital incrementing		\geq (U _b -3 V), 20 mA, short-circuit proof (Terminals 1-, 2+) with frequency division F _{in} /1 F _{in} /9999
Transfer characteristics		
Input frequency		\leq 40000 Hz, pulse pause/pulse length: \geq 12 μ s
Deviation		\leq 0.2 % of full-scale value
Changing interval		5 ms (Internal processing time)
Standard conformity		
Electromagnetic compatibility		acc. to EN 50081-2 / EN 50082-2
Ambient conditions		
Ambient temperature		-25 40 °C (-13 104 °F)
Storage temperature		-40 85 °C (-40 185 °F)
Relative humidity		max. 80 %, not condensing
Altitude		0 2000 m
Operating conditions		The device has only to be used in an indoor area.
Mechanical specifications		
Connection assembly		Caution: Please be aware that the device may only be connected to a switchable power supply. The switch or circuit breaker must be easy to reach and identified as the separator for the device.

IP20

Degree of protection Connection

Construction type

Mounting

removable terminals , max. core cross section 0.2 $\rm mm^2 \ldots 2.5$ $\rm mm^2$ modular terminal housing in Makrolon, System KF For use in the switch cabinet/switch cabinet module snap-on to 35 mm standard rail or screw fixing

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com


Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com




1

Dimensions

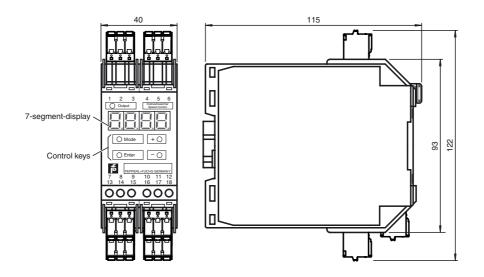

Electrical connection

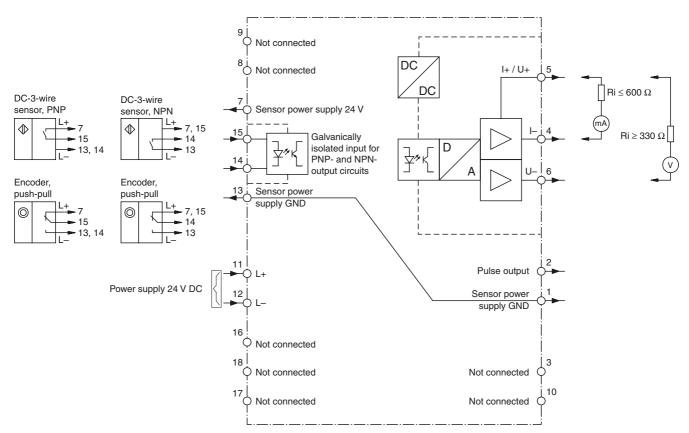

2

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com



Function

The KFU8-FSSP-1.D-Y frequency-voltage/current converter is a device for displaying and monitoring periodic signals, which occur in almost all areas of the automation and processing industry, i.e. frequencies in general and rotational speeds in particular.

Input pulses are evaluated according to the cycle method, i.e. by measurement of the periodicity, and are converted into a frequency or rotational speed by a µ controller. Depending on the measurement range value selected, the µ controller calculates a voltage or current value proportionate to the input frequency and exports this value via a digital-analog converter.

The following analogue signals are available for selection: 0 V... 10 V, 2 V... 10 V, 0 mA ... 20 mA, 4 mA ... 20 mA.

The serially switched output provides the input frequency which can be subdivided by the adjustable factor (1 ... 9999).

Special consideration was given to the frequently occurring special case of rotational speed measurement during the development of the device. This makes it possible for the display and inputs to be either Hz or in min⁻¹.

In addition, in applications with signal encoders that return multiple pulses per revolution, it is possible to operate automatically at the actual speed of the drive by assigning the number (1 ... 1200).


The frequency/voltage/current converter is supplied with 24 VDC.

All commonly available two- three- or four-wire proximity switches and incremental encoders on the input galvanically separated by an optical coupler are accepted as a signal source.

The input signal frequency in Hz or the speed in min⁻¹ - or the output signal voltage in V or current in mA - appears in a 4-place 7-segment LED display on the front of the device. Parameters can be set with 4 buttons underneath the display.



Function description

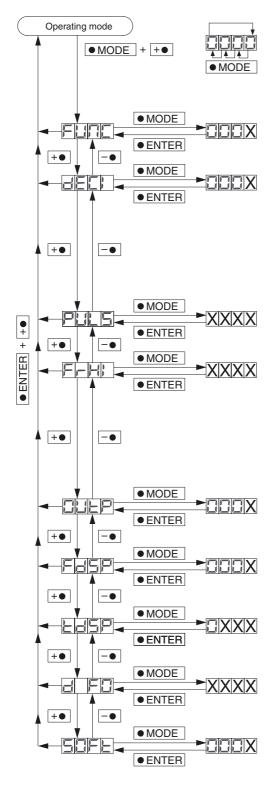



Function selection:

X=0: Frequency measurement 0.002 Hz...9999 Hz X=1: Speed measurement 0.01 min⁻¹...9999 min⁻¹ Factory set: X = 1

Display and measurement range: $0 \le X \le 3$ at frequency measurement $0 \le X \le 2$ at speed measurement Factory set: X = 0

Х	Frequency [Hz]		Speed [min ⁻¹]	
0000	0 9999			
000.1	0 999.9			
00.02	0 99.99			
0.003	0 9.999		-	

Signal divider:

Number of signals per rotation (is ignored during frequency measurement) $1 \le XXXX \le 1200$, Factory set: XXXX = 1

Measurement range final value: Frequency or speed, by which 10 V or 20 mA are applied to the analog output. $0 \le XXXX \le 9999$, Factory set: XXXX = 9999 Teach in of the current frequency or speed value as a measurement range final value by pressing the "MODE" button and then the "ENTER" button.

X	Analog output
0	0 V 10 V
1	2 V 10 V
2	0 mA 20 mA
3	4 mA 20 mA

Factory set: X = 0

Display:

X=0: Frequency or speed X=1: Voltage display or current display Factory set: X = 0

Display rate: 0.01 s \leq X.XX \leq 2.5 s Factory set: X.XX = 0.33 s

Division factor for pulse output: $1 \le XXXX \le 9999$ Factory set: XXXX = 1

Software-version number: Can only be read.

Pepperl+Fuchs Group www.pepperl-fuchs.com



4