



Model Number

SB4 Module 4CP/165

Safety control unit module
Module for Evaluation unit SafeBox - series SB4

Features

- Sensor module
- 4 sensor channels
- Single module for safety thru-beam sensors SLA12 and SLA29 and for 2 channel safety devices (emergency off)
- Micro-Controller controls
- Operating mode can be selected by means of DIP switches
- Screw terminals or spring terminals

Accessories

SB4 Cape
cover sheet

SB4 Housing 2
Empty housing for Evaluation unit SB4

SB4 Housing 3
Empty housing for Evaluation unit SB4



SB4 Housing 4
Empty housing for Evaluation unit SB4

SB4 Housing 5
Empty housing for Evaluation unit SB4


SB4 Housing 6
Empty housing for Evaluation unit SB4

SB4 Housing 8
Empty housing for Evaluation unit SB4


Dimensions

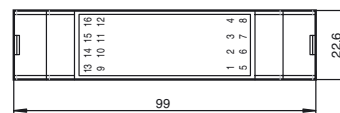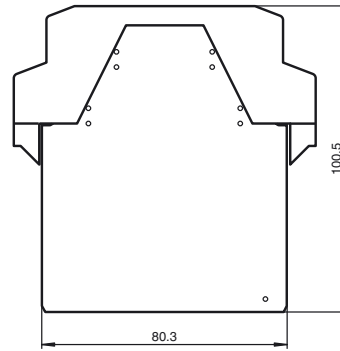

Electrical connection

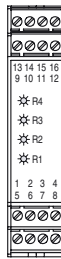

Terminal	Function	Channel assignment
1	Receiver 2 input	Input
2	Receiver 2 +U	Channel 2
3	Transmitter 2 +U	Output
4	Transmitter 2 output	Channel 2
5	Receiver 1 input	Input
6	Receiver 1 +U	Channel 1
7	Transmitter 1 +U	Output
8	Transmitter 1 output	Channel 1
9	Transmitter 3 output	Output
10	Transmitter 3 +U	Channel 3
11	Receiver 3 +U	Input
12	Receiver 3 input	Channel 3
13	Transmitter 4 output	Output
14	Transmitter 4 +U	Channel 4
15	Receiver 4 +U	Input
16	Receiver 4 input	Channel 4

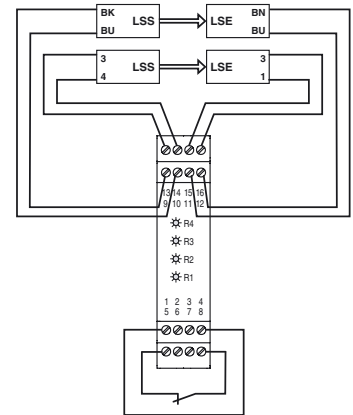

Connection example
(LSS = transmitter of light barrier; LSE = receiver of light barrier)

Technical data

General specifications

Operating mode simultaneousness, antivalence

Functional safety related parameters

Safety Integrity Level (SIL)	SIL 3
Performance level (PL)	PL e
Category	Cat. 4
Mission Time (T _M)	20 a
Type	4

Indicators/operating means

Function indicator	LED yellow (4x): indicator lamp channel 1 ... 4
Pre-fault indicator	LED yellow flashing: Indicator lamp channel 1 ... 4
Control elements	DIP-switch

Electrical specifications

Operating voltage U_B 24 V DC ± 20 % , via SB4 Housing

Input

Activation current approx. 7 mA

Conformity

Functional safety	ISO 13849-1 ; EN 61508 part1-4
Product standard	EN 61496-1

Ambient conditions

Ambient temperature	0 ... 50 °C (32 ... 122 °F)
Storage temperature	-20 ... 70 °C (-4 ... 158 °F)

Mechanical specifications

Degree of protection	IP20
Connection	Cage tension spring terminals , Cable cross-section 0.2 ... 1.5 mm ²
Material	

Release date: 2017-12-05 15:19 Date of issue: 2017-12-05 206761_eng.xml

Housing	Polyamide (PA)
Mass	approx. 150 g
Approvals and certificates	
CE conformity	CE
UL approval	cULus
TÜV approval	TÜV

The operation of this module is possible only within a control unit of the type SafeBox SB4.

Is the operating instruction of the SafeBox pay attention.

Function

The 4-channel sensor card module SB4-4CP makes it possible to connect light barriers or light grids or contact safety sensors in a one or two-channel version. In addition it contains the Micro-Controller controls of the SafeBox.

This version only exists once in a system and is always located in slot 2 of the SafeBox. The module is supplied with plug-in jumper. If additional modules are used, this plug-in jumper must be moved.

There is a plug-in jumper on the module. If the system contains further units, this plug-in jumper onto the last slot must be moved.

When the system is switched on, the software determines whether a light barrier or a contact safety sensor is switched on at a channel and monitors its presence during operation. Safety sensors with switching contacts, which are connected to the Safe-Box, must operate in the switching mode "normally closed". An open contact means "safe status".


The channels 1 and 2 as well as 3 and 4 (and 5 and 6) can be monitored for simultaneousness or antivalence. If simultaneousness monitoring is activated, 2 channel safety equipment is monitored for simultaneous opening or changing of the signals. The monitoring time is 2 s.

Antivalence monitoring expects the normally closed contact at channel 1 or 3 (or 5) and the normally open contact at channel 2 or 4 (or 6). If antivalence monitoring is performed without simultaneousness monitoring, an incorrect contact position causes a switch-off and the error message 7 after approx. 60 s .

Operation types

The assembly contains 4 DIP switches for selecting the simultaneousness functions of neighbouring channels (1 and 2, 3 and 4) and for an antivalent evaluation of neighbouring channels (1 and 2, 3 and 4 or also 5 and 6). For selecting functions, 2 selector switches must always be actuated. The functions are not effective if light barriers are connected.

Position of the DIP switches

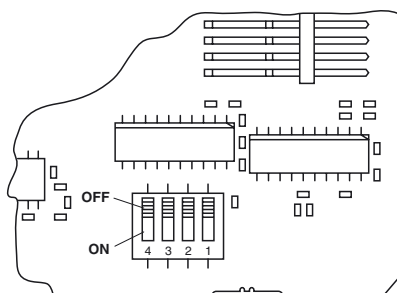

Switch	Position	Operation type
1 and 3	OFF	No antivalent evaluation
	ON	Antivalent evaluation active
2 and 4	OFF	No simultaneousness evaluation
	ON	Simultaneousness evaluation active

Display

For each channel, there is a yellow LED on the front panel of the module.

Display	LED	Meaning
R1 - R4	yellow	Status of light barrier 1 ... 4 Off: light beam interrupted On: light beam released Flashing (2.5 Hz): light beam released, function reserve fallen short of Flashing (5 Hz): error

Release date: 2017-12-05 15:19 Date of issue: 2017-12-05 206761_eng.xml