







Model Number

UC500-30GM70S-2E2R2-V15


Ultrasonic diffuse sensor with pivoting transducer

Features

- · 2 switch outputs
- Synchronization options
- **Temperature compensation**
- Can be parameterized via the ULT-RA-PROG-IR software and interface (accessories)

Diagrams

Characteristic response curve

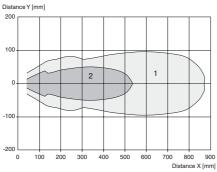



Date of issue: 2016-02-12 238379_eng.xml

Release date: 2016-02-12 15:23

Curve 1: flat surface 100 mm x 100 mm Curve 2: round bar, Ø 25 mm

Technical data

General specifications	
Sensing range	45 500 mm
Adjustment range	50 500 mm
Dead band	0 45 mm
Standard target plate	100 mm x 100 mm
Transducer frequency	approx. 300 kHz
Response delay	≤ 60 ms

Response delay Nominal ratings

Temperature drift ≤ ± 1.5 % of full-scale value

Time delay before availability t < 85 ms

Limit data

Permissible cable length max. 300 m

Indicators/operating means

LED yellow solid Switching state switch output 1 yellow: switching state switch output 2 green: Teach-In LED green/yellow

Switching output 1 and Switching output 2 adjustable Potentiometer

Electrical specifications

Rated operating voltage Ue Operating voltage U_B 12 ... 30 V DC (including ripple)

Ripple < 10 % No-load supply current I₀ ≤ 50 mA

Interface

Interface type Infrared Mode point-to-point connection

Input/Output

1 synchronization connection, bidirectional (Factory setting: Input/output type

synchronized mode) / Teach-In input

0 Level ≤ 3 V 1 Level \geq 15 V typ. 900 Ω Input impedance Number of sensors max. 10

Switching output

2 switch outputs PNP, NO (NC contact programmable Output type

Default setting 50 ... 500 mm (adjustable via potentiometer)

Repeat accuracy R

Operating current I_L Per 150 mA, short-circuit/overload protected

< 5 Hz Switching frequency

Switching hysteresis 5 mm (programmable)

Voltage drop ≤ 3 V Off-state current \leq 10 μ A

Ambient conditions

-25 ... 70 °C (-13 ... 158 °F) Ambient temperature -40 ... 85 °C (-40 ... 185 °F) Storage temperature Shock resistance 30 g , 11 ms period

10 ... 55 Hz , Amplitude ± 1 mm Vibration resistance

Mechanical specifications

Connection type Connector M12 x 1, 5-pin

Degree of protection **IP65**

Material

Housing brass, nickel-plated

Transducer epoxy resin/hollow glass sphere mixture; polyurethane foam

Installation position any position Mass 170 g Construction type Cylindrical

Compliance with standards and directives

Standard conformity

Standards EN 60947-5-2:2007 + A1:2012 IEC 60947-5-2:2007 + A1:2012


Approvals and certificates

cULus Listed, General Purpose **UL** approval CSA approval cCSAus Listed, General Purpose


CCC approval CCC approval / marking not required for products rated

≤36 V

Dimensions

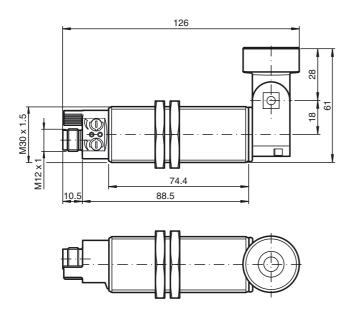

Electrical Connection



Pinout




Wire colors in accordance with EN 60947-5-2

1	BN	(brown
2	WH	(white)
3	BU	(blue)
4	BK	(black)
5	GY	(gray)

Additional Information

Switching outputs operating mode

Switching output mode

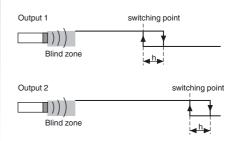

FPEPPERL+FUCHS

Accessories

BF 30

Mounting flange, 30 mm

BF 5-30

Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm

V15-G-2M-PUR

Female cordset, M12, 5-pin, PUR cable

UC-18/30GM-IR

Interface cable


ULTRA-PROG-IR

Configuration software for ultrasonic sensors

Description of Sensor Functions

Displays and Controls

The sensor has two potentiometers and two display LEDs.

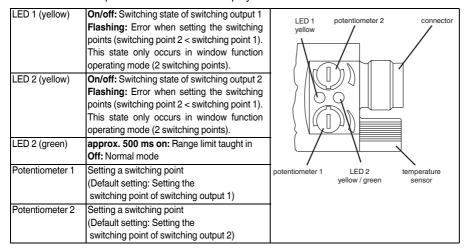

Setting the Sensor Using the Potentiometers


The sensor is equipped with two potentiometers. These potentiometers are assigned to the two switching outputs by default. The switching outputs operate in switching point mode by default. Potentiometer P1 is used to set the switching point on switching output 1. Potentiometer P2 is used to set the switching point on switching output 2.

Note:

The function of the potentiometer can be altered using the ULTRA-PROG-IR software. As soon as a configuration has been changed, the potentiometer function selected using ULTRA-PROG-IR is activated.

Parameterization via ULTRA-PROG-IR

In order to be able to set the sensor parameters and adjust the sensor to the respective application, the sensor is able to communicate with a PC via the integrated infrared interface. The UC-18/30GM-IR interface cable is required to allow communication via this method. This cable is connected to an unused USB port on the PC.



The ULTRA-PROG-IR parameterization software is also required for setting the sensor parameters. The ULTRA-PROG-IR software can be downloaded for free from the **www.pepperl-fuchs.com** website. The software allows all open parameters to be set, including:

- All trip points and switching hystereses
- Output modes and behaviors
- Delay times
- Settings and setting ranges of the potentiometer
- Settings for teach-in and synchronization
- Definition of blind zones
- Sensor modes and measurement methods
- Filtering measurement values

The following service functions are also available:

- Observing and recording measurement values
- Diagnosing interference reflections



Teach-in

The sensor is equipped with a function input (XI). In order to teach in a limit value, this sensor must be parameterized as the Teach-in input using the ULTRA-PROG-IR parameterization software. This parameterization software allows you to specify what limit value is taught in.

Note

The Teach-in function is not activated when the sensor is delivered.

Description of the Teach-in process:

- 1. Position an object at the required distance.
- 2. Connect the Teach-in input to L-.
 - The green LED lights up briefly after approx. 3 seconds. This indicates that the required distance has been successfully saved.
- 3. Disconnect the Teach-in input from L-.

Noto

If the Teach-in input remains connected to L-, the Teach-in process is repeated every 3 seconds.

Synchronization

The sensor features a function input (XI). Using the ULTRA-PROG-IR parameterization software, this function input can be configured as a synchronization input to suppress mutual interference from external ultrasonic signals. This is illustrated in the following description. If the synchronization input is not connected, the sensor operates with internally generated cycle pulses.

External synchronization

The sensor can be synchronized by applying external rectangular pulses. The pulse duration must be \geq 100 μ s. Each rising pulse edge sends an individual ultrasonic pulse. If the signal at the synchronization input is high, the sensor reverts to the normal, unsynchronized operating mode. If a low signal is applied to the synchronization input, the sensor switches to standby. In this operating mode, the last recorded output statuses are retained.

Internal synchronization

Common mode operation

Up to ten sensors can be synchronized with each other. To do this, the synchronization inputs of the individual sensors are connected to each other. When configured in this state, all of the sensors send the ultrasonic signals together at the same time. The cycle rate corresponds to the cycle rate of the sensor with the lowest rate.

Multiplex mode

Up to ten sensors can work in multiplex mode; i.e. the sensors send their ultrasonic signals in succession. This prevents the sensor signals interfering with each other. In multiplex mode, the synchronization inputs of all sensors are connected to each other. An address must also be assigned to each sensor using the ULTRA-PROG-IR parameterization software, and the number of sensors to be synchronized must be determined. To start multiplex mode, all sensors are commissioned together by switching on the power supply.