



Installation- and Operating instructions for

CU8880-0010

Ethernet Controller with USB Input

Version: 1.4

Date: 2018-04-12

BECKHOFF

Table of contents

1. General instructions	2
Notes on the Documentation	2
Liability Conditions	2
Trademarks	2
Patent Pending	2
Copyright	2
State at Delivery	2
Delivery conditions	2
Description of safety symbols	3
2. Product Description	4
Product Overview	4
Power Supply	5
Data connectors	5
USB type B Port (X20) (standard-cable)	5
RJ 45-Port (X10) (standard CAT5-cable)	5
LED Diagnostics	6
3. Installation Instructions	7
Transport and Unpacking	7
Transport	7
Unpacking	7
Mounting / Unmounting	8
Connecting devices	9
Connecting cables	9
4. Operating Instructions	10
Configuration	10
5. Appendix	11
Assembly dimensions	11
Service and Support	12
Beckhoff's branch offices and representatives	12
Beckhoff headquarters	12
Beckhoff Support	12
Beckhoff Service	12
Technical data	13
Approvals for USA and Canada	13
FCC: Federal Communications Commission Radio Frequency Interference Statement	13
FCC: Canadian Notice	13

General instructions

Notes on the Documentation

This description is only intended for the use of trained specialists in control and automation engineering who are familiar with the applicable national standards. It is essential that the following notes and explanations are followed when installing and commissioning these components.

The responsible staff must ensure that the application or use of the products described satisfy all the requirements for safety, including all the relevant laws, regulations, guidelines and standards.

Liability Conditions

The documentation has been prepared with care. The products described are, however, constantly under development. For that reason the documentation is not in every case checked for consistency with performance data, standards or other characteristics. In the event that it contains technical or editorial errors, we retain the right to make alterations at any time and without warning. No claims for the modification of products that have already been supplied may be made on the basis of the data, diagrams and descriptions in this documentation.

All pictures shown in the documentation are exemplary. Illustrated configurations can differ from standard.

Trademarks

Beckhoff®, TwinCAT®, EtherCAT®, Safety over EtherCAT®, TwinSAFE® and XFC® are registered trademarks of and licensed by Beckhoff Automation GmbH.

Other designations used in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owners.

Patent Pending

The EtherCAT Technology is covered, including but not limited to the following patent applications and patents:

EP1590927, EP1789857, DE102004044764, DE102007017835

with corresponding applications or registrations in various other countries.

The TwinCAT Technology is covered, including but not limited to the following patent applications and patents:

EP0851348, US6167425 with corresponding applications or registrations in various other countries.

Copyright

© Beckhoff Automation GmbH & Co.KG.

The reproduction, distribution and utilization of this document as well as the communication of its contents to others without express authorization are prohibited. Offenders will be held liable for the payment of damages. All rights reserved in the event of the grant of a patent, utility model or design.

State at Delivery

All the components are supplied in particular hardware and software configurations appropriate for the application. Modifications to hardware or software configurations other than those described in the documentation are not permitted, and nullify the liability of Beckhoff Automation GmbH & Co.KG.

Delivery conditions

In addition, the general delivery conditions of the company Beckhoff Automation GmbH & Co.KG apply.

Description of safety symbols

The following safety symbols are used in this operating manual. They are intended to alert the reader to the associated safety instructions.



Danger

This symbol is intended to highlight risks for the life or health of personnel.



Warning

This symbol is intended to highlight risks for equipment, materials or the environment.



Note

This symbol indicates information that contributes to better understanding.

Product Description

Product Overview

View of the CU8880-0010




The CU8880-0010 USB-to-LAN adapter places an additional industrially-suited and independent Ethernet interface at the user's disposal. In this way, four or more Ethernet interfaces can be implemented, depending on the system configuration. The CU8880-0010 is used for necessary IT communication, so that the respective on-board Ethernet interfaces are available for EtherCAT or real-time Ethernet communication.

- user-friendly installation via integrated top hat rail adapter
- power supply via USB - no supply voltage necessary
- compact industrial design
- clear quick diagnosis by separate LEDs.

Power Supply

Power supply via USB-port

The Ethernet controller does not need any additional power supply. The power supply (5 V DC) is realized by the USB connector. The LED P20 lights green when power supply is connected.

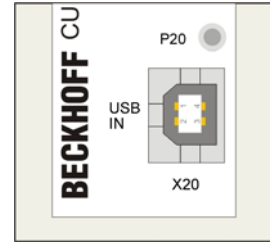


Data connectors

The connector are 1 USB port Type B and a RJ45-connector. The pins are described below:

USB type B Port (X20) (standard-cable)


USB type B Port

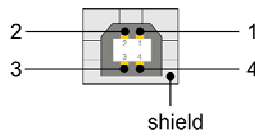

Pin	Signal
1	VCC
2	Data -
3	Data +
4	GND
shield	shield

RJ 45-Port (X10) (standard CAT5-cable)


RJ 45 Port

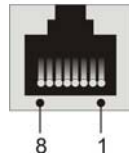

Pin	Signal
1	TX+
2	TX-
3	RX+
4	n.c.
5	n.c.
6	RX-
7	n.c.
8	n.c.

LED Diagnostics

LED Diagnostics

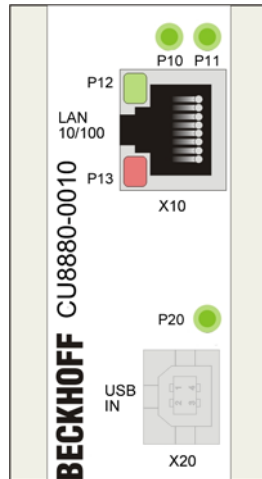

The following table shows the possible states for the LEDs:

LED	Assignment	Status	Meaning
P20	power supply	off	no power supply connected
		lights green	5 V _{DC} via USB-Port
P10	Ethernet port	off	
		lights green	Ethernet Collision
P11	Ethernet port	off	
		lights yellow	Ethernet full duplex
P12	Ethernet port	off	
		lights	Ethernet Link
P13	Ethernet port	off	Ethernet Speed 10MBit
		lights	Ethernet Speed 100MBit

Installation Instructions

Please also refer to chapter [General instructions](#).

Transport and Unpacking

The specified storage conditions must be observed (see chapter [Technical data](#)).

Transport

Despite the robust design of the unit, the components are sensitive to strong vibrations and impacts. During transport, the unit should therefore be protected from excessive mechanical stress. Therefore, please use the original packaging.



Warning

Danger of damage to the unit!

If the device is transported in cold weather or is exposed to extreme variations in temperature, make sure that moisture (condensation) does not form on or inside the device.

Prior to operation, the unit must be allowed to slowly adjust to room temperature. Should condensation occur, a delay time of approximately 12 hours must be allowed before the unit is switched on.

Unpacking

Proceed as follows to unpack the unit:


1. Remove packaging.
2. Do not discard the original packaging. Keep it for future relocation.
3. Check the delivery for completeness by comparing it with your order.
4. Please keep the associated paperwork. It contains important information for handling the unit.
5. Check the contents for visible shipping damage.
6. If you notice any shipping damage or inconsistencies between the contents and your order, you should notify Beckhoff Service.

Mounting / Unmounting

The CU8880-0010 can be snapped onto a 35 mm mounting rail conforms to EN 50022.


Mounting the Ethernet Controller

Just push the unit on the upper side under the rail (**figure 1**) and snap in the lower side as shown below (**figure 2**):

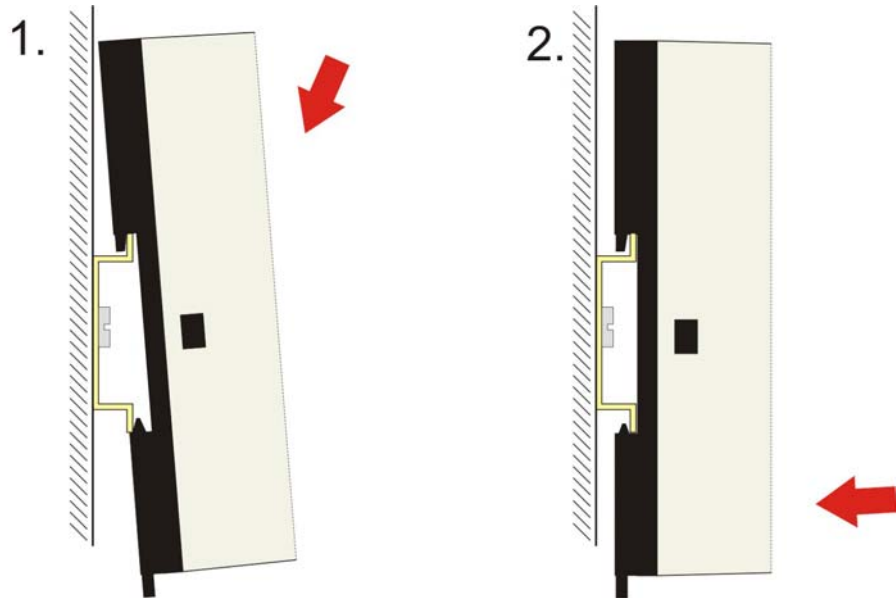

Unmounting the Ethernet Controller

To release the CU8880-0010 from the mounting rail pull down the locking clip with a screwdriver (**figure 1**) and pull off the device from the rail (**figure 2**):

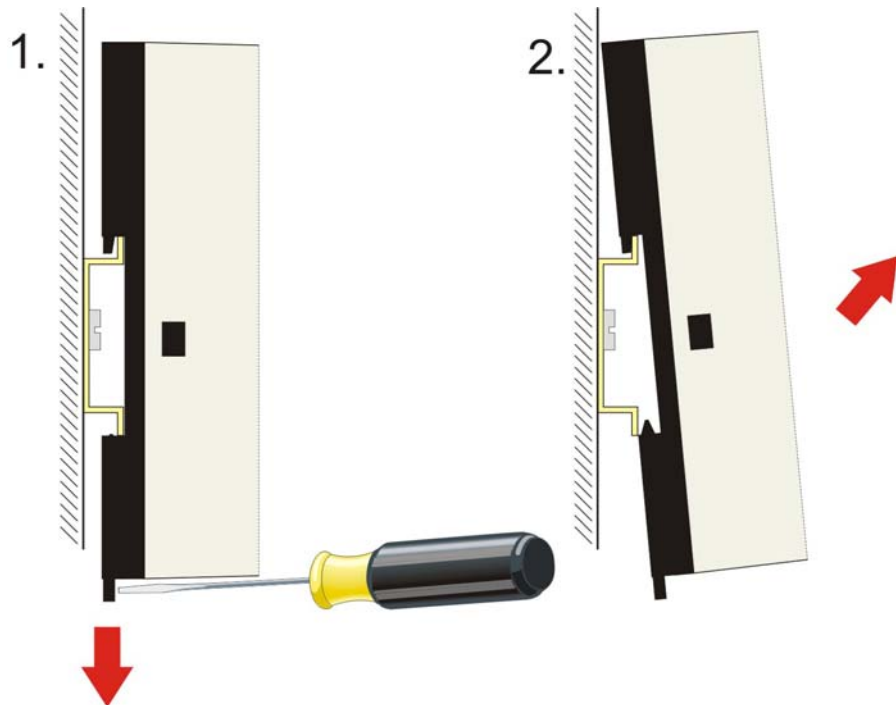

**Warning**

Connecting devices

The power supply plug must be withdrawn!

Please read the documentation for the external devices prior to connecting them.

During thunderstorms, plug connector must neither be inserted nor removed.

When disconnecting a plug connector, always handle it at the plug. Do not pull the cable!

Connecting cables

The connections are documented in the section [Product Description](#).

When connecting the cables to the CU8880-0010, proceed according to the following sequence:

- Switch off all the devices that are to be connected.
- Disconnect all the devices that are to be connected from the power supply.
- Connect all the cables between the CU8880-0010 and to the devices that are to be connected.
- Reconnect all devices to the power supply.

Operating Instructions

Configuration




Note

The provided CD contains the according configuration software.

Appendix

Assembly dimensions

The product is characterized by small overall installed size. With a height of approx. 100 mm, the module dimensions exactly match those of the Beckhoff Bus Terminals. Together with the lowered connector surfaces, this means that it can be used in a standard terminal box with a height of 120 mm.

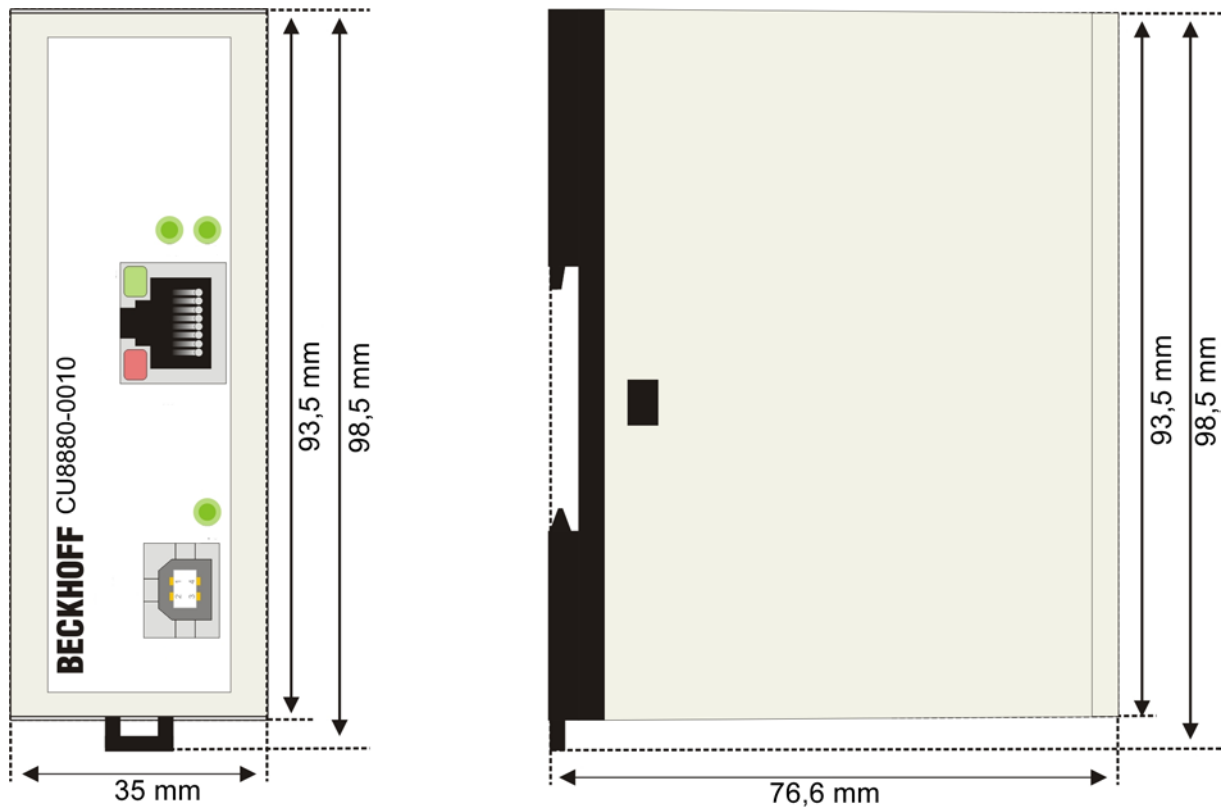

Service and Support

Beckhoff and their partners around the world offer comprehensive service and support, making available fast and competent assistance with all questions related to Beckhoff products and system solutions.

Beckhoff's branch offices and representatives

Please contact your Beckhoff branch office or representative for [local support and service](#) on Beckhoff products!

The addresses of Beckhoff's branch offices and representatives round the world can be found on her internet pages:

<http://www.beckhoff.com>

You will also find further [documentation](#) for Beckhoff components there.

Beckhoff headquarters

Beckhoff Automation GmbH & Co. KG
Huelshorstweg 20
D-33415 Verl
Germany

Phone: +49(0)5246/963-0
Fax: +49(0)5246/963-198
e-mail: info@beckhoff.com

Beckhoff Support

Support offers you comprehensive technical assistance, helping you not only with the application of individual Beckhoff products, but also with other, wide-ranging services:

- world-wide support
- design, programming and commissioning of complex automation systems
- and extensive training program for Beckhoff system components

Hotline: +49(0)5246/963-157
Fax: +49(0)5246/963-9157
e-mail: support@beckhoff.com

Beckhoff Service

The Beckhoff Service Center supports you in all matters of after-sales service:

- on-site service
- repair service
- spare parts service
- hotline service

Hotline: +49(0)5246/963-460
Fax: +49(0)5246/963-479
e-mail: service@beckhoff.com

Quote the project number

If servicing is required, please quote the **project number** of your Industrial PC.

Technical data

Number of ports	1	USB-input type B
	1	Ethernet interface with 10/100BASE-T-connector RJ45
Supported USB standard	USB 2.0	
Status display	5 LEDs	
USB wiring length	maximum 1 meter	
Power supply	power supply via USB input connector	
Max. current input from 5 V USB	maximum 500 mA at 5V DC	

The following conditions must be observed during operation:

Environmental conditions	Ambient temperature:	0 to 55°C (operation) -25°C to +70°C (transport/ storage)
	Atmospheric humidity:	Maximum 95%, non-condensing
Vibration/ Shock resistance	EN 60068-2-6 / EN 60068-2-27	
EMC resistance burst/ ESD	EN 60000-6-2 / EN 60000-6-4	
Protection class	IP20	

Do not use the CU8880-0010 in areas of explosive hazard

The Ethernet Controller may not be used in areas of explosive hazard.

Dimensions (W x H x D)	app. 35 mm x 98,5 mm x 76,6 mm (with mounting for DIN rail)	
Weight	app. 95 g	
Assembly	on 35 mm mounting rail conforms to EN 50022	
Installation position	any	
Approvals	CE	

Approvals for USA and Canada

FCC: Federal Communications Commission Radio Frequency Interference Statement

FCC Approval for USA

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

FCC: Canadian Notice

FCC Approval for Canada

This equipment does not exceed the Class A limits for radiated emissions as described in the Radio Interference Regulations of the Canadian Department of Communications.