


# **Electrical connection**

#### IN1 ¦ l+1 1.2 AS-Interface 7 $\Diamond$ **♦** 11 1.3 0 I-1 AS-Interface <u>IN2</u> for 3-wire sensors ¢ l+2 2.2 2.3 0 I-2 1/ nput <u>IN3</u> 3.1 3.2 3.2 13 3.3 13 3.3 13 1.3 25 <u>| IN4</u> 4.1 4.1 4.2 4.2 14 PWR/FAULT 4.3 4.3 6 I-4 <u>OUT1</u> 1.2 01 1.3 0-1 Load OUT2 Output 2.2 90.5 2.3 ¢ O-2 <u>OUT3</u> 3.2 О3 3.3 AUX O-3 ⊢₿ AUX-AUX

# Indicating / Operating means

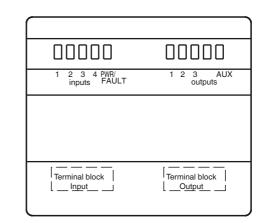

### Model number

### VBA-4E3A-G4-ZE/E2

G4 module IP65 4 inputs (PNP) and 3 electronic outputs

#### Features

- Degree of protection IP65 ٠
- A/B slave with extended addressing • possibility for up to 62 slaves
- Flat or round cable connection (via ٠ standardized EEMS base, not included with delivery)
- Cable piercing method for flat cable •
- Inputs for 2- and 3-wire sensors
- Power supply of outputs from the external auxiliary voltage
- Power supply of inputs from the mo-• dule
- Function display for bus, ext. auxiliary ٠ voltage, inputs and outputs
- LED indicator for overload on sensor • supply

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com fa-info@us.pepperl-fuchs.com

USA: +1 330 486 0001

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



1

# AS-Interface sensor/actuator module

#### **Technical data** General specifications Slave type A/B slave AS-Interface specification V3.0 Required master specification ≥ V2.1 UL File Number E223772 Indicators/operating means I ED PWR/FAULT dual LED green/red green: AS-Interface voltage red: communication error or address 0 green/red flashing: overload sensor supply or outputs LED AUX ext. auxiliary voltage UAUX ; LED green LED IN switching state (input); 4 LED yellow LED OUT Switching state (output); 3 LED yellow **Electrical specifications** U<sub>AUX</sub> 24 V DC ± 15 % PELV Auxiliary voltage (output) Rated operating voltage 26.5 ... 31.6 V from AS-Interface Ue Rated operating current $\leq$ 40 mA (without sensors) / max. 240 mA Protection class $U_{AUX}, U_{in}$ : Over voltage category III, safe isolated power supplies (PELV) Surge protection Input Number/Type 4 inputs for 2- or 3-wire sensors (PNP), DC from AS-Interface Supply Voltage 21 ... 31 V $\leq$ 180 mA (T\_B $\leq$ 40 °C), $\leq$ 140 mA (T\_B $\leq$ 60 °C), short-circuit protected Current loading capacity ≤ 9 mA (limited internally) Input current according to DIN EN 61131-2 (Type 2) Switching point 0 (unattenuated) $\leq 3 \text{ mA}$ 1 (attenuated) $\geq 5 \text{ mA}$ Output Number/Type 3 electronic outputs, PNP, overload and short-circuit proof Supply from external auxiliary voltage UAUX Current 4 A total OUT 1, OUT 2: 2 A per output OUT 3: 1.5 A ≥ (U<sub>AUX</sub> - 0.5 V) Voltage Directive conformity Electromagnetic compatibility Directive 2014/30/EU EN 62026-2:2013 Standard conformity Degree of protection EN 60529:2000 Fieldbus standard EN 62026-2:2013 Input EN 61131-2:2007 Emitted interference EN 61000-6-4:2007 EN 62026-2.2013 AS-Interface Noise immunity EN 61000-6-2:2005 Programming instructions Profile S-7.A.0 IO code 7 ID code A ID1 code 7 ID2 code 0 Data bits (function via AS-Interface) input output IN1 OUT1 D0 D1 IN2 OUT2 D2 IN3 OUT3 D3 IN4 Parameter bits (programmable via AS-i) function P0 not used P1 not used P2 not used P3 not used Ambient conditions -25 ... 60 °C (-13 ... 140 °F) Ambient temperature -25 ... 85 °C (-13 ... 185 °F) Storage temperature Relative humidity 85 %, noncondensing Climatic conditions For indoor use only Altitude ≤ 2000 m above MSL Pollution degree 3 **Mechanical specifications** IP65 Degree of protection

## Function

The VBA-4E3A-G4-ZE/E2 is an AS-Interface coupling module with four inputs and three outputs. Mechanical contacts and 2- and 3wire sensors can be connected to the inputs. The sensors are supplied via the module. The outputs are electronic outputs, which can be loaded to 24 V DC and 2 A or 1.5 A per output (total load < 4 A).

The G4 module is especially suitable for rough conditions. Sensors and actuators attach to cable glands and cage tension spring terminals thus making the installation especially user-friendly. For pre-addressing the module it can be plugged directly onto the adapter of the hand-held programming device VBP-HH1.

The current switching state of each channel is indicated by an LED, located on the module's top side. In the case of communication errors on the bus, the outputs are de-energised via an integrated watchdog.

Both flat and round cables can be used for the AS-Interface transmission line and the external 24 V DC power supply. Use the U-G1FF base for the AS-Interface flat cable. The AS-Interface standardised EEMS interface, uses the cable piercing method to connect both the yellow and black flat cables.

Use the U-G1PP base for the round cable. The AS-Interface-cable as well as the external power supply may be connected within this base.

#### Note:

The device incorporates communication monitoring, which switches off power to the outputs if no communication has taken place on the AS-Interface line for longer than 40 ms.

An overloading of the internal input supply or of the outputs is signalled to the AS-Interface master via the "Peripheral fault" function. Communication via the AS-Interface remains intact.

#### Accessories

VBP-HH1-V3.0-KIT AS-Interface Handheld with accessory

#### VBP-HH1-V3.0

AS-Interface Handheld

# VAZ-G4-B1

# Blind plug M12

#### Matching system components

#### U-G1FF

AS-Interface module mounting base for connection to flat cable (AS-Interface and external auxiliary power)

#### U-G1PP

AS-Interface module mounting base for connection to round cable (AS-Interface and external auxiliary power)

2

Germany: +49 621 776 4411

fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs



# VBA-4E3A-G4-ZE/E2

Connection	yellow flat cable/black flat cable or standard round cable inputs/outputs:M12 x 1.5 cable glands and cage tension spring terminals
Material	
Housing	PA 6 GF30
Mass	350 g
Tightening torque, housing screws	0.8 Nm
Mounting	DIN rail or screw mounting

# Notes

Do not connect inputs and outputs, which are supplied via the module from AS-interface or via auxiliary power, with power supply and signal circuits with external potentials.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

