A COMPANY	General specifications	
	Sensing range	80 2000 mm
	Adjustment range Dead band	120 2000 mm 0 80 mm
	Standard target plate	100 mm x 100 mm
	Transducer frequency	approx. 180 kHz
	Response delay	approx. 150 ms
	Indicators/operating means	
	LED green	solid: Power-on
	LED yellow	flashing: program function object detected solid: switching state switch output
	LED red	flashing: program function normal operation: "fault" program function: no object detected
	Electrical specifications	
	Operating voltage U _B	10 30 V DC , ripple 10 % _{SS}
$C \in (S \mathbb{R}^{\circ} \circ \mathbb{C}(\mathbb{V} \mathbb{L})_{US})$	No-load supply current I0	≤ 50 mA
	Input/Output	
C — US	Synchronization	bi-directional 0 level -U _B +1 V 1 level: +4 V+U _B
odel Number		input impedance: > 12 KOhm synchronization pulse: ≥ 100 μs, synchronization interpulse
		period: $\geq 2 \text{ ms}$
B2000-30GM-E4-V15	Synchronization frequency	< 20 Hz
ngle head system	Common mode operation	\leq 30 Hz \leq 30 Hz / n = number of sensors $n \leq 5$
	Multiplex operation	$\leq 30~Hz$ / n , n = number of sensors , n ≤ 5
eatures	Input	
Switch output	Input type	1 program input, operating range 1: -U _B +1 V, operating range 2: +4 V
5 different output functions can be set		+U _B input impedance: > 4.7 k Ω ; program pulse: ≥ 1 s
	Output	
Program input	Output type	1 switch output NPN , Normally open/closed , programmabl
Synchronization options	Rated operating current le	200 mA, short-circuit/overload protected
	Voltage drop U _d	$\leq 2.5 \text{ V}$
Deactivation option	Repeat accuracy	≤ 0.5 % of switching point
Temperature compensation	Switching frequency f Range hysteresis H	\leq 3.3 Hz 1 % of the set operating distance
	Temperature influence	< 2 % of far switch point
Insensitive to compressed air	Ambient conditions	
	Ambient temperature	-25 70 °C (-13 158 °F)
iagrams	Storage temperature	-40 85 °C (-40 185 °F)
	Mechanical specifications Connection type	Connector M12 x 1, 5-pin
naracteristic response curve	Degree of protection	IP65
	Material	
		nickel plated brass; plastic components: PBT
	Housing	
	Transducer	epoxy resin/hollow glass sphere mixture; polyurethane foar
0.6 0.4	Transducer Mass	
	Transducer Mass Factory settings	epoxy resin/hollow glass sphere mixture; polyurethane foar 140 g
	Transducer Mass	epoxy resin/hollow glass sphere mixture; polyurethane foar 140 g Switch point A1: 220 mm
	Transducer Mass Factory settings	epoxy resin/hollow glass sphere mixture; polyurethane foar 140 g
	Transducer Mass Factory settings Output Compliance with standards and	epoxy resin/hollow glass sphere mixture; polyurethane foar 140 g Switch point A1: 220 mm Switch point A2: 2100 mm output function: Window mode
	Transducer Mass Factory settings Output Compliance with standards and directives	epoxy resin/hollow glass sphere mixture; polyurethane foar 140 g Switch point A1: 220 mm Switch point A2: 2100 mm output function: Window mode
	Transducer Mass Factory settings Output Compliance with standards and directives Standard conformity	epoxy resin/hollow glass sphere mixture; polyurethane foar 140 g Switch point A1: 220 mm Switch point A2: 2100 mm output function: Window mode output behavior: NO contact
	Transducer Mass Factory settings Output Compliance with standards and directives	epoxy resin/hollow glass sphere mixture; polyurethane foar 140 g Switch point A1: 220 mm Switch point A2: 2100 mm output function: Window mode output behavior: NO contact EN 60947-5-2:2007+A1:2012
$\begin{array}{c} 0.6 \\ 0.4 \\ 0.2 \\ 0.0 \\ 0.0 \\ 0.2 \\ 0.4 \\ 0.6 \\ 0.8 \\ 0.0 \\ 0.5 \\ 1.0 \\ 1.5 \\ 2.0 \\ 2.5 \\ 3.0 \\ 3.5 \\ 4.0 \end{array}$	Transducer Mass Factory settings Output Compliance with standards and directives Standard conformity Standards	epoxy resin/hollow glass sphere mixture; polyurethane foar 140 g Switch point A1: 220 mm Switch point A2: 2100 mm output function: Window mode output behavior: NO contact
0.6 0.4 0.2 0.0 0.2 0.4 0.2 0.0 0.2 0.4 0.2 0.0 0.2 0.4 0.2 0.0 0.2 0.4 0.2 0.0 0.2 0.0 0.2 0.0 0.2 0.0 0.2 0.0 0.2 0.0 0.5 1.0 1.5 0.2 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5 0.5	Transducer Mass Factory settings Output Compliance with standards and directives Standard conformity	epoxy resin/hollow glass sphere mixture; polyurethane foar 140 g Switch point A1: 220 mm Switch point A2: 2100 mm output function: Window mode output behavior: NO contact EN 60947-5-2:2007+A1:2012
$\begin{array}{c} 0.6 \\ 0.4 \\ 0.2 \\ 0.0 \\ 0.0 \\ 0.2 \\ 0.4 \\ 0.6 \\ 0.8 \\ 0.0 \\ 0.5 \\ 1.0 \\ 1.5 \\ 2.0 \\ 2.5 \\ 3.0 \\ 3.5 \\ 4.0 \end{array}$	Transducer Mass Factory settings Output Compliance with standards and directives Standard conformity Standards Approvals and certificates	epoxy resin/hollow glass sphere mixture; polyurethane foar 140 g Switch point A1: 220 mm Switch point A2: 2100 mm output function: Window mode output behavior: NO contact EN 60947-5-2:2007+A1:2012 IEC 60947-5-2:2007 + A1:2012

Release date: 2017-07-03 12:07 Date of issue: 2017-07-03 097968_eng.xml

 Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 G

 www.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



A2

A1

object distance

Additional Information

Programmable output modes 1. Window mode, normally open mode

> ſ **A1**

2. Window mode, normally closed mode

A2

3. One switch point, normally open mode

A2 4. One switch point, normally closed mode

> Γ **A1**

5. A1 -> ∞ , A2 -> ∞ : Object presence detection mode Object detected: Switch output closed No object detected: Switch output open


A1 < A2:

A2 < A1:


A1 -> ∞:

A2 -> ∞:

Dimensions

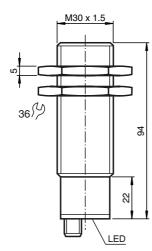

Electrical Connection

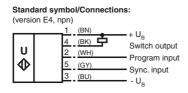

Wire colors in accordance with EN 60947-5-2.

Pinout



Wire colors in accordance with EN 60947-5-2

1 2	BN WH	(brown) (white)
3	BU	(blue)
4 5	BK GY	(black)
5	G	(gray)

Release date: 2017-07-03 12:07 Date of issue: 2017-07-03 097968_eng.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group www.pepperl-fuchs.com



Accessories

BF 30

Mounting flange, 30 mm

BF 30-F

Mounting flange with dead stop, 30 mm

BF 5-30

Universal mounting bracket for cylindrical sensors with a diameter of 5 ... 30 mm

UVW90-M30

Ultrasonic -deflector

UVW90-K30

Ultrasonic -deflector

UB-PROG2 Programming unit

V15-G-2M-PVC

Female cordset, M12, 5-pin, PVC cable

Description of Sensor Functions

Programming procedure

The sensor features a programmable switch output with two programmable switch points. Programming the switch points and the operating mode is done by applying the supply voltage $-U_B$ or $+U_B$ to the Teach-In input. The supply voltage must be applied to the Teach-In input for at least 1 s. LEDs indicate whether the sensor has recognized the target during the programming procedure.

Note:

If a programming adapter UB-PROG2 is used for the programming procedure, button A1 is assigned to -U_B and button A2 is assigned to +U_B.

Programming of the switch output

Window Modes

Normally open (NO) output

- 1. Place the target at the near end of the desired switch window
- 2. Program the window boundary by applying -U_B to the Teach-In input (yellow and green LEDs flash)
- 3. Disconnect the Teach-In input from -U_B to save the window boundary
- 4. Place the target at the far end of the desired switch window
- 5. Program the window boundary by applying +U_B to the Teach-In input (yellow and green LEDs flash)
- 6. Disconnect the Teach-In input from +U_B to save the window boundary

Normally closed (NC) output

- 1. Place the target at the near end of the desired switch window
- 2. Program the window boundary by applying +U_B to the Teach-In input (yellow and green LEDs flash)
- 3. Disconnect the Teach-In input from $+U_B$ to save the window boundary
- 4. Place the target at the far end of the desired switch window
- 5. Program the window boundary by applying -U_B to the Teach-In input (yellow and green LEDs flash)
- 6. Disconnect the Teach-In input from $\mbox{-}U_B$ to save the window boundary

Switch Point Modes

- Normally open (NO) output
- 1. Place the target at the desired switch point position
- 2. Program the switch point by applying +U_B to the Teach-In input (yellow and green LEDs flash)
- 3. Disconnect the Teach-In input from $+U_B$ to save the switch point
- 4. Cover the sensor face with hand or remove all objects from sensing range
- 5. Program the switch point by applying -U_B to the Teach-In input (red and yellow LEDs flash)
- 6. Disconnect the Teach-In input from $\mbox{-}U_B$ to save the switch point

Normally closed (NC) output

- 1. Place the target at the desired switch point position
- 2. Program the switch point by applying $-U_B$ to the Teach-In input (yellow and green LEDs flash)
- 3. Disconnect the Teach-In input from -U_B to save the switch point
- 4. Cover the sensor face with hand or remove all objects from sensing range
- 5. Program the switch point by applying $+U_B$ to the Teach-In input (red and yellow LEDs flash)
- 6. Disconnect the Teach-In input from $+U_B$ to save the switch point

Object Detection Mode

- 1. Cover the sensor face with hand or remove all objects from sensing range
- 2. Apply -U_B to the Teach-In input (red and yellow LEDs flash)
- 3. Disconnect the Teach-In input from +U_B to save the setting
- 4. Apply +U_B to the Teach-In input (red and yellow LEDs flash)
- 5. Disconnect the Teach-In input from $+U_B$ to save the setting

Factory settings

See technical data.

Display

The sensor provides LEDs to indicate various conditions.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com



U_B to the Teach-In input (red a nect the Teach-In input from +

	Green LED	Red LED	Yellow LED
During Normal operation			
Proper operation	On	Off	Switching state
Interference (e.g. compressed air)	Off	Flashing	Previous state
During sensor programming			
Object detected	Flashing	Off	Flashing
No object detected	Off	Flashing	Flashing
Object uncertain (programming invalid)	Off	Flashing	Flashing

Synchronization

This sensor features a synchronization input for suppressing ultrasonic mutual interference ("cross talk"). If this input is not connected, the sensor will operate using internally generated clock pulses. It can be synchronized by applying an external square wave. The pulse duration must be \geq 100 µs. Each falling edge of the synchronization pulse triggers transmission of a single ultrasonic pulse. If the synchronization signal remains low for \geq 1 second, the sensor will revert to normal operating mode. Normal operating mode can also be activated by opening the signal connection to the synchronization input (see note below).

If the synchronization input goes to a high level for > 1 second, the sensor will switch to standby mode, indicated by the green LED. In this mode, the outputs will remain in the last valid output state.

Note:

If the option for synchronization is not used, the synchronization input has to be connected to ground (0 V) or the sensor must be operated via a V1 cordset (4-pin).

The synchronization function cannot be activated during programming mode and vice versa.

The following synchronization modes are possible:

- 1. Several sensors (max. number see technical data) can be synchronized together by interconnecting their respective synchronization inputs. In this case, each sensor alternately transmits ultrasonic pulses in a self multiplexing mode. No two sensors will transmit pulses at the same time (see note below).
- 2. Multiple sensors can be controlled by the same external synchronization signal. In this mode the sensors are triggered in parallel and are synchronized by a common external synchronization pulse.
- 3. A separate synchronization pulse can be sent to each individual sensor. In this mode the sensors operate in external multiplex mode (see note below).
- 4. A high level (+U_B) on the synchronization input switches the sensor to standby mode.

Note:

Sensor response times will increase proportionally to the number of sensors that are in the synchronization string. This is a result of the multiplexing of the ultrasonic transmit and receive signal and the resulting increase in the measurement cycle time.

Installation conditions

If the sensor is installed in an environment where the temperature can fall below 0 °C, one of these mounting flanges must be used for mounting: BF30, BF30-F, or BF 5-30.

If it is intended to operate the sensor at - 25 °C, we recommend discussing the mounting situation with a Pepperl + Fuchs application specialist to ensure a trouble-free operation.

If the sensor is mounted in a through hole using the included steel nuts, it must be mounted at the middle of the threaded housing. If it must be mounted at the front end of the threaded housing, plastic nuts with centering ring (optional accessories) must be used.

