VBA-4E4A-G2-ZA/EA2




Model number

VBA-4E4A-G2-ZA/EA2


G2 flat module 4 inputs (PNP) and 4 electronic outputs

Features


- AS-Interface certificate •
- Degree of protection IP67 •
- Addressing jack •
- Flat cable connection with cable pier-• cing technique, variable flat cable guide
- Communication monitoring
- Inputs for 2-, 3-, and 4-wire sensors •
- Power supply of outputs from the ex-• ternal auxiliary voltage
- Supply for inputs from AS-Interface •
- Ground connection (FE) possible •
- Function display for bus, ext. auxiliary • voltage, inputs and outputs
- Detection of overload on sensor supp-• ly
- Detection of output overload

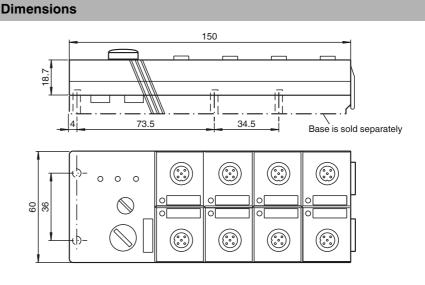

Electrical connection

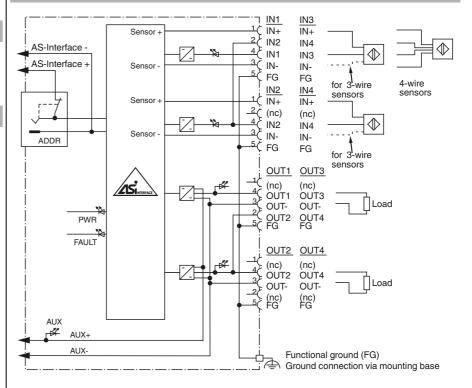

Indicating / Operating means

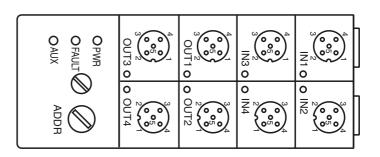

Pepperl+Fuchs Group

www.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001

fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



1

AS-Interface sensor/actuator module

VBA-4E4A-G2-ZA/EA2

Technical data

Technical data			
General specifications			
Slave type		A/B slave	
AS-Interface specification		V3.0	
Required master specification		≥ V3.0	
UL File Number		E223772	
Functional safety related parame	eters		
MTTF _d		140 a	
Mission Time (T _M)		20 a	
Diagnostic Coverage (DC)		0 %	
Indicators/operating means			
LED FAULT		error display; LED red	
		red: communication error or	r address is 0
		red flashing: overload of ser	nsor power supply or outputs
LED PWR		AS-Interface voltage; LED g	green
LED AUX		ext. auxiliary voltage U_{AUX} ;	LED green
LED IN		switching state (input); 4 LE	D yellow
LED OUT		Switching state (output); 4 L	ED yellow
Electrical specifications			
Auxiliary voltage (output)	U _{AUX}	20 30 V DC PELV	
Rated operating voltage	Ue	26.5 31.6 V from AS-Inter	rface
Rated operating current	l _e	≤ 40 mA (without sensors) /	′ max. 220 mA
Protection class			
Surge protection		UAUX, Uin: Over voltage cate	egory III, safe isolated power supplies
		(PELV)	
Input			
Number/Type		4 inputs for 2- or 3-wire sense	
		option 2 inputs for 4-wire se	nsors (PNP), DC
Supply		from AS-Interface	
Voltage		21 31 V	
Current loading capacity		\leq 180 mA (T _B \leq 40 °C),	
		=	erload and short-circuit protected
Input current		\leq 9 mA (limited internally)	
Switching point		according to DIN EN 61131	-2 (Type 2)
0 (unattenuated)		≤3 mA	
1 (attenuated)		≥5 mA	
Signal delay		< 2 ms (input/AS-Interface)	
Signal frequency		≤ 250 Hz	
Output			
Number/Type		4 electronic outputs, PNP, o	verload and short-circuit proof
Supply		from external auxiliary voltage	ge U _{AUX}
Current		0.5 A per output , 2 A total	
Voltage		≥ (U _{AUX} - 0.5 V)	
Directive conformity			
Electromagnetic compatibility			
Directive 2014/30/EU		EN 62026-2:2013 EN 6100	0-6-2:2001 EN 61000-6-4:2001
Standard conformity			
Degree of protection		EN 60529:2000	
Fieldbus standard		EN 62026-2:2013	
Input		EN 61131-2:2007	
Emitted interference		EN 61000-6-4:2001	
AS-Interface		EN 62026-2:2013	
Noise immunity		EN 61000-6-2:2001	
,			
Programming instructions		S-7.A.7	
Profile			
IO code		7	
ID code		A	
ID1 code		7	
ID2 code		7	
Data bits (function via AS-Interfac	e)	input	output
DO		IN1	OUT1
D1		IN2	OUT2
Do.		IN3	OUT3
D2			OUT4
D3	- 40 "	IN4	0011
D3 Parameter bits (programmable vi	ia AS-i)	function	0011
D3	ia AS-i)	function communication monitoring P0 = 1 (default settings), mo fails, the outputs are de-energy	onitoring = ON, i.e. if communicatior
D3 Parameter bits (programmable vi	ia AS-i)	function communication monitoring P0 = 1 (default settings), mo fails, the outputs are de-ene P0 = 0, monitoring = OFF, if	onitoring = ON, i.e. if communicatior
D3 Parameter bits (programmable vi P0 P1	ia AS-i)	function communication monitoring P0 = 1 (default settings), mo fails, the outputs are de-ene P0 = 0, monitoring = OFF, if maintain their condition not used	onitoring = ON, i.e. if communicatior
D3 Parameter bits (programmable vi P0	ia AS-i)	function communication monitoring P0 = 1 (default settings), mo fails, the outputs are de-ene P0 = 0, monitoring = OFF, if maintain their condition	onitoring = ON, i.e. if communicatior
D3 Parameter bits (programmable vi P0 P1 P2 P3	ia AS-i)	function communication monitoring P0 = 1 (default settings), mo fails, the outputs are de-ene P0 = 0, monitoring = OFF, if maintain their condition not used not used	onitoring = ON, i.e. if communicatior
D3 Parameter bits (programmable vi P0 P1 P2	ia AS-i)	function communication monitoring P0 = 1 (default settings), mo fails, the outputs are de-ene P0 = 0, monitoring = OFF, if maintain their condition not used not used	ponitoring = ON, i.e. if communication argised communication fails, the outputs

Function

The VBA-4E4A-G2-ZA/EA2 is an AS-Interface module with 4 Inputs and 4 outputs. Mechanical contacts (e.g. push buttons) as well as 2-, 3- and 4-wire sensors can be connected to the inputs. The outputs are electronic outputs, which can be collectively loaded with 24 V DC and 0.5 A per output.

The IP67 flat module is ideal for applications in the field. An addressing jack is integrated in the module.

The connection for the sensors/actuators is via M12 x 1 screw connections. An LED is provided on the top of the module, for each channel, to indicate the current switching status. Similarly, an LED is provided to monitor the AS-Interface communication and to indicate that the module has the address 0. LEDs are also provided to indicate AS-Interface voltage and external power supply.

The mounting plate U-G2FF is used as standard for the connection to the AS-Interface flat cable and the external 24 V DC supply. The specially designed base enables the user to connect flat cable from both sides.

The device incorporates communication monitoring, which switches off power to the outputs if no communication has taken place on the AS-Interface line for longer than 40 ms.

An overloading of the internal input supply or of the outputs is signalled to the AS-interface master via the "Peripheral fault" function. Communication via the AS-Interface remains intact.

Note:

The mounting base for the module is sold separately.

Accessories

VBP-HH1-V3.0-KIT

AS-Interface Handheld with accessory

VBP-HH1-V3.0

AS-Interface Handheld

VAZ-PK-1.5M-V1-G

Adapter cable module/hand-held programming device

VAZ-FK-ED-G2

AS-Interface end seal for G2 modules

Matching system components

U-G2FF

AS-Interface module mounting base for connection to flat cable (AS-Interface and external auxiliary power)

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group USA: +1 330 486 0001

Germany: +49 621 776 4411 fa-info@us.pepperl-fuchs.com fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.co

PEPPERL+FUCHS

2

www.pepperl-fuchs.com

Relative humidity	85 % , noncondensing
Climatic conditions	For indoor use only
Altitude	\leq 2000 m above MSL
Pollution degree	3
Mechanical specifications	
Degree of protection	IP67
Connection	Cable piercing method flat cable yellow/flat cable black inputs/outputs: M12 round connector
Material	
Housing	PBT
Mass	150 g
Tightening torque, cable gland	0.4 Nm
Mounting	Mounting plate

Notes

For 4-wire sensors, it is only possible to use plug-in slot IN1 or IN3 for inputs 1+2 or 3+4 (jumpered internally).

Do not connect inputs and outputs, which are supplied via the module from AS-interface or via auxiliary power, with power supply and signal circuits with external potentials.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

