
# Safety control unit module

#### Dimensions



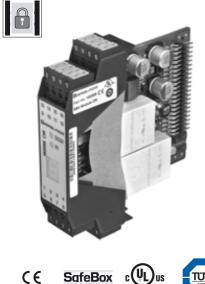

#### **Model Number**

### SB4 Module OR/165

Safety control unit module Module for Evaluation unit SafeBox - series SB4

### **Features**

- OSSD-R/Supply-module ٠
- Safety outputs OSSD, external status ٠ displays OSSD
- Start/Restart disable
- Operating mode can be selected by means of DIP switches
- Relay monitor ٠
- Screw terminals or spring terminals •

### Accessories

SB4 Cape cover sheet

SB4 Housing 2 Empty housing for Evaluation unit SB4


SB4 Housing 3 Empty housing for Evaluation unit SB4

SB4 Housing 4 Empty housing for Evaluation unit SB4

SB4 Housing 5 Empty housing for Evaluation unit SB4


SB4 Housing 6 Empty housing for Evaluation unit SB4


SB4 Housing 8 Empty housing for Evaluation unit SB4

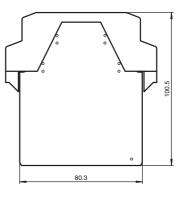



## **Electrical connection**

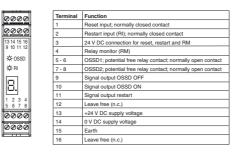

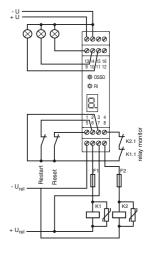

### **Technical data**

General specifications					
Operating mode		Start/restart disable, relay monitor,			
Functional safety related parame	ters				
Safety Integrity Level (SIL)		SIL 3			
Performance level (PL)		PL e			
Category		Cat. 4			
Mission Time (T <sub>M</sub> )		20 a			
B <sub>10d</sub>		see instruction manuals			
Туре		4			
Indicators/operating means					
Diagnostics indicator		7-segment display			
Function indicator		LED red: OSSD OFF LED green: OSSD ON Yellow LED: start readiness			
Control elements		DIP-switch			
Electrical specifications					
Operating voltage	UB	24 V DC $\pm$ 20 % , via SB4 Housing			
Input					
Activation current		approx. 7 mA			
Activation time		0.4 1.2 s			
Test input		Reset-input for system test			
Output					
Safety output		2 relay outputs, force-guided NO-contact			
Signal output		Output for displaying the switching state of the OSSDs			
Switching voltage		10 V 250 V AC/DC			
Switching current		min. 10 mA , max. 6 A AC/DC			
Switching power		max. DC 24 VA , AC 230 VA			

www.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@us.pepperl-fuchs.com fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



1

# Safety control unit module

Conformity			
Functional safety	ISO 13849-1 ; EN 61508 part1-4		
Product standard	EN 61496-1		
Ambient conditions			
Ambient temperature	0 50 °C (32 122 °F)		
Storage temperature	-20 70 °C (-4 158 °F)		
Mechanical specifications			
Degree of protection	IP20		
Connection	Cage tension spring terminals, Cable cross-section 0.2 1.5 mm <sup>2</sup>		
Material			
Housing	Polyamide (PA)		
Mass	approx. 150 g		
Approvals and certificates			
CE conformity	CE		
UL approval	cULus		
TÜV approval	TÜV		

This module can only be operated within an evaluation device of the SafeBox SB4 type.

The SafeBox instruction manual should be observed.

### Function

The OSSD-R/supply module contains the power supply of the SafeBox, 2 OSSDs, the relay monitor and the restart connection. This module is located in slot 1 of the SafeBox and only exists once.

The OSSDs are designed as potential free connection NO contacts. The module can be operated with or without restart interlock. Also, monitoring of the externally connected switching elements can be activated (relay monitor). The OSSD On or Off statuses are indicated via a short-circuit-proof pnp signal output. The restart output is used for indication of the start readiness status. In the case of an error, this output oscillates with 1 Hz.

## Settings

The assembly contains 4 DIP switches for selecting the functions

Restart and relay monitor. For selecting functions, 2 selector switches must always be actuated.

Position of t	the DIP switch	ies
	OFF	

Switch	Position	Operation type
1 and 3	OFF	Without restart interlock (restart, RI)
	ON	With restart interlock (restart, RI)
2 and 4	OFF	Without relay monitor (RM)
	ON	With relay monitor (RM)

# **Displays**

www.pepperl-fuchs.com

The OSSD-R/supply module has a red/green LED for indicating the OSSD on/off statuses, a yellow LED for the start-ready status and a 7 segment display for system diagnosis.

The 7 segment display indicates the status and the error codes of the system. The concept of error localisation is structured in such a way that the 7 segment display shows the error code. The yellow LED of the Stop 0-OSSD assembly of the group in which the error occurs is flashing and the indicators on the faulty assembly are also flashing with 5 Hz. If there is an error on the OSSD assembly itself, only the displays on this assembly are flashing.

Display	LED	Meaning
OSSD	red	OSSD outputs switched off
	green	OSSD outputs switched on
RI	yellow	Continuous light: protected area free, OSSD off, start readiness, actuate restart push button
		Flashing (5 Hz): Error on the card, in the switch group or system errors (see status 7 segment display)



2

206766\_eng.xml

Display	7 segment display
1	DIP switch position does not match
2	Incorrect configuration
3	Time-out at one or more muting sensors
4	Transmitter error
6	Muting lamp error
7	Simultaneousness monitoring error
8	Receiver error
9	Error at sensor channel
E	System error
F	Relay monitor error
Н	Selection chain error
U	Low voltage or voltage surge detected

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

Pepperl+Fuchs Group
USA: +1 330 486 0001
General General

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

