







Model number


VBA-4E4A-G12-ZAL/EA2L

G12 flat module 4 inputs (PNP) and 4 electronic outputs


Features

- One-piece housing with stainless steel base
- Installation without tools
- Metal threaded inserts with SPEED-CON technology
- Flat cable connection with cable piercing technique, variable flat cable guide
- Red LED per channel, lights up in the event of output overload
- Communication monitoring, configurable
- Inputs for 2-, 3-, and 4-wire sensors
- DIN rail mounting
- AS-Interface certificate
- · Sensor supply powered by AUX


Dimensions

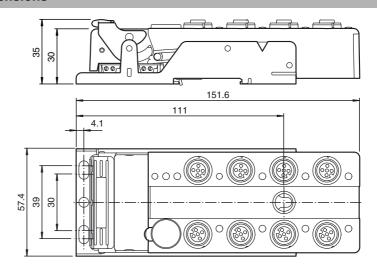

Electrical connection

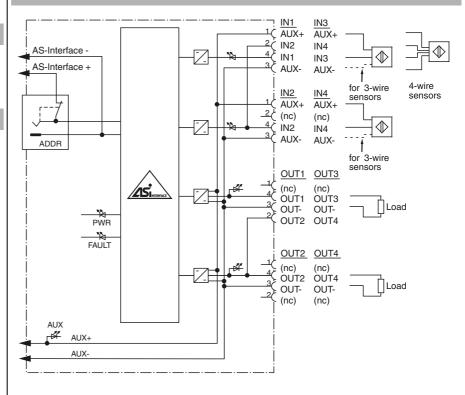

Indicating / Operating means

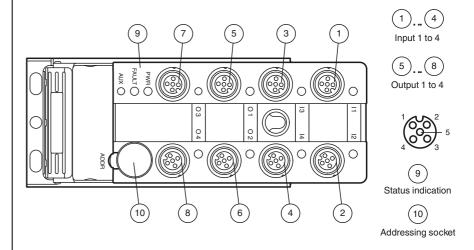

Technical data General specifications A/B slave Slave type AS-Interface specification V3.0 Required master specification ≥ V3.0 E223772 UL File Number Functional safety related parameters 180 a MTTF_d Mission Time (T_M) 20 a Diagnostic Coverage (DC) 0 % Indicators/operating means LED FAULT error display; LED red red: communication error or address is 0 red flashing: overload of sensor power supply or outputs LED PWR AS-Interface voltage; green LED green: voltage OK flashing green: address 0 I FD AUX ext. auxiliary voltage UAUX; dual LED green/red green: voltage OK red: reverse voltage LED IN switching state (input); 4 LED yellow Switching status (output); 4 yellow/red LEDs LED OUT Yellow: output active Red: output overload **Electrical specifications** U_{AUX} 24 V DC ± 15 % PELV Auxiliary voltage (output) 26.5 ... 31.6 V from AS-Interface Rated operating voltage Rated operating current I_e ≤ 40 mA Protection class Ш U_{AUX}, U_{in}: Over voltage category III, safe isolated power supplies Surge protection (PELV) derived from mains up to 300 V AC line-to-neutral Number/Type 4 inputs for 2- or 3-wire sensors (PNP), DC option 2 inputs for 4-wire sensors (PNP), DC from external auxiliary voltage UEXT Supply ≤ 600 mA overload and short-circuit resistant Current loading capacity ≤ 8 mA (limited internally) Input current Switching point according to DIN EN 61131-2 (Type 2) 0 (unattenuated) ≤ 2 mA ≥ 6 mA 1 (attenuated) Signal delay < 1 ms (input/AS-Interface) Output 4 electronic outputs, PNP, overload and short-circuit proof Number/Type from external auxiliary voltage UAUX Supply Current 2 A per output 6 A total (TB ≤ 40 °C) 4 A total (TB ≤ 70 °C) Voltage $\geq (U_{AUX} - 0.5 V)$ **Directive conformity** Electromagnetic compatibility EN 62026-2:2013 EN 61000-6-2:2005, EN 61000-6-4:2007 Directive 2014/30/EU Standard conformity Degree of protection FN 60529:2000 Fieldbus standard EN 62026-2:2013 Input EN 61131-2 Emitted interference EN 61000-6-4:2007 AS-Interface EN 62026-2:2013 Noise immunity EN 61000-6-2:2005 EN 62026-2:2013 **Programming instructions** Profile S-7.A.7 IO code 7 ID code Α ID1 code 7 ID2 code 7 Data bits (function via AS-Interface) input output OUT1 DO IN1 D1 IN₂ OUT2 D2 IN3 OUT3 OUT4 IN4 Parameter bits (programmable via AS-i) function P0 communication monitoring P0 = 1 (default settings), monitoring = ON, i.e. if communication fails, the outputs are de-energised P0 = 0, monitoring = OFF, if communication fails, the outputs maintain their condition P1 P1 = 0 input filter on, pulse suppression ≤ 2 ms P1 = 1 input filter off (default settings)

Function

The VBA-4E4A-G12-ZA/EA2L is an AS-Interface trigger module with 4 inputs and 4 outputs. 2- and 3-wire sensors as well as mechanical contacts can be connected to the plus switching electronic inputs. The outputs are electronic outputs which can be energized with max. 24 V DC and 2 A per output.

The solid housing permits fast mounting without tools as well as easy removal without tools. The stainless steel shell and the cast housing ensure durability and a high protection category.

The connection to the AS-Interface calbe and to the external power supply is achieved via penetration technology in the integrated flat cable. The insert for the flat cables can be turned in two orientations.

All connections to inputs and outputs are implemented via metal inserts for high stability. The connection to the sensors/actuators is achieved via a M12 x 1 circular connector with SPEEDCON quick locking option.

The inputs and the connected sensors as well as the outputs and the connected actuators are supplied via an external power source (AUX).

To indicate the current switching state there is an LED for each channel fitted to the top of the module. The outputs are protected against overload and short circuit, an output overload is indicated via an LED per channel. An LED to indicate the AS-Interface voltage and that the module has an address of 0 is available, another indicates errors in the AS-Interface communication as well as periphery faults. Another LED indicates the external power supply (AUX).

This module can be mounted in any position using three screws or can be snapped onto the DIN rail using the stainless steel holder.

An output overload is reported to the AS-Interface master via the function "periphery fault". The communication with the AS-Interface remains intact.

Accessories

VBP-HH1-V3.0-KIT

AS-Interface Handheld with accessory

VAZ-V1-B3

Blind plug for M12 sockets

VBP-HH1-V3.0

AS-Interface Handheld

VAZ-PK-1,5M-V1-G

Adapter cable module/hand-held programming device

VAZ-CLIP-G12

lock for G12 module

P2	Synchronous mode P2 = 0 synchronous mode on P2 = 1 synchronous mode off (default settings)
P3	not used
Ambient conditions	
Ambient temperature	-25 70 °C (-13 158 °F)
Storage temperature	-25 85 °C (-13 185 °F)
Relative humidity	85 % , noncondensing
Climatic conditions	For indoor use only
Altitude	≤ 2000 m above MSL
Shock and impact resistance	30 g, 11 ms in 6 spatial directions 3 shocks $10 g$, 16 ms in 6 spatial directions 1000 shocks
Vibration resistance	0.75 mm 10 57 Hz , 5 g 57 150 Hz, 20 cycles
Pollution degree	3
Mechanical specifications	
Degree of protection	IP67
Connection	Cable piercing method flat cable yellow/flat cable black inputs/outputs: M12 round connector
Material	
Housing	PBT
Mass	230 g
Tightening torque, cable gland	0.4 Nm
Mounting	Mounting plate

Notes

For 4-wire sensors, it is only possible to use plug-in slot IN1 or IN3 for inputs 1+2 or 3+4 (jump-ered internally).

Do not connect inputs and outputs, which are supplied via the module from AS-interface or via auxiliary power, with power supply and signal circuits with external potentials.