


## Model number

## VAA-4E4A-G11-ZAJ/EA2L-FV1

G11 module 4 inputs and 4 outputs


## Features

- Inputs for 2-, 3-, and 4-wire sensors •
- Power supply of outputs from the ex-• ternal auxiliary voltage
- Supply of sensors from AS-Interface .
- Function display for bus, external au-. xiliary voltage, in- and outputs
- Red LED per channel, lights up in the • event of output overload
- Communication monitoring .
- Switchable lead breakage detection . (outputs)
- Cable piercing method with gold pla-٠ ted contact pins
- Degree of protection IP68 / IP69K •
- **AS-Interface POWER24** •

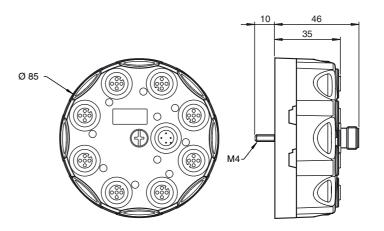


## **Electrical connection**

Dimensions

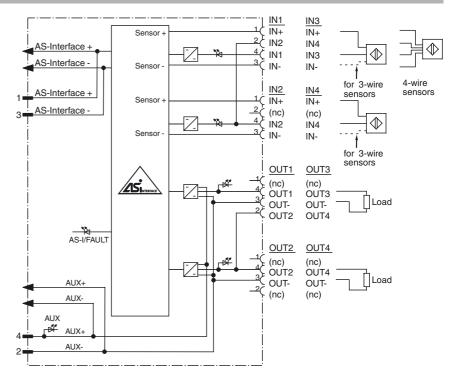

## Indicating / Operating means

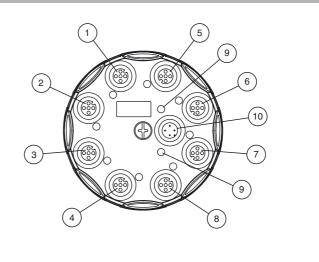







Status indication

(10) AS-i/AUX connection

1

EPPPERL+FUCHS

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

# AS-Interface sensor/actuator module

## Te e le vei e e l'e el

Technical data				
General specifications				
Slave type		Standard slave		
AS-Interface specification		V3.0		
Required master specification		≥ V2.1		
UL File Number		E223772		
Indicators/operating means				
LED AS-i/FAULT		Status display; multi-colour LED Green: normal operation Red: communication fault Flashing yellow/red: address 0 Flashing green/red: sensor supply tion outputs	i.e. overload or lead interrup-	
LED AUX		ext. auxiliary voltage U <sub>AUX</sub> ; dual Li green: voltage OK red: reverse voltage	ED green/red	
LED IN		switching state (input); 4 LED yello	W	
LED OUT		switching state (output); 4 LED yel	low/red	
		yellow: output active red: output overload or lead interru	Intion	
Electrical specifications		red. output overload of lead interre	ipuon	
Electrical specifications Auxiliary voltage (output)	JAUX	20 30 V DC PELV		
	J	18,0 31.6 V from AS-Interface		
Rated operating current	C	$\leq 40 \text{ mA}$ (without sensors) / max. 2	240 mA	
Protection class	Э	≤ 40 mA (without sensors) / max. 2		
Surge protection		U <sub>AUX</sub> , U <sub>in</sub> : Over voltage category II	safe isolated nower supplier	
		(PELV)	, our isolated power supplies	
Input				
Number/Type		4 inputs for 2- or 3-wire sensors (P option 2 inputs for 4-wire sensors		
Supply		from AS-Interface	,, ,, -	
Voltage		12 31 V		
Current loading capacity		≤ 200 mA, overload and short-circ	uit protected	
Input current		$\leq$ 9 mA (limited internally)		
Switching point		according to DIN EN 61131-2 (Typ	be 2)	
0 (unattenuated)		≤3 mA	,	
1 (attenuated)		≥5 mA		
Signal delay		< 1 ms (input/AS-Interface)		
Output		, , , , , , , , , , , , , , , , , , , ,		
Number/Type		4 electronic outputs, PNP, overload	d and short-circuit proof	
Supply		from external auxiliary voltage $U_{AI}$		
Current		2 A per output TB $\leq$ 40 °C: 6 A total TB $\leq$ 70 ŰC: sum O1 + O2 max. 2 A, sum O3 + O4 max. 2 A		
Voltage		≥ (U <sub>AUX</sub> - 0.5 V)		
Galvanic isolation				
Input/Output			safe isolation, rated insulation voltage 40 V DC	
Output/AS-Interface			safe isolation, rated insulation voltage 40 V DC	
Directive conformity			-	
Electromagnetic compatibility Directive 2014/30/EU		EN 62026-2:2013 EN 61000-6-2:2	2005. EN 61000-6-4·2007	
Standard conformity				
•		EN 60529:2000		
Degree of protection Fieldbus standard		EN 60529:2000 EN 62026-2:2013		
Input		EN 62026-2:2013 EN 61131-2:2007		
Emitted interference		EN 61000-6-4:2007		
AS-Interface		EN 62026-2:2013		
Noise immunity		EN 61000-6-2:2005, EN 61326-1:	2006, EN 62026-2:2013	
Programming instructions			,	
Profile		S-7.F		
IO code		7		
ID code		F		
ID1 code		F		
ID2 code		E		
Data bits (function via AS-Interface)		input	output	
D0		IN1	01	
D1		IN2	O2	
D2		IN3	O3	
D3		IN4	O4	
P n P		function Communication monitoring P0 = 0 monitoring = off, the outputs maintain the status if com- munication fails P0 = 1 monitoring = on, i.e. if communication fails, the outputs are deenergised (default settings)		
P1		Input filter P1 = 0 input filter on, pulse suppression $\leq$ 2 ms P1 = 1 input filter off (default settings)		
2 Refer to "General Notes Relating to Pepperl+Fuchs Group			19 621 776 4411 Singap	

## **Function**

The VAA-4E4A-G11-ZAJ/EA2L-FV1 is an AS-Interface switch-on module with 4 inputs and 4 outputs. 2, 3 and 4 wire sensors can also be connected as mechanical contacts to the 4 sourcing electronic inputs. The 4 electronic outputs are overload and short-circuit protected.

The housing with a central screw enables fast mounting on the base plate.

The connection to the AS-Interface cable, to the external power supply and to the sensors/actuators is via M12x1 plug-in connections on the top side of the device.

You can also make the connection to the AS-Interface and to the external energy supply with insulation piercing technology via an AS-Interface flat cable on the underside of the module.

The inputs and the connected sensors are powered by the internal supply of the module (from the AS-Interface). The outputs and the connected actuators are powered by an external voltage source (from the AUX).

The current switching state of each input and output is indicated via an IN or OUT LED. The OUT LED also indicates an overload or a lead breakage at the associated output. The ASi/FAULT LED indicates the status of the AS-Interface (normal operation, communication error, peripheral fault, address 0). The AUX LED indicates the external power supply. The switch-on module is compatible with AS-Interface POWER24.

#### Note:

The device is equipped with a communication monitor, which deactivates the outputs if the AS-Interface does not communicate with the module for more than 40 ms. The communication monitor can be deactivated via the parameter P0. Filters that suppress pulses with a duration of 2 ms or less at the inputs can be connected via the parameter P1.

Parameter P2 activates a lead breakage detection system for the outputs. This function detects and reports a missing load, providing the relevant output is deactivated. The associated OUT LED and the 'peripheral fault' function display the signal transmitted to the AS-Interface master. An overload of the input supply or the outputs is also reported to the AS-Interface master via the 'peripheral fault' function. Communication via the AS-Interface continues even if a peripheral fault is set.

#### Accessories

VBP-HH1-V3.0-KIT AS-Interface Handheld with accessory

VAZ-V1-B3 Blind plug for M12 sockets

VBP-HH1-V3.0

AS-Interface Handheld

# V11-G-1M-PUR-V11-G

Connecting cable, M12 to M12, PUR cable 3-pin

VAZ-FK-S-BK-SEAL

AS-Interface flat cable seal

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

www.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.



# VAA-4E4A-G11-ZAJ/EA2L-FV1


P2	Lead breakage outputs P2 = 0 lead breakage on P2 = 1 lead breakage off (default settings)	
P3	not used	
Ambient conditions		
Ambient temperature	-25 70 °C (-13 158 °F)	
Storage temperature	-25 85 °C (-13 185 °F)	
Relative humidity	85 % , noncondensing	
Climatic conditions	For indoor use only	
Altitude	$\leq$ 2000 m above MSL	
Shock and impact resistance	30 $g$ , 11 ms in 6 spatial directions 3 shocks 10 $g$ , 16 ms in 6 spatial directions 1000 shocks	
Vibration resistance	0.75 mm 10 57 Hz , 5 g 57 150 Hz, 20 cycles	
Pollution degree	3	
Mechanical specifications		
Degree of protection	IP68 / IP69K	
Connection	AS-Interface/U <sub>AUX</sub> : AS-Interface flat cable or M12 round con- nector Inputs/outputs: M12 round connector	
Material		
Housing	PBT PC	
Mounting screw	Stainless steel 1.4305 / AISI 303	
Mass	200 g	
Tightening torque, housing screws	1.8 Nm	
Tightening torque, cable gland	0.4 Nm	
Mounting	Mounting plate	

## Notes

Do not connect inputs and outputs, which are supplied via the module from AS-interface or via auxiliary power, with power supply and signal circuits with external potentials.

#### **Mounting instructions**

Screw the device onto a level mounting surface using two M5 attachment screws. The attachement screws are not included.

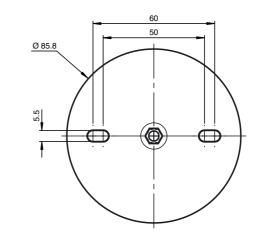

Screw a blind plug onto spare connections to ensure the protection category.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group

www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

