## Thru-beam sensor



# **Model Number**

M7/MV7/59/76a/82b/103/115b Thru-beam sensor

with 0.2 m fixed cable and 4-pin, M12 connector


#### **Features**

- Reliable sensor for standard applications
- Miniature design with versatile mounting options
- Automatic adjustment of sensitivity via TEACH-IN
- Resistant against noise: reliable ope-٠ ration under all conditions
- Certified by ECOLAB


## **Product information**

Small, robust, effective, and reliable - these are the properties of the ML7 sensor series. Due to their small size, number of versions, and two different lens positions, they are particularly suited for installation in tight spaces. The robust design and high quality of Pepperl+Fuchs mean they can also be used under harsh environmental conditions. The efficient technology, switching frequencies up to 1000 Hz, high resistance to ambient light, and 4-in-1 output make the series suitable for non-contact object detection.


## Dimensions

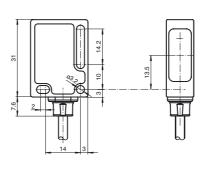



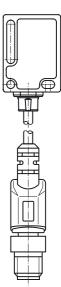


## **Electrical connection**

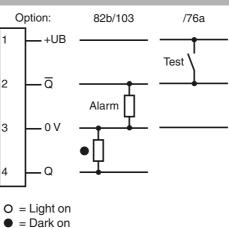

### **Pinout**



## Indicators/operating means

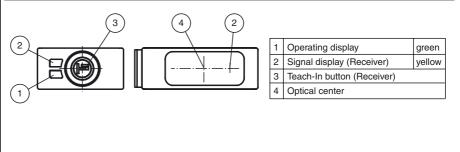

www.pepperl-fuchs.com

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Technical data	
System components	
Emitter	M7/76a/115b
Receiver	MV7/59/82b/103/115b
General specifications	
Effective detection range	0 3.5 m
Threshold detection range	4.5 m
Light source	LED
Light type	modulated visible red light
Target size	min. 7 mm
Diameter of the light spot	approx. 180 mm at a distance of 3.5 m
Angle of divergence	approx. 3 °
Ambient light limit	40000 Lux
Functional safety related parameter	ers
MTTF <sub>d</sub>	1130 a
Mission Time (T <sub>M</sub> )	20 a
Diagnostic Coverage (DC)	60 %
Indicators/operating means	
Operating display	Receiver: LED green, flashes in case of short-circuit Emitter: LED green
Function display	Receiver: LED yellow, lights up when light beam is free, flashes when falling short of the stability control
Controls	Receiver: TEACH-IN key
Electrical specifications	
Operating voltage	U <sub>B</sub> 10 30 V DC , class 2
Ripple	max. 10 %
No-load supply current	I <sub>0</sub> Emitter: ≤ 17 mA
	Receiver: ≤ 15 mA
Input	
Test input	emitter deactivation at +U <sub>B</sub>
Output	
Pre-fault indication output	1 PNP, inactive when level falls below function reserve after approx. 5 s. Immediately inactive if the beam is interrupted 4 times during the flashtime.
Switching type	dark on
Signal output	1 PNP output, short-circuit protected, reverse polarity protected open collector
Switching voltage	max. 30 V DC
Switching current	max. 100 mA
Voltage drop	$U_d \leq 1.5 V DC$
Switching frequency	f 1000 Hz
Response time	0.5 ms
Ambient conditions	
Ambient temperature	-20 60 °C (-4 140 °F)
Storage temperature	-40 75 °C (-40 167 °F)
Mechanical specifications	
Protection degree	IP67 / IP69K
Connection Material	200 mm connecting cable with 4-pin, M12x1 connector
	PC (glass-fiber-reinforced Makrolon)
Housing Optical face	PC (glass-fiber-reinforced Makrolon) PMMA
Mass	approx. 100 g (emitter and receiver)
Compliance with standards and c	
Standard conformity	
Product standard	EN 60947-5-2:2007
Standards	IEC 60947-5-2:2007 EN 50178, UL 508
Sundido	
Approvals and certificates	
Protection class	II, rated voltage ≤ 250 V AC with pollution degree 1-2 accor- ding to IEC 60664-1
	cULus
UL approval	COLUS

## ccessories

ontagekit OMH-ML7-01 ounting set consisting of bracket OMH-L-01 sheet OMH-ML7-03, and fasteng material

ontagekit OMH-ML7-02 ounting set consisting of bracket OMH-L-02 sheet OMH-ML7-03, and fasteng material

MH-ML7-01 ounting bracket

#### MH-ML7-02 ounting bracket

MH-ML7-03 king plate

-G-2M-PUR male cordset, M12, 4-pin, PUR cable


#### -W-2M-PUR male cordset, M12, 4-pin, PUR cable


her suitable accessories can be found at vw.pepperl-fuchs.com



2

### **Curves/Diagrams**

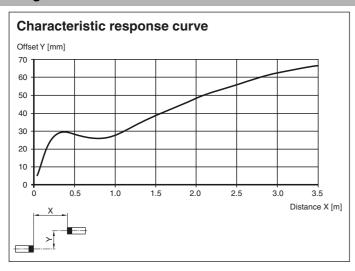

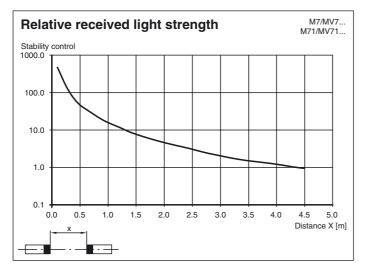

## **Teach-In**

Connect the sensors to operating voltage, the green LEDs green lights up constantly.

- The receiver operates at max. sensitivity (delivery status) or with the last teached values.
- · Mount transmitter and receiver opposite each other and align roughly.
- Adjust the transmitter to the receiver.
- Press the Teach-In button on the receiver as an acknowledgement the green LED will quickly turn off one time.
- Press the Teach-In button on the receiver until both LEDs green and yellow are blinking in parallel (2 Hz). Release the Teach-In button now. • While the green and yellow LEDs are blinking alternating (2 Hz) on the receiver the unit is in the internal set up procedure.
- Teach-In successful: Both LEDs green and yellow on the receiver are on. The unit is ready to use and in switching mode now.
- Teach-In not successful: Both LEDs on the receiver are flashing alternating (4 Hz) for approx. 5 seconds. Afterwards the sensor returns to max. sensitivity setting. Please retry the Teach-In procedure beginning by step 1.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group

www.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

