
## Safety control unit



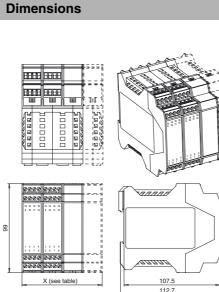

Number of	Housing width X	
optional slots	[mm]	
1	67.8	
2	90.4	
3	113	
4	135.6	
5	180.8	

## **Model Number**

onal module slots for functional enhancement

Safety control unit of series SB4

## **Features**

- ٠ Evaluation device for safety thrubeam sensors SLA12 and SLA29 and for 2 channel safety devices (emergency off)
- Self-monitoring (type 4 according to IEC/EN 61496-1)
- Operating mode can be selected by • means of DIP switches
- 7-segment diagnostic display
- displays OSSD

Pepperl+Fuchs Group

www.pepperl-fuchs.com

USA: +1 330 486 0001

fa-info@us.pepperl-fuchs.com

SB4-OR-4CP-B-B SB4 series safety control unit with opti-

- ٠ Expansion slots for SB4 modules for optional enhanced functionality

- Safety outputs OSSD, external status

## Performance level (PL) Category Mission Time (T<sub>M</sub>) PFHd B<sub>10d</sub>

# Туре Indicators/operating mea

Diagnostics indicator
Function indicator

		) (
Pre-fault indicator		LED yellow flashing: Indicator lamp
Electrical specifications		
Operating voltage	UB	24 V DC, ± 20 %
No-load supply current	I <sub>0</sub>	max. 500 mA
Power dissipation		If additional modules are used, max
Input		
Activation current		approx. 7 mA
Activation time		0.4 1.2 s
Test input		Reset-input for system test
Output		
Safety output		2 relay outputs, force-guided NO-co
Signal output		Output for displaying the switching
Switching voltage		10 V 250 V AC/DC
Switching current		min. 10 mA , max. 6 A AC/DC
Switching power		DC: max. 24 VA AC: max. 230 VA


Response time

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

30 ms

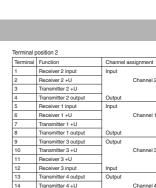

Transmitter 4 +U

Receiver 4 +U

Receiver 4 inpu

Inpu

15

eratino

atio

Start/restart disable, relay monitor,

only apply	10 110 54310	acvice. Il add	montal OD+ mout	103 010 0300	, uie ope
mpany the	e device must	be observed	I during planning	, installation	and oper

Technical data	
General specifications	

**Electrical connection** 

<u>0000 0000</u>

0000 0000

-∰ R3

∰ R2

∰ R1

123

....

Operating mode

0000 0000

000000000

Position 1 Position 2

These specifications

instructions that acco

Techr

₩ os: ₩ B4

₩RI

8.

2 3

----

Terminal position 1

7 - 8

12

13

14

16

nal Function

Reset input; NC contact

Signal output OSSD OFF Signal output OSSD ON

Signal output Restart

0 V DC supply voltage

Functional gro

Reserved (n.c.)

Reserved (n.c.) +24 V DC supply voltage

rt input (RI); NC con

24 V DC connection for reset, restart and RM

Relay monitor (RM) OSSD1; floating relay contact; NO contac

OSSD2; floating relay contact; NO contact

SIL 3
PL e
Cat. 4
20 a
3.5 E-9 (These specifications only apply to the basic device. If additional must be requested.)
see instruction manuals
4
7-segment display
LED red: OSSD OFF LED green: OSSD ON Yellow LED: start readiness channel 1 - 4 LED yellow: switching state (receiver)
LED yellow flashing: Indicator lamp channel 1 4
24 V DC, ± 20 %
max. 500 mA
If additional modules are used, max. 50 W
approx. 7 mA
0.4 1.2 s
Reset-input for system test
2 relay outputs, force-guided NO-contact
Output for displaying the switching state of the OSSDs
10 V 250 V AC/DC
min. 10 mA , max. 6 A AC/DC
DC: max. 24 VA

PEPPERL+FUCHS

1

SB4-OR-4CP-B-B

# Safety control unit

Conformity			
Functional safety ISO 13849-1 ; EN 61508 part1-4			
Product standard	EN 61496-1		
Ambient conditions			
Ambient temperature	0 50 °C (32 122 °F)		
Storage temperature	-20 70 °C (-4 158 °F)		
Mechanical specifications			
Degree of protection	IP20		
Connection	screw terminals , lead cross section 0.2 2 mm <sup>2</sup>		
Material			
Housing	Polyamide (PA)		
Mass	395 g		
Approvals and certificates			
CE conformity	CE		
UL approval	cULus		
TÜV approval	TÜV		
Function			

The operating instructions that accompany the unit must be observed during planning, installation and operation.

The SB4 evaluation system is a type 4 (EN 61496-1 or IEC 61496-1) and category 4 (EN 954-1) AOPD. This system has also been designed and tested in accordance with IEC 61508. The system meets the requirements of SIL3.

At most 4 safety thru-beam sensors can be connected to the control interface in the default setting. Other contact-equipped safety devices can be connected instead of the thru-beam sensors.

The control interface has empty slots. They are used for individual function extensions with SB4 modules.

The following SB4 modules can be employed:

- SB4 modules 4C: SB4 modules 4C in various versions.
- SB4 module for connecting four 2-wire sensors
- SB4 modules 4X: SB4 modules 4X in various versions.
  - SB4 module for connecting 3-wire sensors and safety devices with semiconductor switching outputs
- SB4 modules 6C: SB4 modules 6C in various versions.

SB4 module for connecting six 2-wire sensors

- SB4 modules 2E: SB4 modules 2E in various versions.
   Additional 2 OSSDs, relay monitoring, restart connection and 2 connections for contact-equipped safety sig
  - nals (e.g. emergency off switch), timer functions
- SB4 modules 4M:SB4 modules 4M in various versions. Muting module for connecting up to 4 muting sensors

## **Operating modes**

The startup/restart interlock is activated by default.

All groups feature DIP switches to select the functions. Two switches must always be actuated in order to select a function.

## Switches on the first group:

Switch	Position	Operating mode
1 and 3	OFF	Without startup/restart interlock (restart, RI)
	ON	With startup/restart interlock (restart, RI)
2 and 4	OFF	Without relay monitor (RM)
	ON	With relay monitor (RM)

Switches on the second group:

Switch	Position	Operating mode
1 and 3	OFF	No complementary evaluation
	ON	Complementary evaluation active
2 and 4	OFF	No simultaneous evaluation
	ON	Simultaneous evaluation active

## Indicators

The OSSD-R/supply module in position 1 features a red/green LED to signal the OSSD off/on statuses, a yellow LED to indicate the "Ready for startup" status and a 7-segment display for system diagnostics.

The 7-segment display signals the system status and error codes.

 Perfer to "General Notes Relating to Pepperl+Fuchs Product Information".

 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 Germany: +49 6

 www.pepperl-fuchs.com
 fa-info@us.pepperl-fuchs.com
 fa-info@de.pepp

Germany: +49 621 776 4411 Sing fa-info@de.pepperl-fuchs.com fa-info@

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Display	7-segment display
1	DIP switch setting not identical
2	Incorrect configuration
3	Time-out of one or more muting sensors
4	Transmitter fault
6	Muting lamp fault
7	Simultaneous monitoring fault
8	Receiver fault
9	Sensor channel fault
E	System fault
F	Relay monitor fault
Н	Selection chain fault
U	Under/overvoltage detected

 Refer to "General Notes Relating to Pepperl+Fuchs Product Information".

 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 General General

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

