





Dimensions

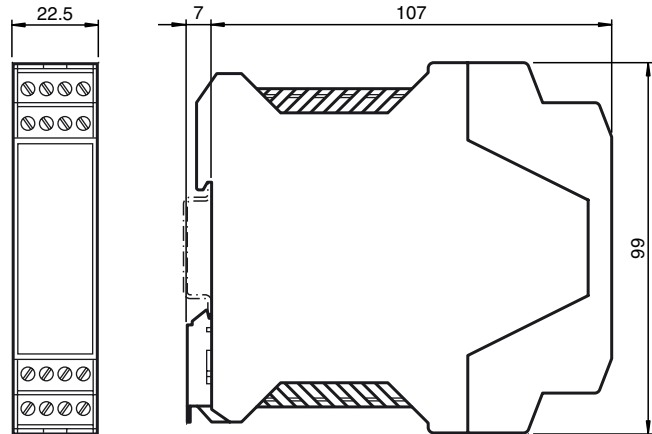

Electrical connection

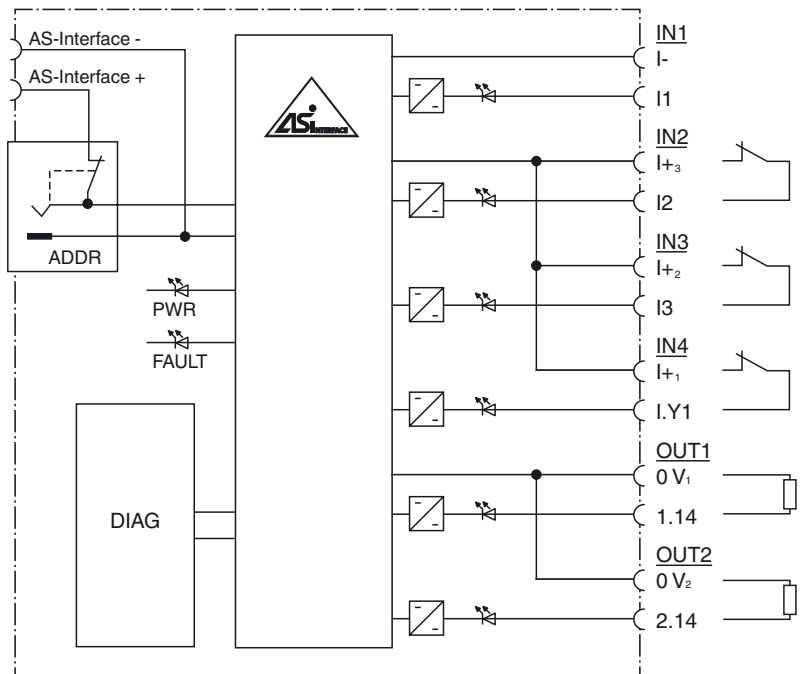

Model number


VBA-4E2A1A-KE3-ZEL/E2L/SEL

KE3 switch cabinet module
1 safety-related electronic output, 4 standard inputs, 2 standard outputs

Features

- Several safe output modules grouped to form a release circuit
- 2 galvanically isolated contact banks
- 4 conventional inputs, 1 of which can be switched as a protective feedback circuit
- SIL3 (IEC 61508)
- Addressing jack
- Occupies one complete address for the safe output and one A/B address for the 4 inputs

Indicating / Operating means

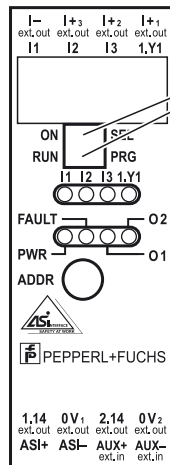

Switches to select the operational mode:

- ON SEL
RUN PRG Normal operating mode
- ON SEL
RUN PRG Addressing:
Safety slave (single address)
- ON SEL
RUN PRG Addressing:
4I input slave (AB address)
- ON SEL
RUN PRG Addressing:
Diagnostic slave (AB address)

Release date: 2019-01-09 10:13 Date of issue: 2019-01-09 257778_eng.xml

Technical data**General specifications**

Slave type	A/B slave, standard slave
AS-Interface specification	V3.0
Required master specification	≥ V2.1

Functional safety related parameters

Safety Integrity Level (SIL)	SIL 3
Performance level (PL)	PL e
Mission Time (T _M)	20 a
PFH _d	1.91 E-9
PFD	5.94 E-7

Indicators/operating means

LED FAULT	error display; LED red red: communication error
LED PWR	AS-Interface voltage; LED green
LED IN	switching state (input); 4 LED yellow
LED OUT	For flashing patterns see diagnostics table

Electrical specifications

Auxiliary voltage (input)	U _{EXT}	24 V ± 20 % PELV
Rated operating voltage	U _e	26.5 ... 31.6 V from AS-Interface
Rated operating current	I _e	< 200 mA
Protection class		III
Surge protection		U _{EXT} , U _e : Over voltage category III, safe isolated power supplies (PELV)

Input

Number/Type	3 standard inputs, 1 EDM input
Supply	from external auxiliary voltage U _{AUX}
Voltage	24 V DC
Input current	Static switching current: 4 mA at 24 V. Dynamic switching current: 15 mA at 24 V (T=100 μs)
Sensor supply	≤ 100 mA

Output

Number/Type	2 output switch elements Max contact load: 0.5 A DC-13 at 30 V 1 safe electronic output
Supply	from external auxiliary voltage U _{AUX}

Directive conformity

Electromagnetic compatibility	
Directive 2014/30/EU	EN 62026-2:2013 EN 61000-6-2:2005/AC:2005 EN 61000-6-3:2007/A1:2011

Standard conformity

Electromagnetic compatibility	EN 61326-3-1:2008
Degree of protection	EN 60529:2000
Electrical safety	EN ISO 13849-1:2008 EN ISO 13849-2:2012
Emitted interference	EN 61000-6-3:2007/A1:2011
AS-Interface	EN 62026-2:2013
Noise immunity	EN 61000-6-2:2005/AC:2005 EN 62026-2:2013
Functional safety	IEC 61508:2010 (SIL3) EN 62061:2005

Programming instructions

Profile	Diagnostic slave: S-7.A.E, ID1 = 5 Input slave: S-7.A.E, ID1 = 7
IO code	7
ID code	F

Ambient conditions

Ambient temperature	0 ... 55 °C (32 ... 131 °F)
Storage temperature	-25 ... 85 °C (-13 ... 185 °F)

Mechanical specifications

Degree of protection	IP20
Connection	removable terminals rated connection capacity: rigid/flexible (with and without wire-end ferrules): 0.25 mm ² ... 2.5 mm ² for multiple-wire connection with two wires of equal cross-section: flexible with twin wire-end ferrules: 0.5 mm ² ... 1.5 mm ²
Material	
Housing	PA 66-FR
Mounting	DIN mounting rail

Notes

Do not connect inputs and outputs, which are supplied via the module from AS-interface or via auxiliary power, with power supply and signal circuits with external potentials.

Function

The AS-Interface safety output module VBA-4E2A1A-KE3-ZEL/E2L/SEL is a switch cabinet module with a safe electronic output. The module has four inputs and two standard outputs. The inputs consist of three conventional inputs and one EDM input. The safety output module allows safe switching processes to take place remotely in the box. The parallel wiring of safe actuators in the box is a thing of the past.

The housing is only 22.5 mm wide and takes up little space in the switch cabinet. A snap-on function mounts the module onto the 35 mm mounting strip in line with EN 50022. An addressing socket is integrated in the module.

The connection is made via plug-in terminals. Four-way (black) terminal blocks are used for the inputs. The AS-Interface is connected via a two-way terminal block (yellow). This allows the sensors or the power supply to be easily separated for commissioning or service. Power is supplied to the inputs and connected sensors by an external auxiliary power supply. Yellow LEDs display the current switching status of the inputs and outputs. Red LEDs display communication errors and indicate that the A0 output bit is set. A green LED displays the operating voltage and the 0 address.

Switching the programming plug accesses addressing for the safe output slave and the integrated A/B slave. Another A/B slave is available for diagnostics.

Accessories**VBP-HH1-V3.0-KIT**

AS-Interface Handheld with accessory

VBP-HH1-V3.0

AS-Interface Handheld

VAZ-PK-1,5M-V1-G

Adapter cable module/hand-held programming device

Programming Instructions (Bit Assignment of Inputs and Outputs, Standard and EDM Input)

Bit	AS-Interface Output	Bit	AS-Interface Input
A0	Not used	E0	I1
A1	Not used	E1	I2
A2	Not used	E2	I3
A3	Not available	E3	1.Y1

Programming Instructions (Bit Assignment 1 Diagnostic Slave)

Bit	AS-Interface Output	Bit	AS-Interface Input
A0	Parameter P1=1 Not used	Parameter P1=0 1: Switches output O1 on if release is issued. 0: Switches output O1 off although release is issued	E0
A1	Parameter P1=1 Not used	Parameter P1=0 1: Switches output O2 on if release is issued. 0: Switches output O2 off although release is issued	E1
A2	Not used		E2
A3	Not available		E3
			Parameter P2=0 1.Y1
			Parameter P2=1 1: Feedback for user: Release activated 0: Feedback for user: Release deactivated

Diagnostics

Value	Color	Description	Status Change	LED Out
0	Green	Output on		On
1	Green flashing	-		-
2	Yellow	Restart interlock	Help signal 2	1 Hz
3	Yellow flashing	-		-
4	Red	Output off		Off
5	Red flashing	Waiting to reset fault condition	Help signal 1	8 Hz
6	Gray	Internal fault such as fatal error	By powering device on only	All flash LEDs
7	Green/yellow	Output released but not switched on	Switched on by setting A1	Off

Programming Instructions (Bit Assignment of the AS-Interface Parameter, Diagnostic Slave)**P1 Bit**

P1=1 Safe output switches when released

P1=0 Safe output switches when released and when A0=1 and A1=1

P1 Bit

P2=1 Feedback for user: AS-Interface E3 bit released

P2=0 Input 1.Y1 on AS-Interface E3 bit

P0, P3 Bits

Not used

Release	AS-Interface Safety Output Module, Release AS-Interface Safety Monitor		
	AS-Interface Parameter	No Release	Release
AS-Interface parameter (diagnostic slave) changes the function of A0 and A1 output bits	P1=1 (default) A0=0	Semiconductor output 1 not switched on	Semiconductor output 1 switched on
	P1=1 A0=1	Semiconductor output 1 not switched on	Semiconductor output 1 switched on
	P1=0 A0=0	Semiconductor output 1 not switched on	Semiconductor output 1 not switched on
	P1=0 A0=1	Semiconductor output 1 not switched on	Semiconductor output 1 switched on
	P1=1 (default) A1=0	Semiconductor output 2 not switched on	Semiconductor output 2 switched on
	P1=1 A1=1	Semiconductor output 2 not switched on	Semiconductor output 2 switched on
	P1=0 A1=0	Semiconductor output 2 not switched on	Semiconductor output 2 not switched on
	P1=0 A1=1	Semiconductor output 2 not switched on	Semiconductor output 2 switched on