

# **GN**IIS CE

# **Model Number**

# OBE2000-R2-SE0-Y264206

Thru-beam sensor with 2 m fixed cable


# **Features**

- Ultra-small housing design ٠
- 45° cable outlet for maximum moun-٠ ting freedom under extremely tight space constraints
- Improvement in machine availability • with abrasion-resistant, antistatic glass front
- Extremely large detection range in ٠ Long Range Mode
- Option of switching to high precision mode for greater switching accuracy


### **Product information**

The nano sensor has been developed for a broad range of applications. It offers excellent durability and is exceptionally easy to install. The housing is compact and, with its 45° cable outlet, can be installed in the smallest spaces. New functional principles and functionality open up a range of new options. The abrasion-resistant lens allows long operating times close to the moving object.


# **Dimensions**

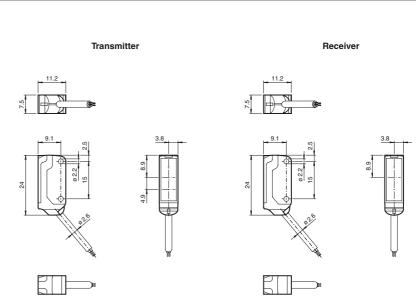


# **Electrical connection emitter**

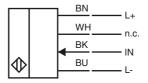

# **Electrical connection receiver**

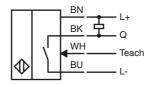

# Indicators/operating means

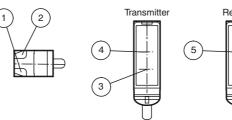

Receiver			
	Ē		
;)—			
	Ļ		
	U		

1	Operating display	green
2	Signal display	yellow
3	Emitter long range	
4	Emitter high precision	
5	Receiver	

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



OBE2000-R2-SE0-Y264206

2

Technical data			Accessories
System components			MH-R2-01
Emitter		OBE2000-R2	Mounting aid for R2 series, Mounting bra-
Receiver		OBE2000-R2-E0	cket
General specifications			
Effective detection range		Long range mode: 0 2 m High precision mode: 0 200 mm	MH-R2-02 Mounting aid for R2 series, Mounting bra-
Threshold detection range		Long range mode: 2.5 m High precision mode: 300 mm	cket
Light source		LED	MH-R2-03
Light type		modulated visible red light , 630 nm	Mounting aid for R2 series, Mounting bra-
Angle deviation Diameter of the light spot		approx. 2 ° Long range mode: 150 mm at a distance of 2000 mm High preci-	cket
Angle of divergence		sion mode: 0.5 mm at a distance of 50 mm approx. 2 $^{\circ}$	MH-R2-04
Optical face		frontal	Mounting aid for R2 series, Mounting bra-
Ambient light limit		EN 60947-5-2 : 30000 Lux	cket
Functional safety related part	rameters		Other suitable accessories can be found at
MTTF <sub>d</sub>		806 a	www.pepperl-fuchs.com
Mission Time (T <sub>M</sub> )		20 a	www.pepper-lucits.com
Diagnostic Coverage (DC)		0 %	
Indicators/operating means			
Operation indicator		LED green, statically lit Power on , short-circuit : LED green flas- hing (approx. 4 Hz)	
Function indicator		Receiver: LED yellow, lights up when light beam is free, flashes when falling short of the stability control ; OFF when light beam is interrupted	
Electrical specifications			
Operating voltage	U <sub>B</sub>	10 30 V DC , class 2	
No-load supply current	Ι <sub>Ο</sub>	Emitter: ≤ 11 mA Receiver: ≤ 8 mA	
Input			
Control input		Emitter selection BK: not connected, Long Range mode BK: 0 V, High Precicion Mode	
Switching threshold		Teach-In input	
Output			
Switching type		NO contact	
Signal output		1 NPN output, short-circuit protected, reverse polarity protected, open collector	
Switching voltage		max. 30 V DC	
Switching current		max. 50 mA	
Voltage drop	U <sub>d</sub>	≤ 1.5 V DC	
Switching frequency Response time	f	approx. 800 Hz	
		600 μs	
Ambient conditions Ambient temperature		-25 60 °C (-13 140 °F)	
Storage temperature		-25 60 °C (-13 140 °F) -30 70 °C (-22 158 °F)	
Mechanical specifications		00 70 °C ( 22 100 T )	
Housing width		7.5 mm	
Housing height		24 mm	
Housing depth		11.2 mm	
Degree of protection		IP67	
Connection		2 m fixed cable	
Material			
Housing		PC/ABS and TPU	
Optical face		glass	1
Cable		PUR	
Installation		2 x thru-holes 2,2 mm , 2 x M2 allen head screws included with delivery	
Mass		approx. 20 g Per sensor	
Cable length		2 m	1
Compliance with standards ves	and direct	-	
Directive conformity	-		
EMC Directive 2004/108/EC	<b>)</b>	EN 60947-5-2:2007	
Approvals and certificates			
UL approval		cULus Recognized, Class 2 Power Source	
CCC approval		CCC approval / marking not required for products rated $\leq$ 36 V	


Date of issue: 2017-07-17 264206\_eng.xml Release date: 2017-07-17 13:41


Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com


Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



# **Curves/Diagrams**

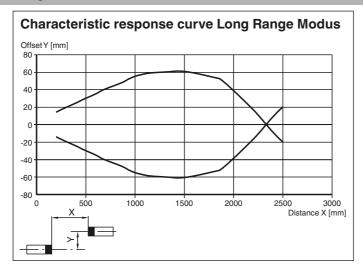

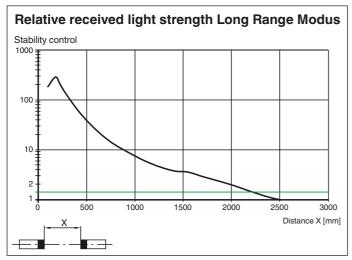

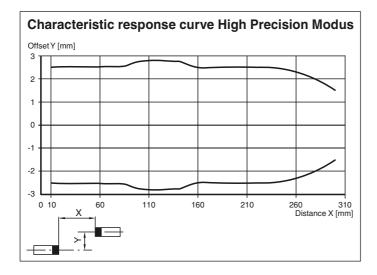


Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com


USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com


Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



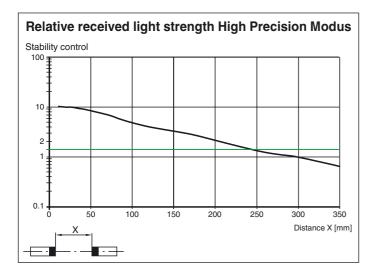

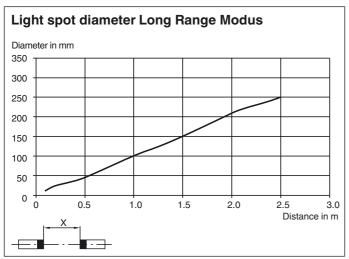

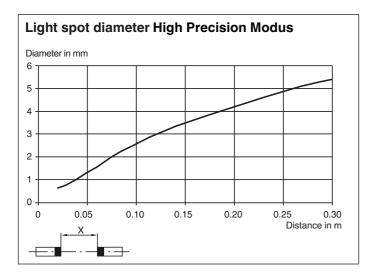

### **Teach-In Methods**

The thru-beam sensor enables the switching points to be taught in for optimum adaptation to specific applications. This eliminates the need for additional components such as apertures.

Essentially, all Teach-in methods can be used in both "High Precision" and "High Power" operating modes.

The sensitivity of the thru-beam sensor can be adjusted using three Teach-in methods:

### **Position Teach**

4

When using this Teach-in method, the following settings are made on the thru-beam sensor:

• The gain is set to an optimum value

• The signal threshold is set to a minimum

Date of issue: 2017-07-17 264206\_eng.xml Release date: 2017-07-17 13:41

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com





#### Recommended application:

This method enables extremely small differences in contrast to be detected, as well as minuscule particles in the beam path, and provides exceptional positioning accuracy.

The best results are achieved in "High Precision" mode.


- 1. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.
- 2. Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver.
- The green and yellow LED indicators flash simultaneously at 2.5 Hz
- 3. Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
- 4. The end of the Teach-in process is indicated when the green LED indicator lights up sold and yellow LED blinks.

### **Two-Point Teach-In**

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- The gain is set to an optimum value
- · The signal threshold is set in the center between the two taught signal values

Signal s	strength	
Max	Teach-in value 1 (avg)	The second se
	Threshold level	
	Teach-in value 2 (avg)	
0 -	t t	

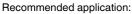

Enables detection of transparent objects.

The best results are achieved in "High Precision" mode.

- 1. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.
- 2. Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash simultaneously at 2.5 Hz
- 3. Position the object in the beam path.
- 4. Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
- 5. The end of the Teach-in process is indicated when the green LED indicator lights up sold.

#### Maximum Teach-In

- When using this Teach-in method, the following settings are made on the thru-beam sensor:
- · The gain is set to a maximum
- · The signal threshold is set to a minimum

Signal strength		_
Max		
	Threshold level	_ /*
0		<b>,</b> L



#### Recommended application:

Enables an object to be detected with a high excess gain. This can be useful if there is severe environmental contamination or to achieve long operating times.

- The best results are achieved in "High Precision" mode.
- 1. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.
- 2. Cover the receiver or transmitter.
- 3. Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash simultaneously at 2.5 Hz
- 4 Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
- 5. The end of the Teach-in process is indicated when the green LED indicator lights up sold.

264206 ena.xml

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

