**Dimensions** 



### **Model Number**

### OBR12M-R100-2EP-IO-0,3M-V1-L

Laser retroreflective sensor with fixed cable and M12 connector, 4-pin

#### **Features**

- Miniature design with versatile • mounting options
- DuraBeam Laser Sensors durable ٠ and employable like an LED
- Extended temperature range • -40°C ... 60°C
- High degree of protection IP69K
- IO-link interface for service and process data


### **Product information**

The R100 series miniature optical sensors are the first devices of their kind to offer an end-to-end solution in a small single standard design - from thru-beam sensor through to a distance measurement device. As a result of this design, the sensors are able to perform practically all standard automation tasks.

The entire series enables sensors to communicate via IO-Link.

The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

The use of Multi Pixel Technology gives the standard sensors a high level of flexibility and enables them to adapt more effectively to their operating environment.

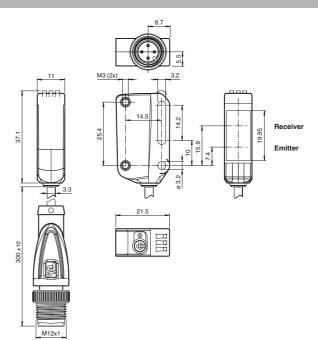


### **Electrical connection**



#### Pinout



# Indicators/operating means

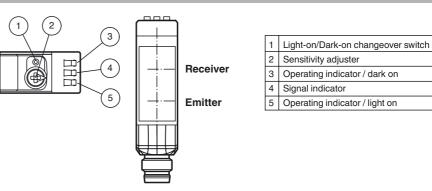

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group

www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



Laserlabel

#### **Technical data**

#### General specifications Effective detection range Reflector distance Threshold detection range Reference target Light source Light type Polarization filter Laser nominal ratings Note Laser class Wave length Beam divergence Pulse length Repetition rate max. pulse energy Diameter of the light spot Angle of divergence Ambient light limit Functional safety related parameters MTTF<sub>d</sub> Mission Time (T<sub>M</sub>) Diagnostic Coverage (DC) Indicators/operating means Operation indicator Function indicator

Control elements Control elements Parameterization indicator Electrical specifications Operating voltage Ripple No-load supply current Protection class Interface Interface type Transfer rate **IO-Link Revision** Min. cycle time Process data witdh SIO mode support Device ID Compatible master port type Output Switching type

Signal output

Switching voltage Switching current Usage category Voltage drop Switching frequency Response time Conformity Communication interface Product standard

Laser safety Ambient conditions Ambient temperature

Storage temperature

**Mechanical specifications** Housing width

# H50 reflector laser diode modulated visible red light yes

### LASER LIGHT, DO NOT STARE INTO BEAM

680 nm > 5 mrad d63 < 2 mm in the range of 250 mm ... 750 mm 1.6 µs max 17.6 kHz 9.6 nJ approx. 30 mm at a distance of 12 m approx. 0.3 EN 60947-5-2

#### 672 a 20 a 0%

UB

I<sub>0</sub>

A

 $U_{d}$ 

f

0....12 m 0.2 ... 12 m

15 m

LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode Yellow LED Permanently lit - light path clear Permanently off - object detected Flashing (4 Hz) - insufficient operating reserve Light-on/dark-on changeover switch sensitivity adjustment IO link communication: green LED goes out briefly (1 Hz)

10 ... 30 V DC max 10 % < 20 mA at 24 V supply voltage ш

IO-Link (via C/Q = pin 4) COM 2 (38.4 kBaud) 1.1 2.3 ms Process data input 2 Bit Process data output 2 Bit ves 0x110202 (1114626)

#### The switching type of the sensor is adjustable. The default setting is: C/Q - Pin4: NPN normally open / dark-on, PNP normally closed / light-on, IO-Link /Q - Pin2: NPN normally closed / light-on, PNP normally open / dark-on 2 push-pull (4 in 1)outputs, short-circuit protected, reverse polarity protected, overvoltage protected max. 30 V DC max. 100 mA , resistive load DC-12 and DC-13 $\leq$ 1.5 V DC 2000 Hz 250 µs IEC 61131-9 EN 60947-5-2 EN 60825-1:2014 -40 … 60 °C (-40 … 140 °F) , fixed cable -25 … 60 °C (-13 … 140 °F) , movable cable not appropriate for conveyor chains -40 ... 70 °C (-40 ... 158 °F)



### Accessories

IO-Link-Master02-USB IO-Link master, supply via USB port or separate power supply, LED indicators, M12 plug for sensor connection

#### V1-G-2M-PUR Female cordset, M12, 4-pin, PUR cable

V1-W-2M-PUR Female cordset, M12, 4-pin, PUR cable

OMH-R10X-01 Mounting bracket

OMH-R10X-02 Mounting bracket

OMH-R10X-04 Mounting bracket

OMH-R10X-10 Mounting bracket

OMH-ML100-03 Mounting aid for round steel ø 12 mm or sheet 1.5 mm ... 3 mm

OMH-ML100-031 Mounting aid for round steel ø 10 ... 14 mm or sheet 1 mm ... 5 mm

REF-MH82 Reflector with Micro-structure, rectangular 82 mm x 60 mm, mounting holes

### REF-MH20

Reflector with Micro-structure, rectangular 32 mm x 20 mm, mounting holes

## **REF-MVR10**

Reflector with Micro-structure, rectangular 60 mm x 19 mm, mounting holes

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

11 mm

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com




# Laser retroreflective sensor


Housing height	37.1 mm	
Housing depth	21.5 mm	
Degree of protection	IP67 / IP69 / IP69K	
Connection	300 mm fixed cable with M12 x 1, 4-pin connector	
Material		
Housing	PC (Polycarbonate)	
Optical face	РММА	
Mass	approx. 21 g	
Cable length	0.3 m	
Approvals and certificates		

#### Approvals and certificates

UL approval FDA approval E87056, cULus Listed, class 2 power supply, type rating 1 IEC 60825-1:2007 Complies with 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007

# **Curves/Diagrams**

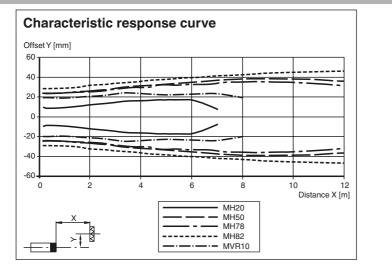

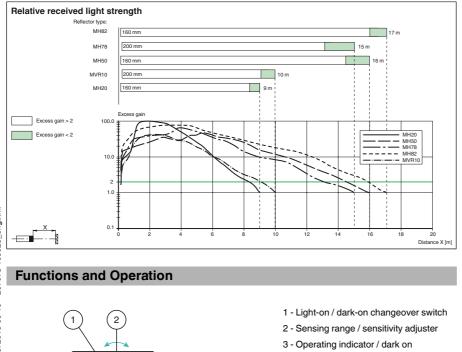

- 4 Signal indicator
- 5 Operating indicator / light on

To unlock the adjustment functions turn the sensing range /sensitivity adjuster for more than 180 degrees.

## Sensing Range / Sensitivity

Turn sensing range / sensitivity adjuster clockwise to increase sensing range / sensitivity.

Refer to "General Notes Relating to PepperI+Fuchs Product Information".			
Pepperl+Fuchs Group	USA: +1 330 486 0001	Germany: +49 621 776 4411	Singapore: +65 6779 9091
www.pepperl-fuchs.com	fa-info@us.pepperl-fuchs.com	fa-info@de.pepperl-fuchs.com	fa-info@sg.pepperl-fuchs.com



R100

(5

4)(3

Turn sensing range / sensitivity adjuster counter clockwise to decrease sensing range / sensitivity.

If the end of the adjustment range is reached, the signal indicator starts flashing with 8 Hz.

#### Light-on / Dark-on Configuration

Press the light-on / dark-on changeover switch for more than 1 second (less than 4 seconds). The light-on / dark-on mode changes and the operating indicators are activated accordingly.

If you press the light-on / dark-on changeover switch for more than 4 seconds, the light-on /dark-on mode changes back to the original setting. On release of the light-on / dark-on changeover switch the current state is activated.

#### **Restore Factory Settings**

Press the light-on / dark-on changeover switch for more than 10 seconds (less than 30 seconds) until all LEDs turn off. On release of the light-on / dark-on changeover switch the signal indicator turns on. After 5 seconds the sensor resumes operation with factory default settings.

After 5 minutes of inactivity the sensing range / sensitivity adjustment is locked. In order to reactivate the sensing range / sensitivity adjustment, turn the sensing range /sensitivity adjuster for more than 180 degrees.



4