




Model number


VBP-HH1-V3.0-110V-OEM

AS-Interface Handheld

Features

- · Addressing and programming AS-Interface slaves
- Displaying the assigned slave addres-• ses and the status of the inputs
- Setting outputs at the AS-Interface ٠ slave
- Also supports profiles S-7.7.A.7 ٠ (Spec 3.0), S-0.B and S-7.B (AS Interface Safety at Work)
- The slave connection is short-circuit and overload proof
- Battery charger included with delivery

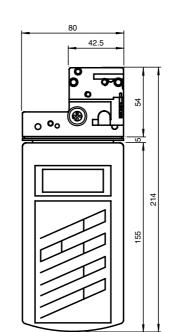

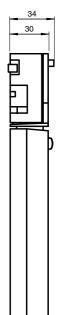


Electrical connection

Dimensions



- AS-Interface + 1
- 2 Digital input for optical addressing adapters
- 3 AS-Interface -
- Digital output for optical addressing adapters 4
- 5 Voltage supply for optical addressing adapters

Indicating / Operating means

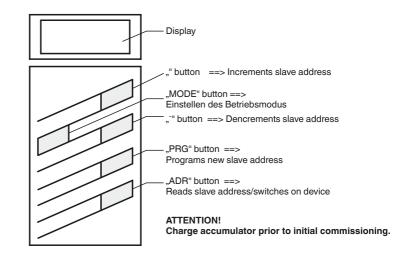

Technical data

iconnour duta	
General specifications	
AS-Interface specification	V3.0
Operating mode	Plug-in cha
Indicators/operating means	
Display	LC display
Keyboard	membrane black with g

arging unit, 120 V AC, included with delivery

e keys, 5 keys gray buttons (without logo)

AS-Interface Handheld

Electrical specifications

Operating duration Power supply

Interface

Interface type Open loop voltage Load current

Directive conformity

Electromagnetic compatibility Directive 2014/30/EU

Standard conformity

Degree of protection Electrical safety Emitted interference Noise immunity Ambient conditions Ambient temperature Storage temperature Mechanical specifications

Degree of protection Material

Housing

Mass

8 h or \geq 250 read/write procedures for fully charged battery battery mode, please use only battery charger included with delivery to charge (charging time about 14 h)

AS-Interface, short-circuit proof and overload-proof, or optical 28 ${\rm V}$

100 mA at 25 V

EN 61326-1:2013

EN 60529:2000 Plug-in charging unit UL 1310 EN 61326-1:2013 EN 61326-1:2013

0 ... 40 °C (32 ... 104 °F) -20 ... 40 °C (-4 ... 104 °F)

IP20

plastic grey (RAL7035) approx. 610 g

Function

The AS-Interface Handheld VBP-HH1-V3.0 is an addressing device according to the AS-Interface specification 3.0.

This addressing device can be used to program AS-Interface slaves and to test part of their functions.

In addition, new functions have been incorporated:

- Permanent data exchange with AS-Interface slaves
- Support of the data exchange with 4E4A slaves in ext. addressing mode
- Indication of the safety code for AS-Interface Safety-at-Work slaves

The AS-Interface connection adapter on the top of the addressing device is used for connecting AS-Interface slaves (sensors, actuators and modules) to the addressing device. The following devices and designs can be connected to the addressing device by directly plugging it onto the AS-Interface connection adapter:

Devices with M12 connector, VariKont M-system, VariKont system, FP design, AS-Interface modules of the types G1 and G4.

For device designs with integrated addressing socket, please use the optional adapter cable.

Accessories

VAZ-PK-1,5M-V1-G

Adapter cable module/hand-held programming device

V1S-TEE-V1/V1S

T-Distributor, M12 connector to M12 socket/connector

VAZ-PK-FK-0,2M-V1-W

Adapter cable G10 module/hand-held programming device

VAZ-9VDC-CHRG-115VAC Power Supply

VAZ-9VDC-CHRG-230VAC Power Supply

VAZ-PK/G20-1M-V1-G Adapter cable G20 module/hand-held programming device