



## **Model number**

#### PGV100I-F200-B16-V15


Read head for incident light positioning system

### **Features**

- Mechanically rugged: no wearing parts, long operating life, maintenance-free
- CANopen interface
- · Reading of Data Matrix control codes
- Non-contact positioning on Data Matrix code tape
- Infrared light

## **Diagramms**

## Coordinates

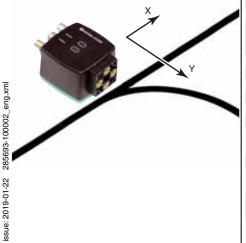

# System components

PGV\*-CA25-\*

Date of i

Release date: 2019-01-22 07:34

Data Matrix code tape

VAZ-V1S-B

Blind plug for M12 sockets

## **Technical data**

General specifications

 Passage speed v
 ≤ 8 m/s

 Measuring range
 max. 10000 m

 Light type
 Integrated LED lightning , infrared

 Read distance
 100 mm

 Depth of focus
 ± 30 mm

 Reading field
 120 mm x 80 mm

 Ambient light limit
 100000 Lux

 Resolution
 ± 0.2 mm

Resolution
Nominal ratings

Camera Type

Type CMOS , Global shutter Processor

Clock pulse frequency 600 MHz

Speed of computation 4800 MIPS Functional safety related parameters

 $\begin{array}{ll} \text{MTTF}_{d} & \text{87 a} \\ \text{Mission Time } (\text{T}_{M}) & \text{20 a} \\ \text{Diagnostic Coverage (DC)} & \text{0 } \% \\ \end{array}$ 

Indicators/operating means

LED indication 7 LEDs (communication, alignment aid, status information)

Power consumption P<sub>0</sub> 6 W

Interface

Interface type CANopen , galvanically isolated

Data output code binary code
Transfer rate binary code max. 1 MBit/s

Interface 2
Interface type USB Service

Input

Input type 1 funtion input

0-level: -U<sub>B</sub>or unwired

1-level: +8 V ... +U<sub>B</sub> , programmable

Input impedance ≥ 27 kg

Output

Output type 1 to 3 switch outputs , programmable , short-circuit

Switching voltage Operating voltage
Switching current 150 mA each output

Standard conformity

 Emitted interference
 EN 61000-6-4:2007+A1:2011

 Noise immunity
 EN 61000-6-2:2005

 Shock resistance
 EN 60068-2-27:2009

 Vibration resistance
 EN 60068-2-6:2008

Ambient conditions

Relative humidity

Operating temperature 0 ... 60 °C (32 ... 140 °F) , -20 ... 60 °C (-4 ... 140 °F)

(noncondensing; prevent icing on the lens!)

90 % . noncondensing

Mechanical specifications

Connection type 8-pin, M12x1 connector, standard (supply+IO) 5-pin, M12x1 socket, A-coded (bus out/termination)

5-pin, M12x1 connector, A-coded (bus in)

Housing width 70 mm
Housing height 70 mm
Housing depth 50 mm
Degree of protection IP67

Material
Housing PC/ABS
Mass approx. 200 g

Approvals and certificates


UL approval cULus Listed, General Purpose, Class 2 Power Source,

Type 1 enclosure


CCC approval CCC approval / marking not required for products rated ≤36

V


## **Dimensions**

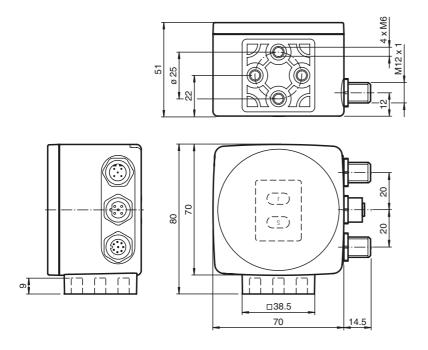

## **Electrical connection**

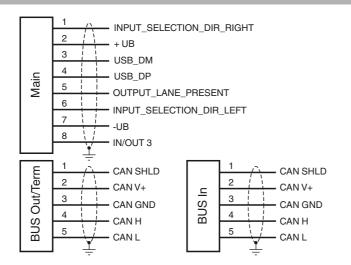

## **Pinout**



The PGV... reader forms part of the positioning system in the Pepperl+Fuchs incident light process. The read head's features include a camera module and an integrated illumination unit. The reader uses these features to detect a colored strip stuck to the floor to track the lane. The reader also detects control codes and position markers in the form of Data Matrix codes attached to a self-adhesive code tape. The Data Matrix code tape is usually mounted in a fixed position instead of the colored strip or parallel to the colored strip. The reader is located on the front of an automated guided vehicle and guides this vehicle along the colored strip and/or Data Matrix code tape.

## System components


### PGV\*-CC25-\*


Control code tape für PGV System

## PGV25M-CD100-CLEAR

Protective laminate for PGV code tape

## **Additional information**

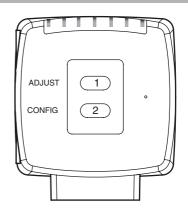

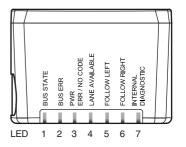

# **Accessories**

## PCV-SC12

Grounding clip for PCV system

# **ICZ-TR-CAN/DN-V15**

Terminal resistor for DeviceNet, **CANopen** 

## PCV-LM25

Marker head for 25 mm code tape

# PCV-MB1

Mounting bracket for PCV\* read head

## V15-G-2M-PUR-CAN

DeviceNet/CANopen bus cable, M12, PUR cable, 5-pin

## V15-G-2M-PUR-CAN-V15-G

DeviceNet/CANOpen bus cable, M12 to M12, PUR cable 5-pin

## V15-G-5M-PUR-CAN-V15-G

DeviceNet/CANOpen bus cable, M12 to M12, PUR cable 5-pin

## V19-G-2M-PUR-ABG

Female cordset, M12, 8-pin, shielded, PUR cable

# V19-G-5M-PUR-ABG

Female cordset, M12, 8-pin, shielded, PUR cable

PEPPERL+FUCHS

V19-G-10M-PUR-ABG

# **Accessories**

Female cordset, M12, 8-pin, shielded, PUR cable

## **Vision Configurator**

Operating software for camera-based sensors

### PCV-KBL-V19-STR-USB

USB cable unit with power supply

#### **Mounting and Commissioning**

Mount the reader such that the optical surface of the device captures the optimum reading distance to the colored strip and/or Data Matrix code tape (see "Technical Data"). The stability of the mounting and the manner in which the vehicle is guided ensure that the reader is not operated outside of its depth of focus range. The colored strip and/or Data Matrix code tape must not leave the maximum reading window for the reader during this process.

All readers can be adapted to optimally meet specific requirements through parameterization.

#### **Displays and Local Controls**

The PGV... reader is equipped with seven indicator LEDs for carrying out visual function checks and rapid diagnosis. The reader is equipped with two buttons at the back for activating the alignment aid and parameterization mode.

#### **LEDs**

LED	Color	Label	Meaning
1	Yellow	BUS STATE	CANopen communication active
2	Red	BUS ERR	CANopen communication error
3	Green/red	PWR	Code detected/not detected, error
		ERR/NO CODE	
4	Yellow	LANE AVAILABLE	Lane available
5	Yellow	FOLLOW LEFT	"Follow left-hand lane" activated
6	Yellow	FOLLOW RIGHT	"Follow right-hand lane" activated
7	Red/green/yel-	INTERNAL	Internal diagnostics
	low	DIAGNOSTIC	

# **External Parameterization**

To parameterize the device externally, the parameterization code is required in the form of a Data Matrix containing the desired reader parameters. Data Matrix code cards detailing the step-by-step process for externally parameterizing the device are printed in the instruction manual for the reader.

The reader can be parameterized only within ten minutes of being switched on. If a key is pressed after ten minutes of the device being switched on, a visual signal is given by the LEDs (LED1, yellow/LED2, red/LED3, green/LED4, yellow/LED5, yellow/LED6, yellow, flashing for two seconds).

- The switchover from normal mode to parameterization mode is made by pressing button 2 on the back of the reader. To switch the device over, button 2 must be pressed and held for more than two seconds. LED4 then flashes.
  - **Note:** Parameterization mode is exited automatically if the device is inactive for one minute. In this case, the reader reverts to normal mode and operates without the settings having been changed.
- Place the parameterization code in the field of vision of the camera module. After the parameterization code is detected, the green LED3 lights up for one second. If the parameterization code is invalid, LED3 lights up in red for two seconds.
- Briefly pressing button 2 will exit parameterization mode.