## **Features**

- Interface between the I/O modules and the PCS/PLC
- · Com unit for 80 analog or 184 digital channels
- Communication via MODBUS TCP
- · Installation in suitable enclosures in Zone 1
- Module can be exchanged under voltage (hot swap)
- HART communication via MODBUS TCP
- · Configuration via FDT 1.2 DTM
- Non-volatile memory for configuration and parameter settings
- Self configuration in redundant systems
- · Permanently self-monitoring
- · Outputs drive to safe state in case of failures

### **Function**


The MODBUS TCP com unit forms the interface between the I/O modules on the backplane and the process control system.

It supports all single width and dual width I/O modules. Thereby signals from NAMUR sensors, mechanical contacts, high-power solenoid drivers, power relays, sounders, and alarm LEDs are transported to the higher-level bus system.

The com unit can be easily configured via DTM and supports redundancy as well as HART.


# **Assembly**

### Front view

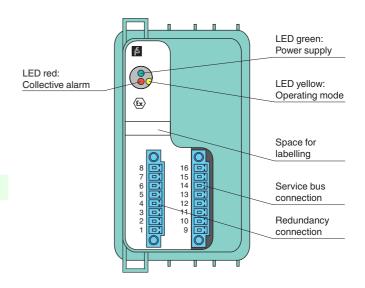



### Connection

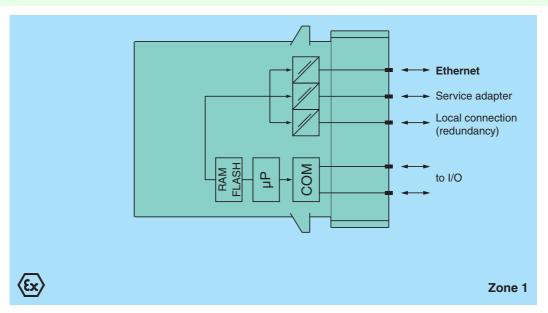

www.pepperl-fuchs.com

Supply		
Connection		backplane bus
Rated voltage	U <sub>r</sub>	5 V DC, only in connection with the power supplies FB92**
Power dissipation	O <sub>r</sub>	2 W
•		2.5 W
Power consumption Fieldbus interface		2.5 W
		MODBUGTOR
Fieldbus type		MODBUS TCP
Ethernet Interface		
Connection type		wired to Ex e terminals via backplane
Transfer rate		10 MBit/s
Station connection		directly to PCS or PLC or via hubs or switches
Bus length		≤ 100 m (Ethernet standard)
Addressing		IP address assigned via Ethernet
Ethernet address		IP V4 address (factory standard setting: 0.0.0.0, auto IP, DHCP)
Number of channels per station		≤80 analog, ≤184 digital
Supported I/O modules		all FB remote I/O modules
HART communication		via Ethernet
Internal bus		
Connection		backplane bus
Redundancy		via left front connector
Service interface		
Connection		via right front connector in connection with service adapter SERV8001
Indicators/settings		3
LED indication		LED green (power supply): On = operating, fast flash = cold start
		LED red (collective alarm): On = internal fault, flashing = no Modbus TCP connection LED yellow (operating mode): flashing 1 (1:1 ratio) = active, normal operation; flashing 2 (7:1 ratio) = active, simulation
Directive conformity		
Electromagnetic compatibility		
Directive 2014/30/EU		EN 61326-1
Conformity		
Electromagnetic compatibility		NE 21
Degree of protection		IEC 60529
Fieldbus standard		IEEE 802.3
Environmental test		EN 60068-2-14
Shock resistance		EN 60068-2-27
Vibration resistance		EN 60068-2-6
Damaging gas		EN 60068-2-42
Relative humidity		EN 60068-2-56
Ambient conditions		
Ambient temperature		-20 60 °C (-4 140 °F)
Storage temperature		-25 85 °C (-13 185 °F)
Relative humidity		95 % non-condensing
Shock resistance		shock type I, shock duration 11 ms, shock amplitude 15 g, number of shocks 18
Vibration resistance		frequency range 10 150 Hz; transition frequency: 57.56 Hz, amplitude/acceleration ± 0.075 mm/1 g; 10
Vibration resistance		cycles frequency range 5 100 Hz; transition frequency: 13.2 Hz amplitude/acceleration ± 1 mm/0.7 g; 90 minutes at each resonance
Damaging gas		designed for operation in environmental conditions acc. to ISA-S71.04-1985, severity level G3
Mechanical specifications	3	
Degree of protection		IP20 (module), a separate housing is required acc. to the system description
Connection		via backplane
Mass		approx. 750 g
Dimensions		57 x 107 x 132 mm (2.2 x 4.2 x 5.2 inch)
Data for application in cor with hazardous areas	nnection	
EU-Type Examination Certif	icate	PTB 97 ATEX 1074 U
Marking		(₺) II 2 G Ex d [ib] IIC Gb
Directive conformity		
Directive 2014/34/EU		EN 60079-0:2009 EN 60079-1:2007 EN 60079-26:2007 EN 61241-11:2006
International approvals		
EAC approval		Russia: RU C-IT.MIII06.B.00129
app.ora.		



Marine approval	
Lloyd Register	15/20021
DNV GL Marine	TAA0000034
American Bureau of Shipping	T1450280/UN
General information	
System information	The module has to be mounted in appropriate backplanes (FB92**) in Zone 1, 2, or outside hazardous areas. Observe the corresponding EC-type examination certificate.
Supplementary information	EC-Type Examination Certificate, Statement of Conformity, Declaration of Conformity, Attestation of Conformity and instructions have to be observed where applicable. For information see www.pepperlfuchs.com.