Receiver





# **Model Number**

# OBE2000-R2-SE0-0,2M-V31

Thru-beam sensor with fixed cable and 4-pin, M8 connector

# **Features**

- Ultra-small housing design
- 45° cable outlet for maximum mounting freedom under extremely tight space constraints
- Improvement in machine availability with abrasion-resistant, antistatic glass front
- Extremely large detection range in Long Range Mode
- Option of switching to high precision mode for greater switching accuracy


# **Product information**

The nano sensor has been developed for a broad range of applications. It offers excellent durability and is exceptionally easy to install. The housing is compact and, with its 45° cable outlet, can be installed in the smallest spaces. New functional principles and functionality open up a range of new options. The abrasion-resistant lens allows long operating times close to the moving object.


# **Dimensions**

# **Electrical connection emitter**

Transmitter

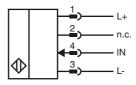

## **Electrical connection receiver**

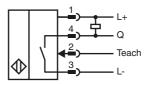


# **Pinout**

Wire colors in accordance with EN 60947-5-2



1 | BN (brown) 3 | BU (blue) 4 | BK (black)

# Indicators/operating means

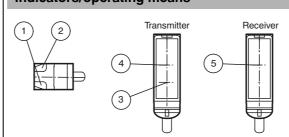

1	Operating display	green	
2	Signal display	yellow	
3	Emitter long range		
4			
5			

Technical data		
System components		
Emitter		OBE2000-R2-0,2M-V31
Receiver		OBE2000-R2-E0-0,2M-V31
General specifications		
Effective detection range		Long range mode: 0 2 m High precision mode: 0 200 mm
Threshold detection range		Long range mode: 2.5 m High precision mode: 300 mm
Light source		LED
Light type		modulated visible red light, 630 nm
Angle deviation  Diameter of the light spot		approx. 2 ° Long range mode: 150 mm at a distance of 2000 mm High precision mode: 0.5 mm at a distance of 50 mm
Angle of divergence		approx. 2 °
Optical face		frontal
Ambient light limit		EN 60947-5-2 : 30000 Lux
Functional safety related parar	neters	
MTTF <sub>d</sub>		806 a
Mission Time (T <sub>M</sub> )		20 a
Diagnostic Coverage (DC)		0 %
Indicators/operating means		
Operation indicator  Function indicator		LED green, statically lit Power on , short-circuit : LED green flashing (approx. 4 Hz)
		Receiver: LED yellow, lights up when light beam is free, flashes when falling short of the stability control; OFF when light beam is interrupted
Electrical specifications		
Operating voltage	$U_B$	10 30 V DC , class 2
No-load supply current	I <sub>0</sub>	Emitter: ≤ 11 mA
		Receiver: ≤ 8 mA
Input		
Control input		Emitter selection BK: not connected, Long Range mode BK: 0 \ High Precicion Mode
Switching threshold		Teach-In input
Output		
Switching type		NO contact
Signal output		1 NPN output, short-circuit protected, reverse polarity protected open collector
Switching voltage		max. 30 V DC
Switching current		max. 50 mA
Voltage drop	U <sub>d</sub>	≤ 1.5 V DC
Switching frequency	f	approx. 800 Hz
Response time		600 μs
Ambient conditions		07 00 00 / 10 110 0 <b>7</b> )
Ambient temperature		-25 60 °C (-13 140 °F)
Storage temperature		-30 70 °C (-22 158 °F)
Mechanical specifications		
Housing width		7.5 mm
Housing height		24 mm
Housing depth		11.2 mm
Degree of protection		IP67
Connection		200 mm fixed cable with 4-pin, M8x1 connector
Material		DO/ADO
Housing		PC/ABS and TPU
Optical face Cable		glass PUR
Installation		
Mass		Fixing screws, 2 x M2 allen head screws included with delivery
Cable length		approx. 20 g Per sensor 200 mm
-	d diroc*	
Compliance with standards an ves	u airecti	
Directive conformity		EN 00047 F 0.0007
EMC Directive 2004/108/EC		EN 60947-5-2:2007
Approvals and certificates		
UL approval		cULus Recognized, Class 2 Power Source
CCC approval		CCC approval / marking not required for products rated ≤36 V
σου αμμισναί		COO approvar/ marking not required for products rated ≤36 V

# Accessories

# MH-R2-01

Mounting aid for R2 series, Mounting bracket

# MH-R2-02

Mounting aid for R2 series, Mounting bracket

### MH-R2-03

Mounting aid for R2 series, Mounting bracket

### MH-R2-04

Mounting aid for R2 series, Mounting bracket


# V31-GM-2M-PUR


Female cordset, M8, 4-pin, PUR cable


# V31-WM-2M-PUR

Female cordset, M8, 4-pin, PUR cable


Other suitable accessories can be found at www.pepperl-fuchs.com

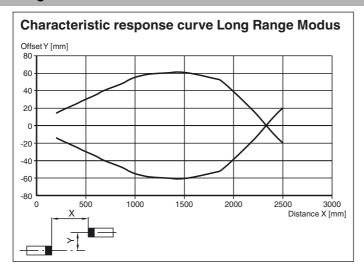


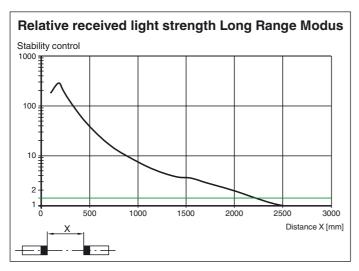

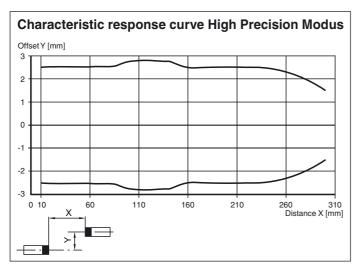

www.pepperl-fuchs.com

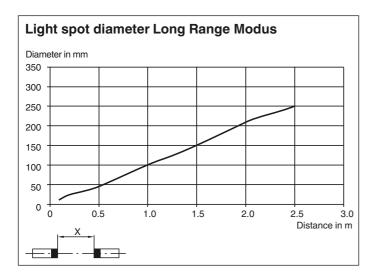

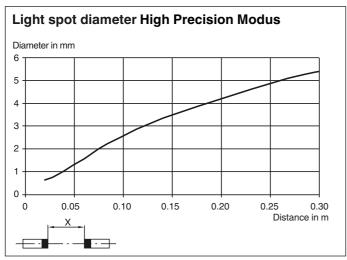

# **Teach-In Methods**

The thru-beam sensor enables the switching points to be taught in for optimum adaptation to specific applications. This eliminates the need for additional components such as apertures.


Essentially, all Teach-in methods can be used in both "High Precision" and "High Power" operating modes.

The sensitivity of the thru-beam sensor can be adjusted using three Teach-in methods:

# **Position Teach**

- The gain is set to an optimum value
- The signal threshold is set to a minimum



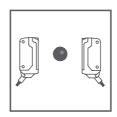

#### Recommended application:

This method enables extremely small differences in contrast to be detected, as well as minuscule particles in the beam path, and provides exceptional positioning accuracy.


The best results are achieved in "High Precision" mode.


- 1. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.
- Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver.
   The green and yellow LED indicators flash simultaneously at 2.5 Hz
- 3. Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
- 4. The end of the Teach-in process is indicated when the green LED indicator lights up sold and yellow LED blinks.

#### Two-Point Teach-In

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- The gain is set to an optimum value
- · The signal threshold is set in the center between the two taught signal values

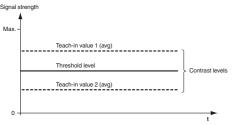

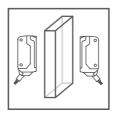

# Recommended application:

Enables detection of transparent objects.


The best results are achieved in "High Precision" mode.

- 1. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.
- 2. Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash simultaneously at 2.5 Hz
- 3. Position the object in the beam path.
- 4. Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver. The green and yellow LED indicators flash alternately at 2.5 Hz
- 5. The end of the Teach-in process is indicated when the green LED indicator lights up sold.

# Maximum Teach-In

When using this Teach-in method, the following settings are made on the thru-beam sensor:

- The gain is set to a maximum
- The signal threshold is set to a minimum

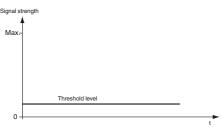



## Recommended application:

Enables an object to be detected with a high excess gain. This can be useful if there is severe environmental contamination or to achieve long operating times.

The best results are achieved in "High Precision" mode.

- 1. Make sure that there are no objects in the beam path and that the sensor is connected to the power supply.
- 2. Cover the receiver or transmitter.
- Connect the white cable on the receiver (WH/IN) to the blue cable (BU/0 V) on the receiver.
   The green and yellow LED indicators flash simultaneously at 2.5 Hz
- Disconnect the white cable on the receiver (WH/IN) from the blue cable (BU/0 V) on the receiver.
   The green and yellow LED indicators flash alternately at 2.5 Hz
- 5. The end of the Teach-in process is indicated when the green LED indicator lights up sold.

287780 ena.xml