Distance sensor

OMT300-R201-IEP-IO-0,3M-V31



CE IO-Link

Model Number

OMT300-R201-IEP-IO-0,3M-V31

Distance sensor

with fixed cable and 4-pin, M8 connector

Features

- Medium design with versatile • mounting options
- Space-saving distance sensors in ٠ small standardized design
- Multi Pixel Technology (MPT) exact • and precise signal evaluation
- IO-link interface for service and process data
- Analog output 4 ... 20 mA

Product information


The optical sensors in the series are the first devices to offer an end-to-end solution in a medium-sized standard design-from the thru-beam sensor through to the measuring distance sensor. As a result of this design, the sensors are able to perform practically all standard automation tasks.


The entire series enables sensors to communicate via IO-Link.

The DuraBeam laser sensors are durable and can be used in the same way as a standard sensor.

Multi Pixel Technology (MPT) ensures that the standard sensors are flexible and can be adapted to the application

environment.

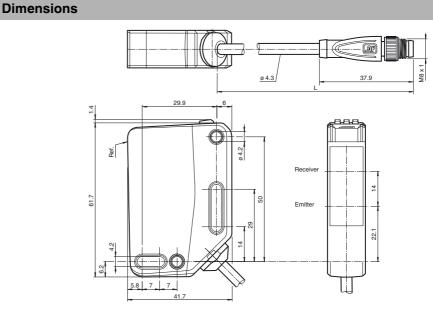

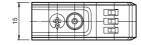

3 4

Electrical connection





Pinout



Wire colors in accordance with EN 60947-5-2 ΒN (brown) (white) WH BU BK (blue) (black)

Indicators/operating means





1	Mode rotary switch	
2	Teach-in button	
3	Switching output display Q1	YE
4	Operating indicator	GN

Q1B	Switching output/switch point B
Q1A	Switching output/switch point A
Q2A	Analog output/value A
Q2B	Analog output/value B
0	Keylock

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com



Measurement range

Reference target

Angle deviation

Angle of divergence

Ambient light limit

Operation indicator

Function indicator

Control elements

Control elements

Operating voltage

Protection class

Device profile

Transfer rate **IO-Link Revision**

Min. cvcle time

Process data witdh

SIO mode support

Device ID

Switching type

Signal output

Switching voltage Switching current

Usage category

Response time

Recovery time

Product standard

Temperature drift

Repeat accuracy

Ambient conditions

Warm up time

Linearity error

Housing width

Housing height

Housing depth Degree of protection

Connection

Material

Voltage drop

Analog output

Output type Load resistor

Conformity

Output

Ripple

Interface Interface type

Resolution

MTTF_d Mission Time (T_M)

Light source

Light type

Technical data Accessories **General specifications** IO-Link-Master02-USB 100 ... 300 mm IO-Link master, supply via USB port or standard white, 100 mm x 100 mm separate power supply, LED indicators, I FD M12 plug for sensor connection modulated visible red light LED risk group labelling exempt group V31-WM-2M-PUR max. +/- 1.5 Female cordset, M8, 4-pin, PUR cable Diameter of the light spot approx. 8 mm at a distance of 300 mm 1.8 V31-GM-2M-PUR EN 60947-5-2 : 45000 Lux Female cordset, M8, 4-pin, PUR cable 0.1 mm Other suitable accessories can be found at Functional safety related parameters www.pepperl-fuchs.com 520 a 20 a Diagnostic Coverage (DC) 0% Indicators/operating means LED green: constantly on - power on flashing (4Hz) - short circuit flashing with short break (1 Hz) - IO-Link mode LED vellow: constantly on - switch output active constantly off - switch output inactive Teach-In key 5-step rotary switch for operating modes selection **Electrical specifications** 18 ... 30 V DC UB max. 10 % No-load supply current < 25 mA at 24 V supply voltage 10 Ш IO-Link (via C/Q = pin 4) Identification and diagnosis Smart Sensor type 0/type 3.3 COM 2 (38.4 kBaud) 1.1 3 ms Process data input 4 byte Process data output 2 bits ves 0x111915 (1120533) Compatible master port type А The default setting is: C/Q - Pin4: NPN normally open, PNP normally closed, IO-Link I¿Pin2: analog output 4...20 mA 1 push-pull output , 1 analog output , short-circuit-proof, reverse polarity protection, surge-proof max 30 V DC max. 100 mA , resistive load DC-12 and DC-13 U_{d} ≤ 1.5 V DC 2 ms , see table 1 1 current output: 4 ... 20 mA > 1 k Ω voltage output ; \leq 470 Ω current output 2 ms Communication interface IEC 61131-9 EN 60947-5-2 Measurement accuracy 0.05 %/K 5 min < 0.5 % , see table 1 0.5 % 10 ... 50 °C (50 ... 122 °F) Ambient temperature Storage temperature -40 ... 70 °C (-40 ... 158 °F) **Mechanical specifications** 15 mm 61.7 mm 41.7 mm IP67 / IP69 / IP69K fixed cable 300 mm with M8 x 1 male connector; 4-pin

2

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com



Housing		PC (P	olycarbonate)		
Optical face		PMMA	4			
Mass		appro	x. 51 g			
Cable length		0.3 m				
Approvals and certific	cates					
UL approval		E870	56 , cULus L	isted , class 2	power supp	ly , type rating 1
CCC approval CCC approval / marking not required for products rated ≤36 V						
		000	approvar/ m	arking not rec	uneu ioi pio	
Table 1: Informa	tion on I					
Table 1: Informa					64-way	256-way
Table 1: Information Measured value	filter	Measure	d Value	Filters		
Table 1: Information Measured value Filter	filter 1-way	Measure 2-way	d Value 4-way	Filters 16-way	64-way	256-way

Settings

Teach-In (TI)

Use the rotary switch for switching signal Q1 to select the relevant switching threshold A and/or B to teach in.

The yellow LEDs indicate the current state of the selected output.


To teach in a switching threshold, press and hold the "TI" button for approximately 1 s, until the yellow and green LEDs flash in phase. Teach-in starts when the "TI" button is released.

- Teach-in successful: the yellow and green LEDs flash alternately at 2.5 Hz.
- Teach-in unsuccessful: the yellow and green LEDs quickly flash alternately at 8 Hz.


After an unsuccessful Teach-in, the sensor continues to operate with the previous valid setting after the relevant visual fault signal is issued.

Set switching mode: you can define different switching modes by teaching in the relevant distance data for switching thresholds A and B.

1. Single point mode:



2. Window mode:



Teach in switching thresholds: you can teach in or overwrite a taught-in switching threshold at any time. To do this, press the "TI" button again.

Reset a value: you can reset a taught-in value. To do this, press the "TI" button for > 4 s, until the yellow and green LEDs go out. The reset process itself starts when the "TI" button is released.

• Reset successful: the yellow and green LEDs flash alternately at 2.5 Hz.

Minimum and maximum values for the analog output Q2 are taught in and deleted in the same way as those for the switching output.

- The following applies:
- A = Minimum voltage/current
- B = Maximum voltage/current

Resetting to Factory Settings

To revert back to factory settings, press the "TI" button for > 10 s with the rotary switch set to position "O," until the yellow and green LEDs go out at the same time. The reset process itself starts when the "TI" button is released.

• Reset to factory settings successful: the yellow and green LEDs light up at the same time. The sensor then continues to operate with factory settings.

OMT-IEP

- Factory setting for switching signal Q1:
- Switching signal is high active, window mode
- Analog output: current output, 4 mA ... 20 mA absolute mode

OMT-UEP

- Factory setting for switching signal Q1:
- Switching signal is high active, window mode
- Analog output: voltage output, 0 V ... 10 V absolute mode

Analog output

www.pepperl-fuchs.com

The analog output type can be configured as voltage or current output via IO-Link. The following output types are available:

 Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

 Pepperl+Fuchs Group
 USA: +1 330 486 0001
 G

USA: +1 330 486 0001 Germany: +49 621 776 4411 fa-info@us.pepperl-fuchs.com fa-info@de.pepperl-fuchs.com



- Analog output 0 mA ...20 mA
- Analog output 4 mA ...20 mA
- Analog output 0 V ... 10 V

The following operating modes are available:


- Absolute mode (default setting) ٠
- · Normalized mode
- Rising slope
- · Falling slope

The following substitute values can optionally be configured:


- · No substitute values used (default setting)
- · Substitute value for "no measured value" used
- · Substitute value for "no measured value" and "Measuring overrange" used

The sensor's tolerances are based on the digital process data.


Absolute mode (default setting, A and B = deleted)

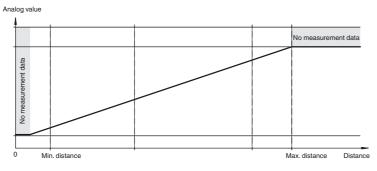

Normal mode (A and B without teach-in / deleted)

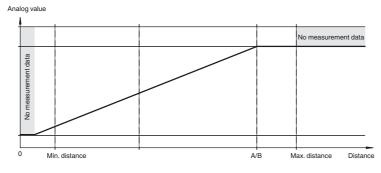


Rising slope (A < B)

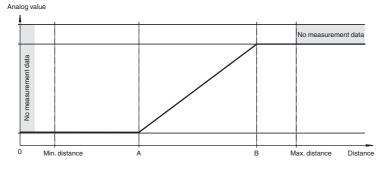

PEPPERL+FUCHS

4

Falling slope (A > B)

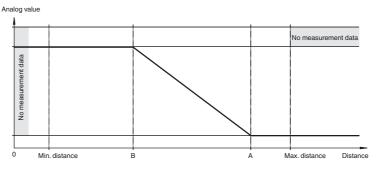

Configuration via IO-Link interface

Setting different operating modes via the IO-Link interface

The devices are equipped with an IO-Link interface as standard for diagnostics and parameterization tasks to ensure optimum adjustment of the sensors to the relevant application.

Single point mode operating mode (one switch point):

- "Detection of objects irrespective of type and color in a defined detection range. Objects in the background are suppressed.
- "The switch point corresponds exactly to the set point.



Window mode operating mode (two switch points):

- Detection of objects irrespective of type and color in a defined detection range. Reliable detection when object leaves the detection range.
- · Window mode with two switch points.

C	
Foreground suppression	Background suppression

Center window mode operating mode (one switch point):

- · Detection of objects irrespective of type and color in a defined detection range. Sets a defined window around a given object. Objects outside this window are not detected.
- Window mode with one switch point.

active	detection range
Foreground suppression	Background suppression

Two point mode operating mode (hysteresis operating mode):

• Detection of objects irrespective of type and color between a defined switch-on and switch-off point.

	active detection ra	ange		
Output	Hysteresis		Output	
Inactive operating mode: • Evaluation of switching signals is de	activated.			
The associated IODD device descri	ption file can be found i	n the download	area at www.pepperl-fu	chs.com
Refer to "General Notes Relating to Pepperl+Fuchs P	roduct Information".		F _	

5

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com