Thru-beam sensor



CE

Model Number

ML29-P/25/103/115b-2m

Thru-beam sensor


with fixed cable and M12 connector, 4-pin

Features

- Single-beam monitoring with extre-• mely narrow sensor
- Integrated circuit ٠
- Test •
- Simple installation Plug & Play
- Ideal for installation in door profiles or ٠ frames
- Light on version


Product information

The narrow miniature thru-beam sensors are a small and cost-effective solution, fitting in virtually any door frame. The ML29 and ML30 series offer fast, reliable detection at a distance of up to 8.5 m. The sensors are easy to mount on the profile, either using adhesive strips or a screw. A large opening angle ensures problem-free alignment. Several sensors can be mounted in a cross formation to offer multi-beam protection.

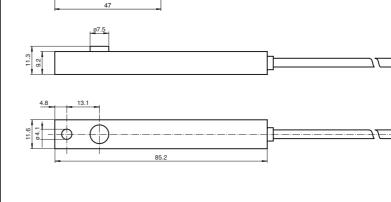


Electrical connection

Dimensions

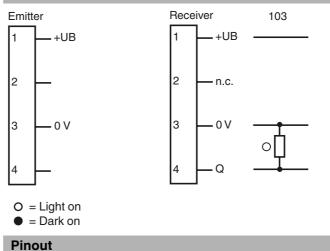



Indicators/operating means

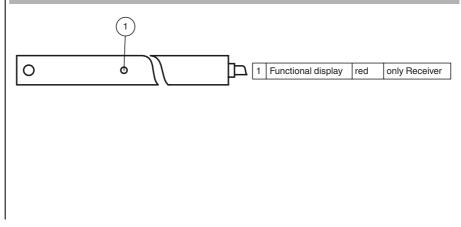

Refer to "General Notes Relating to Pepperl+Fuchs Product Information" Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com

PEPPERL+FUCHS

1

ML29-P/25/103/115b-2m


ML29-P/25/103/115b-2m

Technical data			Typical applications
			Typical applications
System components		MI 00 T/115h 0m	Person detection for automatic doors and
Emitter Receiver		ML29-T/115b-2m ML29-B/25/103/115b-2m	gates
		ML29-R/25/103/1150-2m	 Closing edge protection on sliding and
General specifications			revolving doors
Effective detection range		06m	 Threshold monitoring for elevator doors
Threshold detection range		8.5 m	Step monitoring for doors on public trans-
Light source		IRED	port vehicles
Light type		modulated infrared light	 Trigger function for restarting escalators
Angle of divergence Optical face		+/- 8	
		40000 Lux	Detection area
Ambient light limit	-	40000 Lux	
Functional safety related pa	rameters		
MTTF _d		880 a	
Mission Time (T _M)		20 a	
Diagnostic Coverage (DC)		0 %	
Indicators/operating means			
Function indicator		LED red in receiver : lights up when receiving the light beam	
Electrical specifications			
Operating voltage	UB	11 30 V DC	
No-load supply current	Ι _Ο	Emitter: ≤ 25 mA Receiver: ≤ 10 mA	
Input			
Test input		Test: Transmitter switches off at +UB \leq 5 V DC	
Output			
Switching type		light on	
Signal output		1 PNP output, short-circuit protected, reverse polarity protected, open collector	
Switching voltage		max. 30 V DC	
Switching current		max. 0.1 A	
Switching frequency	f	100 Hz	
Response time		5 ms	Accessories
Ambient conditions			Autosonico
Ambient temperature		-20 60 °C (-4 140 °F)	ML29 Front Plate
Storage temperature		-20 75 °C (-4 167 °F)	Front plate for thru-beam sensors in se-
Relative humidity		90 % , noncondensing	ries ML29
Mechanical specifications			
Degree of protection		IP65	Other suitable accessories can be found a
Connection		2 m fixed cable with 4-pin, M12 x 1 connector	www.pepperl-fuchs.com
Material		•	
Housing		PMMA, black	
Optical face		Plastic pane	
Mass		per device 120 g	
Compliance with standards ves	and direct		
Standard conformity			
Product standard		EN 60947-5-2:2007 IEC 60947-5-2:2007	
Standards		EN 61000-6-2, EN 61000-6-3	

CCC approval / marking not required for products rated ≤36 V

Approvals and certificates CCC approval

Curves/Diagrams

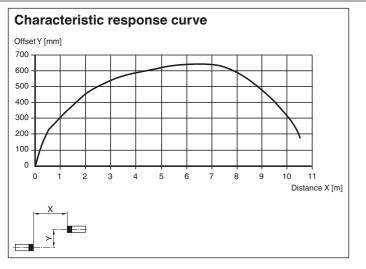



Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com


USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 4411 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com



2

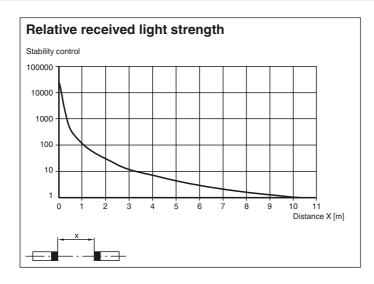

Function principle

The thru-beam sensor requires a pair of devices for operation, comprising a light transmitter and a light receiver. The emitter and receiver must be arranged in optical alignment with each other. The infrared light from the emitter is detected by the receiver and evaluated.

Function

Static detection:

The thru-beam sensor detects persons and objects independently of movement and surface structure for as long as the object breaks the detection beam.

		Electronic output
Light detection (05	Person in the beam	Inactive
Light detection /25	No person in the beam	Active
Dark data stice (50	Person in the beam	Active
Dark detection /59	No person in the beam	Inactive

Optics:

The relatively wide opening angles enable the light beam switches to be installed quickly, without alignment problems. Even if there is a light distortion of the installation profiles the function is retained.

Testing:

Testing is used to check the function of the light beam switch.

With supply voltage +U_B < 5 V the emitter device is switched off. This simulates a light beam interruption. By means of this, the function of the light barrier can be tested easily without using a separate test input.

Installation:


Thanks to its small dimensions, the light beam can be fitted in a U-profile or behind a face panel. The hole diameter for both the emitter and the receiver is 8 mm.

Even fixing by means of the adhesive tape contained in the delivery package can be considered.

Installation of twin-beam arrangement:



A twin-beam version requires 2 emitters and receivers. Care should be taken that the beam separation is not less than 20 cm. The transmitters and receivers must be arranged in the form of a cross.

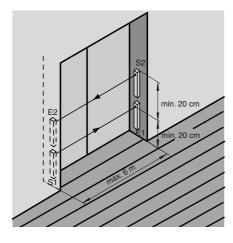

www.pepperl-fuchs.com



4