

- Polled Mode
- Cyclic Mode
- Sync Mode

Technical data

- General specifications Detection type
- Linearity error
- **UL File Number**

Functional safety related parameters

- Diagnostic Coverage (DC)
- **Electrical specifications**
- Operating voltage UB
- Power consumption P₀ Time delay before availability tv
- Output code
- Code course (counting direction)
- Resolution Single turn Multiturn Overall resolution Transfer rate Cycle time Standard conformity
- Connection Connector
- Standard conformity
- Degree of protection Climatic testing Emitted interference
- Shock resistance
- Vibration resistance
- Ambient conditions Operating temperature
- Storage temperature
- Relative humidity Mechanical specifications Material Housing Flange Shaft Mass Rotational speed
- Moment of inertia Starting torque Shaft load Axial Radial Angle offset Axial offset

binary code adjustable CANopen up to 16 Bit up to 15 Bit up to 31 Bit min. 20 kBit/s, max. 1 MBit/s ≥1 ms **DSP 406** M12 connector, 5 pin Ø6 mm, 4 x 2 x 0.14 mm² DIN EN 60529, IP65 or IP67 DIN EN 60068-2-3, no moisture condensation

magnetic sampling

Absolute encoders

480 a at 40 °C

marking is marked on the product.

9 ... 30 V DC (with galvanic isolation)

< ± 0.1

20 a

0%

≤ 1.2 W

< 250 ms

EN 61000-6-4:2007 EN 61000-6-2:2005 DIN EN 60068-2-27, 200 g, 6 ms DIN EN 60068-2-6, 20 g, 10 ... 1000 Hz

cable, flexing: -5 ... 70 °C (23 ... 158 °F), cable, fixed: -30 ... 70 °C (-22 ... 158 °F) connector models: -40 ... 85 °C (-40 ... 185 °F) -40 ... 85 °C (-40 ... 185 °F) 98 % . no moisture condensation

- nickel-plated steel, painted Aluminum Stainless steel approx. 300 g max. 12000 min 50 gcm² < 5 Ncm
- 24 N 198 N ± 0.9 ° ± 0.3 mm static ± 0.5 mm static
- Approvals and certificates
 - UL approval

Radial offset

cULus Listed, General Purpose, Class 2 Power Source , if UL marking is marked on the product.


Pepperl+Fuchs Group www.pepperl-fuchs.com

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091 fa-info@sg.pepperl-fuchs.com


1

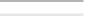


E223176 "For use in NFPA 79 Applications only", if UL

5 E+8 revolutions at 24/198 N axial/radial shaft load

Dimensions

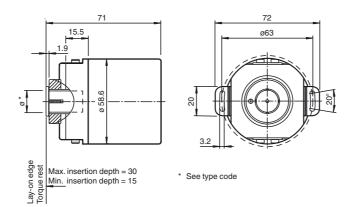

Recessed hollow shaft

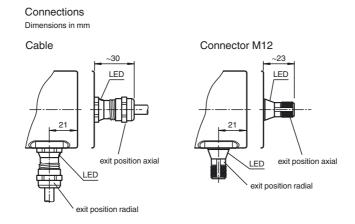

Electrical connection

Signal	Wire end	5-pin, M12 x 1 connector
CAN GND	green	1
+V _S	red	2
GND	yellow	3
CAN-High	white	4
CAN-Low	brown	5
Shielding	Shielding	Housing
Pinout		2

USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Indicating elements

LED-indicator with dual color LED

CAN Run (green)	State	Description
Blinking	Pre-Operational	Boot up message is sent, device configuration is possible, device is in CAN state "Pre-Operational"
Single flash	Stopped	The Encoder is in CAN state "Stopped"
On	Operational	The encoder is in CAN state "Operational"
Off		No power supply
Err (red)	State	Description
Off	No error	The Encoder is in operating mode
Flickering	AutoBitrate	Auto baud mode is active and the encoder tries to find within the time out period a
		valid CAN message for baud rate measurement
Single flash	Warning limit reached	At least one of the error counters of the CAN controller has reached or exceeded the
		warning level (too many error frames)
Double flash	Error control event	A guard event (NTM slave or NTM master) or a heartbeat event has occured
On	Bus off	The CAN controller is in stae bus off. No communication possible anymore. Too many error frames in the network.

Refer to "General Notes Relating to Pepperl+Fuchs Product Information".


Pepperl+Fuchs Group www.pepperl-fuchs.com USA: +1 330 486 0001 fa-info@us.pepperl-fuchs.com

Programmable CAN operating modes

Mode	Explanation
Polled mode	The connected host requests the current actual position value via a remote transmission request telegram. The absolute encoder reads in the current position, calculates all parameters that have been set and sends back the process actual value through the same CAN identifier.
Cyclic mode	The absolute encoder sends the current actual process value cyclically, without being prompted by the host. The cycle time can be programmed in milliseconds for values between 1 ms and 65536 ms.
Sync mode	After the sync telegram has been received by the host, the absolute encoder sends the current actual process value. If multiple nodes should respond to the sync telegram, the individual nodes report one after the other according to their CAN identifier. There is no programming of an offset time. The sync counter can be programmed so that the rotary encoder does not transmit until after a defined number of sync telegrams.

Programmable rotary encoder parameters

Parameter	Explanation	
Operating parameter	The direction of rotation (complement) can be specified by parameter as the operating parameter. This parameter determines the direction of rotation in which the output code will ascend or descend.	
Resolution per revolution	The "Resolution" parameter is used to program the rotary encoder so that a desired number of steps can be implemented in reference to one revolution.	
Preset value	The preset value is the desired position value that must be achieved for a specific physical setting of the axis. The preset value parameter is used to set the actual position value to the desired actual process value.	
Min. and max. limit switch	A total of two positions can be programmed. The absolute encoder sets one bit to high state in the 32 Bit actual process value if a value falls outside the range between these two positions.	
Cam	8 freely programmable cams can be set within the overall resolution. This produces the functionality of a mechanical cam shifting mechanism.	

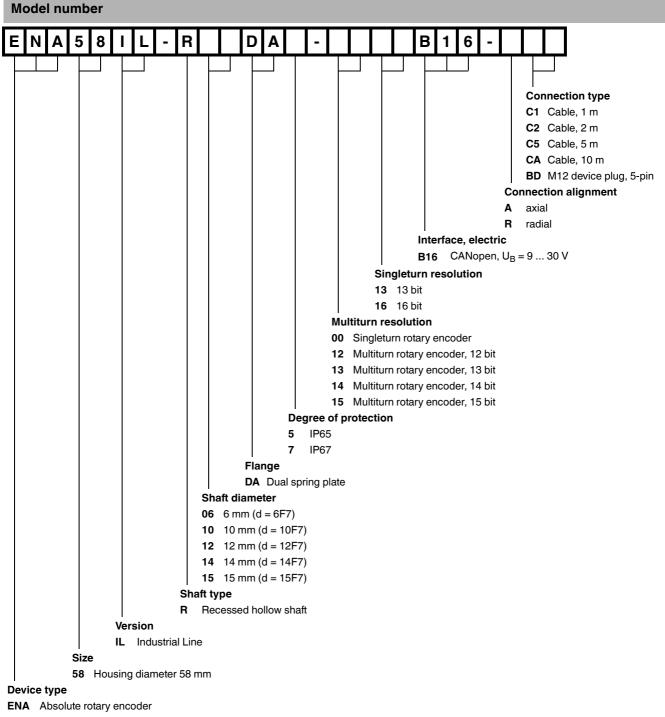

Release date: 2019-01-30 13:22 Date of issue: 2019-01-30 1183818_eng.xml

Refer to "General Notes Relating to Pepperl+Fuchs Product Information"

Pepperl+Fuchs Group www.pepperl-fuchs.com

Germany: +49 621 776 1111 fa-info@de.pepperl-fuchs.com

Singapore: +65 6779 9091