

DNNF012

DNNF020

uniVision software



Operating Instructions

Table of Contents

1. General	9
1.1 Information Concerning these Instructions	9
1.2 Explanations of Symbols	9
1.3 Limitation of Liability	10
1.4 Copyrights	10
2. For Your Safety	11
2.1 Use for Intended Purpose	11
2.1.1 uniVision for 2D/3D Sensors	11
2.1.2 uniVision for Smart Cameras	11
2.2 Use for Other than the Intended Purpose	12
2.3 Personnel Qualifications	12
2.4 General Safety Precautions	12
3. Technical Data	13
4. System Overview	14
4.1 uniVision for 2D/3D Sensors	14
4.1.1 Overview of Order Numbers	14
4.1.2 One 2D/3D Sensor per Control Unit	17
4.1.3 Several 2D/3D Sensors per Control Unit	18
4.2 uniVision for Smart Cameras	19
4.2.1 Smart Camera weQube with auto-focus	19
4.2.2 Smart Camera, weQube with C Mount	20
4.2.3 Further accessories for the Smart Camera weQube	21
5. General Information	22
5.1 Control Unit	22
5.1.1 Resetting to Factory Settings	22
5.1.2 Remote Access via VNC	22
5.1.3 Browser	22
5.1.4 File Manager	23
5.1.5 SOS wenglor support	23
5.1.6 FTP Server	23
5.2 Basic Principles for Data Recording and Evaluation	24
5.2.1 Data Recording	24
5.2.1.1 Image Analysis	24
5.2.1.2 Profile Analysis	25
5.2.2 Data Evaluation	26
5.2.2.1 uniVision Application and uniVision Software	26
5.2.2.2 uniVision Project, Module Status and Error Handling	27
5.2.2.3 Input Images/ Pointclouds, Input Coordinate System	28
5.2.2.4 Converting Numeric Values Into Good-Bad Values	30
5.3 Network Protocols	31
5.3.1 Control Unit with uniVision Application	31
5.3.2 weQube Smart Camera	33

6. Updating Software and Firmware	35
6.1 Installing or Updating the uniVision Software for Windows	35
6.2 Updating the Firmware of the Smart Camera weQube.....	35
6.2.1 Firmware Update via uniVision Software	35
6.2.2 Firmware Update via FTP Interface.....	36
6.3 Updating the Firmware of the Control Unit	36
6.4 Compatibility	37
6.4.1 Upgrading the weQube Firmware from Version 1.x.x to Version 2.x.x.....	37
6.4.2 Downgrading the weQube Firmware from Version 2.x.x to Version 1.x.x.....	38
6.5 Project Converter.....	38
7. License Management	39
7.1 Order Numbers	40
7.2 Procedure for Ordering License Files	40
7.3 License for Offline Use.....	40
8. Setting Up the uniVision Software	41
8.1 Start Screen	41
8.2 Network Search	42
8.3 Device List.....	43
8.3.1 Connection	44
8.3.1.1 Control Unit	44
8.3.1.2 weQube Smart Camera	46
8.3.1.3 Project Selection	47
8.3.2 Properties	48
8.3.2.1 Control Unit	48
8.3.2.2 uniVision Application.....	49
8.3.2.3 weQube Smart Camera	49
8.4 User Interface.....	51
8.4.1 Menu Bar	51
8.4.1.1 File	52
8.4.1.2 User Accounts	52
8.4.1.3 Settings.....	54
8.4.1.4 View	55
8.4.1.5 Help	56
8.4.1.6 User View	56
8.4.2 Closing the Project	56
8.4.3 Modifiable Windows and Areas.....	56
8.4.3.1 Project Tree, Settings/Results.....	57
8.4.3.2 Toolox.....	58
8.4.3.3 Online data monitoring	59
8.4.3.4 Network tools	59
8.4.3.5 Project tools	59
8.4.3.6 Module Toolbar	60
8.4.4 Camera Image or Measuring Range.....	60
8.4.4.1 weCat3D 2D/3D Sensor	60
8.4.4.2 weQube Smart Camera	60
8.4.5 The Status Bar	61

9. Software Modules for Data Recording	62
9.1 Module Device Camera	62
9.1.1 Overview	62
9.1.2 Setting Parameters	62
9.1.3 Configuration	66
9.1.3.1 Submodule Read-out Area	66
9.1.3.2 Submodule White Balance	66
9.2 Module Device weCat3D	67
9.2.1 Overview	67
9.2.2 Setting Parameters	69
9.2.3 Configuration	69
9.2.3.1 Image Format	69
9.2.3.2 Acquisition	70
9.2.3.3 Digital I/O	75
9.2.3.4 Counter and Timer	76
9.2.3.5 Encoder	76
9.2.3.6 Signal	77
9.2.3.7 Device Information	77
9.2.3.8 Chunk Data	78
10. Software Modules for Image Analysis	79
10.1 Module Localizer	79
10.1.1 Overview	79
10.1.2 Setting Parameters	80
10.2 Module Coordinate System	81
10.2.1 Overview	81
10.2.2 Setting Parameters	82
10.2.3 Configuration	83
10.2.3.1 Submodule Find Point	83
10.3 Region Module	88
10.3.1 Overview	88
10.3.2 Setting Parameters	88
10.3.3 Configuration	90
10.3.3.1 Submodule Set	90
10.4 Module Filter	91
10.4.1 Overview	91
10.4.2 Setting Parameters	91
10.5 Module Threshold	95
10.5.1 Overview	95
10.5.2 Setting Parameters	95
10.6 Threshold Value Module HSV	99
10.6.1 Overview	99
10.6.2 Setting Parameters	101
10.6.3 Configuration	102
10.6.3.1 Submodule Hue	102
10.6.3.2 Submodule Value	102
10.6.3.3 Submodule Saturation	102

10.7 Module Cluster.....	103
10.7.1 Overview.....	103
10.7.2 Setting Parameters.....	103
10.7.3 Configuration.....	105
10.7.3.1 Submodule Cluster List.....	105
10.8 Module Measure.....	106
10.8.1 Overview.....	106
10.8.2 Setting Parameters.....	106
10.8.2.1 Submodule Find Point.....	108
10.8.2.2 Submodule Find Line, Circle or Arc.....	108
10.8.2.3 Submodule Distance.....	111
10.8.2.4 Submodule Intersection.....	111
10.8.2.5 Find Segments on Line, Arc or Circle Submodule.....	112
10.9 Module Code 1D.....	113
10.9.1 Overview.....	113
10.9.2 Setting Parameters.....	114
10.9.3 Configuration.....	115
10.9.3.1 Submodule Reading List.....	115
10.9.3.2 Extended Parameters Submodule.....	116
10.10 Module Code 2D.....	119
10.10.1 Overview.....	119
10.10.2 Setting Parameters.....	120
10.10.3 Configuration.....	121
10.10.3.1 Submodule Reading List.....	121
10.10.4 General Settings for All Code Types.....	124
10.10.5 Data Matrix ECC 200.....	125
10.10.6 QR Code.....	127
10.10.7 PDF417.....	128
10.11 Module Image Comparison.....	129
10.11.1 Overview.....	129
10.11.2 Setting Parameters.....	129
10.11.3 Configuration.....	130
10.12 Module OCR (Optical Character Reader).....	131
10.12.1 Overview.....	131
10.12.2 Setting Parameters.....	134
10.12.3 Configuration.....	134
10.12.3.1 Reading List.....	134
10.12.3.2 Segment List.....	135
10.12.3.3 Row Find.....	135
10.12.3.4 Binarization.....	136
10.12.3.5 Segmentation.....	137
10.12.3.6 Classification.....	138
10.12.3.7 Fielding.....	138
10.12.3.8 Teaching-in Characters.....	139
10.13 Module Pattern Match.....	141
10.13.1 Overview.....	141
10.13.2 Setting Parameters.....	142
10.13.3 Configuration.....	146
10.13.3.1 Submodule Reading List.....	146
10.13.3.2 Shape Model.....	146

11. Software Modules for Profile Analysis	148
11.1 Module Pointcloud Coordinate System	148
11.1.1 Overview	148
11.1.2 Setting Parameters	148
11.1.3 Configuration	149
11.1.3.1 Submodule Find Point 1 (2 or 3)	150
11.2 Module Pointcloud Filter	151
11.2.1 Overview	151
11.2.2 Setting Parameters	151
11.3 Module Pointcloud Region	153
11.3.1 Overview	153
11.3.2 Setting Parameters	154
11.3.3 Configuration	156
11.4 Module Pointcloud Measure	157
11.4.1 Overview	157
11.4.2 Setting Parameters	158
11.4.3 Configuration	159
11.4.3.1 Finding the Submodule Point	159
11.4.3.2 Submodule Find Line, Arc or Circle	159
11.4.3.3 Submodule Find Segments on Line or Arc	165
11.4.3.4 Submodule Find Turning Point	169
11.4.3.5 Distance Calculation Submodule	170
11.4.3.6 Submodule Intersection Point	170
11.4.3.7 Submodule Property of Geometry	171
11.5 Module Pointcloud Calculus	172
11.5.1 Overview	172
11.5.2 Setting Parameters	172
11.5.3 Configuration	173
11.5.3.1 Submodule Find Highest Point	173
11.5.3.2 Submodule Find Lowest Point	173
11.5.3.3 Submodule Find Edges	174
12. Software Modules for Results Calculation	175
12.1 Module Logic	175
12.1.1 Overview	175
12.1.2 Setting Parameters	175
12.2 Mathematics Module	176
12.2.1 Overview	176
12.2.2 Setting Parameters	176
12.3 Module Numeric Comparison	177
12.3.1 Overview	177
12.3.2 Setting Parameters	177
12.4 Module Match Code	178
12.4.1 Overview	178
12.4.2 Setting Parameters	178
12.4.3 Configuration	179
12.4.3.1 Match Code #1	179
12.5 Module Statistic	180
12.5.1 Overview	180
12.5.2 Setting Parameters	180
12.5.3 Configuration	181

12.5.3.1 Submodule Channel #1	181
-------------------------------------	-----

13. Software Modules for Data Output 183

13.1 Module Device IO Unit (weQube Only)	183
13.1.1 Overview	183
13.1.2 Setting Parameters	183
13.1.3 Configuration	183
13.1.3.1 IO Timings	184
13.1.3.2 Digital I/Os 1 to 6 Submodule	186
13.1.3.3 Error Handling	188
13.2 Module Device IO Unit (Control Unit Only)	189
13.2.1 Overview	189
13.2.2 Setting Parameters	189
13.2.3 Configuration	190
13.2.3.1 Submodule Digital Input 1-8	190
13.2.3.2 Submodule Digital Output 1-8	191
13.2.3.3 Submodule Error Handling	192
13.3 Module Device Display (weQube Only)	193
13.3.1 Overview	193
13.3.2 Setting Parameters	193
13.3.3 Configuration	193
13.3.3.1 Submodule Text	194
13.3.3.2 Submodule Indicator	194
13.3.3.3 Submodule Numeric	194
13.3.3.4 Submodule Match Code	194
13.3.3.5 Submodule Teach	195
13.3.3.6 Submodule Formatting Options	195
13.3.3.7 Submodule Error Handling	195
13.4 Module Device Indicator (weQube only)	196
13.4.1 Overview	196
13.4.2 Setting Parameters	196
13.4.2.1 Submodule Error Handling	196
13.5 Module Device RS232 (weQube Only)	197
13.5.1 Overview	197
13.5.2 Configuration	197
13.5.2.1 Submodule String count	197
13.5.2.2 Submodule Formatting Options	198
13.6 Module Device FTP (weQube Only)	199
13.6.1 Overview	199
13.6.2 Configuration	200
13.6.2.1 Submodule String Count	200
13.6.2.2 Submodule Error Handling	200
13.7 Module Device TCP	201
13.7.1 Overview	201
13.7.2 Setting Parameters	201
13.7.3 Configuration	202
13.7.3.1 Submodule String Count	202
13.7.3.2 Submodule Error Handling	202
13.7.3.3 Submodule Formatting Options	203

13.8 Module Device UDP	204
13.8.1 Overview	204
13.8.2 Setting Parameters	204
13.8.3 Configuration	205
13.8.3.1 String Count Submodule	205
13.8.3.2 Error Handling Submodule	205
13.8.3.3 Formatting options	205
14. Appendix	206
14.1 Change Index, Operating Instructions	206
14.2 Change Index Software	207
14.3 Status Information	210
14.3.1 weQube Smart Camera	210
14.3.2 uniVision Application	210
14.3.3 Control Unit	211
14.4 Glossar	212
14.5 Module Status	213

1. General

1.1 Information Concerning these Instructions

- These instructions apply to the products with ID codes DNNF012 and DNNF020.
- They make it possible to use the product safely and efficiently.
- These instructions are an integral part of the product and must be kept on hand for the entire duration of its service life.
- Local accident prevention regulations and national work safety regulations must be complied with as well.
- The product is subject to further technical development, and thus the information contained in these operating instructions may also be subject to change. The current version can be found at www.wenglor.com in the product's separate download area.



NOTE!

The operating instructions must be read carefully before using the product and must be kept on hand for later reference.

1.2 Explanations of Symbols

- Safety precautions and warnings are emphasized by means of symbols and attention-getting words.
- Safe use of the product is only possible if these safety precautions and warnings are adhered to.

The safety precautions and warnings are laid out in accordance with the following principle:



ATTENTION-GETTING WORD!

Type and Source of Danger!

Possible consequences in the event that the hazard is disregarded.

- Measures for averting the hazard.

The meanings of the attention-getting words, as well as the scope of the associated hazards, are listed below:



DANGER!

This word indicates a hazard with a high degree of risk which, if not avoided, results in death or severe injury.



Warning!

This word indicates a hazard with a medium degree of risk which, if not avoided, may result in death or severe injury.



CAUTION!

This word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.



ATTENTION!

This word draws attention to a potentially hazardous situation which, if not avoided, may result in property damage.



NOTE!

A note draws attention to useful tips and suggestions, as well as information regarding efficient, error-free use.

1.3 Limitation of Liability

- The product has been developed in consideration of the current state-of-the-art and applicable standards and guidelines. Subject to change without notice.
- A valid declaration of conformity can be accessed at www.wenglor.com in the product's separate download area.
- wenglor sensoric elektronische Geräte GmbH (hereinafter referred to as "wenglor") excludes all liability in the event of:
 - Non-compliance with the instructions
 - Use of the product for purposes other than those intended
 - Use by untrained personnel
 - Use of unapproved replacement parts
 - Unapproved modification of products
- These operating instructions do not include any guarantees from wenglor with regard to the described procedures or specific product characteristics.
- wenglor assumes no liability for printing errors or other inaccuracies contained in these operating instructions, unless wenglor was verifiably aware of such errors at the point in time at which the operating instructions were prepared.

1.4 Copyrights

- The contents of these instructions are protected by copyright law.
- All rights are reserved by wenglor.
- Commercial reproduction or any other commercial use of the provided content and information, in particular graphics and images, is not permitted without previous written consent from wenglor.

2. For Your Safety

2.1 Use for Intended Purpose

2.1.1 uniVision for 2D/3D Sensors

The uniVision software enables parameterization of uniVision Applications. In the uniVision Application, the pointclouds of 2D/3D Sensors are evaluated. A wide range of tools are available that can be combined as desired. This enables object measurements, edge detection and tracking tasks to be carried out.



NOTE!

Further information regarding the mode of operation of the 2D/3D Sensors is included in the operating instructions of each respective sensor.

2.1.2 uniVision for Smart Cameras

The uniVision software enables Smart Cameras to be parametrized for evaluating image data. A wide range of tools are available that can be combined as desired. This enables dimensional accuracy checks, object counting, presence checks, pattern matchings, optical character readings and 1D-/2D code readings to be carried out.



NOTE!

Further information regarding the mode of operation of the Smart Cameras is included in the operating instructions of each respective sensor.

This product can be used in the following industry sectors:

- Special machinery manufacturing
- Heavy machinery manufacturing
- Logistics
- Automotive industry
- Food industry
- Packaging industry
- Pharmaceuticals industry
- Plastics industry
- Woodworking industry
- Consumer goods industry
- Paper industry
- Electronics industry
- Glass industry
- Steel industry
- Aviation industry
- Chemicals industry
- Alternative energy
- Raw materials extraction

2.2 Use for Other than the Intended Purpose

- Not a safety component in accordance with 2006/42/EC (Machinery Directive)
- The product is not suitable for use in potentially explosive atmospheres.
- The product may only be used with accessories supplied or approved by wenglor, or in combination with approved products. A list of approved accessories and combination products can be accessed at www.wenglor.com on the product detail page.



DANGER!

Risk of personal injury or property damage in case of use for other than the intended purpose!

- Use for other than the intended purpose may lead to hazardous situations.
- Instructions regarding use for intended purpose must be observed.
-

2.3 Personnel Qualifications

- Suitable technical training is a prerequisite.
- In-house electronics training is required.
- Trained personnel who use the product must have uninterrupted access to the operating instructions.



DANGER!

Risk of personal injury or property damage in case of incorrect initial start-up and maintenance!

- Personal injury and damage to equipment may occur.
- Adequate training and qualification of personnel.
-

2.4 General Safety Precautions



NOTE!

- These instructions are an integral part of the product and must be kept on hand for the entire duration of its service life.
- In the event of possible changes, the respectively current version of the operating instructions can be accessed at www.wenglor.com in the product's download area.

3. Technical Data

Order Number	DNNF012 uniVision for Linux	DNNF020 uniVision for Windows
Technical Data		
Function		
Configuration software	Yes	Yes
Diagnostics software	Yes	Yes
Operating system		
Linux	Yes	No
Windows 7	No	Yes
Windows 10, 64 bit	No	Yes
Interface		
Ethernet	Yes	Yes
General data		
Usage	For uniVision Application	For Smart Camera and uniVision Application
Languages	DE, EN, FR, IT, ES, PT, NL, HU, TR, ZH, RU	
Licensing model	Freeware	Freeware
System requirements		
Cycle rate	Can only run on the wenglor Control Unit	2 GHz
RAM	Can only run on the wenglor Control Unit	2 GB
Free hard disc space	Can only run on the wenglor Control Unit	500 MB
Minimum screen resolution	1280 × 1024	

4. System Overview

4.1 uniVision for 2D/3D Sensors

4.1.1 Overview of Order Numbers












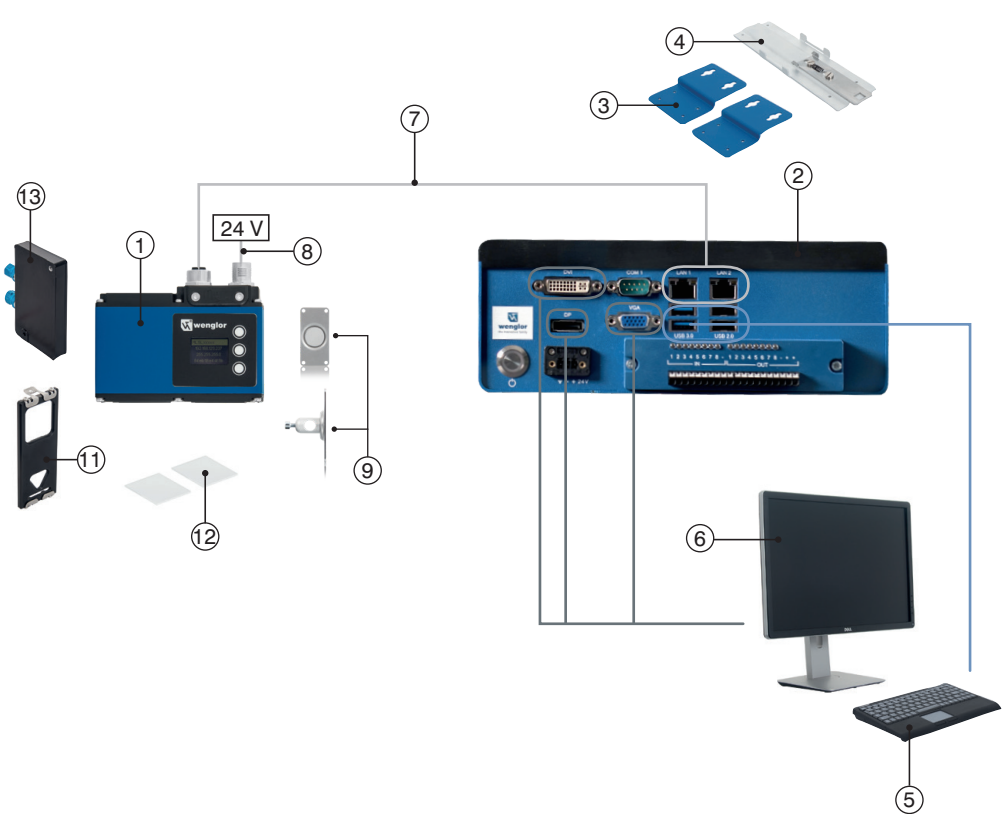
Image	Order Number	Description	Additional Information	No.
Control Unit				
	BB1C001	Control Unit		2
Control Unit Mounting System				
	ZB1E001	Mounting kit for wall mounting	Replacement part (included with BB1C001)	3
	ZB1Z001	Mounting system for 35 mm H-rail mounting		4
2D/3D Sensors				
	MLSLxxx	2D/3D Sensors		1
	MLWLxxx	2D/3D Sensors		1

Image	Order Number	Description	Additional Information	No.
Mounting System for 2D/3D Sensors				
	ZLSZ001, ZLSZ002	Aluminum mounting system, plastic mounting system		9
Connector Cable (M12, 8-pin to RJ45)				
	ZC1V001 ZAV50R502 ZC1V002 ZC1V013 ZC1V009 ZC1V010 ZC1V011 ZC1V003 ZC1V014 ZC1V015	Connection cable, straight, 2 m Connection cable, straight, 5 m Connection cable, straight, 10 m Connection cable, straight, 30 m Connection cable, angled, 2 m Connection cable, angled, 5 m Connection cable, angled, 10 m Connection cable, straight, 5 m Connection cable, straight, 10 m Connection cable, angled, 10 m		7
Connection Cables (12-pin M12)				
	ZDCL001 ZDCL002 ZDCL003 ZDCL007	Connection line, straight, 2 m Connection line, straight, 5 m Connection line, straight, 10 m Connection line, straight, 30 m		8
	ZDCL004 ZDCL005 ZDCL006	Connection line, angled, 2 m Connection line, angled, 5 m Connection line, angled, 10 m		8
Connection Cable (M12, 12-pin to M12, 12-pin)				
	ZDCV001 ZDCV002 ZDCV003	Connection cable, 2 m Connection cable, 5 m Connection cable, 10 m		8
Accessories for Control Unit				
	ZNNG026	Monitor with VGA and DisplayPort cable		6

Image	Order Number	Description	Additional Information	No.
	Z0044	Keyboard		5
Accessories for 2D/3D Sensors				
		Protective screen retainer	Available for all modules	11
		Protective screen set, glass, protective screen set, plastic	Available for all modules	12
		Cooling unit	Available for all modules	13
	ZNNG013	Micro SD card	Replacement part (included with MLSLxxx)	–
Switch				
	EHSS001	Switch with 5 Ethernet ports		10

4.1.2 One 2D/3D Sensor per Control Unit

The following illustration shows the setup when using one 2D/3D Sensor at a Control Unit.




4.1.3 Several 2D/3D Sensors per Control Unit

Up to 16 2D/3D Sensors can be connected to a Control Unit.



NOTE!

The number of 2D-/3D sensors per Control Unit depends on the total process times of all uniVision Applications and the acquisition frequency of the 2D-/3D sensors.

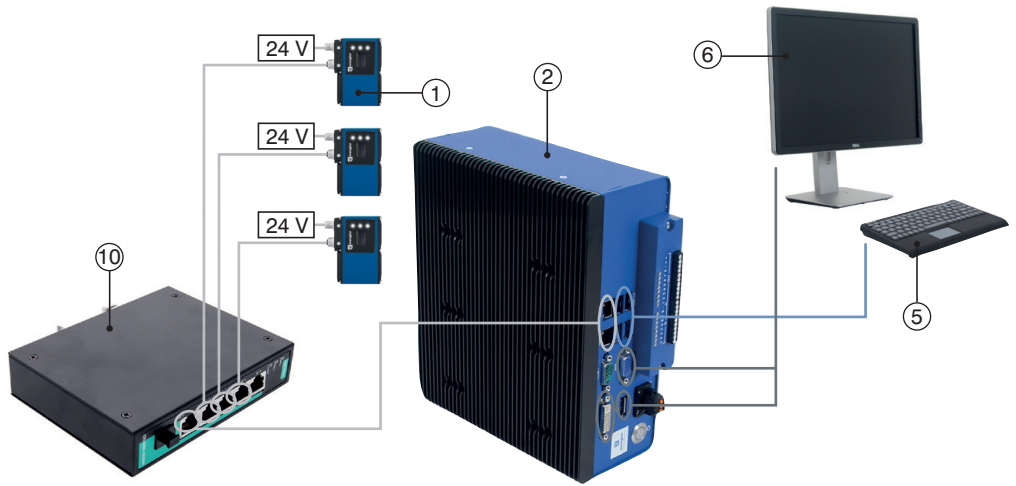

4.2 uniVision for Smart Cameras

4.2.1 Smart Camera weQube with auto-focus

Connection Cable

M12, 8-pin to RJ45

ZC1V001 (straight)	2 m
ZAV50R502 (straight)	5 m
ZC1V002 (straight)	10 m
ZC1V013 (straight)	30 m
ZC1V009 (angled)	2 m
ZC1V010 (angled)	5 m
ZC1V011 (angled)	10 m
ZC1V003 (straight)**	5 m
ZC1V014 (straight)**	10 m
ZC1V015 (angled)**	10 m

Connector Cables

M12, 12-pin to open end

ZDCL001 (straight)	2 m
ZDCL002 (straight)	5 m
ZDCL003 (straight)	10 m
ZDCL007 (straight)	30 m
ZDCL004 (angled)	2 m
ZDCL005 (angled)	5 m
ZDCL006 (angled)	10 m

Interface Cable

M12, 12-pin to RS-232

ZDCG002

Connection Cable

M12, 12-pin to M12, 12-pin

ZDCV001	2 m
ZDCV002	5 m
ZDCV003	10 m

M12, 4-pin to M12, 4-pin

BW2SG2V1-2M	2 m
BG2SG2V1-2M	2 m
BG2SG2V3-2M	2 m

Connecting Module

M12, 12-pin to trigger / illumination

ZDCG001

Mounting System

ZMBID1202

ZMWZF0001

Alternative Micro SD Card

ZNNG013*

Replacement Disc weQube

ZNNG012

Polarization Filter, Circular

ZNNG004

Protection Housing

ZNNS001

ZNNS002

Legend

Required accessories

Optional accessories

Included in delivery *

Drag Chain Suitable **

4.2.2 Smart Camera, weQube with C Mount

Connection Cable

M12, 8-pin to RJ45

ZC1V001 (straight)	2 m
ZAV50R502 (straight)	5 m
ZC1V002 (straight)	10 m
ZC1V013 (straight)	30 m
ZC1V009 (angled)	2 m
ZC1V010 (angled)	5 m
ZC1V011 (angled)	10 m
ZC1V003 (straight)**	5 m
ZC1V014 (straight)**	10 m
ZC1V015 (angled)**	10 m

Connector Cables

M12, 12-pin to open end

ZDCL001 (straight)	2 m
ZDCL002 (straight)	5 m
ZDCL003 (straight)	10 m
ZDCL007 (straight)	30 m
ZDCL004 (angled)	2 m
ZDCL005 (angled)	5 m
ZDCL006 (angled)	10 m

Interface Cable

M12, 12-pin to RS-232

ZDCG002

Connection Cable

M12, 12-pin to M12, 12-pin

ZDCV001	2 m
ZDCV002	5 m
ZDCV003	10 m

M12, 4-pin to M12, 4-pin

BW2SG2V1-2M	2 m
BG2SG2V1-2M	2 m
BG2SG2V3-2M	2 m

Mounting System

ZMBID1202

ZMWZF0001

Alternative Micro SD Card

ZNNG013*

Protection Housing

ZSZ-02-01

ZSZ-03-01

Connecting Module

M12, 12-pin to trigger / illumination

ZDCG001

Lens

LAC9-14-K01	9 mm
LAC25-14-K02	25 mm
LAC35-16-K02	35 mm

Illuminations

Further information is available > here

Legend

- Required** accessories
- Optional** accessories
- Included** in delivery *
- Drag Chain** Suitable **

4.2.3 Further accessories for the Smart Camera weQube

Licenses

DNNL001	License, vision module
DNNL002	License, 1D-/2D code module
DNNL003	License, OCR module
DNNL006	License, Pattern Match module
ZNN1004	PC license, offline operation, 1D-/2D code module, Pattern Match module

Operating Instructions

ZNNG046	Operating instructions on CD
---------	------------------------------

5. General Information

5.1 Control Unit

5.1.1 Resetting to Factory Settings

If the monitor, keyboard and mouse are connected to the Control Unit, the backup mode can be called up during the boot phase of the Control Unit.

There are various options here:

1. Only reset the network settings to the default settings.
2. Reset the system to the default settings (without network settings).
3. Reset the system completely to the default settings.



NOTE!

A Control Unit restart is required following the reset to factory settings.

A password must be entered to carry out the reset.

User name: support

Password: helpAT

5.1.2 Remote Access via VNC

A VNC server runs on the Control Unit. This enables the Control Unit to be accessed with a VNC client:

IP Address: IP Address of the Control Unit

Password: vision

5.1.3 Browser

As a standard feature, the sensor's website is accessed with the Firefox browser.



NOTE!

Further information concerning settings are included in the operating instructions of the respective sensor.

5.1.4 File Manager

Under /media/card, you will find the following folders:

- Firmware
- Input
- Output
- Projects
- Reports
- Fonts
- Teach-plus
- Templates
- Tmp

5.1.5 SOS wenglor support

In the event of technical questions or problems, wenglor's technical support department can establish a connection to the Control Unit via remote access. The Control Unit must be equipped with Internet access and active approval for remote access is required to this end.



NOTE!

Enter customer name and a description of your question.



NOTE!

Use LAN1 for connecting to the company network.

5.1.6 FTP Server

A ftp server runs on the control unit. Connecting to the ftp server works in the following way:

1. Create a network connection from the PC to the Control Unit.
2. Enter the IP-Address of the Control Unit at the file manager of the PC.

Example with the default IP-Address of the Control Unit: ftp://192.168.100.252


3. Enter user data:
 - User name: ftpuser
 - Password: ftpvision

5.2 Basic Principles for Data Recording and Evaluation

5.2.1 Data Recording

In uniVision, data can be recorded and evaluated in the form of images or profiles. The image and profile information is output with reference to an original coordinate system.

A right-handed coordinate system is used in uniVision software. The following angles and rotations around the axis are indicated.

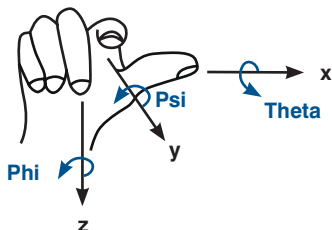

Phi (Z rotation)	Rotation around the Z-axis
Theta (X rotation)	Rotation around the X-axis
Psi (Y rotation)	Rotation around the Y-axis


5.2.1.1 Image Analysis

The Smart Camera can be used to take and evaluate images. The origin of the coordinate system is located in the top left corner of the image. The image information is output in the x-y plane:

X-axis: Positive to the right

Y-axis: Positive to the bottom


Geometry rotations are thus possible around the Z-axis (Phi). The example shows a rectangle with a rotation of 10°.

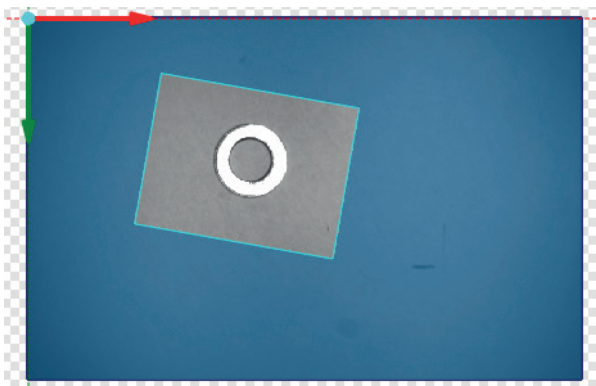


5.2.1.2 Profile Analysis

The weCat3D 2D-/3D sensors can be used to record profiles and evaluate them in a uniVision Application. The profile is a height section along the laser line and consists of numerous points in the x-z plane. The origin of the coordinate system is located in the sensor – in the center on the laser outlet.

- X-axis: Positive to the right (in the direction of the laser line)
- Y-axis: Positive out of the plane (in the conveyor belt's advancing direction or in the direction of sensor motion)
- Z-axis: Positive to the bottom (height information)

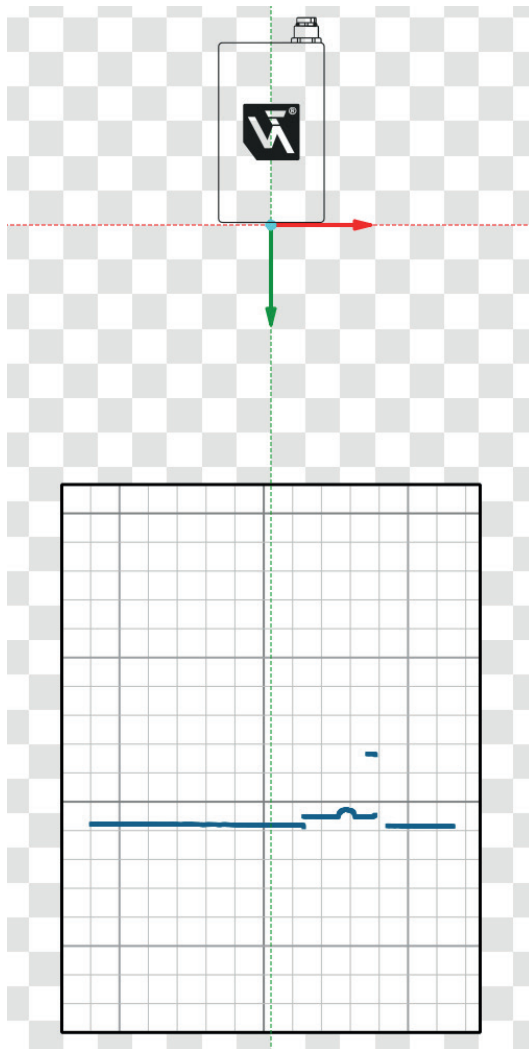

Geometry rotations are thus possible around the Y-axis (Psi). The example shows a rectangle with a rotation of 10°.

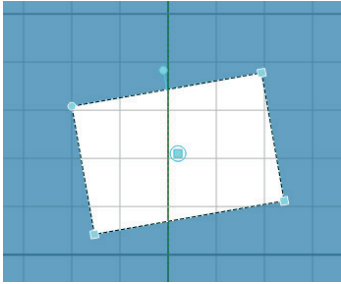

5.2.2 Data Evaluation

5.2.2.1 uniVision Application and uniVision Software

The recorded data is evaluated in the uniVision Application. The uniVision Application can carry out evaluations of images or profiles both on smart devices (e.g. Smart Camera) and on the Control Unit.

The uniVision software can be used to set up uniVision Applications. A connection between the uniVision software and the device can be established for this. Following the parametrization, the connection can be disconnected and the device carries out evaluations independently.

- uniVision Application: Processing unit for evaluating images or profiles
- uniVision software: Software for parameterizing uniVision Applications

uniVision Applications Independent of Each Other:

Multiple uniVision Applications can carry out evaluations independently of each other on a Control Unit. Each uniVision Application contains data from different sensors and evaluates the data according to the loaded project. The allocation of sensors and uniVision Applications to each other is displayed in the device list.

Device List

Search Network

Device Quick Search

Status	Name	IP Address	Article Number	Serial Number
Ok	control-unit	192.168.100.252	BB1C001	1006
Ok	application-1	192.168.100.251	BB1C001	1006
.	wecat3d-1	192.168.100.250	MLSL121	001006
Ok	application-2	192.168.100.249	BB1C001	1006
.	wecat3d-2	192.168.100.248	MLSL123	001003

Connect Properties Delete

Sensor “wecat3d-1” is used in “application-1” and sensor “wecat3d-2” is used in “application-2” in the example.

5.2.2.2 uniVision Project, Module Status and Error Handling

The project of the uniVision Application is run through for each profile or image and a result output. This means that there is a result for every trigger signal.

Module Status

The uniVision project contains one or multiple modules. Each module has a module status.

- Module State 0: No errors
- Module State not 0: Error



NOTE!

The complete overview of all module statuses can be found in [section "14.4 Module Status" on page 213](#).

Overview of the Most Common Module Statuses with Possible Solutions:

Module Status	Description	Possible Solution
1010	A value that is linked in the module as an input value is invalid.	Check the linked input quantities of the module and analyze which module the error status was inherited from.
1011	A value that is calculated in the module as an output value is invalid.	Check the settings in the module. (E.g.: If no points are present in the search area in the Pointcloud measuring module, no line search is possible and the module enters the error state.)
1040	The input image or input Pointcloud is not linked in the module.	Link an input image or input Pointcloud in the module.
1100	The module is not licensed.	A license must be purchased to use the module (see section "7. License Management" on page 39).
1102	The connected device (e.g. 2D-/3D sensor) is not available.	<ul style="list-style-type: none"> • Check the power supply on the device. • Check the network cable between the device (e.g. 2D-/3D sensor) and Control Unit. • Wait until the device has completely booted up.
1103	There is no valid data and therefore no valid result for the trigger signal. Reasons: <ul style="list-style-type: none"> • No object in the measuring range of the 2D-/3D sensor. • The data evaluation is taking too long. 	<ul style="list-style-type: none"> • Ensure that there is an object in the measuring range. • Reduce the total processing time of the uniVision project. • Reduce the acquisition frequency of the sensor (e.g. 2D-/3D sensor).
1104	The module is not taught in.	Carry out the teach-in procedure in the module.

Error Handling


If a value that is in the error state is linked on an interface module, the Error Handling is triggered. For each interface module, there is the option of defining the behavior in case of an error via the Error Handling.

Example:

In the device I/O module, the behavior of the digital outputs in the event of an error can be defined. This enables a decision to be made regarding whether the output should be active or inactive in the event of an error.


5.2.2.3 Input Images/ Pointclouds, Input Coordinate System

An input image or input Pointcloud can be linked in some modules. Each available input image or input Pointcloud from the project can be linked in the module.

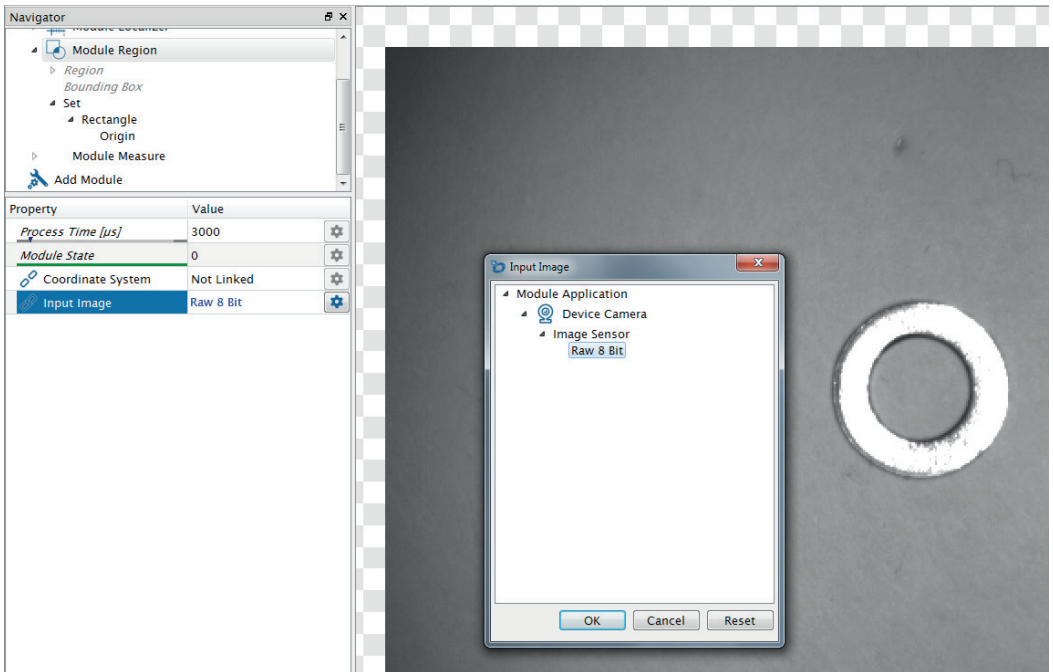


Some modules also have an input coordinate system. This may deviate from the original coordinate system and can be moved statically to any position or tracked dynamically on the object. This enables testing tasks to be carried out on the object, even though the position of the object may vary from recording to recording. If a coordinate system is linked in the module, all determined values are output in relation to the linked coordinate system.

In the example, the coordinate system is found dynamically via the tracking module and aligned to the washer. The dynamic coordinate system is linked in the measuring module as an input coordinate system. This means that the search geometry (circle) is tracked on the object. The coordinates of the found geometry (circle) are output in relation to the input coordinate system.

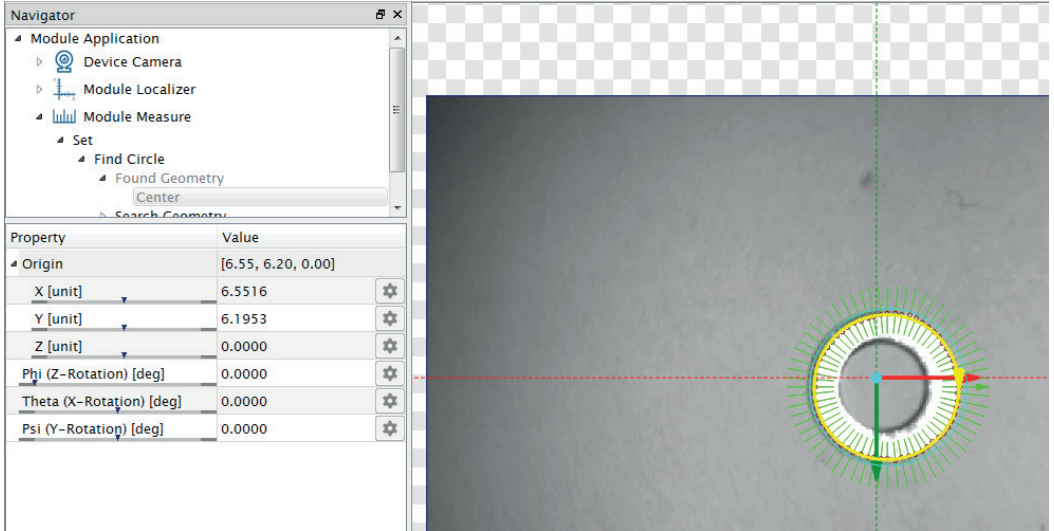

In addition to Pointclouds, images and coordinate systems, further results from the module can also be linked in a different module. For example, a read code from the 1D-code module can be linked in the match code module as an input value to compare the read code with a match code.

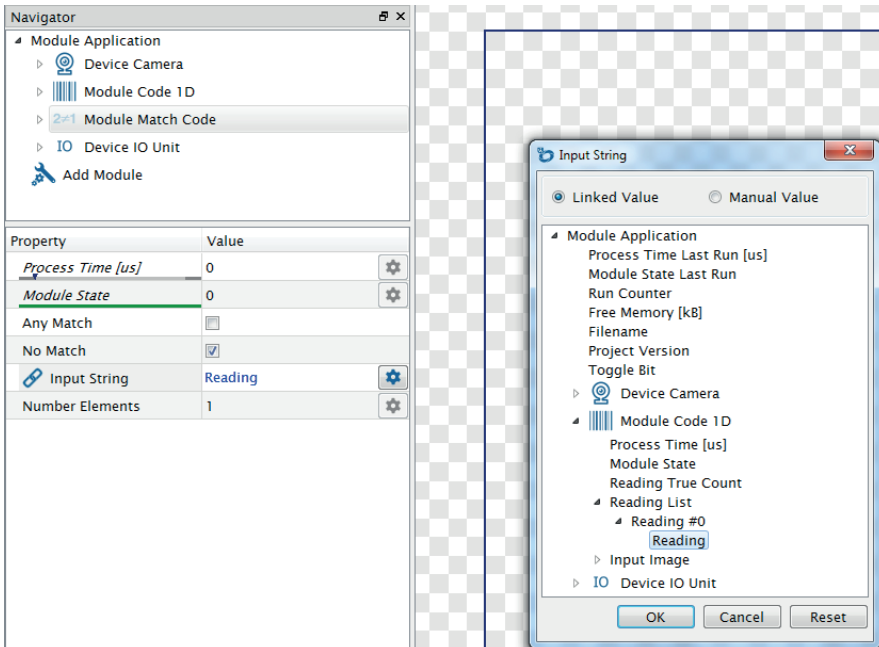

5.2.2.4 Converting Numeric Values Into Good-Bad Values

To link a numeric value to a digital output, the minimum and maximum limit values must be defined. If the numeric value is between the set limit values, the result is output as good. If the numeric value is outside the set limit values, the result is evaluated as bad.

The screenshot displays a software interface with a Navigator pane on the left and a main workspace on the right. The Navigator pane shows a tree view with the following items: Module Application, Device Camera, Module Localizer, Module Region, Module Threshold, and Add Module. The Property pane below it lists various properties and their values:

Property	Value
Process Time [μs]	6000
Module State	0
Pixel Count [unit]	3586
Input Region	Region
Teach	<input type="checkbox"/>
Input Image	Raw 8 Bit
Mode	Static
Threshold Low	235
Threshold High	255

The main workspace shows a blue background with a black square containing a white circular ring. A dialog box titled "Pixel Count [unit]" is open, displaying the following fields and values:


Minimal Pixel Count [unit]	2000
Maximal Pixel Count [unit]	5000
Step Pixel Count [unit]	1
Actual Pixel Count [unit]	3586
Evaluated Result	<input checked="" type="radio"/> Good




The dialog box also features "OK" and "Cancel" buttons at the bottom.




5.3 Network Protocols

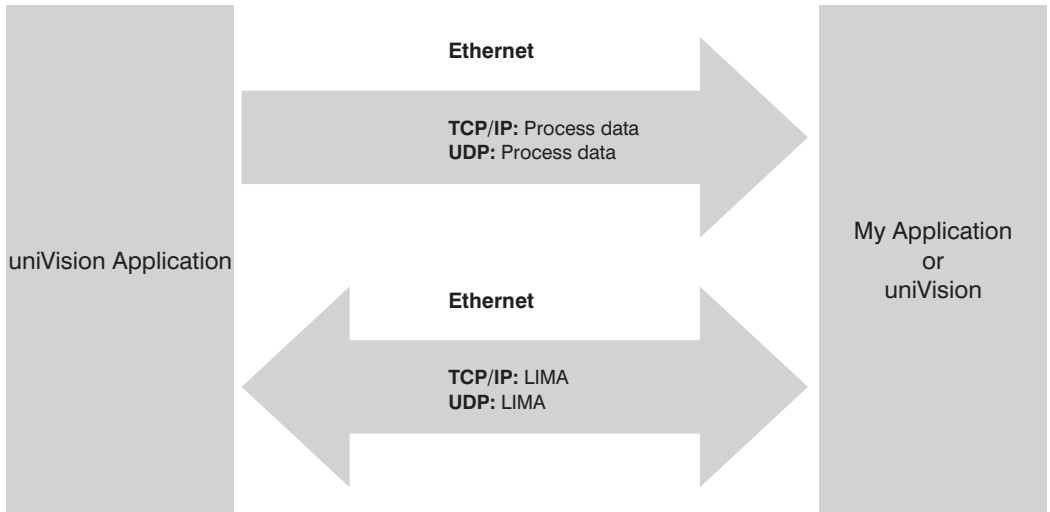5.3.1 Control Unit with uniVision Application

One or more uniVision Applications evaluations can be executed on a single Control Unit. Various options for communication with the uniVision Applications via TCP/IP socket and UDP are depicted in the following graphic.



Protocol	Port	Description
TCP/IP	32001	<p>Fixed port for communication via the LIMA protocol. Write and read commands can be transmitted via this port. Only one connection is permissible via this port.</p> <p> NOTE! The uniVision Application's IP Address is displayed in the device list.</p> <p> NOTE! uniVision software communicates via this port in the edit mode.</p>
TCP/IP	32002	<p>Standard port for transmitting process data. The port can be configured via the TCP device module.</p> <p> NOTE! The uniVision Application's IP Address is displayed in the device list.</p>

Protocol	Port	Description
TCP/IP	32005	<p>Fixed port for communication via the LIMA protocol. Only read commands can be transmitted via this port. Up to five simultaneous connections are possible via the port.</p> <p> NOTE! The uniVision Application's IP Address is displayed in the device list.</p> <p> NOTE! The uniVision Application communicates via this port in the run mode.</p>
UDP	32002	<p>Port for transmitting the device statuses of the:</p> <ul style="list-style-type: none"> • Control Unit • uniVision Application <p>Fixed port for transmitting process data via the UDP device module.</p>
UDP	32003	<p>Fixed port for transmitting LIMA commands.</p> <p> NOTE! Up to 65,535 bytes can be transmitted via UDP. Longer commands can be transmitted via TCP/IP.</p>
UDP	32004	<p>Fixed port for receiving LIMA responses which have been transmitted via port 32003.</p>




NOTE!

Detailed information on the LIMA communication can be found in the interface protocol.



5.3.2 weQube Smart Camera

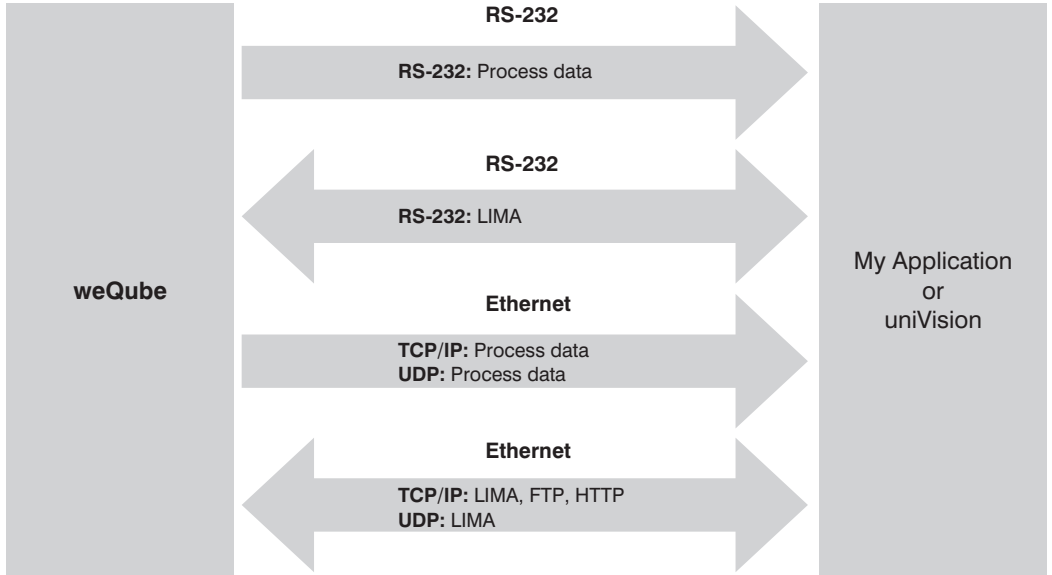Various options for communication with the weQube Smart Camera via TCP/IP socket, UDP and RS-232 are depicted in the following graphic.



Basic RS-232 settings:

- Baud rate: 115,200 bps
- 8 data bits
- No parity
- 1 stop bit

Protocol	Port	Description
TCP/IP	32001	Fixed port for communication via the LIMA protocol. Write and read commands can be transmitted via this port. Only one connection is permissible via this port.  NOTE! uniVision software communicates with the Smart Camera via this port.
TCP/IP	32002	Standard port for transmitting process data. The port can be configured via the TCP device module.
UDP	32002	Port for transmitting the device status of the weQube Smart Camera. Fixed port for transmitting process data via the UDP device module.
UDP	32003	Fixed port for transmitting LIMA commands.  NOTE! Up to 65,535 bytes can be transmitted via UDP. Longer commands can be transmitted via TCP/IP.
UDP	32004	Fixed port for receiving LIMA responses which have been transmitted via port 32003.



NOTE!

Detailed information on the LIMA communication can be found in the interface protocol.

6. Updating Software and Firmware

6.1 Installing or Updating the uniVision Software for Windows

1. Access the product detail page for the uniVision software for Windows DNNF020 at www.wenglor.com. The latest software update file can always be found there in the download area.
2. Download and run the update file.
3. Follow the steps in the installation assistant and install the software.

6.2 Updating the Firmware of the Smart Camera weQube

The firmware of the Smart Camera can be upgraded and downgraded via the uniVision software for Windows or via the FTP interface.

6.2.1 Firmware Update via uniVision Software

First install the latest version of the uniVision software to subsequently update the firmware via the uniVision software.

1. Access the product detail page for the Smart Camera weQube (e.g. B50M001) at www.wenglor.com. The latest firmware update file can always be found there in the download area.
2. Download and save the update file.
3. Establish a connection to the Smart Camera with the uniVision software.
4. Click “Firmware Update” in the help menu.
5. Select the firmware file and start the update process.
6. The Smart Camera is restarted and the firmware update is carried out.



NOTE!

The update process takes a few minutes. During the update, the device must not be disconnected from the supply voltage.

6.2.2 Firmware Update via FTP Interface

First establish a FTP connection to the device. For this, enter the IP Address of the device in the file manager.

Example with the standard IP Address of the Smart Camera: ftp://192.168.100.1

User details:

- User name: ftpuser
- Password:

The following steps must be carried out for upgrading or downgrading the firmware:

1. Open the firmware folder.
2. Copy the update file to the firmware folder.
3. Carry out a restart on the device (via OLED display, website or uniVision software).
4. The Smart Camera is restarted and the firmware update is carried out.



NOTE!

The update process takes a few minutes. During the update, the device must not be disconnected from the supply voltage.

6.3 Updating the Firmware of the Control Unit

The firmware of the Control Unit can be upgraded and downgraded.

1. Access the product detail page for the uniVision software for Linux DNNF012 at www.wenglor.com. The latest Control Unit firmware can always be found there in the download area.
2. Download the file and save it to a USB stick.
3. Connect the USB stick to one of the USB ports on the Control Unit.
4. Select the update file and copy it to the /media/card/firmware directory.
5. Restart the Control Unit.
6. The update process is executed automatically after restarting.
7. Following the successful update, the new software version is displayed on the start screen of uniVision.



NOTE!

For updating the Control Unit to firmware 2.0.0, the firmware version 1.1.3 has to be installed.

6.4 Compatibility

The firmware and software versions consist of three characters:

- Major release: First character changes (projects not compatible)
- Feature release: Second character changes (projects must be converted)
- Bugfix release: Third character changes (projects are compatible)

Project version 1.x:

weQube firmware	Project version	Software
1.3.x	1.3	weQube 1.3.x software
1.4.x	1.4	weQube 1.4.x software



NOTE!

The major release of the weQube firmware from 1.x.x to 2.x.x changes the setting software from the weQube software to the uniVision software.

Project version 2.x:

weQube firmware	Project version	Software	Control Unit firmware
Not available	2.0	Not available	Firmware Control Unit 1.0.x
Not available	2.1	Not available	Firmware Control Unit 1.1.x
2.0.x	2.2	uniVision 2.0.x software	Firmware Control Unit 2.0.x

6.4.1 Upgrading the weQube Firmware from Version 1.x.x to Version 2.x.x



NOTE!

The weQube firmware 2.x.x does not support the Smart Camera weQube with industrial ethernet. On smart cameras with industrial ethernet the weQube firmware 1.4.5 is installed and the suitable parameterization software is weQube software 1.4.5.



NOTE!

To update the weQube firmware to version 2.x.x, firmware version 1.4.5 must be installed on the Smart Camera. If a different firmware version is installed on the device, a firmware update to version 1.4.5 must be carried out first.

The following steps must be carried out due to the major release:

1. Install the weQube 1.4.5 software. (Older software versions do not support the major release update!)
2. Establish a connection to the Smart Camera with the weQube software.
3. Click "Firmware Update" in the help menu.
4. Select the firmware file with version 2.x.x and start the update process.
5. The Smart Camera is restarted and the firmware update is carried out.



NOTE!

After the weQube firmware has been updated to 2.x.x, connection to the device is no longer possible with the weQube software.

6. Download and install the uniVision software.
7. The Smart Camera can now be set up with the uniVision software.

6.4.2 Downgrading the weQube Firmware from Version 2.x.x to Version 1.x.x

If the weQube is used as a replacement device or for a series system and if existing projects with version 1.3 or 1.4 are to continue to be used with a new device, the weQube firmware can be downgraded from 2.x.x to version 1.x.x.

1. Download and install the uniVision software.
2. Establish a connection to the Smart Camera with the uniVision software.
3. Click “Firmware Update” in the help menu.
4. Select the firmware file with version 1.x.x and start the downgrade process.

NOTE!

weQubes with firmware version 2.x.x can only be downgraded to firmware version 1.3.4 or 1.4.5. Downgrading to other 1.x.x firmware versions is not possible. The following options are available depending on the project version:

- Project version 1.3: Downgrade weQube firmware to version 1.3.4.
- Project version 1.4: Downgrade weQube firmware to version 1.4.5.



NOTE!

After the weQube firmware has been downgraded to 1.x.x, connection to the device is no longer possible with uniVision software.



5. Download and install weQube software 1.4.5.
6. The Smart Camera can now be set up with weQube software and existing 1.3 or 1.4 projects can be loaded to the device.

6.5 Project Converter

If there are projects on the device and if they are to continue to be used after a feature update (change to the second character in the version number), a project conversion is required.

NOTE!

If a firmware update is carried out via the uniVision software, the project converter starts automatically after the firmware update or downgrade.



Procedure for the project conversion:

1. Start the project converter via the uniVision software.
2. Select the projects to be converted and select the target project version.
3. Start the conversion.
4. All selected projects are converted to the desired project version.

NOTE!

The original projects are saved in a backup folder and the converted projects are saved in the project folder.
























7. License Management

Different modules are licensed or not licensed depending on the device type. If there is a connection between the uniVision software and the device, the license management can be accessed via -> Help -> Licenses.

License Information ✕

Module List of: 192.168.100.5:32001

	Module Name	License Status
<input type="checkbox"/>	 Module Pattern Match	●
	Device Camera	✓
	Device FTP	✓
	Device RS232	✓
	Device TCP	✓
	Device UDP	✓
	Device Display	✓
	Device IO Unit	✓
	Device Indicator	✓
	Module Cluster	✓
	Module Code 1D	✓
	Module Code 2D	✓
	Module Coordinate System	✓
	Module Filter	✓
	Module Image Comparison	✓
	Module Localizer	✓
	Module Logic	✓
	Module Match Code	✓
	Module Math	✓
	Module Measure	✓
	Module Numeric Comparison	✓

7.1 Order Numbers

Order Number	For Product	Modules
ZNN1004	PC license	For offline operation of the modules: <ul style="list-style-type: none">• 1D code module• 2D code module• Pattern matching module
DNNL001	weQube	<ul style="list-style-type: none">• Measuring module• Cluster module• Image comparison module
DNNL002	weQube	<ul style="list-style-type: none">• 1D code module• 2D code module
DNNL003	weQube	<ul style="list-style-type: none">• OCR module
DNNL006	weQube	<ul style="list-style-type: none">• Pattern matching module

7.2 Procedure for Ordering License Files

1. Establish a connection to the device with the uniVision software.
2. Access the license management under -> Help -> Licenses.
3. Select the required license files and generate license request files for them.
4. Send the *.u_k files together with the order via e-mail to wenglor customer service (order@wenglor.com).



NOTE!

Processing the license files can take approx. one working week. The licensed files are returned via e-mail.

5. Once the *.u_l files are received, call up the license management again.
6. Click on Load and select the *.u_l files.
7. The licenses for the relevant modules are now available.

7.3 License for Offline Use

For offline operation of the modules 1D code, 2D code and pattern matching, the USB dongle ZNN1004 can be purchased.

1. Insert the USB dongle on the laptop.
2. Start the uniVision software and open a project in offline mode (e.g. example file).
3. Access the license management under -> Help -> Licenses.
4. Click on Load and select the *.u_l files on the accompanying CD.
5. The licenses for the relevant modules are now available.

8. Setting Up the uniVision Software

8.1 Start Screen

Once the uniVision software is started, the start screen appears with the following options.



Connect to device	The device list is opened.
Open	The local project folder is opened. A project can be selected and opened offline.
Examples	Different sample projects are available and can be opened offline.

8.2 Network Search

After clicking on “Connect to device”, the network search opens automatically in the event of an empty device list. All devices available in the network are shown.

Name	IP Address	MAC	Article Number
control-unit	192.168.100.252	00:01:29:64:74:7f	BB1C001
weqube	192.168.100.5	54:4a:05:09:04:47	B50M011

The network search can be restarted at a later time via “Search”.

NOTE!



If the device is not found, the following points can be checked:

- The PC and the device are connected physically via a network cable.
- The device is supplied with power and the boot process is successfully completed.
- The Windows firewall is deactivated.

If a found device is selected, its network settings can be edited. The network settings for the device are described under the properties for the devices (see [section “8.3.2 Properties” on page 48](#)).



NOTE!

To establish a connection with the device, the PC and the device must be in the same IP Address area.

Example of a correct network configuration of PC and Smart Camera weQube:

- PC:
 - IP Address: 192.168.100.5
 - Subnet mask: 255.255.255.0
- weQube Smart Camera:
 - IP Address: 192.168.100.1
 - Subnet mask: 255.255.255.0




NOTE!

More information on deactivating the Windows firewall and on assigning or changing a static IP Address on the PC can be found in the general instructions “Changing the IP Address”, which can be downloaded on the product detail page of DNNF020 (uniVision software for Windows) at www.wenglor.com.

If the PC and the device are located in the same network, the device can be added to the device list.

8.3 Device List

The set up devices are managed in the device list. Further devices can be found via “Search Network” (see section “8.2 Network Search” on page 42).

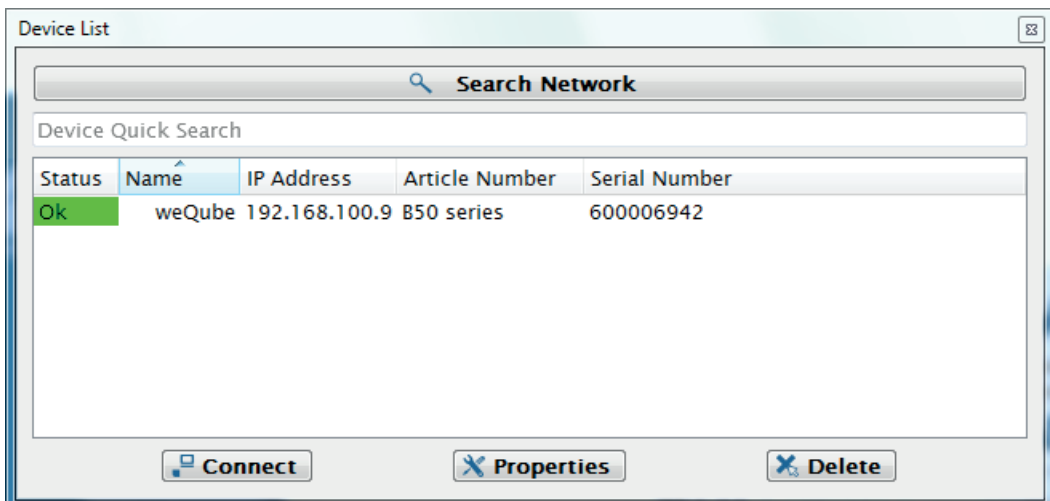

The screenshot shows a window titled "Device List" with a search bar at the top labeled "Search Network". Below the search bar is a table with the following data:

Status	Name	IP Address	Article Number	Serial Number
Ok	weQube	192.168.100.9	B50 series	600006942

At the bottom of the window, there are three buttons: "Connect", "Properties", and "Delete".


If a device is selected, the following options are available:

- Establish a connection between the uniVision software and the device.
- Open the properties for the device.
- Delete the device from the device list.

8.3.1 Connection

8.3.1.1 Control Unit

If the Control Unit is selected and the Connect button is clicked, the following dialog opens:

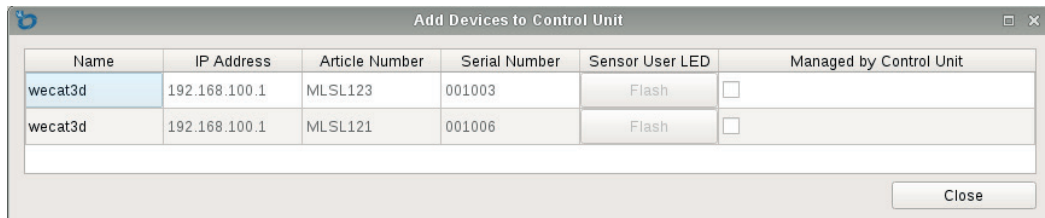

After clicking “Flash”, the user LED at the back of the 2D/3D Sensor blinks.

Procedure for adding a device to the Control Unit:


- Select “Managed by Control Unit” for the corresponding device.
- There is the option of assigning a unique name to the corresponding device. Any given name may only be used once. In each project, the device is assigned to the respective sensor by means of its name.

NOTE!



After projects have been created, the device name should not be changed because allocation of the device its projects is otherwise lost. If the name is changed subsequently, the sensor must be selected once again in all projects.

Added devices are attached to the Control Unit.

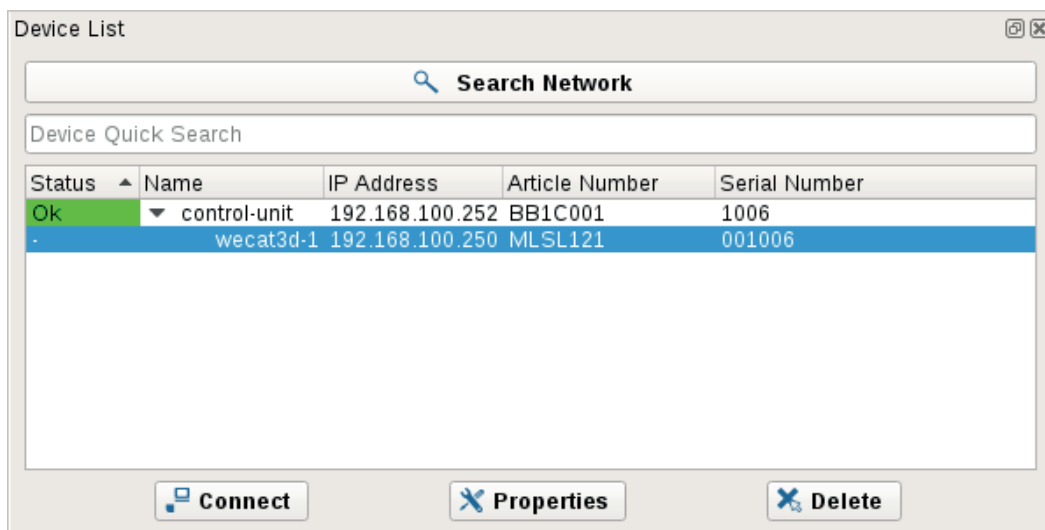

Select the device in the device list and click on Connect to generate a uniVision Application. The data of the device is evaluated in the uniVision Application. After closing the connection to the uniVision Application, the device is listed in the device list under a uniVision Application.

Device List

Status ▲	Name	IP Address	Article Number	Serial Number
Ok	▼ control-unit	192.168.100.252	BB1C001	1006
Ok	▼ application-1	192.168.100.251	BB1C001	1006
-	wecat3d-1	192.168.100.250	MLSL121	001006

Connect

Properties

Delete

Supplement: Replacing Sensors at a Control Unit

1. Open the device list, select the Control Unit and click on Connect. Deselect the old sensor.
2. Remove the old sensor.
3. Mount and connect the new sensor.
4. Open the device list in uniVision software.
5. Select the Control Unit and click "Connect".
6. The newly added sensor is displayed as an available device.
7. Insert a checkmark next to "Managed by Control Unit".
8. Rename the sensor to the device name of the old sensor.
9. Connect to the sensor and select the desired project.



NOTE!

In each project, the device is assigned to the respective sensor by means of its name. If the device name of the old sensor is used for the new one, all projects can be run without making any changes.

Supplement: Expanding the Control Unit with Additional Sensors

1. Mount and connect the additional sensor.
2. Open the device list in uniVision software.
3. Open the Control Unit's properties window.
4. Make sure that the IP Address range includes enough IP Addresses for the required number of sensors.

The following formula applies in this respect:

required number of IP Addresses = 2 x number of sensors + 1.

If enough IP Addresses are available, the properties window can be closed. If additional IP Addresses are required for the Control Unit, they have to be added at the beginning of the IP Address range.



NOTE!

The end of the IP Address range must not be changed because a new address would otherwise also be assigned to the Control Unit itself. As a result, all sensors and applications would no longer be available.

- Select the Control Unit in the device list and click "Connect".
- The added sensor is displayed as an available device.
- Insert a checkmark next to "Managed by Control Unit".
- Assign a unique device name for easier identification.

8.3.1.2 weQube Smart Camera


If a weQube Smart Camera is selected in the device list, followed by a click on Connect, a connection is established with the device and the project can be set up.

The screenshot shows the 'Device List' window. At the top, there is a search bar labeled 'Search Network'. Below it is a 'Device Quick Search' section. A table lists the devices with columns for Status, Name, IP Address, Article Number, and Serial Number. One device is listed: 'weQube' with IP '192.168.100.9', Article Number 'B50 series', and Serial Number '600006942'. The 'Status' column for this device is highlighted in green and contains the text 'Ok'. At the bottom of the window, there are three buttons: 'Connect', 'Properties', and 'Delete'.

Status	Name	IP Address	Article Number	Serial Number
Ok	weQube	192.168.100.9	B50 series	600006942

8.3.1.3 Project Selection

The following options are available after the connection has been established.

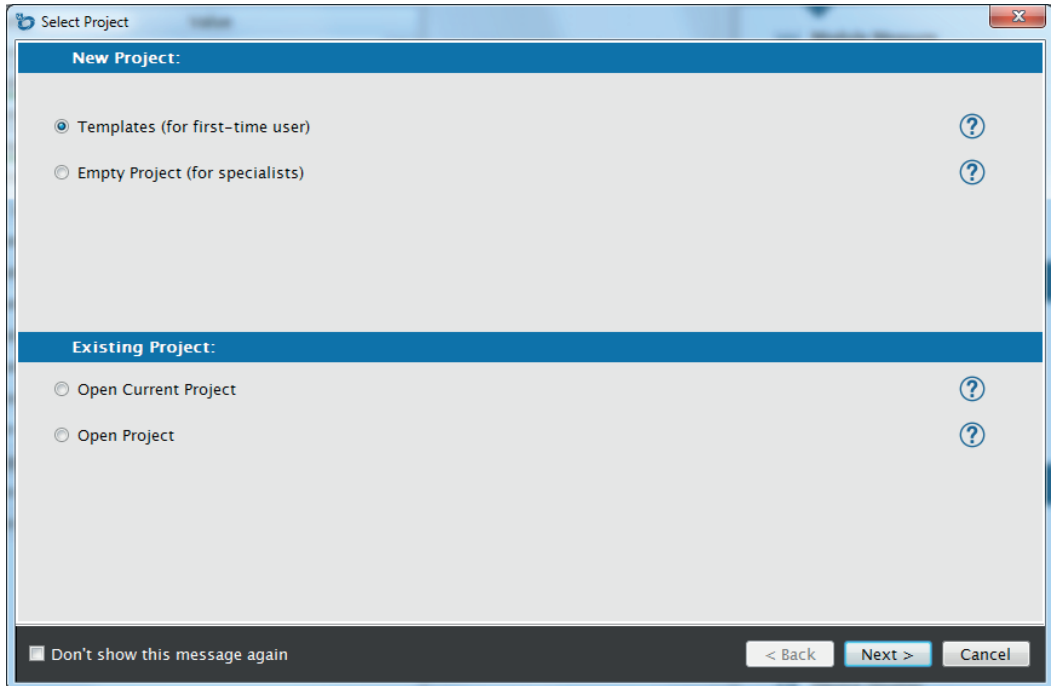



Template	For standard applications, a template can be loaded on the device.
Empty Project	An empty project is loaded on the device. (Only for specialists)
Open Current Project	The project currently running on the device is opened.
Open Project	An existing project can be loaded on the device.

8.3.2 Properties

8.3.2.1 Control Unit

If the Control Unit is selected and “Properties” is clicked, the following setting options open:

Name	Settable device name	
Article Number	Article Number of the device	
Serial Number	Serial Number of the device	
Description	Unchangeable device type	
Product Version	Firmware Version of the device	
Date and Time	Date and Time	
MAC Address	MAC Address of the device	
TCP/IP Port	TCP/IP Port of the device	
UDP State Interval	Interval in seconds with which a status signal of the device (UDP broadcast) is sent via the port 32002.	
Bridge Netmask	Netmask for bridge	
Bridge IP Address Range Start	Beginning of the IP Address range.	
		NOTE! In order to subsequently add additional sensors, shift the Start of the IP Address range two IP Addresses per sensor.
Bridge IP Address Range End	End of the IP Address range	
		NOTE! The IP Address entered as the end of the IP Address range is used by the Control Unit itself. If this IP Address is changed, the existing applications must be deleted and the sensors selected again.
LAN1 DHCP	Via a DHCP server in the network, the LAN1 interface can be assigned a network configuration. Activate DHCP for this.	
LAN1 Fallback IP Address	If bridge is set to LAN2, the entered IP Address is used for the LAN1 interface.	
LAN1 Fallback Netmask	If bridge is set to LAN2, the entered Netmask is used for the LAN1 interface.	
Standard Gateway	Standard Gateway of the Control Unit	
Bridge	LAN1 and LAN 2	Both LAN interfaces are given the same network configuration. This means that 2D-/3D sensors, process data and the LIMA communication with uniVision Applications can take place via both LAN interfaces.
	LAN2	Only on LAN2 can 2D-/3D sensors be connected, process data received and communication take place with uniVision Applications via LIMA commands. LAN1 can thus be used separately for TeamViewer or VNC.

The following rules apply to the internal assignment of IP Addresses:

- The highest IP Address is always used for the Control Unit.
- Two additional IP Addresses are required for each additional sensor:
 - An IP Address for the uniVision Application
 - An IP Address for the sensor

8.3.2.2 uniVision Application

If the uniVision Application is selected and “Properties” is clicked, the following setting options open:

Name	Settable device name
Article Number	Article Number of the device
Serial Number	Serial Number of the device
Description	Unchangeable device type
Product Version	Firmware Version of the device
MAC Address	MAC Address of the device
TCP/IP Port	TCP/IP Port of the device
UDP Status Interval	Interval in seconds with which a status signal of the device (UDP broadcast) is sent via the port 32002.
Start Project	Project that is loaded as standard when the device starts up. The start behavior must be set to start project for this.
Startup Policy	The device can start with the most recent loaded project or with a fixed start project.
FTP Remote IP Address	IP Address of the FTP server
FTP Remote User Name	FTP user name
FTP Remote Password	FTP password


8.3.2.3 weQube Smart Camera

If the weQube Smart Camera is selected and “Properties” is clicked, the following setting options open:

Name	Settable device name
Article Number	Article Number of the device
Serial Number	Serial Number of the device
Description	Unchangeable device type
Product Version	Firmware Version of the device
MAC Address	MAC Address of the device
DHCP	Via a DHCP server in the network, the device can be assigned a network configuration. Activate DHCP for this.
IP Address	Static IP Address of the device.


Fallback IP Address	If DHCP is activated on the device without a DHCP server in the network, the device starts with the fallback IP Address.	
Subnet Mask	Static subnet mask of the device	
Fallback Subnet Mask	If DHCP is activated on the device without a DHCP server in the network, the device starts with the fallback subnet mask.	
Standard Gateway	Standard Gateway of the device	
Fallback Standard Gateway	If DHCP is activated on the device without a DHCP server in the network, the device starts with the fallback standard gateway.	
TCP/IP Port	TCP/IP Port of the device.	
Fallback TCP/IP Port	If DHCP is activated on the device without a DHCP server in the network, the device starts with the fallback TCP/IP Port.	
UDP State Interval	Interval in seconds with which a status signal of the device (UDP broadcast) is sent via the port 32002.	
Start Project	Project that is loaded as standard when the device starts up. The start behavior must be set to start project for this.	
Startup Policy	The device can start with the most recent loaded project or with a fixed start project.	
Start Focus Value	-1	No focus homing takes place before advancing to the project's stored focal point.
	0	Focus homing takes place before advancing to the project's stored focal point.
FTP Remote IP Address	IP Address of the FTP server to save data on Module Device FTP	
FTP Remote User Name	FTP user name	
FTP Remote Password	FTP password	
Web Interface Password	The default website password is: admin	
Display Rotation	The OLED display can be rotated by 180°.	
Display Password	The default password for the OLED display is: 2013	
Display Locked	The OLED display can be blocked.	
Display Mode	Selection of the display mode on the OLED display	
Display Intensity	Selection of the intensity of the OLED display	
Display Language	Selection of the language of the OLED display	

8.4 User Interface

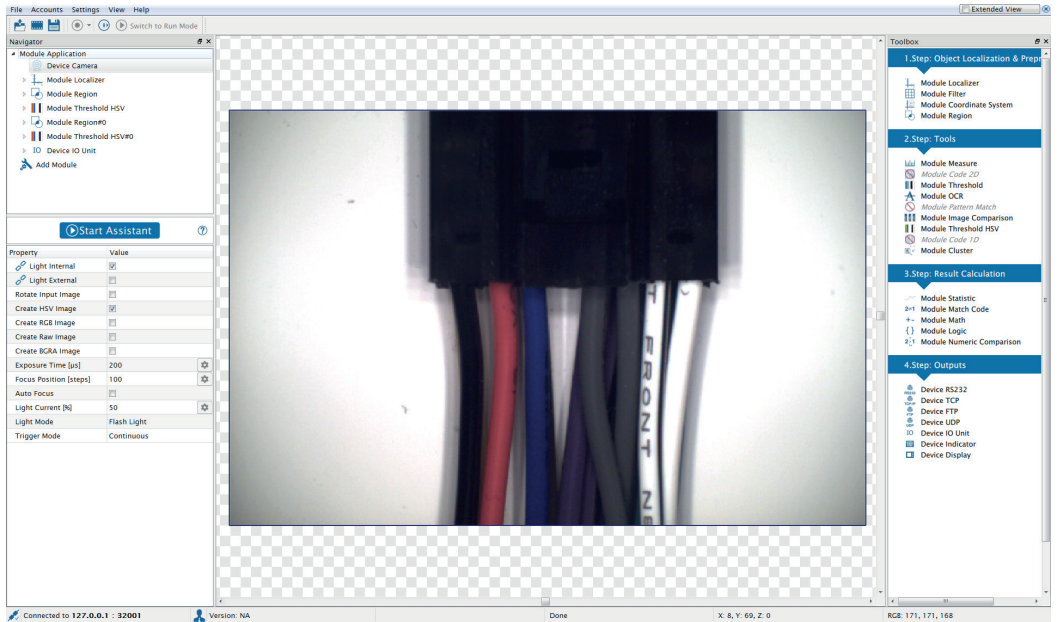

8.4.1 Menu Bar

The following actions are available in the menu bar:



8.4.1.1 File


New	A new project is created on the device (offline not possible).
Open	A project can be opened.
Templates/Examples	Open a template on the device or an example offline.
Save	The currently open project is saved.
Save as	The currently open project can be saved to any desired folder.
Close Project	The connection between the uniVision software and the device is terminated.
Exit	The program is exited.

8.4.1.2 User Accounts

Various settings can be selected for user administration.

Log Off	Logs the active user out.
Lock Screen	The monitor screen is disabled. The software can only be enabled again with the user password.
Settings	Further information on settings is included throughout this section.
Auto Login	If this function has been activated, the last active user is logged in again.

After clicking the “Settings” menu, an overview of existing users appears:

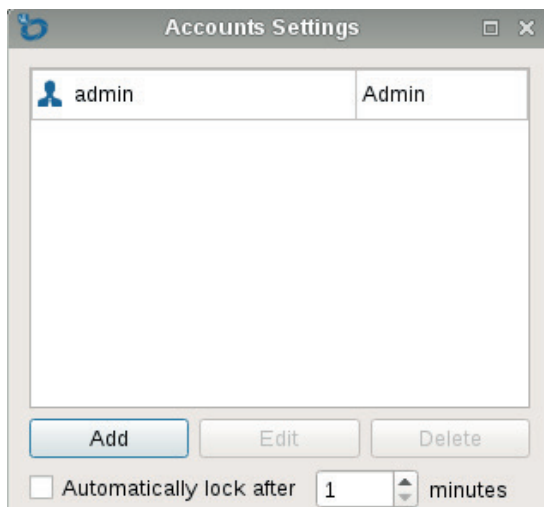


The following user is created as the standard user after installation:

User name: admin
Password: admin

Click the “Add” button in order to set up a new user.

If several users are set up, wenglor recommends changing the password for the user name “admin”.

If the administrator password is lost, please contact wenglor’s support department.

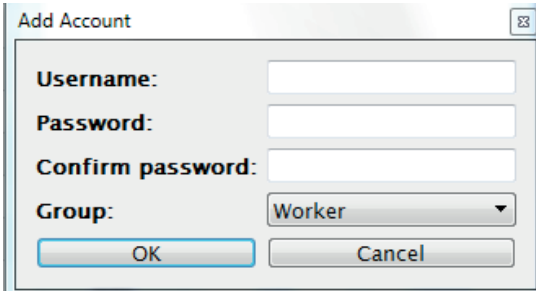

A new user can be set up in the following window. The password must have a length at least 5 characters.


The user can be assigned to one of the following groups:

	Operator	Limited Setter	Setter	Admin
Load project	Yes	Yes	Yes	Yes
Edit projects	No	No	Yes	Yes
Set up a new project	No	No	Yes	Yes
Change user account	Yes	Yes	Yes	Yes
Manage user account	No	No	No	Yes
Disable software	No	No	Yes	Yes
Software – extended view	No	Yes	Yes	Yes
Change visibility of values	No	Yes	Yes	Yes
Change sensor settings	No	No	No	Yes
Change software settings	No	No	No	Yes


8.4.1.3 Settings

Options

Further settings can be selected under options.

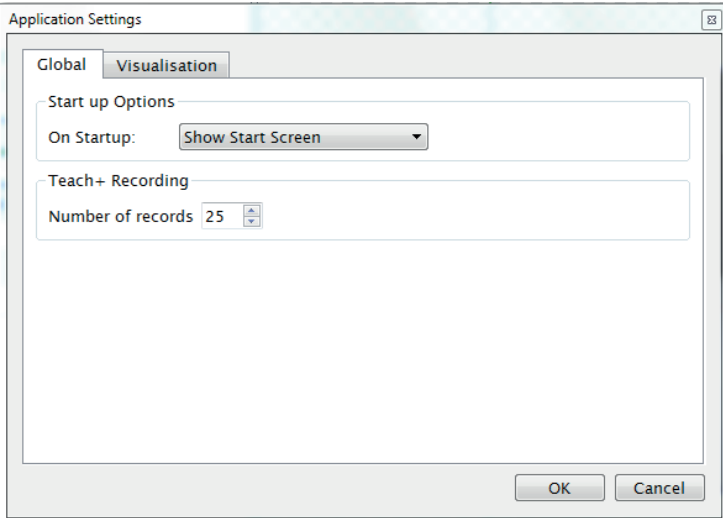

During the software start, the start screen can be shown or a connection to a specific device can be established. The number of recordings for the Teach+ recording can be defined.

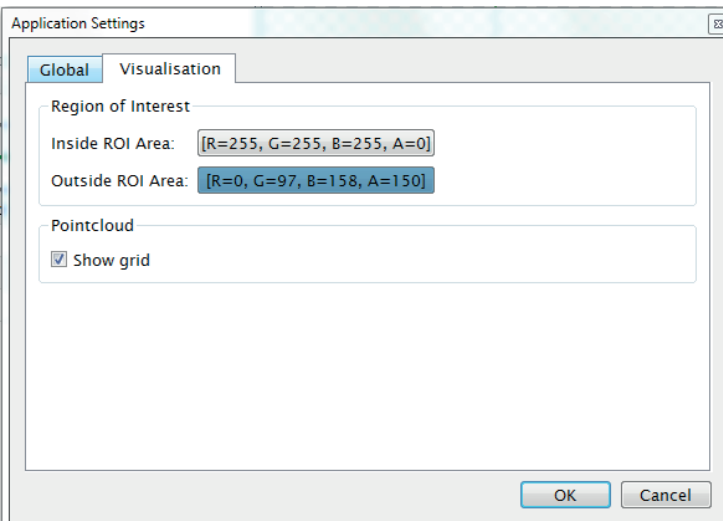

Inside ROI Area	Select color for the area within the region of interest (active area).
Outside ROI Area	Select color for the area outside of the region of interest (active area).
Show Grid	The grid in the measuring range can be activated or deactivated.
Language	uniVision is available in the following languages: <ul style="list-style-type: none"> • German • English • Chinese • Turkish • Dutch • Hungarian • Russian • Portuguese • Spanish • Italian • French

8.4.1.4 View

Various windows can be activated or deactivated in the “View” menu.



NOTE!


Detailed information regarding the individual areas is included in the following sections.

Image Container Viewer	Window with recordings of a Teach+
Histogram	Window for frequency distribution of the gray-scale values within a certain surface area.
Navigator	Window with an overview of the current project.
Profile	Window for analyzing gray-scale values along a line.
Toolbox	Window with all available modules.
Online Data Monitoring	Window for online data monitoring.
Properties	The device’s properties can be opened and edited.
Device List	Window with an overview of all devices.
Search Network	Window with all devices available in the network.
Project Tools	Menu bar for the entire project.
Module Toolbar	Menu bar for the selected module.

8.4.1.5 Help

About	Information on the software version.
Manual	The operating instructions describe the functions of the uniVision software.
Software Changelog	Directory of the software changes.
Vision Portal	Link to the Vision portal with additional information on the devices
Licenses	Window with license management
Firmware Update	Carry out a firmware update on the connected device.

8.4.1.6 User View




Only visible modules appear in the project tree. Modules which will not be edited can be hidden (see “8.4.3.1 Project Tree, Settings/Results”, page 57).



NOTE!

Module visibility can only be changed in the extended view.



All modules and settings can be edited in the project tree.

8.4.2 Closing the Project




The connection to the device is closed.

8.4.3 Modifiable Windows and Areas

The windows and areas listed below can be shown or hidden.

8.4.3.1 Project Tree, Settings/Results

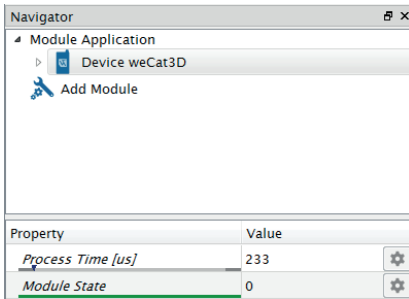


The project tree lists all available modules. Further modules can be added via the tool list.

Settings and results for the selected module appear in the “properties” area. Furthermore, available functions are changed in the module toolbar according to the selected module.

Various settings can be selected after right clicking a module. A module can be moved to the desired position within the project tree by clicking it and holding the mouse key depressed.

Copy node path to clipboard	Copying the node value to the clipboard can be helpful in making it easier to create your own LIMA commands.
Visible	The module can be made invisible for normal view and thus protected against any alteration of its settings.
Rename	The module’s name can be changed.
Delete	The selected module is deleted from the project tree.
Copy Module	Copies the module along with all of its settings.


8.4.3.2 Toolox

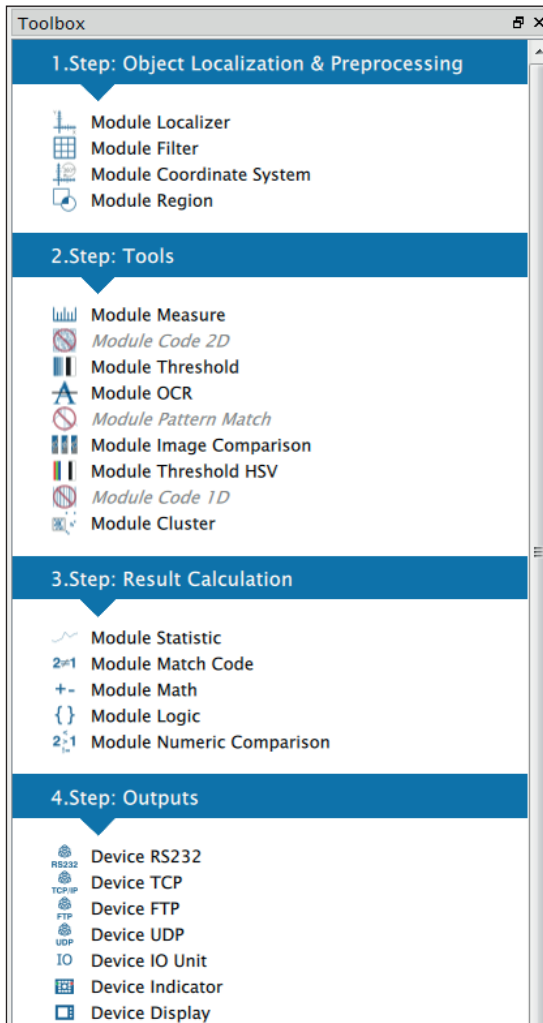

Modules can be added to the navigator by double clicking, or by dragging and dropping them from the toolbox.

8.4.3.3 Online data monitoring

The process times, the status of the digital inputs and outputs and the memory usage are shown.

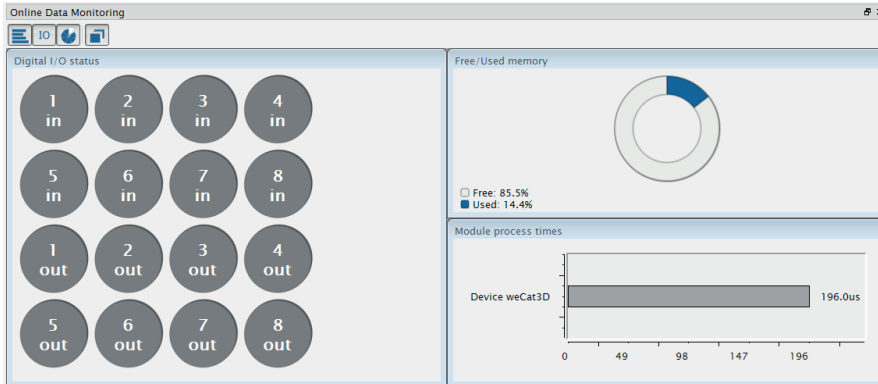

8.4.3.4 Network tools

Various windows can be accessed from the “Network tools” menu.

Device List	Opens the device list.
Search Network	Opens “Search Network”.

8.4.3.5 Project tools




New Project	Opens a new project.
Open Template/ Example	Opens a template/example file.
Open File	Opens an existing project.
Save File	Saves a project file.
Teach+ Recording	Saves a project with all project settings and a certain number of recordings (images or Pointclouds). Via the Teach+ downloader, a Teach+ file recorded via the OLED display can be downloaded from the device.
Live Mode	Sensor data are displayed continuously in the live mode. However, no changes can be made to the software settings in this mode.
Edit Mode	The settings can be changed in edit mode. Current data is only retrieved from the sensor in the event that the module is replaced or the settings are changed.

8.4.3.6 Module Toolbar

There are specific functions for each module which are described in the sections for each respective module.


8.4.4 Camera Image or Measuring Range

8.4.4.1 weCat3D 2D/3D Sensor

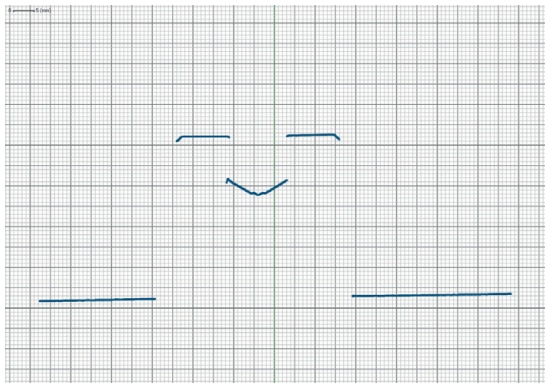

The measuring range of the 2D/3D Sensor is displayed, and the scale provides information concerning the dimensions. The Pointcloud transmitted by the sensor is visualized by means of blue points within the measuring range.

8.4.4.2 weQube Smart Camera

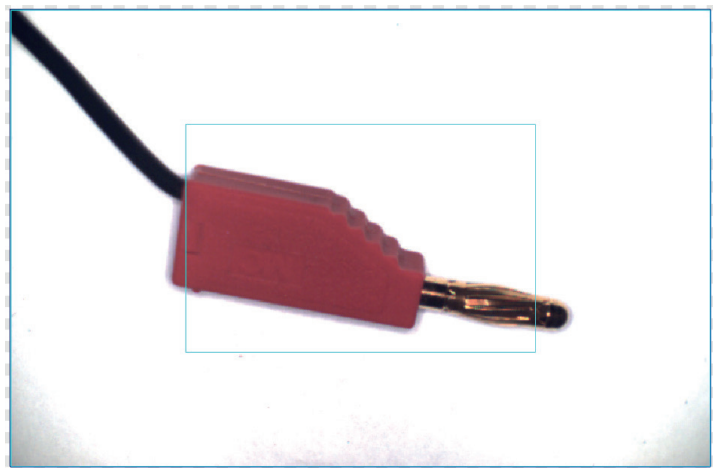

The camera image are displayed.

8.4.5 The Status Bar

The following Information is displayed in the status bar:

- Status and IP Address of the device
- Information on the logged in user
- Coordinates of the mouse position
- Intensity of measuring points or gray values of pixels



9. Software Modules for Data Recording

9.1 Module Device Camera

9.1.1 Overview

Objective Set up the camera for optimized preparation of image processing.

Procedure Various image recording settings can be changed in order to obtain the best possible camera image for subsequent image processing. For example focal point, exposure time and illumination can be adapted to the respective ambient conditions.

Furthermore, the camera area which is read out can be reduced in size. In this way, sensor processing time can be reduced and the refresh rate can be increased.

9.1.2 Setting Parameters







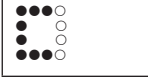
Image Area If connection to the sensor has been established, the live image is displayed in the image area.

Property The following settings/results are displayed:

Process Time [μ s]	Process Time for process steps in the camera device module.
Module State	Error codes for troubleshooting support (see section “14.4 Module Status” on page 213).
Capture Duration [μ s]	Process Time for the exposure of the CMOS sensor and reading out the image chip.
Buffer Position	Number of images, which are currently in the input buffer.
Color Mode	Displays the sensor’s image chip variant (color or monochrome).
Light Internal	Internal illumination can be switched on and off. Integrated illumination is switched on by activating the checkbox.
Light External	The use of external illumination is advisable for certain applications. The output which activates external illumination is switched on by activating the checkbox. One of the outputs in the I/O module must be configured as output flash (see section “13.1.3.2 Digital I/Os 1 to 6 Submodule” on page 186).
Rotate Input Image	After activation, the input image is automatically rotated 180°.

Property

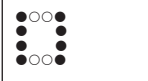
Exposure Time [μs]	<p>Exposure time is the period of time during which the CMOS sensor receives light. Exposure time can be selected within a range of 17 μs to 30,000 μs.</p> <ul style="list-style-type: none"> • Short exposure times are used for dynamic processes in order to avoid motion blur. • Long exposure times are used for static processes. <p>Note: Long exposure times (>1 ms) reduce the maximum possible illumination intensity that can flow through the LEDs. Reducing the illumination intensity serves as a safety mechanism and prevents overloading of the LEDs.</p>
Gain	<p>Gain is the factor by which CMOS sensor sensitivity is increased. Please note that image interference (snow), which is associated with the CMOS sensor, is amplified as well. Amplification should be kept as low as possible in order to avoid unnecessary diminishing of the quality of the image.</p>
Focus Position [steps]	<p>The focus position can be changed manually for the purpose of precision adjustment</p>
Subsampling	<p>In the case of subsampling, transmission of brightness information, and thus the resolution of the camera image, is greatly reduced. This reduces the required amount of storage space and increases the transmission speed (only available with monochrome image chip versions).</p>
Auto Focus	<p>An in-focus range can be selected within the field of vision. In the submodule automatic focus range, the size and position of the rectangle for the automatic focus can be changed. Then put a check mark next to automatic focus and the sensor focuses automatically.</p>
Light Current [%]	<p>The light current specifies the intensity of the utilized illumination. The LEDs brightness can be influenced by adjusting amperage. Various brightness levels are available.</p> <p>Note: The light current setting is limited by exposure time. As a safety mechanism, a limited light current value can be selected in the case of long exposure times.</p>
Light Mode	<p>There are two different illumination variants:</p> <p>Flash Light Illumination is only activated at the moment at which image recording takes place. In flash mode, more brightness can be achieved and the service life of the illumination is increased.</p> <p>Continuous Light Continuous illumination can be used if the flash is perceived as disturbing.</p>

<p>Light Segments</p>	<p>If reflection or a shadows impairs the image, individual LEDs can be switched off.</p> <p>The following table shows the assignment of numbers to the active (white point) and inactive (black point) LEDs (front view facing the LEDs).</p> <div style="display: flex; justify-content: space-around; align-items: flex-start;"> <div style="text-align: center;"> <p>1</p>  </div> <div style="text-align: center;"> <p>5</p>  </div> </div> <div style="display: flex; justify-content: space-around; align-items: flex-start; margin-top: 10px;"> <div style="text-align: center;"> <p>2</p>  </div> <div style="text-align: center;"> <p>6</p>  </div> </div> <div style="display: flex; justify-content: space-around; align-items: flex-start; margin-top: 10px;"> <div style="text-align: center;"> <p>3</p>  </div> <div style="text-align: center;"> <p>7</p>  </div> </div> <div style="display: flex; justify-content: space-around; align-items: flex-start; margin-top: 10px;"> <div style="text-align: center;"> <p>4</p>  </div> </div>
-----------------------	--

Trigger continuous:

Sequence in Live Mode


Trigger Delay = 0
 Output Hold Time = 0
 Event 1 Delay = 0

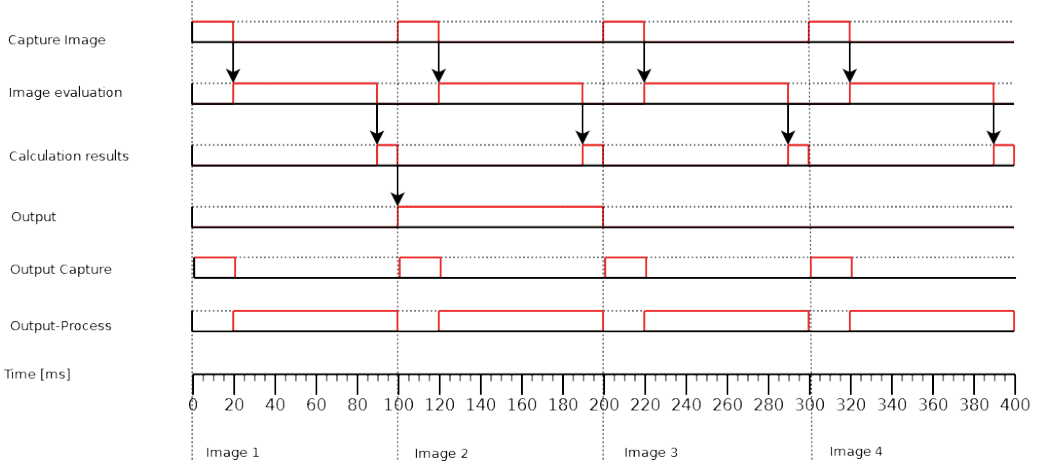

Trigger:

Sequence in Trigger mode

Trigger Delay = 0
 Output Hold Time = 0
 Event 1 Delay = 0

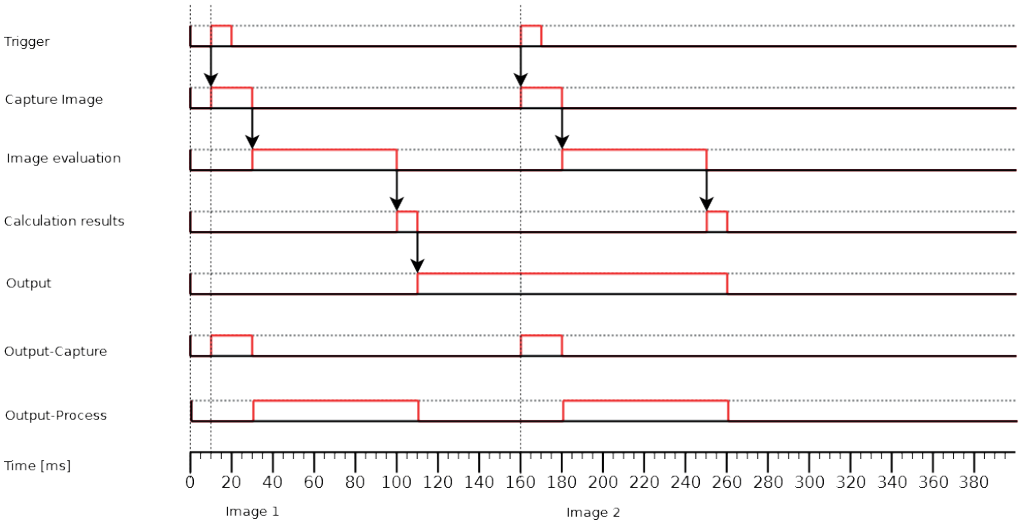

9.1.3 Configuration

The camera device module includes the following configuration options:

- Read-out Area
- White balancing

9.1.3.1 Submodule Read-out Area

Objective

The camera range which should actually be read out can be selected. Using a smaller read-out range **reduces** the transmission time and **increases** the image refresh rate.



NOTE!

The area to be examined must be lie **completely** within the read-out range.

Image area

As a default feature, the read-out area encompasses the entire camera image. It appears in the image area as a dashed frame, where it can be adjusted.

9.1.3.2 Submodule White Balance



Activating white balancing

Procedure

The view is changed to the module's input image when the "White Balancing" tool is activated. Clicking the place in the image which should be defined as "white" in the application ascertains coordinates and forwards them to the algorithm. The algorithm calculates the new values for the image's red and blue value. The image is then redisplayed with the changed values.



NOTE!

The white balancing function is only available with color versions of the weQube.

9.2 Module Device weCat3D

9.2.1 Overview

Objective Set up the 2D/3D Sensor so that a reliable Pointcloud is transmitted.

Abbreviated procedure Adjust the settings of the 2D/3D Sensor such that a stable Pointcloud is displayed within the measuring range.



NOTE!

Detailed information on the settings of the 2D/3D Sensors can be found in the operating instructions for the relevant sensors.

Supplement: Synchronization of Several 2D/3D Sensors

Synchronization of several 2D/3D Sensors is necessary when the laser line of one sensor lies within the scanning range of at least one other sensor.



NOTE!

A 2D/3D Sensor with red laser light and a 2D/3D Sensor with blue laser light do not influence each other.

Procedure for synchronizing two 2D/3D Sensors:

Wire the two 2D/3D Sensors to each other so that one of the pins of the first sensor (master) is connected to one of the pins of the second sensor (slave).

Example: I/O #3 at the master is connected to I/O #4 at the slave.



Configure one I/O pin at the master as an output with time delay. Delay should be at least as long as the master's exposure time. The output signal may not be any longer than the slave sensor's exposure time.

Abbreviated procedure

Example for the master:

- Exposure time: 200 μ s
- Line Selector: I/O #3
- Line mode: Output
- Line source: Timer 1 active
- Timer duration: 100 μ s
- Timer delay: 200 μ s



NOTE!

The master sensor can be triggered as desired.

Configure one of the slave's Line pins as an input.

Example for the slave:

- Line selection: Line #4
- Line mode: Input
- Trigger source: Line #4
- Exposure time: 200 μ s



NOTE!

If the master is triggered internally, trigger delay at the master must be at least as long as the slave sensor's exposure time.

9.2.2 Setting Parameters

Image area If the sensor is connected, the transmitted Pointcloud id displayed.

Property The following settings/results are displayed:

Process Time [us]	Process Time for process steps in the current module.
Module State	Error codes provide support for troubleshooting.
Device Name	The name of the current device is displayed. Any other available device can be selected as well.

9.2.3 Configuration

The weCat3D device module includes the following configuration options:

- Image format
- Acquisition
- Digital I/O
- Counter and timer
- Encoder
- Device information
- Signal
- Data

9.2.3.1 Image Format

Objective Display the image settings.

Property The following settings/results are displayed:

Width	Width of the transmitted image.
Height	Height of the transmitted image
Offset X	Offset in X-direction.
Offset Y	Offset in Y-direction.
Pixel format	Selection between RGB16 Plannar (standard) and Mono 8.
Sensor width	Width of the transmitted image.
Sensor height	Height of the transmitted image

9.2.3.2 Acquisition

Objective


The following standard trigger modes are available.

1. Continuous with fixed Acquisition Line Rate:

The sensor acquires a specified number of lines per second without external triggering.

Sample settings:

- Trigger source: Intern
- Acquisition Line Rate: 200 Hz
- Exposure time: 200 μs

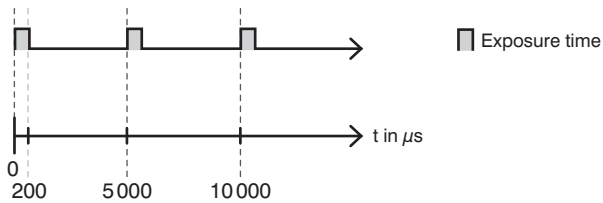


2. Continuous with encoder:

Acquisition is triggered by an encoder so that a line is acquired for all x encoder steps.

Sample settings with an HTL encoder:

- Trigger source: Encoder 1
- Trigger Divider: 0 or 2
- Encoder Selector: Encoder 1 (HTL)
- Encoder source A: I/O #1
- Encoder source B: I/O #2
- Encoder output mode: Motion

Objective

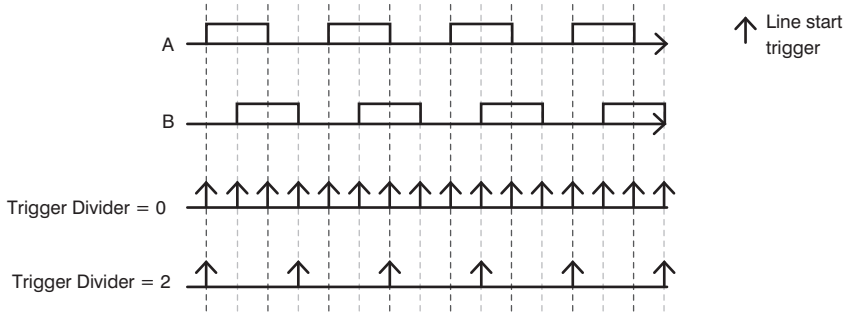


3. Continuous with active acquisition:

Continuous operation (with fixed acquisition line rate or encoder triggering) can be used with an acquisition active signal. As long as the signal is applied to one of the sensor's pins, lines are acquired.

Example:

- Trigger source: Intern
- Acquisition Line Rate: 200 Hz
- Exposure time: 200 μ s
- Trigger Selector: Acquisition active
 - Trigger mode: On
 - Trigger activation: Level high
 - Trigger source: I/O #4

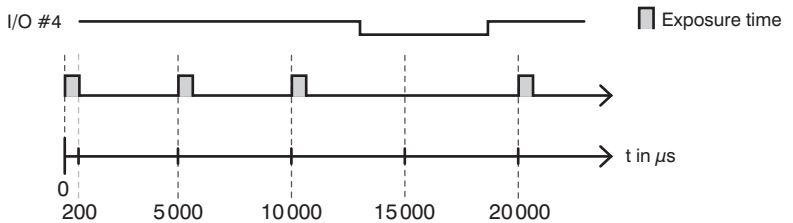

Objective



NOTE!


The acquisition active signal can also be transmitted to the associated application by means of a LIMA command. The start signal for activation starts the line recording and the stop signal ends the line recording. Further information can be found in the interface protocol.

4. Continuous with trigger:

The trigger command can be transmitted to the associated application via one of the sensor's I/O pins, as well as by means of a LIMA command.

Example with triggering via an I/O pin at the sensor:

- Trigger Selector: Line start
- Trigger source: Line 3
- Trigger activation: Rising edge
- Exposure time: 200 μs

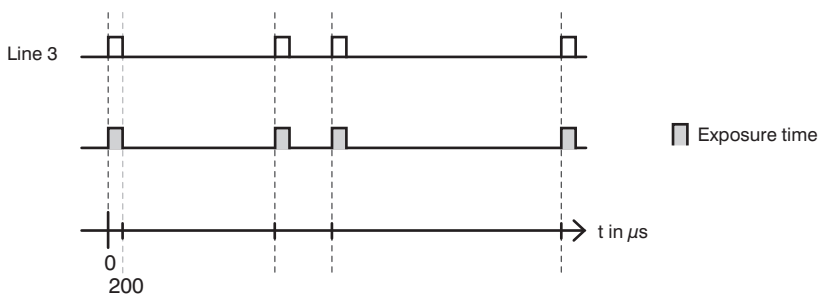

In order to control acquisition at the associated application by means of a LIMA command, the trigger source must be set to software. Further information can be found in the interface protocol.





NOTE!





In the case of time-critical applications and strict timing requirements for triggering, the trigger signal must be used via digital input directly at the sensor.

Property


The following settings/results are displayed:

Acquisition Mode	Continuous	After the acquisition active command, each trigger signal results in acquisition until a de-activation command is issued.
Acquisition Line Rate	 NOTE! Maximum acquisition line rate depends on the sensor's read-out range and the evaluation program at the Control Unit.	Number of lines per second (for internal trigger source only).
Acquisition Status	OK	Successful acquisition
	Too fast	Triggering is too fast for acquisition (e.g. via encoder or an I/O pin at the sensor).
Exposure Time	Exposure time in μs	
Trigger Selector	Line start	Specify triggering of individual lines.
	Acquisition active	Specify the acquisition active signal.
		The corresponding parameters (trigger mode, trigger source and trigger activation) are displayed depending on the selected trigger.
Trigger Mode	On	The selected trigger is activated.
	Off	The selected trigger is deactivated.
		 NOTE! The line start trigger cannot be deactivated.

Property

Trigger Source	Select the trigger source:	
	Intern	<p>The selected acquisition frequency determines how many lines are acquired per second.</p> <p> NOTE! Internal triggering is only possible with the line start trigger.</p>
	Line 1...4	Use an I/O pin at the sensor for triggering.
	Encoder 1	<p>Use the HTL encoder input at the sensor for triggering.</p> <p> NOTE! Encoder triggering is only possible with the line start trigger.</p>
	Encoder 2	<p>Use the TTL encoder input at the sensor for triggering.</p> <p> NOTE! Encoder triggering is only possible with the line start trigger.</p>
Software	<p>Cause triggering at the associated application by means of LIMA commands.</p> <p> NOTE! In the case of time-critical applications, the trigger signal must be transmitted directly to the sensor's digital input.</p>	
Trigger Activation	The following options are available with the line start trigger:	
	Rising edge	Only the rising edge results in triggering.
	Falling edge	Only the falling edge results in triggering.
	The following options are available with the acquisition active signal:	
	Level high	If the level at the I/O pin is high, acquisition is active.
Level low	If the level at the I/O pin is low, acquisition is active.	

Property


Trigger Delay	<p>Delay time in μs until the arriving trigger signal results in the line start trigger. Only available with internal trigger source.</p> <p> NOTE! If several sensors are operated synchronously, the master device is triggered internally via trigger delay.</p>
Trigger Divider	<p>Number of transmitted trigger pulses. In the case of 0, no trigger pulses are transmitted and in the case of two, every third trigger pulse results in line start triggering. Can only be selected with trigger source set to encoder or I/O 1 ... 4.</p>

9.2.3.3 Digital I/O
Objective

Configure the digital I/Os at the sensor.

Property

The following settings/results are displayed:

Line Selector	<p>Select the Line pin at the sensor.</p> <p> NOTE! When an I/O pin at the sensor is selected, the associated parameters are displayed.</p>
Line Mode	The Line pin can be configured as an input or an output.
Line Inverter	Operate the input or output in the normal or inverted mode.
Line Status	Displays the status of the output.
Line Source	<p>Only available when output is selected:</p> <ul style="list-style-type: none"> • User output • Timer 1 active
User Output Value	True or false
Output Function	Selection between Push Pull, PNP and NPN
Input Load	The 2 mA internal load can be activated or deactivated at the input. An internal resistor is connected to the input (pull-down).

9.2.3.4 Counter and Timer

Objective

Set time delay at the sensor's digital I/Os.

Property

The following settings/results are displayed:

Timer Selector	Select the timer.
Timer trigger Selector	Set the timer to the sensor's digital I/Os.
Timer duration	Duration of the timer signal in μs
Timer delay	Timer signal delay in μs

9.2.3.5 Encoder

Objective

Configure the encoder input at the sensor.

Property

The following settings/results are displayed:

Encoder Selector	Encoder 1	HTL encoder at the sensor
	Encoder 2	TTL encoder at the sensor
Encoder source A	Specify the I/O pin at the sensor for the HTL encoder's first signal.	
Encoder source B	Specify the I/O pin at the sensor for the HTL encoder's second signal.	
Encoder output mode	Select the encoder output mode:	
	Position high	The sensor is only triggered when the encoder value is higher than before.
	Position low	The sensor is only triggered when the encoder value is lower than before.
	Direction up	Any increase in the encoder value triggers the sensor.
	Direction down	Any decrease in the encoder value triggers the sensor.
Motion	Any change to the encoder value triggers the sensor.	
Encoder reset source	The encoder value can be reset via one of the sensor's I/O pins.	
Encoder reset activation	Only when encoder reset source is selected:	
	Rising edge	The rising edge causes resetting of the encoder value.
	Falling edge	The falling edge causes resetting of the encoder value.
Any edge	Any edge causes resetting of the encoder value.	

9.2.3.6 Signal

Objective

Carry out the signal settings on the sensor.

Property

The following settings/results are displayed:

Signal Enable	The first, the second or both signals can be used. This setting is useful for semi-transparent materials for selecting the required signal.
Signal selection	The signal top, bottom, the strongest signal or the signal with the highest signal width can be selected.
Signal width min	Minimum signal width
Signal width max	Maximum signal width
Signal strength min	Minimum signal strength

9.2.3.7 Device Information

Objective

Display the sensor information.

Property

The following settings/results are displayed:

Device type	Device type (fixed)
Device Model Name	Article Number (fixed)
Device Vendor Name	Manufacturer (fixed)
Device Version	Version (fixed)
Device Firmware Version	Firmware Version (fixed)
Device Serial Number	Serial Number (fixed)
Device type TL	Device type GigE Vision
Working range Z start	Working range Z start (fixed)
Working range Z	Measuring range Z (fixed)
Field width X start	Visual field width X start (fixed)
Field width X end	Visual field width X end (fixed)

9.2.3.8 Chunk Data

Objective

In addition to the Pointcloud, additional data can be transmitted as chunk data.

Property

The following settings/results are displayed:

Chunk Selector	<p>Different results are available as Chunk Data:</p> <ul style="list-style-type: none"> • Chunk Picture Counter: Profile number • Chunk Timestamp: Time when the profile was captured in μs • Chunk Device Temperature: Temperatur in $^{\circ}C$ within the housing • Chunk Line Status All: Status of IO pins at device we-Cat3D <ul style="list-style-type: none"> Bit 0: IO 1 Bit 1: IO 2 Bit 2: IO 3 Bit 3: IO 4 • Chunk Encoder Value: Current encoder position • Chunk Scanner Status: Information about current device status <ul style="list-style-type: none"> Bit 0: 2D/3D Sensor OK Bit 1: Exposure Time OK Bit 2: Laser On Time OK Bit 3: Not used Bit 4: Not used Bit 5: Scanning frequency too fast Bit 6: Not used Bit 7: Not used <p>Notes to Line Status All and Scanner Status:</p> <ul style="list-style-type: none"> • The decimal value (e.g. 95 for Scanner Status) has to be transferred in a binary number (e.g. 1011111). • Last digit represents Bit 0, the next to last represents Bit 1 and so on • For the example with Scanner Status 95 the 2D/3D Sensor, the exposure time and the Laser On Time are ok and the scanning frequency is not too fast.
Chunk Enable	The selected chunk data can be activated or deactivated.

10. Software Modules for Image Analysis

10.1 Module Localizer

10.1.1 Overview

Objective

Objects can be tracked and reliably detected. The following image processing functions are set up on the basis of this coordinate system.

The tracking module allows for translatory tracking. The coordinate system's X and Y positions are adjusted to this end, but **not** its rotary position.

Tracking is thus suitable for objects, for which the rotary position is irrelevant. Furthermore, an easy to detect feature which stands out from the rest of the image (especially high-contrast area, special shape, edge or corner) is helpful for successful tracking.

NOTE!



In addition to translatory tracking, rotary tracking is also possible. This can be set up in the coordinate system module (see section [“10.2 Module Coordinate System”](#) on page 81).

Procedure

The module contains a movable region to be taught in. This can be taught in on a reliably detectable area (especially high-contrast area, special shape, edge or corner) and under settings in the tracking module. Alternatively, the location with the highest contrast can be taught in automatically.

In every recorded image, the area within the specified search region is then detected which **most closely** coincides with the taught in area. The **gray-scale values** in the areas serve as a basis for comparison. The coordinate system is aligned to the point of closest correspondence to the taught-in image, and the object is thus translatorally tracked.

Note: No rotary tracking with rotation of the coordinate system can be executed with this module. The coordinate system must be used in order to perform rotary tracking (see section [“10.2 Module Coordinate System”](#) on page 81).


10.1.2 Setting Parameters

Image area

The coordinate system, which can be aligned to an taught in feature, is displayed. The X-axis appear red, the Y-axis green.

Settings/ Results

The following settings/results are displayed:

Process Time [μs]	Process Time for the process steps in the module localizer.
Module State	Error codes for troubleshooting support (see section “14.4 Module Status” on page 213).
Smallest difference	The difference in the number of pixels between the taught-in image and the best match in the current image is read out. The results provide an indication of the probability that the currently found reference is the correct reference.
Teach Reference Auto	A possible position (area with the highest contrast) is searched for automatically within the specified search region. The coordinate system for tracking is aligned to the region to be taught in. The results may serve as a good starting value. However, it may also be advisable to specify the reference position manually.
Teach Reference	The current position of the teach-in region can be taught in. The best possible match is searched for in all subsequent images. The coordinate system for tracking is aligned to this region. <div style="display: flex; align-items: center;">  <p>NOTE! Before the teach-in process, the teach-in region must be positioned in a place with the highest possible contrast.</p> </div>
Input image	Selection of the channel for the image input
Tracking method	Position the coordinate system statically on the origin or dynamically on the best match.

10.2 Module Coordinate System

10.2.1 Overview

Objective

Objects can be tracked and reliably detected. Additional image processing functions can also be set up on the basis of this coordinate system.

The coordinate system module allows for **translatory and rotary** tracking. The coordinate system's X and Y positions, as well as its rotary position, are adjusted to this end.

The coordinate system is suitable for tracking objects whose rotary position can change.

Note: In addition to rotary tracking, translatory tracking is also possible. Pure translatory tracking is possible with the module localizer (see section "[10.1 Module Localizer](#)" on page 79).

Abbreviated procedure

First of all, how the coordinate system is laid out can be individually specified. Various algorithms are available.

Search lines can then be used to detect edge transitions along search rays. A point is generated at these transitions, which can be defined as an origin or a point along the X or the Y-axis.

10.2.2 Setting Parameters

Image area

The coordinate system set up by means of the specified method is displayed.

Property

The following settings/results are displayed:

Process Time [μs]	Process Time for the process steps in the coordinate system module.
Module State	Error codes for troubleshooting support (see section "14.4 Module Status" on page 213).
Input image	Selection of the channel for the image input
Construction Method	<p>The coordinate system can be set up in different ways:</p> <p>1 pt. origin 1 point defines the origin of the translatory coordinate system.</p> <p>1 pt. X-axis, 1 pt. Y-axis 1 point defines the X-axis and 1 point defines the Y-axis, by means of which a translatory coordinate system is formed.</p> <p>1 pt. origin, 1 pt. X-axis One point defines the origin and one point defines the X-axis of the translatory/rotary coordinate system.</p> <p>1 pt. origin, 1 pt. Y-axis One point defines the origin and one point defines the Y-axis of the translatory/rotary coordinate system.</p> <p>1 pt. X-axis, 1 pt. Y-axis Two points define the X-axis and one point / defines the Y-axis of the translatory/rotary coordinate system.</p>
Tracking method	<p>The way in which the points should be tracked can be specified.</p> <p>No The points are not tracked.</p> <p>Yes The point are tracked in the X and Y directions.</p> <p>Horizontally The points are only tracked in the X direction.</p> <p>Vertically The points are only tracked in the Y direction.</p> <p>Only available if the construction method uses more than one point.</p> <p>1st pt.: All points are tracked according to the first point.</p> <p>2nd pt.: All points are tracked according to the second point.</p> <p>3rd pt.: All points are tracked according to the third point.</p>

10.2.3 Configuration

The coordinate system module includes the following configuration options:

- Find point

10.2.3.1 Submodule Find Point

Objective Specify a point for setting up the X or Y-axis within the image. Various algorithms are available.

Image area Depending on the construction method, either a fixed point or a search ray is displayed in the image area. In the case of the search ray, the detected point appears purple.

Property The following settings/results are displayed: Either one, two or three points appear depending on the previously selected construction method.


Found point	The found point is shown.	
Input point	A fixed point or a found point from a different module can be linked.	
Find method	Selection for the construction method:	
	Point (fixed or linked)	A fixed point or a found point from a different module can be linked.
	Edge on line	An edge transition is looked for along a search line.
	Edge on arc	An edge transition is looked for along an arc.
	Segment on line	Segments are looked for on a line.
	Segment on arc	Segments are looked for on an arc. Available points of the arc segments can be used.
	Segment on circle	Segments are looked for on a circle. Available points of the circle segments can be used.
	Find line	Special points on a line can be used.
	Find arc	Special points on an arc can be used.

Construction Method


Edge on line or arc

First of all, the search line's gray-scale values are determined. Then a derivative is generated from the gray-scale values in order to ascertain where an edge is located. If several edges are found, polarity and the "find by" specification determine which edge will be used as a point for the coordinate system.

Example: The first transition from dark to bright should be detected as an edge in the following image.

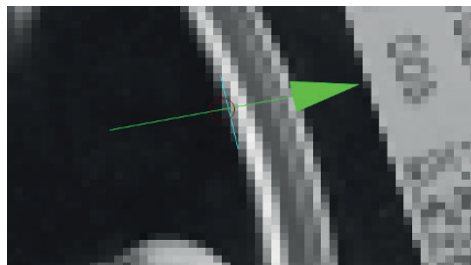


The search line's gray-scale values are represented in the profile.

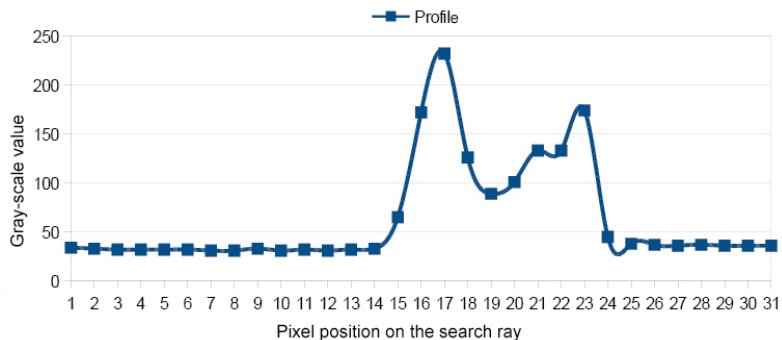

The profile's derivatives are shown in this diagram for edge widths of both 3 and 9. If the positive threshold gradient is 150 and the threshold is -120, edges are detected at pixels 16, 18 and 24 (if an edge width of three has been selected), because the derivative exceeds the positive threshold gradient or falls short of the negative threshold gradient at these points. In contrast, no edges would be detected with an edge width of 9.

Construction Method

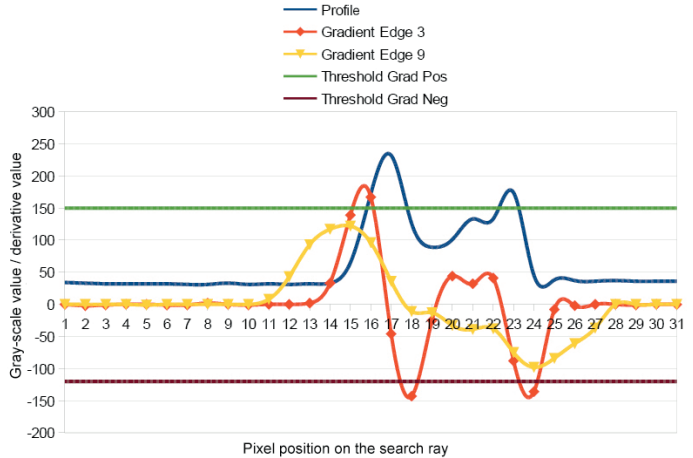

By selecting “First score” or via the “Dark to bright” polarity, it can be assured that the first transition from dark to bright is used as a point for the coordinate system.

The edge width dictates how long a new brightness value has to be retained in order for the transition to be recognized as an edge. In the above example, the new value is retained only briefly, which causes flattening and shifting to the left of the derivative with the larger edge width. The amount of change in brightness an edge has to demonstrate in order to be accepted can be adjusted by setting the threshold gradients. The higher the value is, the sharper the edge has to be. In order to be able to detect unsharp edges, the values have to be set accordingly low.

Edge point	The coordinates of the detected edge transition are displayed under Edge point.	
Edge polarity	Expected	Characteristics
	Either	Both bright to dark and dark to bright transitions are searched for.
	Light to dark	Only bright to dark transitions are searched for.
Dark to light	Only dark to bright transitions are searched for.	

Construction Method

Find by	<p>This parameter can be used to specify which of the detected edges will be used on the search line.</p> <p>Best score If several edge transitions are detected on the search line, the transition with the greatest contrast is selected.</p> <p>First score If several edge transitions are detected on the search line, the first transition in the search direction is selected.</p> <p>Last score If several edge transitions are detected on the search line, the last transition in the search direction is selected.</p>
Edge width [unit]	<p>“Edge width” influences detection sensitivity for brightness fluctuations. Note: An edge width of 3 pixels reacts to even the smallest contrast change in the image. An edge width of 9 pixels smooths the brightness profile over a distance of 9 pixels and ignores small irregularities.</p>
Threshold gradient positive (GrM)	<p>Positive threshold gradient specifies the positive acceptance threshold.</p> <p>Note: The gradient corresponds to the change in brightness from one pixel to the next. The higher the edge’s contrast, the larger the gradient.</p>
Threshold gradient negative (GrM)	<p>The negative threshold gradient specifies the negative acceptance threshold.</p> <p>Note: The gradient corresponds to the change in brightness from one pixel to the next. The higher the edge’s contrast, the larger the gradient.</p>
Orientation	<p>Default The edge transition search direction corresponds to the direction in which the search ray has been drawn.</p> <p>Swap The edge transition search direction is opposite of the direction in which the search ray has been drawn.</p>

Construction Method

Segment on line, arc or circle

The construction method is the same as that for edge on line or arc. The difference is that adjacent segments are looked for in the search geometry. The beginning or end of a segment is defined by an edge. Only the additional settings are provided.

Segments True Count	The number of segments detected in the search geometry is displayed. The upper and lower thresholds can be adjusted manually.
Segments Max Count	Maximum number of segments to be expected.
Segments Minimal Length	Minimum length of the segments
Segments Maximal Length	Maximum length of the segments
Sort Rule	<p>The rule used for sorting segments can be defined.</p> <p>Position on search geometry The segments are listed in search direction.</p> <p>Size Segments are sorted by size in ascending or descending order.</p>

Construction Method

Find Geo Line or Arc

The setting parameters are the same as those for the search for edges on lines or arcs. In contrast to the search for edges on lines or arcs, the search here is carried out based on vertically arranged search rays for edge transitions. The following additional settings are available:

Quality of Fit [%]	Proportion of the valid points in relation to all found points.
Threshold Outliers Distance [unit]	Maximum permissible distance from points to the found shape
Search Ray Length [unit]	Definition of the search ray length
Search Ray Interval [unit]	Definition of the search ray intervals
Points to Use [%]	The percentage indicates how many points will be used to ascertain the shape.

Points to Use Strategy	The points which are used to ascertain the shape are specified. Selection can be made between the first and the last points on the search geometry. The search direction is made apparent by the direction of the arrow.
Fit Maximal Geometry	The search for start and end points can be switched on or off.
Maximal Gap Between Valid Points	Start and end points of geometries are found if the distance between two successive valid points is larger than the space specified by this value.
Maximal Outlier in a Row	Start and end points of geometries are found if there is a larger number of successive outliers than specified by this value.

10.3 Region Module

10.3.1 Overview

Objective

The relevant region of interest used for evaluation should be as large as necessary and as small as possible.

The **smaller** and more precise the surface, the **faster** the evaluation and the **higher** the image refresh rate. This allows for faster application runtimes because image recording and processing are quicker. Furthermore, the object or feature detection is more **reliable** because fewer noise pixels can occur within the evaluated area.

The object to be detected must lie **fully** within the selected area, because reliable object detection cannot otherwise be assured.

Abbreviated procedure

Any desired area can be specified as the “region of interest” by adding, removing or customizing shapes. In addition to existing standard shapes, any number of various shapes can also be added and linked by means of mathematical set theories.

10.3.2 Setting Parameters

Image area

The region of interest is highlighted in color in the image area.

Property





The following settings/results are displayed:

Process Time [μs]	Process Time for the process steps in the module.
Module State	Error codes for troubleshooting support (see section “14.4 Module Status” on page 213).
Input image	Selection of the channel for the image input
Coordinate system	A selection can be made regarding how the region should be tracked.
Variant	The displayed algorithm type is used.

Function field





New shapes can be added.


1. Select the mathematical operation

	Add	The new shape should be added to the overall shaped.
	Subtract	The new shape should be removed to the overall shaped.
	Symmetrical Subtract	The common area of the new shape is removed from the overall shape.
	Intersection	The common area of the new shape and the overall shape should be selected.

Note: The order of the shapes is dictated by the order in which they are created and cannot be subsequently changed. As a result, the overall shape of all previously existing shapes is always used for the offsetting of shapes.

2. Select a new shape

	Rectangle through two points	A rectangle is drawn with 2 points. The first corner of the rectangle is specified within the image area by left clicking with the mouse. The diagonally opposite corner of the rectangle is specified with a second click.
	Rectangle through three points	A rectangle is drawn with 3 points. The first corner of the rectangle is specified within the image area by the first click. The next click specifies one of the neighboring corners and the third click specifies the side opposite the side defined by the two points.
	Circle through 2 points	A circle is drawn with 2 points. The first click specified the center of the circle. The radius of the circle is specified by means of the second click.
	Circle through 3 points	A circle is drawn with 3 points. 3 points around the circumference of the circle are specified with 3 mouse clicks.

	<p>Polygon</p>	<p>A polygon can be created with any desired number of clicks. Each click specifies one of the polygon's corners. Processing of the shape is ended by double clicking the last corner. Polygons can be specially processed within the image area.</p> <p>Individual points can be deleted by pressing and holding the Ctrl+Shift key and clicking the respective point with the left mouse key. A new point can be added to the polygon by pressing and holding the Alt+Shift key and left-clicking at the desired side of the polygon.</p>
---	-----------------------	---

3. Draw a new shape within the image area as described.

10.3.3 Configuration

As a standard feature, the region module includes the following configuration options:

- Quantity.


10.3.3.1 Submodule Set

Objective

All of the individual shapes used in the image area, as well as the overall shape, can be adapted to the application. A rectangle is present as standard.

Image area

The selected shapes are displayed in the image area and can be edited there as well.

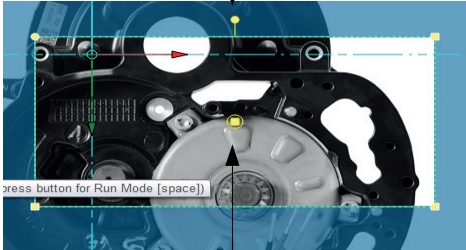Change position	Click the respective shape in the image area and hold the mouse key depressed until the shape has been dragged to the desired position.
Change size	Click one of the corners of the respective shape in the image area. Hold the mouse key depressed until the shape reaches the desired size.
Rotate shape	<ol style="list-style-type: none"> 1. Position the pivot reference point. 2. Rotate the shape at the pivot point. <div style="text-align: center;">  </div>

10.4 Module Filter

10.4.1 Overview

Objective	Filters are used to emphasize or suppress a property of an image or image section or to improve the image quality. This property can be an edge or an area, for example. Filters therefore prepare for the image processing.
Procedure	The desired type of filter can be selected and applied to the desired region.

10.4.2 Setting Parameters

Image area Current filter settings are displayed in the selected region of interest.

Property The following settings/results are displayed:

Process Time [μs]	Process Time for the process steps.
Module State	Error codes for troubleshooting support (see section “14.4 Module Status” on page 213).
Input region	Selection of the region to which the filter will be applied.
Input image	Selection of the channel for the image input
Filter type	<p>Pre-defined, performance-optimized filters can be selected directly. Free filters can be defined with kernel sizes 3x3 and 5x5.</p> <p>Off Output image = input image</p> <p>Sobel Edge and smoothing filters:</p> <ul style="list-style-type: none"> • Homogeneous areas appear in black. • Edges are shown in white. • Edges are highlighted, even if they have relatively low gray-scale transitions.

Gauss	<p>“Low-pass filter” (smaller structures are lost, larger ones are retained):</p> <ul style="list-style-type: none"> - The image becomes softer. - Noise is reduced. - Inhomogeneous surfaces become more homogeneous. - Edges are highlighted, even if they have relatively minimal gray-scale transitions.
Median	<p>The median is a soft-focus filter. The gray-scale value of a pixel is replaced by the median of all gray-scale values of the neighboring pixels. This is accomplished by placing all pixels in the specified surroundings in ascending order and replacing the current pixel with the mean value (the median) of the ascending sequence.</p> <ul style="list-style-type: none"> • Smoothing of the image while retaining edge steepness. • Sharpness is retained because the edges do not become blurred. • Small sporadic noise pixels are removed.
Dilation	<p>These image processing functions are used to highlight objects with a specific shape and/or size, to make them smaller (black sections are amplified) or to delete them.</p> <p>These functions are also used for the following for objects with a specific shape and/or size</p> <ul style="list-style-type: none"> • Smoothing edges, • Removing faults or “noise” or • “Filling in” certain sections in an image. <p>Effects of dilatation:</p> <ul style="list-style-type: none"> • Adds points to the edges of the objects corresponding to the shape and color of the neighboring point. • Small distortions and gaps are closed and disappear permanently. • Close neighboring objects can be connected with each other.

Erosion	<p>These image processing functions are used if objects with a specific shape and/or size</p> <ul style="list-style-type: none">• Should be highlighted or made smaller (black sections are amplified) or• Should be deleted.
	<p>These functions are also used for the following for objects with a specific shape and/or size</p> <ul style="list-style-type: none">• Smoothing edges,• Removing faults or “noise” or• “Filling in” certain sections in an image.
	<p>Effects of erosion:</p> <ul style="list-style-type: none">• Adds points to the edges of the objects corresponding to the shape and color of the neighboring point.• Small distortions and gaps are closed and disappear permanently.• Closes objects.
Opening	<p>The opening filter refers to the sequence of an erosion and dilatation. Erosion closes spaces between dark structures, while dilatation reverses the thickening of dark objects again. The enlarging effect on the area of the dark objects during erosion is reversed again by dilatation.</p>
	<p>Effects of the opening filter:</p> <ul style="list-style-type: none">• Contours are highlighted significantly, even if they have relatively low gray-scale transitions.
Closing	<p>Like the opening filter, a closing filter relates to the sequence of dilatation and erosion. Erosion closes spaces between light structures, while dilatation reverses the thickening of light objects again. The enlarging effect on the area of the light objects during dilatation is reversed again by erosion.</p>
	<p>Effects of the closing filter:</p> <ul style="list-style-type: none">• Contours are highlighted significantly, even if they have relatively low gray-scale transitions.
Sharpen	<p>Filter amplifies the edges, but also any noise in the image. This can even result in noise becoming visible after the filter is applied, which was not visible before.</p>

Matrix

Creating your own filters – 3x3 or 5x5:

Where filters are used, the surrounding pixels are generally analyzed for each pixel. This results in a calculated value for the respective pixel, which is used in the output image of the filter module.

With some filters it's possible to specify how heavily the gray-scale values of the surrounding pixels will be weighted into the calculation of the pixels for the output image.

Example of a vertical edge filter:

The following weighting can be used with the 3x3 filter in order to create a vertical edge filter.

-1	0	1
-1	0	1
-1	0	1

The gray-scale value of the output image needs to be determined for the following central pixel. The gray-scale values of the input image's surrounding pixels are ascertained first of all to this end.

50	120	105
90	80	60
80	100	100

During calculation, each gray-scale value is multiplied by the weighting factor. The individual values are added up and then divided by 9. The result is the gray-scale value of the central pixel for the output image.

$$50 \times (-1) + 90 \times (-1) + 80 \times (-1) + 120 \times 0 + 80 \times 0 + 100 \times 0 + 105 \times 1 + 60 \times 1 + 100 \times 1 = 45$$

$$45 \div 9 = 5$$

Kernel size	The filter size can be set (3x3 or 5x5).
Variant	The displayed algorithm type is used.

10.5 Module Threshold

10.5.1 Overview

Objective In order to be able to evaluate or count objects, the images have to be converted to black and white binary images as a preparatory step. The objective is to separate the foreground from the background. This is the only way to assure simple subsequent evaluation of the images.

Procedure The limits for the gray-scale values which will determine which pixels appear black and which appear white can be specified. The **histogram** or the **profile** showing the brightness values and distribution may be helpful with the threshold process.



10.5.2 Setting Parameters

Image area A preview of the threshold analysis appears in the image area. The threshold value process is only applied within the selected region of interest. Depending on the gray-scale values and the selected settings, the pixels in the region of interest become either black or white.


Property The following settings/results are displayed:

Process Time [μs]	Process Time for the process steps.
Module State	Error codes for troubleshooting support (see section "14.4 Module Status" on page 213).
Pixel Count [unit]	Display of the number of white pixels counted in the region of interest. The upper and lower thresholds of the pixel value can be adjusted.
Input region	Selection of the region for the threshold process.
Input image	Selection of the channel for the image input

Property

Teach	The current number of detected pixels is taught in. The window width between minimum and maximum remains unchanged, but the minimum and maximum values of the pixel count value are adjusted such that the current number of detected pixels is half way between the two values.
Mode	<p>Threshold values can be adjusted statically or dynamically.</p> <p>NOTE! Threshold values can be dynamically corrected in order to compensate for minimal brightness fluctuation or different surface finishes. However, brightness differences can only be compensated for in settings which are already relatively stable by means of this adaptive adjustment.</p> <p></p> <p>Static The threshold values are set and fixed via Threshold Low and Threshold High.</p> <p>Adaptive by Reference The threshold values are determined dynamically for each image. Two reference areas are available for this – an area for the Threshold Low and an area for the Threshold High. The mean gray-scale value of the pixels within the defined area is determined for each area. The minimum and maximum threshold is determined for each image via the set offset.</p> <p>Adaptive by histogram The threshold values are determined dynamically for each image. They are defined by the quantiles from the histogram.</p> <ul style="list-style-type: none">• The quantile for the Threshold Low determines the percentage value of the gray-scale value for the Threshold Low.• The quantile for the Threshold High determines the percentage value of the gray-scale value for the Threshold High. <p>NOTE!  In the function field, the histogram can be opened for this purpose in order to define the quantiles there.</p> <p>With the set offset values, this provides the values for the minimum and Threshold High.</p>

Property

Threshold Low/ Threshold High	<p>The lower and upper gray-scale threshold values can be set in the static mode:</p> <p>a) The lower threshold is less than the upper threshold.</p> <ul style="list-style-type: none">• Pixels with gray-scale values between the two thresholds appear white.• Pixels with gray-scale values which fall short of the lower threshold or exceed the upper threshold appear black. <p>b) The lower threshold is greater than the upper threshold</p> <ul style="list-style-type: none">• Pixels with gray-scale values between the two thresholds appear black.• Pixels with gray-scale values which fall short of the upper threshold or exceed the lower threshold appear white. <p>NOTE!</p> <p>The profile or the histogram showing the gray-scale values or distribution makes defining the gray-scale thresholds easier. Via the profile, the limit values can be specified on both sides of edges and the thresholds adapted accordingly. In dynamic mode, the calculated threshold values are shown.</p> 
----------------------------------	---

Function field

A window can be opened in the function field which serves as an adjustment tool for the “Dynamically via histogram” mode.



Opening the adjustment tool

The gray area identifies the area for black pixels.
The red area identifies the area for white pixels.

Magic Wand

The “wand” tool is an adjustment tool for the “Threshold value module” and the “Threshold value module HSV”. This tool can be used for the initial setting for the individual threshold values. The threshold values may have to be adjusted afterwards.



Opening the adjustment tool

Procedure:

The view is changed to the module’s input image when the “wand” tool is activated. Clicking the place in the image which should be defined as the foreground in the application ascertains coordinates and forwards them to the algorithm. The algorithm calculates the new binarization thresholds (minimum threshold and maximum threshold). The result is then shown.

Calculation of the threshold values:

Threshold Low = brightness value in click position – 20

Threshold High = brightness value in click position + 20

Both threshold values are limited to the range [0...255].



NOTE!

In the threshold value module HSV, the threshold values are calculated for all 3 channels.

10.6 Threshold Value Module HSV

10.6.1 Overview

Objective

Teach in certain colors and differentiate them from other colors.

Procedure

A binary black and white image must be generated in order to be able to process objects. The objective is to separate the foreground from the background. Suitable parameter values are selected for the respective application to this end (hue, saturation and brightness). In order to make best possible use of options offered by the filters, a brief overview of the HSV color space is provided in the following.

A color is broken down into three channels in HSV color space.



H (hue)
S (saturation)
V (value)

Hue H can have a value within a range of 0° to 360° and is generally depicted as a circle. All colors are represented within the circle. Red is at 0° , green is at 120° and blue is at 240° . All of the various hues lie between these points. Black and white are not included as hues. They are achieved by means of saturation and brightness. The circle is divided into steps of 0 to 255 for the vision sensor.

Saturation S is the luminosity of a given color. If saturation is set to its maximum value, a pure color appears. If saturation is set to its minimum value, a gray-scale value appears, which is dependent upon the current brightness value (V). All colors between gray and the pure color can be found between these minimum and maximum values.

Brightness value V is the brightness of a color ranging from black to maximum brightness. Attainable maximum brightness is dependent upon saturation.

A color with a brightness value of 0 appears black regardless of H and S. A color with a maximum brightness value appears as the brightest variant of the respective H-S combination, regardless of its H and S values.

Examples:



H = 0 (red)
 S = 255
 V = 128



H = 0 (red)
 S = 255
 V = 255



H = 170
 (blue)
 S = 0
 V = 128



H = 85
 (green)
 S = 255
 V = 255

Advantages for digital image processing

This results in a decisive advantage for digital image processing. A hue can be detected regardless of its brightness. For example, a shade of blue can be recognized independent of ambient luminosity. This is not possible in RGB color space.

Application

The setting selected at the color filter determines which colors will be allowed to pass through the filter and which will not.

If all shades of red need to be filtered out of a colorful image, the H value filter must be utilized. The filter thresholds must be set above and below the desired shade of red. All colors between the two thresholds are allowed to pass through the filter.

If all shades of red between the H thresholds should be allowed to pass through the filter for this application regardless of saturation and brightness, the S and V filters can be deactivated. However, if only the luminous shades of red should be allowed to pass through the filter, the saturation filter must be activated and all colors beginning with a given gray-scale value up to maximum saturation must be allowed to pass through. If only the dark shades of red should be allowed to pass through the filter, the brightness filter must be adjusted such that the upper threshold is set to the brightest desired value and the lower threshold to 0 (black).

The hue and saturation filters cannot be used in applications for which a gray image or a single-color imprint needs to be evaluated. An image which consists exclusively of identical hues with varying brightness values can only be analyzed with the brightness.

If a color image includes black, white or gray areas and certain shades of color must be permitted to pass through the filter, the saturation filter has to be used and must be set for colors with high saturation values. Black, white and gray tones do not have any defined H values, and are thus allocated a color at random. These must be sorted out by means of their characteristic saturation value ($= 0$).

Example:



If the red area in this image needs to be detected (allowed to pass through the filter), the H filter must be set so that all red are allowed to pass. However, due to that fact that white areas are included (white frame) which need to be suppressed, the saturation filter must also be used.

The settings required for each individual filter are described in the following. One or more filters can be selected in order to generate the digitized black and white image. The **histogram** or the **profile** showing the brightness values and distribution may be helpful with this.

10.6.2 Setting Parameters

Image area A preview of the threshold HSV analysis appears in the image area. The preview is for the selected region only.

Property The following settings/results are displayed:

Process Time [μ s]	Process Time for the process steps.
Module State	Error codes for troubleshooting support (see section “14.4 Module Status” on page 213).
Pixel Count	Display of the number of white pixels counted in the region of interest.
Input region	Selection of the region for the threshold process.
Input image	Selection of the channel for the image input
Teach	The current number of pixels is taught in by adapting the minimum and maximum values for the number of pixels.

Function field A window can be opened in the function field which serves as an adjustment tool for the HSV threshold module.




Opening the adjustment tool



Opening the magic wand tool

Graphic shifting of thresholds

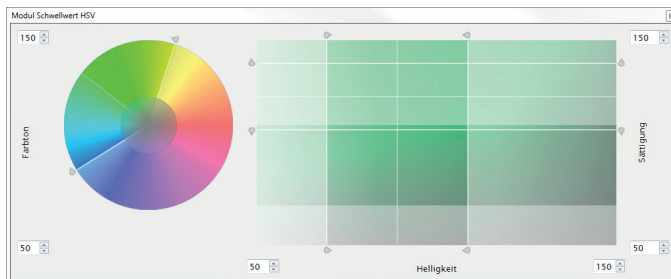

10.6.3 Configuration

The HSV threshold module includes the following configuration options:

- Hue
- Saturation
- Value

10.6.3.1 Submodule Hue

Objective The filter can be adjusted for the hue.

Property The following settings/results are displayed:

Active	The filter for the hue can be activated or deactivated.
Threshold Low	Sets the lower threshold for brightness.
Threshold High	Sets the upper threshold for brightness.

10.6.3.2 Submodule Value

Objective The brightness filter can be adjusted.

Property The following settings/results are displayed:

Active	The brightness filter can be activated or deactivated.
Threshold Low	Sets the lower threshold for brightness.
Threshold High	Sets the upper threshold for brightness.

10.6.3.3 Submodule Saturation

Objective The saturation filter can be adjusted.

Property The following settings/results are displayed:

Active	The saturation filter can be activated or deactivated.
Threshold Low	Sets the lower threshold for saturation.
Threshold High	Sets the upper threshold for saturation.

10.7 Module Cluster

10.7.1 Overview

Objective Detect, count or sort objects reliably in order to check for presence and correct quantity.

Procedure The minimum and maximum number of neighboring pixels which make up a cluster need to be specified. It's also possible to specify the maximum number of objects to be counted, as well as the criteria according to which the objects will be sorted.



10.7.2 Setting Parameters

Image area Detected clusters appear in the image area with a red frame.

Property The following settings/results are displayed:

Process Time [μ s]	Process Time for the module.
Module State	Error codes for troubleshooting support (see section "14.4 Module Status" on page 213).
Cluster True Count	The number of objects in the image area which has been detected using the corresponding settings is displayed. The upper and lower thresholds for the number of clusters can be adjusted manually.
Input image	Selection of the channel for the image input Only binary black-white images can be linked as an input image.
Cluster Size Min	The minimum number of adjoining white pixels can be specified, so that the respective area is counted as a cluster.
Cluster Size Max	The maximum number of adjoining white pixels can be specified, so that the respective area is still counted as a cluster.

Property

Cluster gap	<p>Connected 4 Only directly adjacent white pixels (above, below to the left and to the right) are interpreted as belonging together to a single object.</p>  <p>Three clusters are counted in the example.</p> <p>Connected 8 Pixels joined by their corners are also interpreted as belonging together to a single object.</p>  <p>Only one cluster is counted in the example.</p>
Cluster Size Max	The maximum number of clusters which should be counted can be specified.

Property

Sort Rule	The rule used for sorting clusters can be defined.	
	Size	Detected clusters can be sorted according to size. The detected clusters appear in the cluster list in order of descending surface area.
	Center of gravity X	Detected clusters are sorted according to the location of their center of gravity along the X-axis, and objects appear from left to right in the cluster list.
	Center of gravity Y	Detected clusters are sorted according to the location of their center of gravity along the y-axis, and objects appear from top to bottom in the cluster list.
	Center of gravity YX	Detected clusters are sorted according to the location of their center of gravity along the X and Y-axes, and objects appear from top left to bottom right in the cluster list.
Variant	The variant of the algorithm used is shown.	

10.7.3 Configuration

The cluster module includes the following configuration options:

- Cluster list.

10.7.3.1 Submodule Cluster List

Objective

Detected clusters are listed in this sub-module in order to subsequently transmit their position, number of pixels etc. via an output.

Property

The following settings/results are displayed for any selected cluster:

Pixel size	The number of pixels in the cluster is displayed.
------------	---

The coordinates of the cluster's center of gravity are displayed under Center of gravity.

10.8 Module Measure

10.8.1 Overview

Objective Specify and perform dimensional conformance inspections of removals, lengths, diameters or angles. Lines and circles are found with the help of search rays. Distances and angles can be measured between detected lines or points.











Abbreviated procedure Specify and perform dimensional accuracy checks on removals, length, diameter or angle. Lines and circles are found with the help of search rays. Distances and angles can be measured between detected lines or points.

10.8.2 Setting Parameters

Property The following settings/results are displayed:

Process Time [μs]	Process Time for the module.
Module State	Error codes for troubleshooting support (see section “14.4 Module Status” on page 213).
Input image	Selection of the channel for the image input
Coordinate system	Selection can be made regarding how the functions should be tracked.

Function field

	Point	A fixed point can be specified, or a point can be linked from another module.
	Line	A line is drawn. An edge is detected on the basis of this search line.
	Circle	A circle is drawn which is defined by means of two points. An edge is detected on the basis of this search circle.
	Circle	A circle is drawn which is defined by means of three points. An edge is detected on the basis of this search circle.
	Distance	The distance between different points or lines is calculated.
	Angle	The angle between two lines is ascertained. A line is defined by a starting point and an end point. The detected angle corresponds to the angle of intersection of the two lines in the direction towards their starting points.
	Segment on line	A line is drawn. Segments are looked for on this line.
	Segment on circle	A circle is drawn which is defined by means of two points. Segments are looked for on this circle.
	Segment on arc	An arc is drawn which is defined by means of a starting point, an end point and a radius. Segments are looked for on this arc.
	Property of Geometry	Special points of a shape such as start, middle or end points can be found.

10.8.2.1 Submodule Find Point

Objective

Find a point.

Procedure

A fixed point can be specified, or a point can be linked from another module.

Property

The following settings/results are displayed:

Found point	The found point is shown.
Input point	A fixed point can be specified, or a point can be linked from another module.

10.8.2.2 Submodule Find Line, Circle or Arc

Objective

Detect a line, circle or arc.

Procedure

First of all, activate the function in the toolbar. After the tool has been activated, the shape can be drawn in the image area.

Search rays are generated perpendicular to the search geometry. An edge is searched for on each of these search rays according to the settings. These detected edges form a Pointcloud through which the searched for shape is placed, for which the clearance to the Pointcloud is as small as possible. Individual points may be detected as outliers and ignored during the next iteration step (renewed best-fit calculation). This best-fit calculation is executed as many times as selected under fitting iterations.

Property

The following settings/results are displayed:

Quality of Fit [%]	Proportion of the valid points in relation to all found points.						
Edge polarity	<p>Expected brightness characteristics</p> <table> <tr> <td>Either</td> <td>Both bright to dark and dark to bright transitions are searched for.</td> </tr> <tr> <td>Light to dark</td> <td>Only bright to dark transitions are searched for.</td> </tr> <tr> <td>Dark to light</td> <td>Only dark to bright transitions are searched for.</td> </tr> </table>	Either	Both bright to dark and dark to bright transitions are searched for.	Light to dark	Only bright to dark transitions are searched for.	Dark to light	Only dark to bright transitions are searched for.
Either	Both bright to dark and dark to bright transitions are searched for.						
Light to dark	Only bright to dark transitions are searched for.						
Dark to light	Only dark to bright transitions are searched for.						
Find by	<p>This parameter can be used to specify which of the detected edges will be used on the search line.</p> <table> <tr> <td>Best score</td> <td>If several edge transitions are detected on the search geometry, the transition with the greatest contrast is selected.</td> </tr> <tr> <td>First score</td> <td>If several edge transitions are detected on the search geometry, the first transition in the search direction is selected.</td> </tr> <tr> <td>Last score</td> <td>If several edge transitions are detected on the search geometry, the last transition in the search direction is selected.</td> </tr> </table>	Best score	If several edge transitions are detected on the search geometry, the transition with the greatest contrast is selected.	First score	If several edge transitions are detected on the search geometry, the first transition in the search direction is selected.	Last score	If several edge transitions are detected on the search geometry, the last transition in the search direction is selected.
Best score	If several edge transitions are detected on the search geometry, the transition with the greatest contrast is selected.						
First score	If several edge transitions are detected on the search geometry, the first transition in the search direction is selected.						
Last score	If several edge transitions are detected on the search geometry, the last transition in the search direction is selected.						
Edge width [unit]	<p>“Edge width” influences detection sensitivity for brightness fluctuations.</p> <p>Note:</p> <ul style="list-style-type: none"> • An edge width of 3 pixels reacts to even the smallest contrast change in the image. • An edge width of 9 pixels smooths the brightness profile over a distance of 9 pixels and ignores small irregularities. 						
Threshold gradient positive	<p>Positive threshold gradient specifies the positive acceptance threshold.</p> <p>Note: The gradient corresponds to the change in brightness from one pixel to the next. The higher the edge’s contrast, the larger the gradient.</p>						
Threshold gradient negative	<p>The negative threshold gradient specifies the negative acceptance threshold.</p> <p>Note: The gradient corresponds to the change in brightness from one pixel to the next. The higher the edge’s contrast, the larger the gradient.</p>						

Property

Threshold outlier distance [unit]	Maximum distance to the detected shape which must be maintained by a point, in order for it to be used in the next iteration. Points which are farther away than this distance are treated as outliers.
Search ray length	Length of the search rays, along which an edge transition is searched for.
Search ray interval	Distance between the search rays, along which an edge transition is searched for. Generally speaking, the use of several search rays increases accuracy, but also requires more computing time. Note: Enlarging the interval is especially effective for faster evaluation.
Search Ray Orientation	The direction of the search ray can be turned 180° with this setting.
Points to Use [%]	The percentage indicates how many points will be used to ascertain the shape.
Points to Use Strategy	The points which should be used to ascertain the geometry are specified. Selection can be made between the first and the last points on the search geometry. The search direction is made apparent by the direction of the arrow in the search geometry in the image.
Fit Maximal Geometry	The search for start and end points can be switched on or off.
Maximal Gap between Valid Points	Start and end points of geometries are found if the distance between two successive valid points is larger than the space specified by this value.
Maximal Outliers in a Row	Start and end points of geometries are found if there is a larger number of successive outliers than specified by this value.

10.8.2.3 Submodule Distance

Objective Ascertain distance between two points, or between a point and a line.

Procedure First of all, activate the function in the toolbar.
Click the first point or the first line, and then click the second point or second line.

Property The following settings/results are displayed:

Output distance [unit]	Distance is displayed in pixels. The value can be furnished with any desired upper and lower thresholds. Click the ascertained value to this end, and then click the button. Enter the desired upper and lower threshold values to the window which then appears.				
Calculation method	The type of distance calculation to be used is specified: <table border="0" style="width: 100%;"> <tr> <td style="padding-right: 20px;">Geometrical distance</td> <td>Shortest path from a point to a line (perpendicular)</td> </tr> <tr> <td>Center to point</td> <td>Shortest path between two center points.</td> </tr> </table>	Geometrical distance	Shortest path from a point to a line (perpendicular)	Center to point	Shortest path between two center points.
Geometrical distance	Shortest path from a point to a line (perpendicular)				
Center to point	Shortest path between two center points.				

10.8.2.4 Submodule Intersection

Objective The angle between two lines is measured.

Procedure First of all, activate the function in the toolbar.
Click the first line, and then the second.

Property The following settings/results are displayed:

Output Intersection Point	The coordinates of the found intersection are displayed.
Output angle [deg]	The angle between the two lines is displayed. A line is defined by a starting point and an end point. The detected angle corresponds to the angle of intersection of the two lines in the direction towards their starting points. The value can be furnished with any desired upper and lower thresholds. Click the ascertained value to this end, and then click the button. Enter the desired upper and lower threshold values to the window which then appears.

10.8.2.5 Find Segments on Line, Arc or Circle Submodule

Objective Segments should be found on a line, circle or an arc.

Procedure First of all, activate the function in the toolbar. After the tool has been activated, a shape can be defined.
Edge transitions are searched for on the search geometry according to the settings. The detected edges serve as starting and end points of the various segments. There are different parameters which influence the number and length of the segments.

Property The following settings/results are displayed:

Segments True Count	The number of detected segments is displayed.
Edge width	“Edge width” influences detection sensitivity for brightness fluctuations. Note: <ul style="list-style-type: none">• An edge width of 3 pixels reacts to even the smallest contrast change in the image.• An edge width of 9 pixels smooths the brightness profile over a distance of 9 pixels and ignores small irregularities.
Threshold gradient positive [GrM]	Threshold value Gradient Pos specifies the positive gradient acceptance threshold. Note: The gradient corresponds to the change in brightness from one pixel to the next. The higher the edge’s contrast, the larger the gradient.
Threshold gradient negative [GrM]	Threshold Gradient Neg specifies the negative gradient acceptance threshold. Note: The gradient corresponds to the change in brightness from one pixel to the next. The higher the edge’s contrast, the larger the gradient.
Segments Count Max	Maximum number of segments to be expected.
Segments Length Min	Minimum length of the segments
Segments Length Max	Maximum length of the segments

Sort Rule	The rule used for sorting segments can be defined.	
	Position on search ray	Sorting is based on the position on the search ray. The results depend on the orientation setting.
	Size [longest first]	Segments are sorted in descending order beginning with the longest segment.
	Size [shortest first]	Segments are sorted in ascending order beginning with the shortest segment.
Segment brightness	This setting specifies whether bright or dark segments will be evaluated.	
Orientation	The search direction can be turned 180° with this setting.	

10.9 Module Code 1D

10.9.1 Overview

Objective

All common 1D codes can be read with the 1D code module.

The following 1D codes can be read: Code39, Code128, 2/5 Industrial, 2/5 Interleaved, Codabar, EAN-13, EAN-13 Add-On 2, EAN13 Add-On 5, EAN-8, EAN-8 Add-On 2, EAN-8 Add-On 5, UPC-A, UPC-A Add-On 2, UPC-A Add-On 5, UPC-E, UPC-E Add-On 2, UPC-E Add-On 5, Code 93, MSI, PharmaCode, RSS-14, RSS-14 Truncated, RSS-14 Stacked, RSS-14 Stacked Omnidir, RSS Limited, RSS Expanded, RSS Expanded Stacked.

Procedure

Various code settings can be entered in order to assure reliable code recognition.

10.9.2 Setting Parameters

Property

The following settings/results are displayed:

Process Time [μ s]	Process Time for the process steps.
Module State	Error codes for troubleshooting support (see section “14.4 Module Status” on page 213).
Reading True Count	The number of codes detected in the read image.
Input image	Selection of the channel for the image input
Code type	<p>The type of code can be selected: Code39, Code128, 2/5 Industrial, 2/5 Interleaved, Codabar, EAN-13, EAN-13 Add-On 2, EAN13 Add-On 5, EAN-8, EAN-8 Add-On 2, EAN-8 Add-On 5, UPC-A, UPC-A Add-On 2, UPC-A Add-On 5, UPC-E, UPC-E Add-On 2, UPC-E Add-On 5, Code 93, MSI, PharmaCode, RSS-14, RSS-14 Truncated, RSS-14 Stacked, RSS-14 Stacked Omnidir, RSS Limited, RSS Expanded, RSS Expanded Stacked</p> <p>The code to be read can be identified with the “Auto” mode. If the code was identified correctly, this must be selected to receive the decoded code content.</p>
Read Timeout [μ s]	The time during which the sensor attempts to read the code. If reading is not successful within this period of time, the process is aborted and the reading results are rendered invalid. The time can be selected within a range of 0 to 20 s. Aborting the read attempt takes about 20 ms. The module’s minimum processing time is thus also 20 ms.
Reading Max Count	The maximum number of codes to be read from the image is specified.
Quality grading	<p>Quality grading of the code in accordance with ISO/IEC 15416 can be activated. Note: Activation of this functions extends the module’s deciphering time.</p> <p>Note: The results of the code evaluation in accordance with the standard can be found in the configuration reading list.</p>

10.9.3 Configuration

The 1D code reading module includes the following configuration:

- Reading list
- Extended parameters

10.9.3.1 Submodule Reading List

Property

The following settings/results are displayed:

Reading #0	Scanned code
Quality	<p>If quality quality according to ISO 15416 is activated, the results of quality testing are displayed at this level. The evaluation of code quality is specified as a number between 0 and 4, 0 being the worst and 4 the best evaluation.</p> <p>Overall quality Minimum value of all remaining degree values</p> <p>Decode Is set to 4 if the inspected barcode symbol could be read, otherwise is set to 0.</p> <p>Symbol Contrast The difference between the maximum and minimum reflection value of the gray-scale value profile: strong contrast results in a better value.</p> <p>Minimal Reflectance Is set to 4 if the minimum reflection value of the gray-scale value profile is lower than or equal to 0.5 of the maximum reflection value, otherwise is set to 0.</p> <p>Minimal edge contrast Evaluates the minimum edge contrast in the gray-scale value profile.</p> <p>Modulation Evaluates the amplitude between the symbol elements. Higher amplitudes mean that bars and holes can be differentiated more reliably and that this degree is evaluated higher.</p> <p>Defects Are irregularities in the gray-scale value profile within individual symbol elements of the quiet zones. The presence of these irregularities is evaluated with a lower degree.</p> <p>Decodability Refers to deviations in the symbol element widths from their nominal value, which is defined in the relevant symbology standard.</p> <p>Additional requirements Are further symbology-specific requirements, such as the quiet zone width, the wide/narrow ratio, inter character gaps, guarding patterns or others.</p> <p>Note: More detailed information regarding the results of quality testing can be found in the corresponding standard.</p>

10.9.3.2 Extended Parameters Submodule

Element size min	<p>The minimum size of an element, i.e. the minimum width of all bars and spaces. For extremely narrow barcodes, the value should be reduced to 1.5. For extremely large barcodes, the value can be made larger accordingly, resulting in shorter runtimes.</p> <p>Typical value range: [1.5...10.0] Standard: 2.0</p>
Element size max	<p>The maximum size of an element, i.e. the maximum width of all bars and spaces. This value should be large enough that the candidate region is found for the complete symbol. On the other hand, it must not be so large that two neighboring barcodes merge into a single candidate.</p> <p>Typical value range: [4.0...60.0] Standard: 8.0</p>
Element height min	<p>The minimum height of the barcode element. The presetting with -1 means that, internally, the height of the barcode is selected automatically according to the other setting. With extremely flat barcodes with a height of less than 16 pixels, it is advisable to set the height manually so that the barcode is found and can be read. The minimum height is 8 pixels. With extremely high barcodes, e.g. with 70 pixels and more, the manual setting to the relevant height can result in an acceleration during reading.</p> <p>Typical value range: [-1, 8...64] Standard: -1</p>
Number of scan lines	<p>The maximum number of scan lines used when scanning a (candidate) symbol. If 'Number of Scanlines' is not set (the parameter has a value of 0), the number of scan lines is determined based on an internal rule: 10 for all single-line barcodes, 20 for RSS-14 Stacked or RSS-14 Stacked Omnidirectional and 55 for RSS Expanded Stacked. With this parameter, the speed can be increased in two cases. In the first case, the image contains a high number of incorrect candidates. While the barcode can usually be decoded after one or two scanning processes (except for stacked arcs, see below), an incorrect candidate is scanned with the standard value of 10 scan lines, which increases the runtime unnecessarily. Logically, the speed can be increased with a reduced number of scan lines. Generally speaking, we can say that images of higher quality require fewer scan lines than images of poorer quality. For an average image, a value between 2 and 5 should be sufficient. However, should a barcode no longer be found after the scan lines are reduced, the number of scan lines must be increased again. The second case refers to stacked barcodes (currently RSS-14 Stacked, RSS-14 Stacked Omnidirectional and RSS Expanded Stacked). In this case, all scan lines are evaluated – in contrast to single-line barcodes (e.g. Code 128, EAN 13 or RSS Limited), where the scanning is ended once the code has been successfully decoded. The scanning process is one of the most time-consuming phases of the algorithm. Adjusting the parameter 'Number of Scanlines' can therefore offer major advantages with regard to speed. This applies in particular for RSS Expanded Stacked. A RSS Expanded Stacked Symbol can usually consist of up to 11 lines. To ensure that each line is read reliably by 5 scan lines each, Operator 55 includes scan lines for the general situation. If only symbols with a low number of lines are to be expected, 'Number of Scanlines' should be reduced to between 1.5 and 5 scan lines per expected line.</p> <p>Typical values: [0, 5, 10, 20 ...] Standard: 0</p>

Identical Scanning lines Min	<p>The minimum number of scanning lines which deliver the same result, which is necessary in order to accept the deciphering of a symbol. If this parameter has not been set (i.e. if it has a value of 0), the barcode is deciphered as soon as a scanning line has been successfully decoded.</p> <p>The probability that the barcode will be read incorrectly can be reduced with this parameter. The standard value of 0 is recommended for all barcode types except for 2/5 Industrial and 2/5 Interleaved. In the case of code types 2/5 Industrial and 2/5 Interleaved, a value of at least 2 is recommended in order to minimize incorrect reading. It's also advisable to select a value of 2 or higher in order to prevent reading barcodes inadvertently, especially when image quality is poor or the edges of the bars can't be clearly detected.</p>
Orientation	<p>Expected barcode orientation angle. A potential (candidate) barcode has bars with a similar orientation. The parameters 'Orientation' and 'Orientation tolerance' can be adjusted to define the value range ['Orientation'-'Orientation tolerance', 'Orientation'+ 'Orientation tolerance']. The barcode algorithm only processes candidate regions with bars with an average orientation angle within the upper value range. If the barcodes only appear with a specific orientation in the processed images, the value range can be reduced accordingly so that incorrect candidates are detected earlier, thus reducing the execution time for the operator. This strategy is particularly beneficial if the processed images contain lots of background texture with incorrectly oriented candidates. The scanning direction is not taken into account and only angles in the value range [-90.0...90.0] are of interest.</p> <p>Typical value range: [-90.0...90.0] Standard: 0.0</p>
Orientation tolerance	<p>Tolerance for the orientation. See 'Orientation' for further details. As already explained, only the value range [-90.0...90.0] is taken into account, which is covered completely with an 'Orientation Tolerance' of 90.0. The 'Orientation Tolerance' values are therefore limited to the value range [0.0...90.0]. The value 90.0 means that there is no orientation restriction for the candidates.</p> <p>Typical value range: [0.0...90.0] Standard: 90.0</p>
Start stop tolerance	<p>Requires a tolerant ('high') or a strict ('low') matching criteria during the search for start or stop patterns in a scan line. A tolerant criteria increases the scanning rate in general, particularly in images with poor contrast. On the other hand, this setting can result in invalid decodings in images with noise or in images with symbols from other barcode types. A strict criteria increases the reliability against incorrect decoding, but can also reduce the general scanning rate. It should be noted that two different criteria are only implemented for Code 128.</p> <p>Values: ['high', 'low'] standard: 'high'</p>
Threshold	<p>Edges are found within a scan line with the help of a threshold value. 'Threshold value' determines how this threshold value is calculated relative to the dynamic gray-scale value range along the scan line. If irregularities are present in the search region of if the noise is too great, the value settings for 'Threshold value' should be increased.</p> <p>Typical value range: [0.05...0.2] Standard: 0.05</p>

Threshold absolute	<p>The parameter 'Threshold value absolute' is used to prevent incorrect edge detection. If a scan line enters an image region with a dynamic range that is too small (e.g. a predominantly white region with gray-scale values close to 255), the threshold value for edge detection is calculated too small. This often leads to larger quantities of incorrect edges being detected. If the threshold value based on the parameter 'Threshold value' is smaller than the value of parameter 'Threshold value absolute', the latter value is taken as the threshold value. 'Threshold value absolute' is set to 5.0 as standard. If images with a higher noise level are processed, it may be beneficial to increase the parameter value. On the other hand, if noise-free images with low contrast are processed, this parameter could impede the detection of correct edges. In these cases, it is advisable to reduce the parameter value or even to deactivate the parameter (set to 0.0). Typical value range: [0.0...10.0] Standard: 5.0</p>
Maximum orientation deviation	<p>A potential barcode region consists of bars and also edges with a uniform orientation. The parameter 'Max different orientation' shows how significant the difference in orientation of neighboring edges can be. 'Max orientation deviation' is a difference angle in degrees. If a barcode is frayed, i.e. the bar edges are faulty, a high 'orientation deviation' value should be selected. With small values, on the other hand, the number of incorrect barcode candidates can be reduced. Typical value range: [2...20] Standard: 10</p>
Check character	<p>This parameter decides whether, for a barcode with optional check character, this is taken into account and whether or not it is output in the resulting character sequence. Barcodes with an optional check character are e.g. Code 39, Codabar, 2/5 Industrial or 2/5 Interleaved. As standard, the check character is interpreted as a normal data character and output in the character sequence – 'Check Character' is then equal to 'absent'. If the user knows that the searched for code contains a check character, this should also be tested – 'Check character' must be set to 'present'. With a positive test, the check character is then not output in the resulting character sequence. With a negative test on the check character, the relevant barcode is not returned as a result. Values: ['absent', 'present'] Standard: 'absent'</p>
Composite code	<p>A 2D composite code can be attached to EAN.UPC barcodes. If 'Composite Code' is set to 'CC-A/B', the composite component is localized and decoded. 'Composite Code' is set to 'not available' as standard and the composite component next to the barcode is ignored. If a barcode of the searched-for type contains no composite components, only the result of the barcode is returned. Composite codes are only supported together with an arc of type RSS-14 Stacked or RSS-14 Stacked Omnidirectional. Values: ['none', 'CC-A/B'] Standard: 'none'</p>

UPCE Encodation	<p>UPC-E-barcode can be returned in different output formats. 'UPCE coding' is set to 'ucc-12' as standard and the decoded string is returned in the UCC-12 format (consisting of 12 characters). If 'UPCE coding' is set to 'zero-suppressed', the result is returned in zero-suppressed- format (i.e. with suppressed zeros at defined points). This format consists of a leading zero, six coded characters and an implicitly coded check character. This corresponds to the format required by ISO/IEC 15420.</p> <p>Values: ['ucc-12', 'zero-suppressed'] Default: 'ucc-12'</p>
Code length min	Minimum code length

10.10 Module Code 2D

10.10.1 Overview

Objective	<p>All common 2D codes can be read with the 2D code reading module. The following 2D codes can be read:</p> <ul style="list-style-type: none"> • Data Matrix ECC 200 • QR Code • PDF417
Procedure	<p>An object with a corresponding 2D code is scanned.</p>

10.10.2 Setting Parameters

Property

The following settings/results are displayed:

Process Time [μ s]	Process Time for the module.
Module State	Error codes for troubleshooting support (see section “14.4 Module Status” on page 213).
Reading True Count	The number of 2D codes which have been read is displayed.
Teach	Reading of the current 2D codes is adjusted to the respective conditions.
Input image	Selection of the channel for the image input
Code type	The type of 2D code can be selected. <ul style="list-style-type: none"> • Data Matrix ECC 200. • QR Code. • PDF417.
Recognition	In the case of poor code quality, it is advisable to set this parameter to enhanced or maximum. <p>Standard Easily legible 2D codes are recognized quickly and reliably in the standard mode.</p> <p>Enhanced Difficult 2D codes can be read in the enhanced mode. However, processing takes longer.</p> <p>Maximum Even partially destroyed 2D codes can be read in the maximum mode. However, this mode requires the greatest amount of processing time.</p>
Read Timeout [μ s]	The time during which the sensor attempts to read the code. If reading is not successful within this period of time, the process is aborted and the reading results are rendered invalid. The time can be selected within a range of 0 to 20 s. Aborting the read attempt takes about 20 ms. The module's minimum processing time is thus also 20 ms.
Reading Max Count	The maximum number of code to be read simultaneously can be specified. Up to 20 codes can be read during one image recording operation.

Quality Grading	<p>Quality grading of the code can be activated. Attention: Activation of this functions extends the module's decoding rate.</p> <p>None No quality grading.</p> <p>ISO/IEC 15415 Quality grading in accordance with ISO/IEC15415.</p> <p>AIM DPM-1-2006 Quality grading in accordance with AIM DPM-1-2006 Note: Only available for ECC200 and QR Code.</p> <p>Note: The results of the code evaluation in accordance with the selected standard can be found in the configuration reading list.</p>
-----------------	---

10.10.3 Configuration

The 2D code module includes the following configuration:

- Reading List
- Extended parameters

10.10.3.1 Submodule Reading List

Property

The following settings/results are displayed:

Reading #0	Scanned code
Quality	<p>In accordance with the standard, the individual degrees are evaluated with a value between 0 to 4, where 0 stands for the lowest and 4 for the highest degree. It is important to note that, although this implementation adheres strictly to the standard, the evaluation of the degrees depends on the data code decoding procedure. This means that the evaluation results may deviate slightly from the results of other datacode readers (from other providers).</p> <hr/> <p>Overall quality Minimum value of all remaining degree values Contrast.</p> <hr/> <p>Contrast Difference between black and white code modules with regard to brightness.</p>

Modulation	Evaluates the amplitude between the data code modules. Higher amplitudes mean that dark and bright modules can be differentiated more reliably and that this degree is evaluated higher. It should also be noted that the evaluation of modulation depends on the error correction capacity of the symbol. This means that modulation for symbols with a higher error correction capacity degrades more slowly.
Fixed Pattern Damage	Position inspection of the fixed pattern (L-border, clock pattern and quiet zones).
Decode	Is always set to 4 if the code could be read.
Axial Nonuniformity	Data code symbols usually have square modules, i.e. the width and height of a module are equal. Their ratio may also be unequal due to an angled camera view or incorrect generation of a symbol. This deviation is evaluated via the degree of axial unevenness.
Grid Nonuniformity	If the symbol is suffering from a perspective deformation in addition to an affine deformation, this is evaluated in the unevenness grid accordingly.
Unused error correction	The unused error correction capacity of the investigated symbol is calculated in the degree of unused error correction. In a certain respect, this degree reflects the reliability of the decoding process. It should be noted that some codes with a degree of unused error correction of 0 can still be decoded. This is because a more reliable decoding algorithm is used than the reference decoding algorithm recommended as standard.

The following results appear after quality testing in accordance with DPM-1-2006
The evaluation of code quality is specified as a number between 0 and 4, 0 being the worst and 4 the best evaluation.

Quality AIM DPM- 1-2006	Overall quality	Minimum value of all remaining degree values
	Cell contrast	The difference between the maximum and minimum reflection value of the gray-scale value profile. A stronger contrast provides a better degree.
	Cell modulation	Evaluates the amplitude between the data code modules. Higher amplitudes mean that dark and bright modules can be differentiated more reliably and that this degree is evaluated higher. It should also be noted that the evaluation of modulation depends on the error correction capacity of the symbol. This means that modulation for symbols with a higher error correction capacity degrades more slowly.
	Fixed Pattern Damage	A worsening or fault in the frame pattern and the neighboring quiet zones is evaluated by the Fixed Pattern Damage degree
	Decode	Is always set to 4 if the code could be read
	Axial Nonuniformity	Data code symbols usually have square modules, i.e. the width and height of a module are equal. Their ratio may also be unequal due to an angled camera view or incorrect generation of a symbol. This deviation is evaluated via the degree of axial unevenness
	Grid Nonuniformity	If the symbol is suffering from a perspective deformation in addition to an affine deformation, this is evaluated in the unevenness grid accordingly.
	Unused error correction	The unused error correction capacity of the investigated symbol is calculated in the degree of unused error correction. In a certain respect, this degree reflects the reliability of the decoding process. It should be noted that some codes with a degree of unused error correction of 0 can still be decoded. This is because a more reliable decoding algorithm is used than the reference decoding algorithm recommended as standard.
	Mean Light	The mean gray-scale value for the modules is not defined as a degree in AIM DPM-1-2006. It is an evaluation of the quality of the processed image and is defined as a mean gray-scale value for the centers of the bright data code symbol modules. The mean gray-scale value of the modules can have a value between 0.0 to 1.0, which corresponds to between 0% and 100% of the maximum gray-scale value
Note: Detailed information on the quality calculation can be found in the relevant standards.		

10.10.4 General Settings for All Code Types

Property

The following settings/results are displayed:

Polarity	Describes the polarity of the symbol in the image and determines whether the symbol in the image is dark on a bright background or bright on a dark background. Value list: 'dark on bright', 'bright on dark', 'all'. Standard: 'dark on bright' (extended 'all')
Mirrored	Information on a possible mirror-inversion of the symbol (corresponds to a mix-up between columns and lines). Value list: 'No', 'Yes', 'All' Standard: 'all'
Contrast Min	Minimum contrast between the symbol foreground and the image background. This value can not be determined exclusively by the difference between the gray-scale values of the foreground and background, but also correlates with the rise in the module edges and thus the sharpness of the image. Value range: [1...100] Standard: 30 (Extended: 10)
Small modules robustness	Robustness of the decoding with data codes with an extremely small module size. If the parameter 'Small Modules Robustness' is set to 'High', the probability that data codes can be decoded with extremely small modules increases. In this case, the minimum module size should also be adapted accordingly, i.e. 'Module size min' or 'Module width min' (PDF417) should be set to the assumed minimum module size or module width. If 'Small Modules Robustness' is set, the internal memory requirements can increase significantly. 'Small Modules Robustness' should therefore usually be set to 'low'. Value list: 'low', 'high' Standard: 'low' (extended: 'high')
Strict model	Controls the behavior during the detection of symbols, which do not correspond to the module specifications in terms of symbol size. These can either be rejected ('Yes') or returned as a result despite the difference in size ('No'). Value list: 'Yes' (strict), 'No' (not strict) Standard: 'Yes'

10.10.5 Data Matrix ECC 200

Property

Symbol Columns min	Minimum number of columns of the symbol in modules. Value range: [10...144] - straight Standard: 10																				
Symbol Columns max	Maximum number of columns of the symbol in modules. Value range: [10...144] - straight Standard: 144																				
Symbol Rows min	Minimum number of lines of the symbol in modules. Value range: [8...144] - straight Standard: 8																				
Symbol Rows max	Maximum number of lines of the symbol in modules. Value range: [8...144] - straight Standard: 144																				
Symbol Shape	<p>Possible restrictions with regard to the shape of the symbol (rectangle and/or square). Attention: Setting the symbol shape changes any previously applied restrictions with regard to the symbol size. For 'Square', the minimum values of 'Symbol columns min' and 'Symbol lines min' and the maximum values of 'Symbol columns max' and 'Symbol lines max' are used. The restrictions in accordance with the following table also apply:</p> <table border="1" data-bbox="381 687 1016 880"> <thead> <tr> <th></th> <th>'all'</th> <th>'Rectangle'</th> <th>'Square'</th> </tr> </thead> <tbody> <tr> <td>'Symbol columns min'</td> <td>10</td> <td>18</td> <td>10</td> </tr> <tr> <td>'Symbol columns max'</td> <td>144</td> <td>48</td> <td>144</td> </tr> <tr> <td>'Symbol lines min'</td> <td>8</td> <td>8</td> <td>10</td> </tr> <tr> <td>'Symbol lines max'</td> <td>144</td> <td>16</td> <td>144</td> </tr> </tbody> </table> <p>If 'Symbol columns min' is larger than 'Symbol rows max', 'Symbol shape' is set to 'Rectangle'. If 'Pattern detection tolerance' is set to 'High' or 'All', the value of 'Symbol shape' can speed up the symbol search significantly if 'Rectangle' or 'Square' is selected. Value list: 'Rectangle', 'Square', 'All' Standard: 'All'</p>		'all'	'Rectangle'	'Square'	'Symbol columns min'	10	18	10	'Symbol columns max'	144	48	144	'Symbol lines min'	8	8	10	'Symbol lines max'	144	16	144
	'all'	'Rectangle'	'Square'																		
'Symbol columns min'	10	18	10																		
'Symbol columns max'	144	48	144																		
'Symbol lines min'	8	8	10																		
'Symbol lines max'	144	16	144																		
Module size min	Minimum size of the modules in the image in pixels. Value range: [1...100] Standard: 6 (Extended: 2, Maximum: 1)																				
Module size max	Maximum size of the modules in the image in pixels. Value range: [2...100] Standard: 20 (Extended: 100)																				
Module Gap min	Minimum space in the direction of the symbol columns and rows. Value list: 'No', 'Small', 'Large' Standard: 'No'																				
Module Gap max	Maximum space in the direction of the symbol columns and rows. Value list: 'No', 'Small', 'Large' Standard: 'Small' (Extended: 'Large')																				

Property

Slant max	Maximum deviation of the angle in the L-shaped finder pattern from (ideally) the right angle (the information is provided as a radian measure and corresponds to perspective distortions which can occur when printing the symbol or during image recording). Value range: [0.0...0.5235] Standard: $0.1745 = 10^\circ$ (Extended: $0.5235 = 30^\circ$)
Find Pattern Tolerance	Tolerance of the search against a distorted or missing finder pattern. The finder pattern contains both the L-shaped and the opposite alternating side. Depending on this parameter, different algorithms are used for the search. In one case ('low'), it is assumed that the finder pattern is mostly present with hardly any distortions. In the other case ('high'), the finder pattern can be heavily distorted or missing completely without impeding the detection. It must be noted, however, that, with this version, the parameters for the symbol search should be restricted as much as possible, as an increased processing time can otherwise be expected. It is also important to remember that both algorithms differ slightly in terms as their robustness. This can mean that, even with symbols with intact finder patterns, different results are achieved depending on the 'Finder Pattern Tolerance'. If 'high' is selected, for example, only symbols with a fixed grid can be found (see below), which reduces the robustness against perspective distortions. With 'All', both algorithms are carried out. Value list: 'Low', 'High', 'All' Standard: 'low' (extended: 'All')
Module grid	Information on whether or not the size of the modules can vary to a certain extent. Depending on this parameter, different algorithms are used for calculating the module positions. In one case ('Fixed') a fixed grid is used, where the spaces between the module center points are all equal. In the other case ('Variable'), the grid is oriented on the alternating side of the finder pattern. With 'All', both variants are tried out for the grid one after the other. It is important to remember that the value of 'Module grid' is ignored if the 'Pattern detection tolerance' is set to 'High'. In this case, a fixed grid is always assumed. Value list: 'Fixed', 'Variable', 'All' Standard: 'Fixed' (Extended: 'All')

10.10.6 QR Code

Property	Model type	Type of the QR code mode. The older QR Code Mode 1 and the new Mode 2 are supported. Value list: 1, 2, 'All' Default: 'All'
	Version min	Smallest symbol version to be read. The symbol version corresponds directly with the symbol size. Version 1 corresponds to a symbol with 21×21 modules, Version 2: 25×25 modules etc. up to version 40: 177×177 modules. The maximum symbol size with Mode 1 is 73×73 or Version 14. Value range: [1...40] (Model type 1: [1...14]) Standard: 1
	Version Max.	Biggest symbol version to be read: Value range: [1...40] (Model type 1: [1 ... 14]) Standard: 40
	Symbol size min	Smallest symbol size to be read in modules. This parameter can be used as an alternative to 'Version Min': Value range: [21 ... 177] (Mode type 1: [21 ... 73]) Standard: 21
	Symbol size max	Largest symbol size to be read in modules. This parameter can be used as an alternative to 'Version Max': Value range: [21 ... 177] (Mode type 1: [21 ... 73]) Standard: 177
	Module size min	Minimum size of the modules in the image in pixels. Value range: [1 ... 100] Standard: 6 (Extended: 2, Maximum: 1)
	Module size max	Maximum size of the modules in the image in pixels. Value range: [2 ... 100] Standard: 20 (Extended: 100)
	Module Gap min	Minimum space in the direction of the symbol columns and rows. Value list: 'No', 'Small', 'Large' Standard: 'No'
	Module Gap max	Maximum space in the direction of the symbol columns and rows. Value list: 'No', 'Small', 'Large' Standard: 'small' (Extended: 'Large')
	Position pattern min	Number of position detection patterns that must be clearly visible in the image for a symbol candidate to be generated. Value range: [2, 3] Standard: 3 (Extended: 2)

10.10.7 PDF417

Property		
Symbol columns min	Minimum number of data columns for the symbol in code words, i.e. excluding the two code words of the start/stop pattern and the two code words of the row indicators. Value range: [1...30] Standard: 1	
Symbol columns max	Maximum number of data columns for the symbol in code words, i.e. excluding the two code words of the start/stop pattern and the two code words of the row indicators. Value range: [1...30] Standard: 20 (Extended: 30)	
Symbol Rows min	Minimum number of lines of the symbol in modules. Value range: [3...90] Standard: 5 (Extended: 3)	
Symbol Rows max	Maximum number of lines of the symbol in modules. Value range: [3...90] Standard: 45 (Extended: 90)	
Module width min	Minimum width of the modules in the image in pixels. Value range: [1...100] Standard: 3 (Extended: 2, Maximum: 1)	
Module width max	Maximum width of the modules in the image in pixels. Value range: [2...100] Standard: 15 (Extended: 100)	
Module Aspect min	Minimum side ratio of the modules in the image (height to width). Value range: [0.5...20.0] Standard: 1.0	
Module Aspect max	Maximum side ratio of the modules in the image (height to width). Value range: [0.5...20.0] Standard: 4.0 (Extended: 10.0)	

10.11 Module Image Comparison


10.11.1 Overview

Objective Objects with stored reference images can be compared and any deviations can be reliably detected with the help of the image comparison module.


Procedure The reference image must first be calculated using one or multiple good parts. The algorithm then compares the input image with the reference image pixel by pixel. If the deviation of a pixel comparison is larger than the relevant value in the image threshold value, the pixel in the output image is marked as an error pixel (white). If the deviation of a pixel comparison is smaller than the relevant value in the image threshold value, the pixel in the output image is marked as a good pixel (black). If the image comparison module is selected, the error pixels are also visible. They are marked in red for better representation.

10.11.2 Setting Parameters

Image area Deviations from the reference object are displayed as red pixels in the image area.

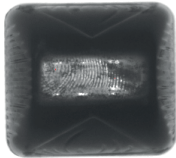

Reference object

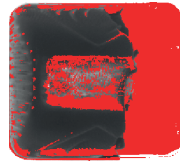

Displayed deviation from the reference object

Property

The following settings/results are displayed:

Process Time [us]	Sensor processing time for the module
Module State	Error codes for troubleshooting support (see section “14.4 Module Status” on page 213).
Pixel Count [unit]	Number of pixels by which the respective image deviates from the original image. The larger the number, the greater the deviation from the original image.
Input image	Selection of the channel for image input
Input region	Selection of the region for image comparison.
Threshold background	Threshold value for brightness differences along the edge. The higher the value, the more tolerance is allowed for brightness differences along the edge. A value of 0 results in greatest possible sensitivity and even extremely small brightness differences are evaluated as edge interruptions. Value 255: No brightness differences are evaluated as edge interruptions.
Threshold Border	Threshold value for brightness differences within the edge surroundings (see Edge sensitivity (%) and Image threshold value). Settings: see Threshold background.
Edge Broadening [unit]	Pixel width of the edges; a sort of virtual hose is placed around the edge.
Teach Image Count	The number of images whose characteristics are combined into a reference image.
Teach	Activation of the teach-in process. After a successful teach-in process, a display appears indicating how many of the image recordings have been combined into a reference image.
Edge sensitivity [%]	A setting which determines which percentage of the detected edges will be evaluated as edges for the reference image. The default values is 20 %.
Variant	Algorithm type A is used for the evaluation.

10.11.3 Configuration

The image comparison module includes the following configuration options:

- Output image
- Reference image
- Threshold Image

10.12 Module OCR (Optical Character Reader)

10.12.1 Overview

Objective	Read letters, numbers and symbols.
Procedure	<p>First specify the search region within which the characters are located. Then select the segmentation settings. The next step involves associating the detected character with a letter or a number.</p> <p>This section is intended to explain the basic requirements for setting up wenglor's OCR Reader. By considering several important attributes, it can be determined whether or not this product is suitable for the respective application.</p>

OCR tips

In actual practice, a great number of ambient conditions influence whether or not reading will be successful. This document only deals with the issues of geometry and contrast.



The most important attributes are:

- Character geometry
- Quiet zone
- Background / contrast

Basic character geometry

- The OCR Reader functions ideally as of a **character height of 25 pixels**. In this case, the gaps between the characters are as a rule large enough for the characters to be separated.
- The OCR Reader functions ideally when the gap between the characters is **half as large as the character width**.
- If "non-linear calculation of the binarization threshold" is used, the gap between the characters should not be any larger than one character. Otherwise the gap itself might be recognized as a character under certain circumstances. In this case, two objects should be used.
- Process Time has a **quadratic relationship to character size**. If a character string with a character height of 25 pixels requires 20 ms for the reading algorithm, time is increased to 80 ms for a character height of 50 pixels.

Examples

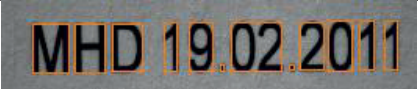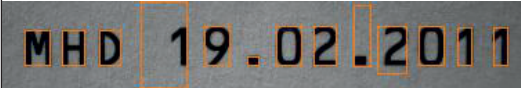Font: Arial Standard Height: 30 pixels → "02" cannot be segmented.	
Font: OCR B Height: 30 pixels → All characters can be readily segmented.	
Font: OCR B Height: 30 pixels Binarization: "non-linear calculation" → Excessively large spaces are seen as separate segments.	

Size of the ROI

If the region of interest is too large, the algorithm for determining the binarization threshold does not function reliably.

The following rule of thumb applies:

Edge spacing left, right: $1 \times$ character width


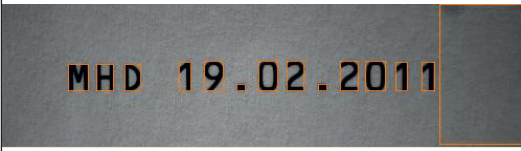
Edge spacing top, bottom: $0.5 \times$ character height

This "quiet zone" should not be interfered with by other characters or objects.

Furthermore, processing time also increases when the ROI is too large.

If the position of the character string to be read is not consistent in actual practice, it's usually better to use localization instead of a very large ROI. Process Time for localization plus reading is usually less than required for a large ROI.


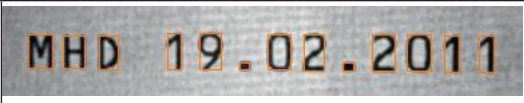
Examples

Ideal edge spacing Reading time: 25 ms	
Edge spacing too large → The segmentation function detects additional object because an incorrect binarization threshold is calculated due to the large surface area of the image. Reading time: 120 ms	

Background

A homogeneous background is always ideal for character segmentation. Structures included in the background which have an intensity similar to that of the characters make reading impossible.

Under certain circumstances, colored structures can be eliminated by using the right illumination color. If fine structures are present in the background, it may be helpful to make use of a Gaussian filter or set the optics slightly out of focus depending upon character size.

Character string with structure in background → Segmentation is not possible	
Character string with structure in background → Segmentation functions correctly	

Contrast



The “binarization” stage must find a suitable binarization threshold for separating the characters from the background on the basis of image contrast. The OCR module is equipped with various binarization functions to this end.

If contrast (difference in intensity between characters and background) is constant over the entire ROI, 20 intensity values are enough for display.

If contrast varies within the ROI (e.g. due to inhomogeneous illumination), there should be a plain difference between the characters and the background. The sensor functions ideally if the image is set up with black characters (intensity = 0) and a gray background. In this case, brightness differences within the characters are outside of the image chip’s dynamic range, and the characters are entirely black.

On the other hand, an attempt can be made to fully over-illuminate the background (white, i.e. intensity = maximum). In this way, structures in the background can no longer be detected and only the characters are gray.

Examples

Dark illumination, structures in the characters are not visible.	
Background over-illuminated, small structures in the background are not visible.	

10.12.2 Setting Parameters

Property

The following settings/results are displayed:

Process Time [μs]	Sensor processing time for the module
Module State	Error codes for troubleshooting support (see section "14.4 Module Status" on page 213).
Segments True Count	Number of detected characters
Reading result	Read-out of all reading results for all detected lines. The lines are separated from each other by a line feed (LF).
Input image	Selection of the channel for image input
Coordinate system	Selection can be made regarding how the OCR module should be tracked.
Read Timeout [μs]	The time during which an attempt is made to read the characters. If reading is not successful within this period of time, the process is aborted. The reading results are rendered invalid.
Segment Max Count	The maximum String Count is adjustable.
Variant	The algorithm type used is displayed.

10.12.3 Configuration

The OCR module includes the following configuration options:

- Reading List
- Segment List
- Search Box
- Row Find
- Binarization
- Segmentation
- Classification
- Fielding

10.12.3.1 Reading List

Property

The following settings/results are displayed:

Reading #0...n	The characters read from the detected line are displayed.
----------------	---

Reading results are read out for each detected line.

10.12.3.2 Segment List

Objective Detected characters are listed in the sub-module in order to provide information concerning the detected segment. This information can be used to further optimize the overall settings.

Property The following settings/results are displayed for any given selected segment

Assigned character	If an appropriate character has been found in the character set, it's displayed. Otherwise, the default replacement character appears, namely a question mark (?).
Lower threshold	Lowest binarization value that has been used to binarize the character.
Upper threshold	Highest binarization value that has been used to binarize the character.
Height	Height of the character
Width	Width of the character
Score	Quality of the character detection

10.12.3.3 Row Find

Objective The module can read out several lines from a search region. The presets for the lines to be expected are entered under "find lines".



Property The following settings/results are available

Row Recognition	This function is initially deactivated. The search algorithm is activated by switching the mode to standard.
Angle [deg]	If the angle range is set to 0, the module automatically calculates the angle of the rows with reference to the search region. The resulting value is displayed.
Row True Count	Number of lines found
Row Max Count	The number of lines to be expected is specified.
Angle range [deg]	The angle between the search region and the expected lines is specified. If this value is set to 0, the module calculates the angle automatically.
Row Height Min [unit]	Minimum height of the expected lines
Row Height Max [unit]	Maximum height of the expected lines
Row Space Min [unit]	The search algorithm for each line is extended in positive direction by a third of a line spacing value.

10.12.3.4 Binarization

Objective The characters are separated from the background with the help of the binarization threshold. It must be determined which type of character is involved and which operating mode needs to be used. Selection can be made between several binarization modes.

Property The following settings/results are displayed for any given selected segment

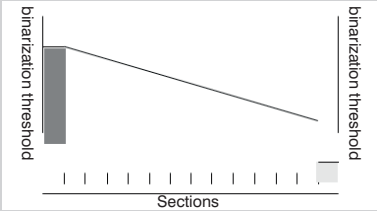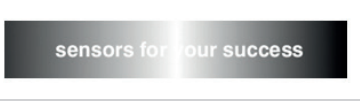Contrast	How the characters are implemented is defined. Dark characters on a bright background or bright characters on a dark background.	
Threshold mode	The following options are available:	
	Manual	The binarization threshold is set manually by specifying the lower and upper threshold values.
	Computed	The binarization threshold is calculated automatically by the OCR algorithm.
	Linear	<p>This mode is used when a linear brightness profile can be detected in the image.</p> 
	Non-linear	<p>This mode is used when the image is not homogeneously illuminated. In the case of non-linear calculation of the binarization threshold, the image is broken down into predetermined sections, and the best possible binarization threshold is calculated for each.</p> 
Linear/non-linear threshold value splitting	This value specifies into how many parts the search region will be split up in order to calculate the individual threshold values.	

10.12.3.5 Segmentation

Objective The characters are separated from each other with the help of segmentation. The module makes use of various automatic methods. If these automatic methods do not lead to the desired results, various segmentation settings can be entered manually.

Property The following settings/results are available

Character Height Min [unit]	The minimum height of the character to be detected is specified.
Character Height Max [unit]	The maximum height of the character to be detected is specified.
Character Width Min [unit]	The minimum width of the character to be detected is specified.
Character Width Max [unit]	The maximum width of the character to be detected is specified.
Cluster Size Min [unit]	The minimum number of pixels which must be contained by a segment in order to be detected as a character
Cluster Size Max [unit]	The maximum number of pixels which may be contained by a segment in order to be detected as a character



Discard Undersized	If the requirements concerning height, width and cluster size are fallen short of, the detected segment is disregarded.	
Discard Oversized	If the requirements concerning height, width and cluster size are exceeded, the detected segment is disregarded.	
Dot Space Vertical [unit]	The vertical pixel pitch for fonts which are made up of individual pixels is specified.	
Dot Space Horizontal [unit]	The horizontal pixel pitch for fonts which are made up of individual pixels is specified.	
Splitting	The following options are available:	
	Default	Fixed distribution of the characters is assumed. Character spacing and angle do not vary.
	Variable	Distribution of the characters with regard to spacing, angle and size may vary.
	Dynamic	Distribution of the characters with regard to spacing, angle and size may vary greatly.

Character Space [unit]	Character spacing specifies the expected number of pixels between the segments.
Substitution character	If a detected character cannot be found in the taught-in character set, the replacement character is displayed.
De-Slanting mode	The inclination of the search regions for the segments can be determined automatically or set manually.
De-Slanting angle [degree]	The inclination angle of the characters can be specified. The value can lie within a range of -45° to $+45^{\circ}$.



10.12.3.6 Classification

Objective Classification specifies as of which degree of conformity a character is selected from the character set. The higher the degree of conformity, the more precisely the characters must conform.

Property The following settings/results are available

Acceptance Level	The current character is compared with the character from the character set and coincidence is evaluated. The higher the value the greater the coincidence. The acceptance value specifies the minimum degree of coincidence which must be achieved for the character to be read out as recognized.
------------------	---

10.12.3.7 Fielding

Objective This function makes it possible to filter the detected characters on the basis of certain criteria.

Property The following settings/results are available

Pattern	This is used to specify at which place which character can be used in the results read-out. Which characters are associated with which abbreviation is defined in the set sub-step.
---------	---

One letter from the defined set must be entered per place in the output value. If the field is empty, the reading results from the OCR module are read out without restriction.

Quantity

The following patterns have already been specified:

N	0123456789
A	ABCDEFGHIJKLMNOPQRSTUVWXYZ (uppercase letters)
a	abcdefghijklmnopqrstuvwxyz (lowercase letters)
H	0123456789ABCDEF (hexadecimal, uppercase)
h	0123456789abcdef (hexadecimal, lowercase)
O	1234567 (octal numbers only)
N	A set of characters can be defined by the user. An explicit letter must be assigned to the subset as a characteristic.



10.12.3.8 Teaching-in Characters

Objective

If characters from the fonts OCR-A or OCR-B need to be read, the included OCR-A and OCR-B fonts can be used. If the characters are from any other font, they first have to be taught in.

Function field


New characters can be taught in to the module toolbar. Taught-in characters can be managed with the help of a character editor.

	Train Line	All of the characters within the search region are taught in.
	Font editor	The font editor is a separate window which makes it possible to manage taught-in characters, as well as to save and load fonts.

The font editor manages the currently used character set. Additional information is available for each font, such as height and width. The number of hits indicates how frequently the character has been used since the program was last started. If the same character has been taught in more than once, information concerning the number of hits is helpful for finding out whether or not a character is actually necessary for the current application. After clicking the small image, a larger image of the taught-in font is displayed.

Each character can be individually removed from the character set by clicking the X in the respective column.

Note: The smaller the font set, the higher the evaluation speed.

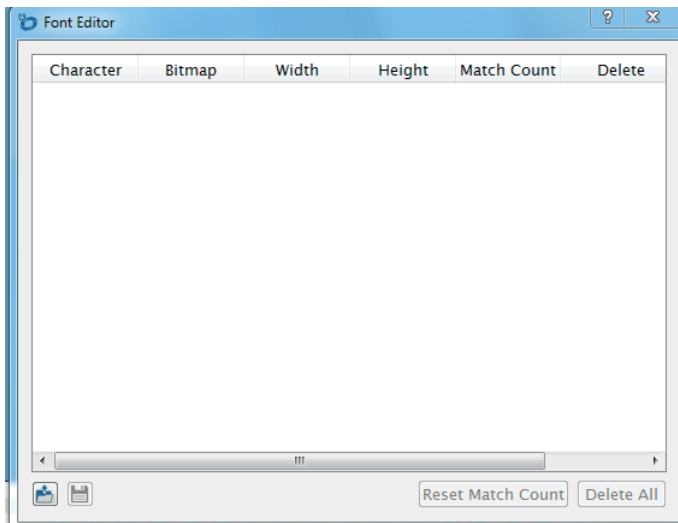

The entire character set can be saved as a wenglor character set. Previously saved character sets can be loaded to the character editor. The weQube installation directory contains the standard font types OCR-A and OCR-B.

10.13 Module Pattern Match

10.13.1 Overview

Objective Recognize objects in an image

Procedure First of all, specify the object or a distinctive element of the object which needs to be recognized. Then specify tolerances for rotational orientation. Teach in and you're done.

Tips

Make sure you have a sharp image with high contrast.

- Move the search region into the middle of the object. Enlarge the search region such that the object or feature you want to detect is enclosed.
- Teach the object in. It may take several seconds until the weQube teach-in process has been completed. Detected contours are displayed in the image. If additional, unnecessary contours are displayed which are not necessarily required for object detection, they should be removed with the help of the contour model editor. A larger number of contours to be searched for extends evaluation time, but it also improves the quality of the results. The ideal relationship between a minimal number of contours and best possible quality varies from application to application.
- Is it possible for the object to turn in the application? If so, the starting angle and the angle range should be set. For example, if it's possible for an object to turn 30 %, set the starting angle to -15 and the angle range to 30. With these settings, the object can rotate within a range of -15° to 15° from the previously taught-in position, and it's still recognized. It must be kept in mind that finding rotated objects requires computing time at the weQube. For this reason, the rotation angle should only be as large as necessary in order to prevent the need for unnecessary computing time.

The following parameters influence evaluation speed:

- Increase the minimum coincidence value step-by-step until the object is no longer detected. Then return to the last value that worked.
- Increase the aggressiveness parameter until pattern matching fails, and then reduce the coincidence value. If this doesn't deliver the desired results, return to the last values with which the object was found.
- Reduce the permissible rotation angle to a minimum.

Procedure

- Reduce the search region to the size which is actually required for the application.
- Be sure to use contour models which demonstrate prominent structures that differ from the rest of the image. When recording the image, make sure that the prominent structures can be easily detected in the image. It's better to use large, prominent structures than small, faint structures. This can have a significant effect on speed.

10.13.2 Setting Parameters

Property The following settings/results are displayed:

Process Time [μs]	Sensor processing time for the module
Module State	Error code for troubleshooting support (see section “14.4 Module Status” on page 213).
Reading True Count	The number of detected objects is displayed.
Input image	Selection of the channel for image input
Read Timeout [μs]	The time during which the sensor attempts to detect the object. If nothing has been successfully detected after this duration has expired, the search is aborted and the result is set to invalid. Time can be set within a range of 0 to 20 seconds in steps of 1 μ s. Aborting the search process takes about 20 ms. The module's minimum processing time is thus also 20 ms.
Reading Max Count	The maximum number of objects to be detected can be selected. Up to 20 objects can be detected simultaneously.
Shape Models	Number of different models which should be detected. Up to 10 different models can be taught in.
Pyramid Levels	With a value of 0, the algorithm automatically optimizes the number of model points. A value of 1 specifies that model points will be looked for in the original image, and thus this setting is the slowest. If the value is increased to 2, the resolution of the original image is reduced by means of subsampling. Possible model points are thus also reduced and the process is accelerated. It must be noted that although processing time is reduced as the pyramid steps value is increased, accuracy is also reduced. We recommend leaving the setting at a value of 0, i.e. automatic.

Property

Angle Start [deg]	This parameter specifies in which negative direction the model can be turned from the taught-in position. It describes the start angle from which the angle of rotation is determined on the basis of angle range. For example, if a start angle of -15° and an angle range of 30° are selected, the model can move within a range of -15° to $+15^\circ$.	
Angle Extent [deg]	Angle Extent specifies the possible range of angles of rotation for the model.	
Angle Step [deg]	The angle increment parameter specifies the individual increments within the selected angle range. The angle increment parameter should be set on the basis of the object's size. Smaller models have only a number of different discrete rotations within the image. For this reason, a larger angle increment should be selected for smaller objects.	
Scale Min	This parameter specifies the lower limit of the possible scaling range which will be searched. A value of 1 corresponds to the model's original size.	
Scale Max	This parameter specifies the upper limit of the possible scaling range which will be searched. A value of 1 corresponds to the model's original size.	
Scale Step	Scaling increment specifies the increment within the scaling range. As is also the case with the angle increment parameter, scaling increment should be set on the basis of the object's size.	
Optimization	In the case of especially large models, it may be advisable to select the number of model points by setting the optimization parameter to a value other than “_”. In the case of smaller models, reducing the number of points does not result in any acceleration.	
	Auto	The number of points is reduced automatically by the algorithm.
	None	No optimization is conducted. All object points are saved.
	Point Reduction Low	There are three different levels for reducing the number of points of a taught-in model. Reducing the number of points can be very helpful for large objects.
	Point Reduction Medium	
	Point Reduction High	
	Pregeneration	If this parameter is selected, a new model is generated each time an image is recorded. It must be noted that regeneration in the case of large rotation or scaling values increases memory occupation. Regeneration also takes a great deal of time.
No pregeneration	Regeneration of models is deactivated.	

Property

Metric	The metrics setting specifies the conditions under which the sample will still be recognized within the image.	
	Polarity – active	The object in the image must demonstrate the same contrast characteristics as the model. For example, if the model is a bright object against a dark background, the object is only detected within the image if it's brighter than the background.
	Global polarity – ignore	The model is also detected when the contrast characteristics are exactly the opposite of those of the taught-in object.
	Local polarity – ignore	If this value is selected, contrast polarity may only change amongst various parts of the model, but the polarity of model points within the same part of the model may not change. The term “Local polarity – ignore” must be correctly understood. It means that changes in polarity between neighboring parts of the model don't influence the score and are thus ignored.
Contrast	The contrast parameter specifies which gray-scale contrast the model's points must demonstrate. Contrast is a measure of local gray-scale differences between the object and the background, as well as between the parts of the object.	
	Auto	Contrast, upper and lower threshold values, and hysteresis are calculated automatically.
	Auto-contrast	Only the contrast values are determined automatically.
	Auto-contrast hysteresis	The hysteresis threshold values are determined automatically.
	Auto Min Size	The minimum contrast magnitude is only used for creating the model – the other influencing variables are not used.
	Numeric value	This value specifies the minimum contrast value of an edge transition which must be achieved. The edge is only used for model generation if this value is reached.

Property

Min contrast	The minimum gray-scale contrast which the model will have to have within the image later on during detection is specified here. In other words, this parameter represents a demarcation of the sample from noise within the image. For this reason, a good value corresponds to the range of gray-scale change which is caused by noise within the image. For example, if gray-scale values fluctuate within a range of 10 due to noise, the value should be set to 10. The value must be less than the contrast parameter value.	
Min Score	Specify the quality of coincidence – the higher the value is set the more quickly evaluation is completed, but quality is reduced.	
Max overlap	This parameter specifies how much of a taught-in model may be covered up, and nevertheless still detected as present.	
Subpixel	The sub-pixel parameter defines whether the position and the orientation of the detected model will be read out with accuracy down to the pixel or the sub-pixel.	
	---	The object's coordination and angle of rotation are read out with an accuracy of down to 1 pixel.
	Interpolation	When interpolation is activated, the algorithm examines the position of the object on the basis of neighboring pixels, angles and scaling around the best coincidence match. The results are accurate down to roughly one twentieth of a pixel. Interpolation is very fast and can be activated for most applications.
	Smallest Squares	The smallest squares parameter works against the interpolation parameter. This function requires a great deal of computing time.
	Smallest squares – high	
	Smallest squares – very high	
	Max deformation 1	Sometimes no objects are found, or only objects with a minimal coincidence value, because they're highly deformed relative to the taught-in model. The max. deformation parameter specifies by how many pixels the detected object can differ from the taught-in object.
Max deformation 2		
Greediness	"Greediness" of the search heuristics (0: reliable but slow, 1: fast but matches may be overlooked).	

10.13.3 Configuration

The pattern matching module includes the following configuration options:

- Reading list
- Search Box
- Teach Box
- Shape models

10.13.3.1 Submodule Reading List

Property

The following settings/results are displayed:


Reading #1	The name of the detected object is displayed.
Score	The displayed number describes the quality of coincidence between the detected object and the taught-in models. The number can lie between 0 (not recognized) and 1 (full coincidence to the taught-in model).
Coordinate system	Details concerning the initial coordinate system are displayed.


10.13.3.2 Shape Model

Objective


Several objects can be taught in. Each object is saved to the sensor as a separate contour model.

Teach-in

Each contour model has a “Teach-in” button. Clicking on the “Teach-in” button teaches in the current object as a contour model. After a model has been taught in successfully, its drawn into the camera image. It’s possible to subsequently edit the taught-in contour model in order to eliminate any interference. An additional window can be opened to this end via the Contour model outline parameter. The window appears after clicking the icon . The following window appears:

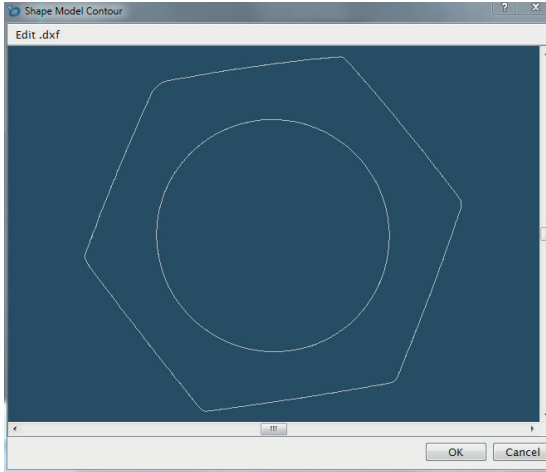

After clicking “Edit.dxf”, the mouse pointer turns into a red dot. This dot can be used to delete individual lines from the detected model. After correction of the model has been completed, the new contour is transmitted to the sensor by clicking OK. The “Undo” function negates the last change. The “Redo” function is the opposite of the “Undo” function and thus deletes the restored areas.

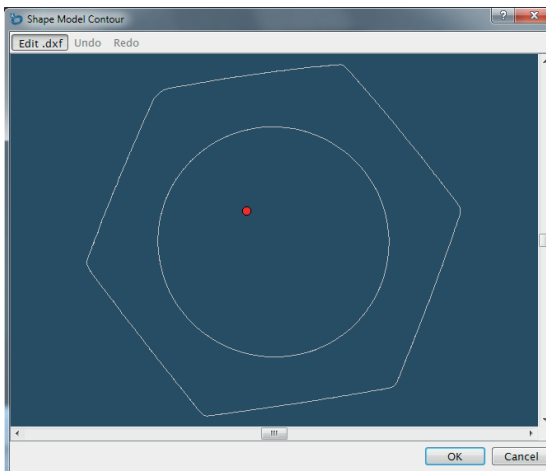

11. Software Modules for Profile Analysis

11.1 Module Pointcloud Coordinate System

11.1.1 Overview

Objective Tracking and reliably detecting objects. Additional functions can also be set up on the basis of this coordinate system.

Procedure The coordinate system can be unequivocally defined on the basis of one, two or three points. These can be specified in a fixed manner, linked from another module or selected from any of the other suggested options.

11.1.2 Setting Parameters

Measuring range Display of the coordinate system.

Property The following settings/results are displayed:

Process Time [us]	Process Time for process steps in the current module.	
Module State	Error codes provide support for troubleshooting.	
Input Pointcloud	Selection of the Pointcloud.	
Construction method	Construction of the coordinate system.	
	1 pt. origin	1 point defines the origin of the translatory coordinate system.
	1 pt. X-axis, 1 pt. Z-axis	1 point defines the X-axis and 1 point defines the Z-axis, by means of which a translatory coordinate system is formed.
	1 pt. origin, 1 pt. X-axis	One point defines the origin and one point defines the X-axis of the rotary coordinate system
	1 pt. origin, 1 pt. Z-axis	One point defines the origin and one point defines the Z-axis of the rotary coordinate system.
	2 pt. X-axis, 1 pt. Z-axis	2 points define the X-axis and 1 point defines the Z-axis of the rotary coordinate.

Property

Tracking method	Only available if the coordinate system is made up of more than one point. It can be specified whether or not and how the coordinate system's points will be tracked at the desired point.	
	No	The coordinate system's points will not be tracked.
	Yes	The coordinate system's points are tracked in the X and Z direction.
	Horizontal	The coordinate system's points are tracked in the X direction only.
	Vertical	The coordinate system's points are tracked in the Z direction only.
Tracking point	Only available if the coordinate system is made up of more than one point and the tracking method is set to yes, horizontal or vertical. All of the coordinate system's points are tracked at the selected point.	
	1st pt.	All points are tracked according to the first point.
	2nd pt.	All points are tracked according to the second point.
	3rd pt.	All points are tracked according to the third point.

11.1.3 Configuration

The coordinate system module includes the following configuration options:

- Coordinate system
- Find point 1 (2 or 3)

11.1.3.1 Submodule Find Point 1 (2 or 3)

Objective Select a point for construction of the coordinate system. Various algorithms are available.

Property The following settings/results are displayed:

Found point	The coordinates of the found point are displayed.	
Find method	Point (fix or linked)	A fixed point can be specified, or a point can be linked from another module.
	Point of line	A line with a starting point and an end point is looked for with a search line. The center, start or end point of the found line can be used as a point for the coordinate system.
	Point of arc	An arc is looked for with a search arc. The center, start or end point of the found arc can be used as a point for the coordinate system.
	Point of circle	An circle is looked for with a search circle. The center, start or end point of the found circle is used as a point for the coordinate system.

Settings for finding lines, circles and arcs correspond with the values in the measuring module [“11.4 Module Pointcloud Measure”](#) on page 157.

11.2 Module Pointcloud Filter





11.2.1 Overview

Objective	Eliminate interfering reflections in the Pointclouds, suppress the influence of individual outliers and increase the stability of the evaluation.
Abbreviated procedure	Define the input Pointclouds and select the required filter type. The filtered Pointcloud is available to other modules as an input Pointcloud.

11.2.2 Setting Parameters

Property The following settings/results are displayed:

Process Time [us]	Process Time for process steps in the current module.		
Module State	Error codes provide support for troubleshooting.		
Input Pointcloud	Any available Pointcloud can be selected.		
Filter type	The following filter types are available. Additional setting parameters appear depending on the selected filter type.		
	Off	Unfiltered Pointcloud.	
	Mean	The arithmetic mean is determined for each point using its closest neighbors. The point itself is also included in the number of neighbors. Filtering can only be applied to the Z values or the X, Y and Z values. (Coordinate filter type)	
	Weighted mean	Analogous to the mean value. Weighting is adjustable for the value of each neighbor.	
		Filter weighting #1	Weighting for the point itself
Filter weighting #2		Weighting for the closest neighbors	
	Filter weighting #3	Weighting for the second closest neighbors	

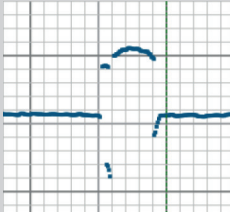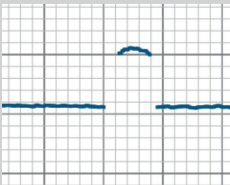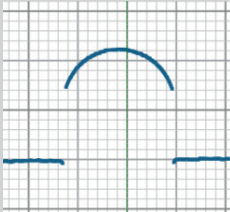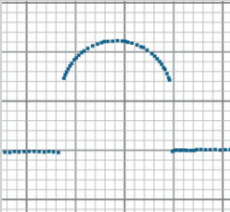Filter type	Median	<p>The mean value (median) is determined for each point using its closest neighbors. The point itself is also included in the number of neighbors. Filtering can only be applied to the Z values or the X, Y and Z values (filter type coordinates).</p>
	Intensity	<p>The filtered Pointcloud contains all points whose intensity values lie between the selected limits. Points with lesser or greater intensity are removed.</p> <p>If the lower threshold is greater than the upper threshold, the filtered Pointcloud contains all points with an intensity which exceeds the lower the threshold or falls short of the upper threshold.</p>
	Remove outliers	<p>Standard filter for eliminating outliers. Closest neighbors are ascertained for each point, as well as the arithmetic mean from the point to all of its neighbors. If distance is greater than the selected outlier threshold value, the point is deemed an outlier and is removed</p> <div style="display: flex; justify-content: space-around; align-items: center;">   </div> <div style="display: flex; justify-content: space-around; margin-top: 5px;"> Unfiltered Pointcloud Filtered Pointcloud </div>
	Down-sampling	<p>The measuring range is subdivided into voxels (squares) of equal size with adjustable edge length (voxel size). The arithmetic mean is determined for all of the points within a voxel. The output Pointcloud contains the arithmetic mean of each voxel.</p> <p>The sampling filter can be used to reduce the point density.</p> <div style="display: flex; justify-content: space-around; align-items: center;">   </div> <div style="display: flex; justify-content: space-around; margin-top: 5px;"> Unfiltered Pointcloud Sampled Pointcloud </div>

11.3 Module Pointcloud Region



11.3.1 Overview

Objective	<p>The relevant region used for evaluation should be as large as necessary and as small as possible.</p> <p>The simpler the region, the quicker the evaluation. In the simplest case, the region consists of just a rectangle. The smaller the initial Pointcloud of the region module, the quicker the evaluation of the subsequent modules which have linked this Pointcloud as an initial value. The area below or above the Pointcloud and the centroid of the area are additionally available.</p>
Abbreviated procedure	<p>Any desired area can be specified as the region of interest by adding, removing or customizing shapes. In addition to existing standard shapes, any number of various shapes can also be added and linked by means of simple set operations.</p> <p>Activate area calculation below or above the Pointcloud if necessary.</p>

11.3.2 Setting Parameters

Property





The following settings/results are displayed:

Process Time [us]	Process Time for process steps in the current module.						
Module State	Error codes provide support for troubleshooting.						
Points Inside region	The number of points inside the selected region.						
Points outside region	The number of points outside of the selected region.						
Input Pointcloud	Any available Pointcloud can be selected.						
Coordinate system	The module can be linked to a coordinate system if necessary. All search geometries within the module are thus aligned to the selected coordinate system.						
Simplification Tolerance	<p>The smaller the value the more precise the overall region. However, this leads to longer processing time. Standard value: 0.2 Value 0: maximum possible accuracy with longest processing time.</p> <p> NOTE! Only available in the extended mode.</p> <p> NOTE! This value is based on the Ramer-Douglas-Peucker algorithm.</p>						
Area calculation	<p>If area calculation is activated, the Pointcloud is joined into a polygon. The polygon is intersected by the drawn region and the corresponding area is read out. The following area calculation options are available:</p> <table border="1"> <tr> <td>Off</td> <td>Area calculation is deactivated as a standard feature.</td> </tr> <tr> <td>Above the curve</td> <td>The area above the Pointcloud is intersected by the area within the region. The common section and the centroid of the area are read out.</td> </tr> <tr> <td>Below the curve</td> <td>The area below the Pointcloud is intersected by the area within the region. The common section and the centroid of the area are read out.</td> </tr> </table>	Off	Area calculation is deactivated as a standard feature.	Above the curve	The area above the Pointcloud is intersected by the area within the region. The common section and the centroid of the area are read out.	Below the curve	The area below the Pointcloud is intersected by the area within the region. The common section and the centroid of the area are read out.
Off	Area calculation is deactivated as a standard feature.						
Above the curve	The area above the Pointcloud is intersected by the area within the region. The common section and the centroid of the area are read out.						
Below the curve	The area below the Pointcloud is intersected by the area within the region. The common section and the centroid of the area are read out.						

Function field

New shapes can be added from the module tool list.

1. Select the mathematical operation






	Add	Add the new shape to the overall shape.
	Subtract	Subtract the new shape from the overall shape.
	Symmetrical subtraction	The common area of the new shape and the overall shape without the intersection.
	Intersection	The intersection of the new shape and the overall shape.



NOTE!

The order of the shapes is dictated by the order in which they are created and cannot be subsequently changed. As a result, the overall shape of all previously existing shapes is always used for the offsetting of shapes.

2. Select a new shape

	Rectangle via two points	A rectangle is drawn with 2 points. The first corner of the rectangle is specified within the image area by left clicking with the mouse. The diagonally opposite corner of the rectangle is specified with a second click.
	Rectangle via three points	A rectangle is drawn with 3 points. The first corner of the rectangle is specified within the image area by the first click. The next click specifies one of the neighboring corners and the third click specifies the side opposite the side defined by the two points.
	Circle via 2 points	A circle is drawn with 2 points. The first click specified the center of the circle. The radius of the circle is specified by means of the second click.
	Circle via 3 points	A circle is drawn with 3 points. 3 points around the circumference of the circle are specified with 3 mouse clicks.
	Polygon	A polygon can be created with any desired number of clicks. Each click specifies one of the polygon's corners. Processing of the shape is ended by double clicking the last corner. Polygons can be specially processed within the image area. Individual points can be deleted by pressing and holding the Ctrl+Shift key and clicking the respective point with the left mouse key. A new point can be added to the polygon by pressing and holding the Alt+Shift key and left-clicking at the desired side of the polygon.

3. Draw a new shape within the image area as described.

Newly added shapes also appear in the list under "Set".

11.3.3 Configuration

The Pointcloud region module includes the following configuration options:

- Output Pointcloud
- Intersection Area
- Area Centroid
- Set: List of individual shapes

11.4 Module Pointcloud Measure

11.4.1 Overview

Objective	Check the profile for dimensional accuracy and detect edges, columns or seams. Enter tolerances for any ascertained dimensions.
Abbreviated procedure	Search for lines, arcs or circles on a height profile and output the coordinates of found points, such as end points of lines, center points of circles and start or rake angles of arcs. Also find, sort and count segments on a line or an arc. Determine spaces between points and found lines and determine the angle and intersections of geometries. Intersections with the axes of the coordinate system are also possible. Values for a given shape such as the center of the surface or start and end points are determined. Furthermore, turning points in the profile can be found relative to the linked coordinate system.

11.4.2 Setting Parameters

Property

The following settings/results are displayed:

Process Time [us]	Process Time for process steps in the current module.
Module State	Error codes provide support for troubleshooting.
Input Pointcloud	Any available Pointcloud can be selected.
Coordinate system	The module can be linked to a coordinate system if necessary. All search geometries within the module are thus aligned to the selected coordinate system.

Function field

Point	A fixed point can be positioned, or a point can be linked from another module.
Line	A search line is drawn. All points within the search area are used to define the line.
Arc	An arc is defined by means of its center, as well as its starting and end points. All points within the search area are used to define the arc.
Circle	A circle is drawn over two or three points. All points within the search area are used to define the circle.
Segments on Line	Lines are looked for in the search range which is defined by the search line and the search width.
Segments on Arc	Arc segments are looked for within the search range, which is defined by the search arc and the search width.
Turning points	Look for turning points such as global minimum and maximum.
Distance	The distance between different points or lines is calculated.
Angle	The intersection and the angle between two lines are ascertained. Furthermore, the angle of a line can be determined relative to the axes of the coordinate system.
Property of Geometry	Attributes such as the center of a shape can be selected.

11.4.3 Configuration

The measuring module includes the following configuration options:

- Find point
- Find line
- Find arc
- Find circle
- Find segments on line
- Find segments on arc
- Find turning points
- Calculate distance
- Calculate intersection
- Property of Geometry

11.4.3.1 Finding the Submodule Point

Properties	Found point	The coordinates of the found point are displayed.
	Input point	A fixed point can be positioned, or a point can be linked from another module.


11.4.3.2 Submodule Find Line, Arc or Circle

Objective	Find a line, circle or arc within the selected search area.
Abbreviated procedure	First of all, activate the function in the toolbar. The search line, search circle or search arc can then be drawn within the measuring range. The search range is determined by means of the search width. All points within this area are used to find the shapes, and the setting for the RANSAC distance threshold influences the stability of the search algorithm.

Where necessary, the search can be determined via the start and end of the geometry. Searching for a certain number of consecutive outliers is conducted to this end from the longest found segment in both directions, or the distance between two consecutive, valid points is analyzed. If the distance between two valid points is greater than the selected value, or if more consecutive outliers occur than tolerated, the starting or end point is set there and the parameters of the detected shape are set accordingly.

Property

The following settings/results are displayed:
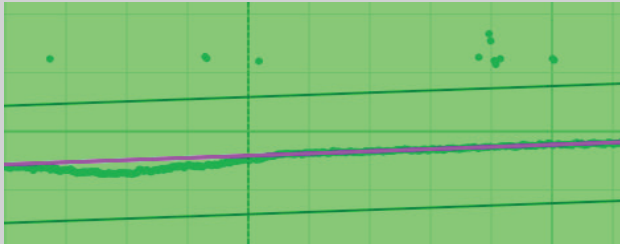
<p>Quality of Fit [%]</p>	<p>Percentage which indicates the relationship of the valid points to all points within the search area.</p> <p>Differentiation between valid points and outliers is determined by means of the outlier threshold distance value.</p>
<p>Threshold outlier distance</p>	<p>Permissible geometric distance from points to the found shape. If the distance to the point is greater than the selected threshold value, the point is evaluated as an outlier. The outlier threshold value is displayed in the search area.</p>  <p>This setting is used for consensus and the ascertainment of the beginning and end of a shape.</p>

Property

The RANSAC distance threshold value is used initially in order to ignore outliers when determining the shape.


The RANSAC distance threshold value specifies the threshold as of which a point is deemed an outlier when the RANSAC filter is used. The search algorithm is executed until 80% of the points have a distance from the shape which is less than the selected threshold.




NOTE!

- Default setting: 0.5.
- A small filter value (e.g. 0.1) increases the accuracy of the search algorithm, because a larger number of outlier points are ignored when searching for the shape. However, evaluation time is also increased.
- The following example shows a circle with a RANSAC distance threshold value of 0.1:

Threshold
Ransac Distance

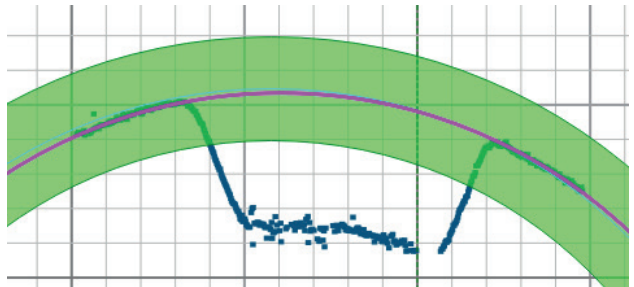


- With a large pre-filter value (e.g. 10) there are fewer outlier points which means that more points are used in order to ascertain the shape. Evaluation duration is reduced. The following example shows a circle with a RANSAC distance threshold value of 10:

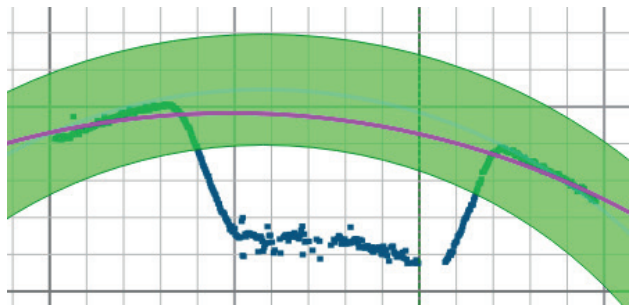


NOTE!

- Only available in the extended mode.

Property

Search width [unit]	Specify the width of the search geometry.
Fit Maximal Geometry	<p>For performance reasons, searching for the starting and end points of a shape is deactivated as a default setting.</p> <p>Off</p> <p>In the case of a line, the intersections of the found line with the edge of the search area are read out as starting and end points.</p> <p>In the case of a circle or an arc, the starting angle (0°) and the end angle (360°) are indicated.</p>
	<p>On</p> <p>Further parameters for searching for start and end points of the shape appear.</p> <p>The start and end points of the line, as well as the launching and rake angles of the arc, are found if a certain number of consecutive outliers occur, or if there's an excessively large distance between two consecutive, valid points.</p> <p> NOTE! This value is not available when searching for a circle.</p>


If “Adjust maximum geometry” is activated, the following additional settings appear as well:

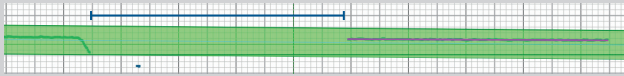Maximal Gap Between Valid Points	<p>If the distance between two consecutive, valid points is greater than the selected value, the starting and end points of the line, as well as the launching and rake angles of the arc, are defined here. The distance between the projected points on the found shape is relevant.</p> <p>In our example, the tolerated gap between two valid points is smaller than the actually occurring gap. The shape's end point is thus fixed at the corresponding location.</p> 
---	--

Property

Maximum outliers in Row

The starting and end points of a line or the launching and rake angles of an arc can also be found by means of a certain number of consecutive outliers. The value determines how many directly consecutive outliers are tolerated. In our example, zero directly consecutive outliers are tolerated.

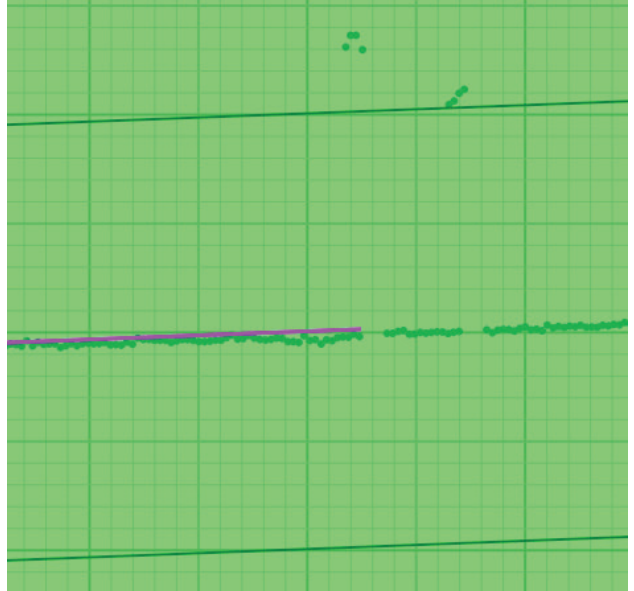

NOTE!

- Value 0: No outliers are tolerated. The beginning and end of the shape are set at the first outlier.
- Value 2 (default setting): Two consecutive outliers are tolerated. If there are three or more consecutive outliers, the starting and end points are set there.
- Using a large value makes the search for the beginning and end of the shape more resistant to numerous consecutive outliers.

Outliers are specified with the outlier threshold value.

Point to Use [%]


The percentage indicates , how many points will be used to ascertain the shape.

Points to Use Strategy

The points which should be used to ascertain the geometry are specified. Selection can be made between the first and the last points on the search geometry.

The following values are available for the search geometry and the detected geometry:

- Line: point 1 (start point) and point 2 (end point)
- Circle: Diameter
- Arc: diameter, start angle (angle between the x-axis of the coordinate system and start point of the geometry in clockwise direction) and rake angle (angle between the start point and end point of the geometry in clockwise direction)
- A Start angle of 270° and a Span angle of 45° are shown in the example.

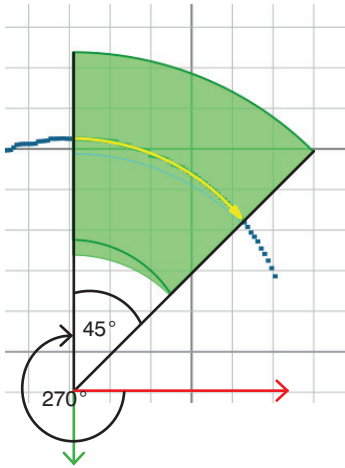

11.4.3.3 Submodule Find Segments on Line or Arc

Objective

Find, sort and count several segments on a search line or a search arc.


Abbreviated procedure

Activate the function in the toolbar. Draw the search line or the search arc into the measuring range. The search range is determined by means of the search width. All points within this area are used to find the shapes, and the setting for the RANSAC distance threshold influences the stability of the search algorithm.

Specify the number of segments, minimum and maximum segment lengths and the sorting rule for segments. Length, as well as starting point, middle point and end point, are read out for each segment. The number of detected segments is also available.

Property

The following settings/results are displayed:

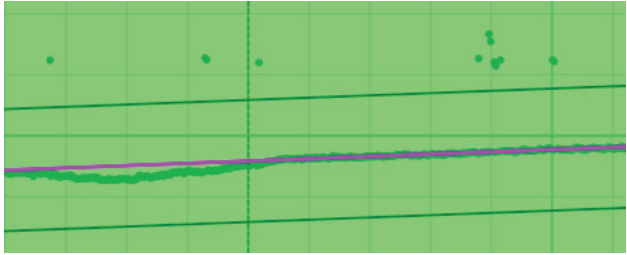Quality of Fit [%]	Percentage which indicates the relationship of the valid points to all points within the search area. Differentiation between valid points and outliers is determined by means of the outlier threshold distance value.
Segments True Count	Number of detected segments. The upper and lower thresholds of the value are adjustable.
Threshold outlier distance	<p>Permissible geometric distance from points to the found shape. If the distance to the point is greater than the selected threshold value, the point is evaluated as an outlier. The outlier threshold value is displayed in the search area.</p>  <p>This setting is used for consensus and the ascertainment of the beginning and end of a shape.</p>

Property

Threshold Ransac Distance


The RANSAC distance threshold value is used initially in order to ignore outliers when determining the shape.

The RANSAC distance threshold value specifies the threshold as of which a point is deemed an outlier when the RANSAC filter is used. The search algorithm is executed until 80% of the points have a distance from the shape which is less than the selected threshold.




NOTE!

- Default setting: 0.5.
- A small filter value (e.g. 0.1) increases the accuracy of the search algorithm, because a larger number of outlier points are ignored when searching for the shape. However, evaluation time is also increased.
- The following example shows a circle with a RANSAC distance threshold value of 0.1:

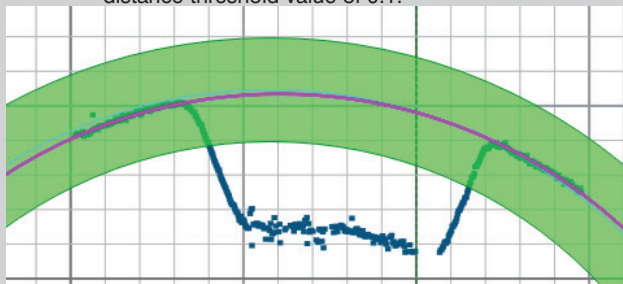



- With a large pre-filter value (e.g. 10) there are fewer outlier points which means that more points are used in order to ascertain the shape. Evaluation duration is reduced. The following example shows a circle with a RANSAC distance threshold value of 10:

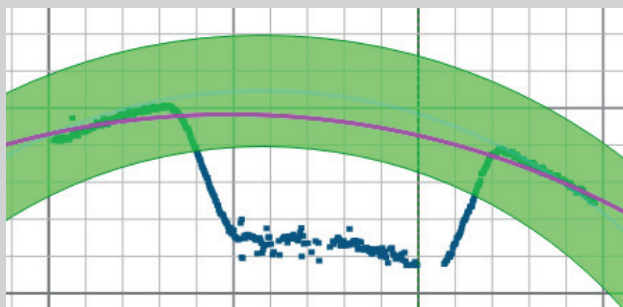

NOTE!

Only available in the extended mode.

Property
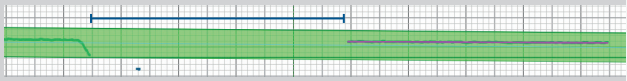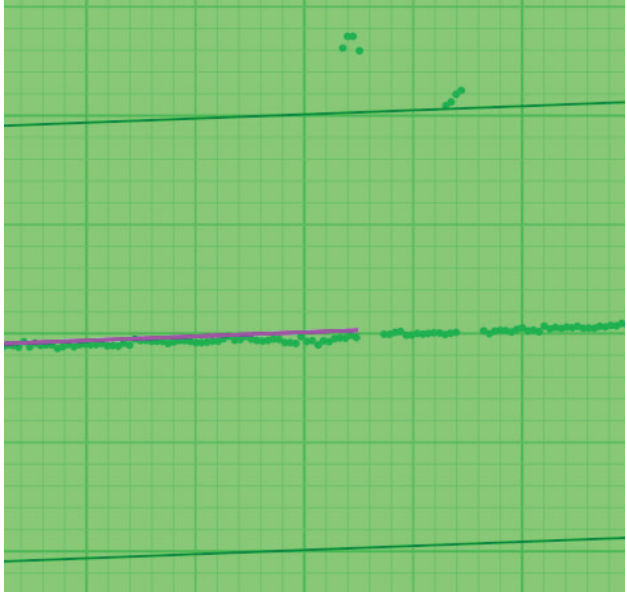
<p>Search width [unit]</p>	<p>Specify the width of the search geometry.</p>
<p>Maximal Gap Between Valid Points</p>	<p>If the distance between two consecutive, valid points is greater than the selected value, the starting and end points of the line, as well as the launching and rake angles of the arc, are defined here. The distance between the projected points on the found shape is relevant.</p> <p>In our example, the tolerated gap between two valid points is smaller than the actually occurring gap. The shape's end point is thus fixed at the corresponding location.</p> 
<p>Maximum outliers in a Row</p>	<p>The starting and end points of a line or the launching and rake angles of an arc can also be found by means of a certain number of consecutive outliers. The value determines how many directly consecutive outliers are tolerated. In our example, zero directly consecutive outliers are tolerated.</p> 

Property

Maximum outliers in a Row



NOTE!

- Value 0: No outliers are tolerated. The beginning and end of the shape are set at the first outlier.
- Value 2 (default setting): Two consecutive outliers are tolerated. If there are three or more consecutive outliers, the starting and end points are set there.
- Using a large value makes the search for the beginning and end of the shape more resistant to numerous consecutive outliers.

Outliers are specified with the outlier threshold value.

Segment Max Count	Maximum number of expected segments.	
Sorting rules	Sort detected segments:	
	Size [longest first]	Sort segments in descending order according to size.
	Size [shortest first]	Sort segments in ascending order according to size.
	Position on search geometry	Sort segments according to position on the search geometry.
Segments Minimal Length	Minimum length of the segments.	
Segments Maximal Length	Maximum length of the segments.	

11.4.3.4 Submodule Find Turning Point

Objective Ascertain turning points such a high and low points relative to the linked coordinate system.

Abbreviated procedure Activate the function in the module toolbar and select the required turning points.

Property The following settings/results are displayed:

Points True Count	Display of the number of detected points.	
Find method	The following turning points can be selected:	
	Global minimum	The point with the largest Z value relative to the linked coordinate system.
	Global maximum	The point with the smallest Z value relative to the linked coordinate system.
	Local minimum	A search region is found around every point, which is defined by the radius. If the difference in the height values between the relevant point and the points in the search region (maximum or average height difference) is larger than the set threshold value, a local minimum is found at this point. The local minimums can be sorted by x-value, z-value or z-distance.
	Local maximum	A search region is found around every point, which is defined by the radius. If the difference in the height values between the points in the search region (maximum or average height difference) and the relevant point is larger than the set threshold value, a local maximum is found at this point. The local maximums can be sorted by x-value, z-value or z-distance.
Points Max Count	Maximum number of points	
Radius [unit]	For local maximums and minimums, the size of the search range can be defined by the radius.	
Threshold [unit]	The height difference that must be exceeded for a point to be detected as a local minimum or maximum.	
Distance mode	From the points in the search range, the average or the maximum z-value can be used.	
Sort Rule	The found local minimums or maximums can be sorted by x-value, z-value or z-distance.	

11.4.3.5 Distance Calculation Submodule

- Objective** Ascertain distance between two points, or between a point and a line.
- Abbreviated procedure** Activate the function in the toolbar first.
Click on the first point or the first line. Then click on the second point or the second line.
- Property** The following settings/results are displayed:

Output distance	The distance value is shown. The value can be furnished with any desired upper and lower thresholds.	
Calculation method	Geometric distance	Shortest path from a point to a line (perpendicular).
	Center to center	Shortest path between two segment center points.

11.4.3.6 Submodule Intersection Point

- Objective** The angle and the intersection between two lines or a line and an axis of the coordinate system are measured.
- Abbreviated procedure** First activate the function in the module toolbar.
Click the first line and then mark the second line or an axis of the coordinate system.
- Property** The following settings/results are displayed:

Output Intersection Point	The intersection's coordinates are displayed.	
Output angle [degree]	The angle between the two shapes is displayed.	
	The orientation of each line is defined by the starting and end points. The detected angle corresponds to the angle of intersection of the two lines in the direction towards their starting points.	

11.4.3.7 Submodule Property of Geometry

- Objective** Special characteristics of a shape, such as its center, can be ascertained.
- Abbreviated procedure** Activate the function in the module toolbar and then click the relevant shape.
- Property** The following settings/results are displayed:

Output point	The coordinates of the relevant point are displayed.	
Type of Property	Center of surface	The center of the surface is found.
	Start of surface	The starting point of the shape is found.
	End of surface	The end point of the shape is found.
	Highest Point	The point on the geometry with the lowest z value is found.
	Lowest Point	The point on the geometry with the highest z value is found.
	Leftmost Point	The point on the geometry with the lowest x value is found.
	Rightmost Point	The point on the geometry with the highest x value is found.

11.5 Module Pointcloud Calculus

11.5.1 Overview

Objective Read out the highest or lowest point of the original sensor coordinate system.



NOTE!

The global minimum or maximum relative to the linked coordinate system is detected in the measuring module under turning points (see “11.4.3.4 Submodule Find Turning Point”, page 169).

Edge points can also be found.

Abbreviated procedure Click the required function in the module toolbar. The coordinates of the special point are displayed.

11.5.2 Setting Parameters

Property The following settings/results are displayed:

Process Time [us]	Process Time for process steps in the current module.
Module State	Error codes provide support for troubleshooting.
Input Pointcloud	Any available Pointcloud can be selected.
Coordinate system	The module can be linked to a coordinate system if necessary.

Function field

Find highest point	The point with the smallest Z value (highest point) is read out.
Find lowest point	The point with the largest Z value (lowest point) is read out.
Find edges	Edge points can be found on the height profile. For this, the z-value differences are analyzed according to the first derivation or the derivation of the z-value differences evaluated according to the second derivation.

11.5.3 Configuration

The calculus module includes the following configuration options:

- Set

11.5.3.1 Submodule Find Highest Point

Objective The point with the smallest Z value is read out from the original coordinate system of the 2D/3D Sensor.
In the case of a linked coordinate system as well, this setting is retained for performance reasons.

Property The following settings/results are displayed:

Output highest point	The coordinates of the highest point are read out relative to the linked coordinate system.
-----------------------------	---

11.5.3.2 Submodule Find Lowest Point

Objective The point with the largest Z value is read out from the original coordinate system of the 2D/3D Sensor.
In the case of a linked coordinate system as well, this setting is retained for performance reasons.

Property The following settings/results are displayed:

Output lowest point	The coordinates of the lowest point are read out relative to the linked coordinate system.
----------------------------	--

11.5.3.3 Submodule Find Edges

Objective

Edge points are output by the origin coordinate system of the 2D/3D Sensor. In the case of a linked coordinate system as well, this setting is retained for performance reasons.

Property

The following settings/results are displayed:

Edges True Count	The number of detected edges is output.
Edges Max Count	The maximum number of edges to be found is adjustable.
Neighbors	A direct filtration is possible via the number of neighbors, so that individual outlier points do not result directly in an edge detection.
Threshold gradient positive	Positive threshold value that must be exceeded as a minimum for an edge to be detected.
Threshold gradient negative	Negative threshold value that must be exceeded as a minimum for an edge to be detected.
Minimum length	Minimum space between the minimum and maximum of the height profile (1st derivation) or between the minimum and maximum of the first derivation of the height profile (2nd derivation) for the point to be detected as an edge.
Maximal length	Maximum space between the minimum and maximum of the height profile (1st derivation) or between the minimum and maximum of the first derivation of the height profile (2nd derivation) for the point to be detected as an edge.
Edge selection	The center point, the start or the end point of the found edge can be output.
Edge type	Only rising, only falling or both edge types can be output.
Sort Rule	The found edges can be sorted by x-value, z-value, edge value or read-in sequence.
Method	The first or the second derivation can be used for the edge search.
Length mode	The x-distance or the xz-distance can be used to analyze the minimum and maximum length.

12. Software Modules for Results Calculation

12.1 Module Logic

12.1.1 Overview

Objective	Logically link several values with each other.
Procedure	Define several values to be linked with each other. Fixed values can be used, as well as values that come from a result.

12.1.2 Setting Parameters

Property	The following settings/results are displayed:
Process Time [us]	Process Time for process steps in the current module.
Module State	Error codes provide support for troubleshooting.
Output	The results are displayed
Logic function	The type of mathematical function is specified: <ul style="list-style-type: none">• A and B• A or B• A xor B• A nand B• A nor B
Inputs Max Count	Number of inputs. In the inputs submodule, the number of inputs appear that can be linked with a fixed value or with a result from the application.

12.2 Mathematics Module

12.2.1 Overview

Objective Calculate several numbers with each other.

Procedure First of all, the mathematical operands are specified which will be used to perform a mathematical operation with the numeric values. Fixed values can be used, as well as values that come from a result.

12.2.2 Setting Parameters

Property The following settings/results are displayed:

Process Time [us]	Process Time for process steps in the current module.
Module State	Error codes provide support for troubleshooting.
Output	The calculated results are displayed.
Math function	The type of mathematical function is specified: <ul style="list-style-type: none">• $A + B$• $A - B$• $A * B$• A/B
Inputs Max Count	Number of inputs. In the inputs submodule, the number of inputs appear that can be linked with a fixed value or with a result from the application.

12.3 Module Numeric Comparison

12.3.1 Overview

Objective Compare two numeric values with each other.

Procedure First of all, the mathematical operands are specified which will be used to compare the two numeric values with each other. Fixed values can be used, as well as values that come from a result.

12.3.2 Setting Parameters

Property The following settings/results are displayed:

Process Time [us]	Process Time for process steps in the current module.
Module State	Error codes provide support for troubleshooting.
Output	The calculated results are displayed.
Compare function	<p>The type of mathematical function is specified:</p> <ul style="list-style-type: none"> • $A > B$: A is larger than B • $A < B$: A is smaller than B • $A \geq B$: A is larger than or equal to B • $A \leq B$: A is smaller than or equal to B • $A == B$: A is equal to B • $A != B$: A is not equal to B
Input A	Fixed value or variable event from the application
Input B	Fixed value or variable event from the application

12.4 Module Match Code

12.4.1 Overview

Objective Check whether a value matches the taught-in match code.

Procedure A match code with the appropriate settings can be entered via this module.

12.4.2 Setting Parameters

Property The following settings/results are displayed:

Process Time [us]	Process Time for process steps in the current module.
Module State	Error codes provide support for troubleshooting.
Any match	If any character string is identical to the input character string, the parameter is set to 1 (checkbox activated).
No match	If no character string is identical to the input character string, the parameter is set to 1 (checkbox activated).
Input string	The match code can either be entered statically as text or a combination of text and characters, or dynamic reference can be made to a software parameter via a link.
Number elements	Number of possible texts for comparison.

12.4.3 Configuration

The match code module includes the following configuration options:

- Match code #1

12.4.3.1 Match Code #1

Property

The following settings/results are displayed:

Match	Display indicating whether or not the match code comparison was successful. Box activated – evaluation successful.	
Mismatch	Display indicating whether or not the match code comparison was successful. Box activated – evaluation not successful.	
Match code	The text or combination of characters on which comparison will take place is selected. The following place holders are also available for the characters:	
	Place holder	For character
	* ? [abc] [^A]	Any String Count. Exactly one character. a, b or c may appear at this position. Any character other than "A" can appear at this position.
Match Teach	The current text or combination of characters is saved as a match code.	

12.5 Module Statistic

12.5.1 Overview

Objective The application can be fine-tuned on the basis of statistical sensor data.

Procedure Various statistical data can be calculated and displayed. Up to 100 most recently acquired values can be analyzed.


12.5.2 Setting Parameters

Property The following settings/results are displayed:

Process Time [us]	Process Time for process steps in the current module.
Module State	Error codes provide support for troubleshooting.
Channel Count	Number of parameters which will be acquired for statistical purposes.


Function field

Insertion of the statistics field



The statistical evaluations are displayed in a separate area.

Statistics window

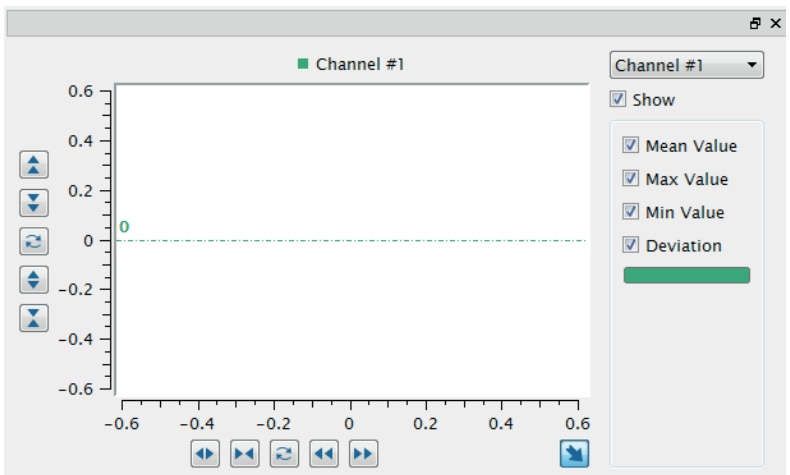

12.5.3 Configuration


The number of channels determines the number of listed channels. The respective statistics value can be displayed in the channel.

- Channel #1


12.5.3.1 Submodule Channel #1

Objective A certain value can be analyzed.

Property The following settings/results are displayed:

Minimum	The lowest value of the most recently observed measured value results is indicated.
Maximum	The highest value of the most recently observed measured value results is indicated.
Mean	The arithmetic mean value is calculated from the most recently observed measured value results.
Median	All values are sorted according to magnitude. The point in the middle (central) location is read out as the median.
Standard deviation	<p>Standard deviation is determined on the basis of the most recently observed measured value results.</p> <p>Standard deviation is the square root of the sum of the squared differences from the mean value divided by the number of values.</p> $s = \sqrt{\frac{1}{n} * \sum_{i=1}^n (x_i - \bar{x})^2}$
Trend	<p>All observed measured value results are equally subdivided into new and old events by means of the trend ratio. The arithmetic mean value is determined for the old, as well as for the new measured values. The difference between these arithmetic mean values is the trend.</p> <p> NOTE! If the trend is close to 0, the measured value has remained relatively constant during the observation time period.</p>
Good	The most recently observed measured value results are used to determine how often the measured value is within the specified tolerance. The good portion is indicated as a percentage of all analyzed values.

Property

Input to Track	A variable application result can be linked to statistical evaluation.
Reset statistic	All most recently observed measured value results, listed under result values, are deleted.
Ratio for Trend	<p>All observed measured value results are equally subdivided into new and old events. The ratio of the number of old results to the number of new results is indicated as the trend ratio. This ratio is set to 1 as a default value. Example of a trend ratio of 1.5 for 5 observed values:</p> <div data-bbox="515 399 873 670" style="text-align: center;"> <p>The diagram illustrates a sequence of five values: Value #0, Value #1, Value #2, Value #3, and Value #4. Values #0, #1, and #2 are grouped under the label 'Old results' with a bracket. Values #3 and #4 are grouped under the label 'New results' with a bracket. A vertical blue arrow points downwards from the word 'Past' at the top to the word 'Present' at the bottom, indicating a progression of time from past to present.</p> </div> <p>This setting is used for the calculation of the trend.</p> <p> NOTE! The larger the trend ratio, the more influence individual outliers have on the trend.</p>
Number of values	Specify the number of most recent events to be observed.

13. Software Modules for Data Output

13.1 Module Device IO Unit (weQube Only)

13.1.1 Overview

Objective The inputs and outputs of the weQube Smart Camera can be configured in order to specify which action will take place as the result of a given event.

Procedure Any desired results can be assigned to an output.
Any desired inputs can be configured as well.

13.1.2 Setting Parameters

Property	The following settings/results are displayed:	
	Process Time [μ s]	Sensor processing time for the module
	Module State	Error codes for troubleshooting support (see section "14.4 Module Status" on page 213).
	Error Handling	Performance of the following read-out options, for example an output, in the event of an error

13.1.3 Configuration

The I/O device module includes the following configuration options:

- I/O timings
- Digital I/O #1
- Digital I/O #2
- Digital I/O #3
- Digital I/O #4
- Digital I/O #5
- Digital I/O #6
- Error handling

The digital I/Os are originally preset as follows:

Digital I/O	no.	Type	Polarity	Mode	Linking/function
	1	Output	Positive	PNP	-
	2	Input	Positive	-	Input Level
	3	Output	Positive	PNP	-
	4	Output	Positive	PNP	Output process
	5	Input	Positive	-	Trigger
	6	Output	Negative	Push-pull	Output Flash (external illumination)

13.1.3.1 IO Timings

Objective Time settings can be selected for the inputs and outputs.

Property


<p>Process Time [μs]</p>	<p>Sensor processing time for the module</p>
<p>Module State</p>	<p>Error codes for troubleshooting support (see section “14.4 Module Status” on page 213).</p>
<p>Time unit</p>	<p>Milliseconds / quadrature pulse If “Timing unit” is set to quadrature pulse, all other time values must also be, entered in pulses, and not in any unit of measure for time. The internal counter is triggered either by a millisecond tick or by quadrature pulses.</p>
<p>Trigger delay</p>	<p>Delay time between the trigger signal and image recording can be set within a range of 0 to 10,000 ms. Sequence in Trigger mode with Trigger Delay</p>
<p>Output Hold Time</p>	<p>The output hold time specifies the duration of the output signal. Output signal duration can be set within a range of 0 to 10,000 ms. Note: With an output hold time of 0 (default value), the output retains its status until a subsequent calculation causes its status to change. Sequence in Trigger mode with Trigger Delay and Output Hold Time</p>

Property

Event 1 Delay

Output signal delay can have a value within a range of 0 to 10,000 ms or pulses (in the case of a rotary encoder input). The output must be linked to the corresponding event to this end. Up to 4 different delays can be selected, which can be linked as often as desired to corresponding outputs.


Sequence in Trigger mode and Trigger Delay/Event Delay/Output Holdtime

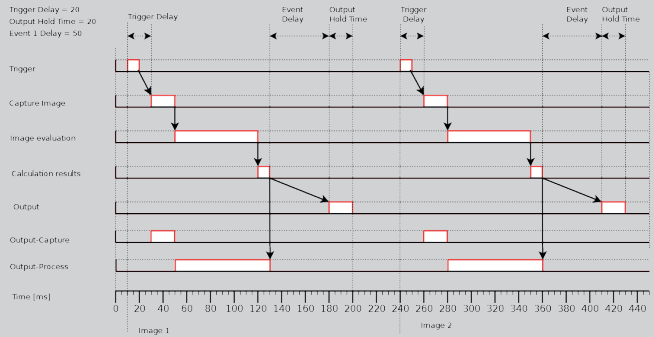

Note: In trigger mode, the next trigger signal for renewed image recording might be generated although the sensor is still busy with image evaluation or calculation. In this case, the output process signal has not yet been reset to “0”, so that the trigger signal does not cause renewed image recording at the sensor. An “empty” image is generated which is subjected to the entire image processing sequence, thus leading to negative results. This assures that there’s a result for each and every trigger pulse.

Sequence in Trigger mode with Trigger-Queue and ignored Trigger

Trigger Delay = 0
Output Hold Time = 0
Event 1 Delay = 0

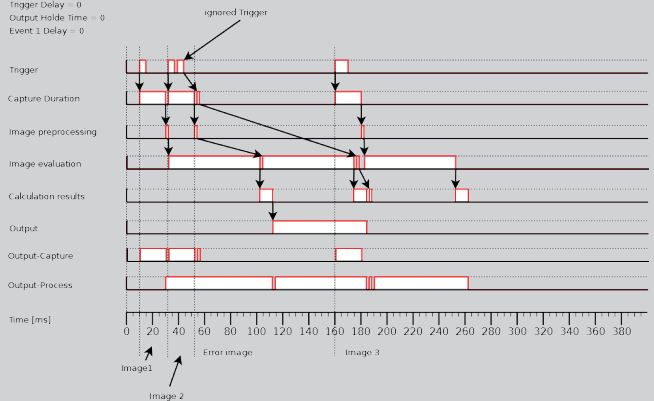


13.1.3.2 Digital I/Os 1 to 6 Submodule

Objective The digital inputs and outputs can be configured.

Property	Process Time	Sensor processing time for the module [μs]
	Module State	Error codes for troubleshooting support (see section “14.4 Module Status” on page 213).
	I/O value	The input’s status is displayed. With an output, this value can be linked with a result from the application.
	I/O type	The type of input or output can be specified: <ul style="list-style-type: none"> • Type not used. • Type input. • Type output.
	I/O logic	The logic is defined. <ul style="list-style-type: none"> • Positive logic. • Negative logic.
	I/O function	The function is defined. <p>Output Fixed value or variable event from the application</p> <p>Output Flash Illumination output for external illumination.</p> <p>Output Process The output is switched if the sensor is occupied with an evaluation. The sensor is ready for new trigger pulses during this time.</p> <p>Output Capture If the output signal is high, the sensor records an image. If a trigger pulse is generated during this time, an empty image is generated and an internal error occurs. This error image is forwarded to the downstream processes. It’s assured that no trigger pulses are lost.</p> <p>Output Project Selection This output is used to acknowledge successful switching from one project to another.</p> <p>Input Level The input is at high level for as long as a signal is applied to the input. As soon as the signal is interrupted, the input is reset to low level.</p> <p>Input Edge The input is set to high level as soon as a positive edge is applied to the input.</p> <p>Input Trigger The sensor generates an image recording as soon as a trigger pulse is applied to the input. This input is exclusively responsible for image recording.</p> <p>Input Quadrature The input is used as a rotary encoder input. Note: In the case of a rotary encoder, two signals are read out which are out of phase with each other.</p>

I/O function

**Input
Quadrature**

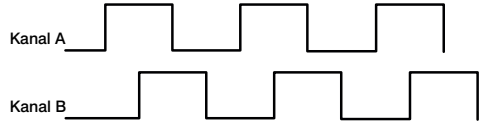

These two signals have to be connected to two sensor pins, regardless of order. The selected pins have to be connected to quadrature input in the weQube software. The time unit must also be set to the quadrature pulses unit for the IO timings. All IO timings are now shown in pulses, not milliseconds.

Example: A further pin can now be used as a hardware trigger input and the number of pulses required to cause image recording after the hardware trigger signal has occurred can be entered to the trigger delay settings. You can also set up an event delay in order to specify after how many pulses certain outputs will be switched.

**Input Project
Selection**

The input is used to change projects and reacts to the project change pulse sequence.

NOTE!

To enable the project change to take place via the digital inputs, the project name of all relevant projects must be saved in the format "xxx_testproject" (x: any whole number from 0 to 9). Example: 01_testproject.u_p
Up to 254 projects can be addressed via the digital inputs.




NOTE!

In all relevant projects, the same digital input and output must be set for the project change! Example: Digital input 3 is defined as the project change input in all projects and output 4 is defined as the project change output in all projects.



Procedure:

1. Apply voltage (> 7 V) for the time T_{EN} on the digital input used as the project change input. Project change mode is now active.
2. Each positive edge is counted in the project change mode. (One positive edge = project 1, two positive edges = project 2 etc.), until a voltage of less than < 2 V has been applied to the project change input for a duration of T_{DIS} .
3. If an output has been set up as a project change output, the project selection is read out from this output using the number of pulses to identify the project number.

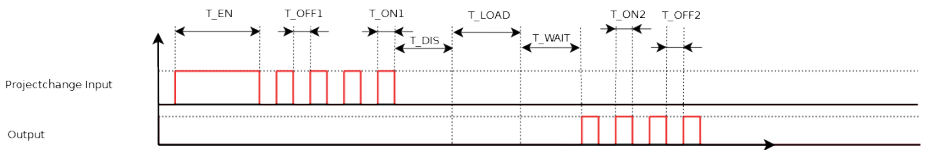

Designation	Typical	Min	Max
T_{EN}	2000 ms	1000 ms	5000 ms
T_{OFF1}	250 ms	100 ms	1000 ms
T_{ON1}	250 ms	100 ms	1000 ms
T_{DIS}	1000 ms	1000 ms	-
T_{LOAD}	12000 ms	10000 ms	15000 ms
T_{WAIT}	1000 ms	-	-
T_{OFF2}	250 ms	-	-
T_{ON2}	250 ms	-	-

Output Mode	The polarity of the output is specified. <ul style="list-style-type: none"> • PNP. • NPN. • PushPull.
Event Link	The output can be linked to one of the 4 events. As a result, the output is switched with a delay amounting to the time selected under IO timings.

13.1.3.3 Error Handling

This setting can be used to set performance of the outputs when a linked event demonstrates an error status.

Property

The following settings are displayed:

Substitute BOOL types by	If this checkbox has been activated, all results of the Boolean type are replaced by the active value, if the linked file type demonstrates an error.
--------------------------	---

13.2 Module Device IO Unit (Control Unit Only)

13.2.1 Overview

Objective Configure the inputs and outputs at the Control Unit.

Abbreviated procedure Any desired results can be assigned to an output. The inputs can be configured as well.



NOTE!

The I/O device module can be used in several applications, where different outputs must be used for each. The same digital output may not be linked in several applications at the same time.

13.2.2 Setting Parameters

Property The following settings/results are displayed:

Process Time [us]	Process Time for process steps in the current module.
Module State	Error codes provide support for troubleshooting.
Error Handling	Performance of the following read-out options, for example an output in the event of an error.

13.2.3 Configuration

The I/O device module includes the following configuration options:

- Digital input #1
- Digital input #2
- Digital input #3
- Digital input #4
- Digital input #5
- Digital input #6
- Digital input #7
- Digital input #8
- Digital output #1
- Digital output #2
- Digital output #3
- Digital output #4
- Digital output #5
- Digital output #6
- Digital output #7
- Digital output #8
- Error Handling

13.2.3.1 Submodule Digital Input 1-8

Objective

Configure the digital inputs.

Property

The following settings/results are displayed:

Process Time [us]	Process Time for process steps in the current module.	
Module State	Error codes provide support for troubleshooting.	
I/O value	The input's status is displayed.	
I/O type	Input	
I/O logic	Input logic is specified. <ul style="list-style-type: none">• Positive logic• Negative logic	
I/O function	Input Level	The current level at the input pin is evaluated.


13.2.3.2 Submodule Digital Output 1-8

Objective


Configure the digital outputs.

The graphics show the switching behavior of the digital outputs for different trigger modes.

Trigger Selector: Line Start
 Trigger Source: Line 3
 Trigger Activation: Rising Edge
 Trigger Delay: 0 µs
 Exposure Time: 200 µs

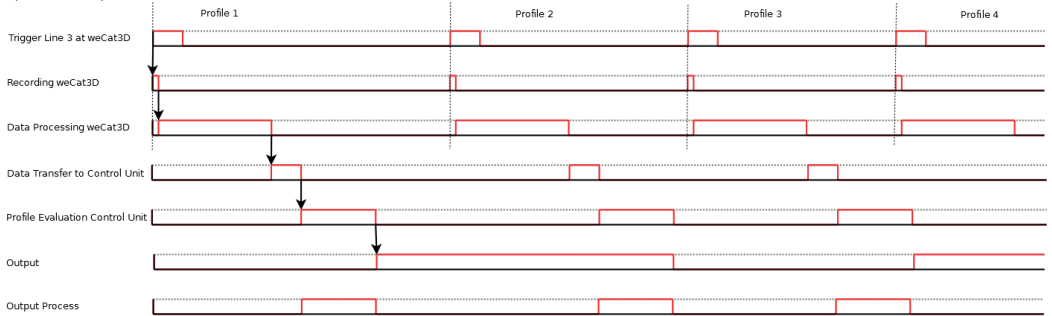

Trigger Selector: Line Start
 Trigger Source: Intern
 Exposure Time: 200 µs

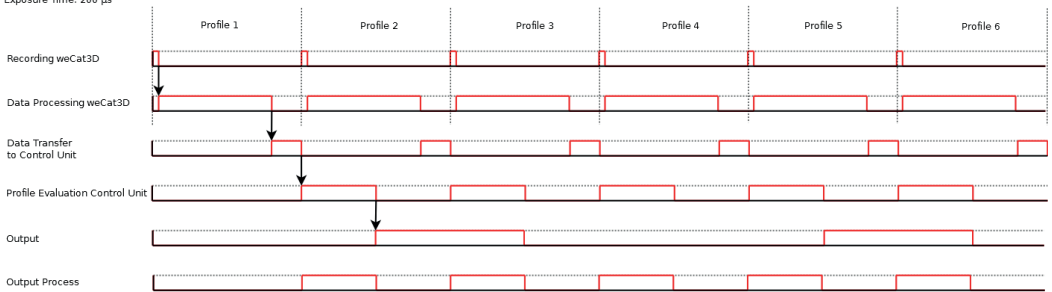

Property

The following settings/results are displayed:

Process Time [us]	Process Time for process steps in the current module.	
Module State	Error codes provide support for troubleshooting.	
I/O value	The output value can be set manually to high or low, or linked to a result from the evaluation.	
I/O type	Selection option between not used and output type. If a digital output is already in use in a different uniVision Application, the relevant output must be set to not used in all other uniVision Applications.	
I/O logic	Output logic is specified. <ul style="list-style-type: none"> • Positive logic • Negative logic 	
I/O function	Output	Fixed value or variable event from the application
	Process output	The output is active while the evaluation is taking place.
Output Mode	PNP	

13.2.3.3 Submodule Error Handling**Objective**

This setting can be used to set performance when a linked event demonstrates an error status.

Property

The following settings/results are displayed:

Substitute BOOL types by	If this checkbox has been activated, all settings of the Boolean type are replaced by the active value, if the linked data type demonstrates an error.
---------------------------------	--

13.3 Module Device Display (weQube Only)

13.3.1 Overview

Objective The OLED display can be adapted to meet you individual needs.

Procedure After the type of display has been specified, the desired values or results can be displayed depending on the selected setting.

13.3.2 Setting Parameters

Property The following settings/results are displayed:

Process Time [μs]	Sensor processing time for the module
Module State	Error codes for troubleshooting support (see section “14.4 Module Status” on page 213).
Output mode	The results can be output formatted or unformatted.
Error Handling	If a linked value is in error state, the value used to replace the result can be defined.

13.3.3 Configuration

The display module includes the following configuration options:

- Text
- Indication
- Numeric
- Match code
- Teach
- Formatted
- Error Handling

13.3.3.1 Submodule Text

Objective Individual texts and specific results can be displayed.

Property The following settings/results are displayed:

Text 1	Line 1 can be entered statically, or it can be linked to a value in the software.
Text 2	Line 2 can be entered statically, or it can be linked to a value in the software.
Text 3	Line 3 can be entered statically, or it can be linked to a value in the software.
Text 4	Line 4 can be entered statically, or it can be linked to a value in the software.

13.3.3.2 Submodule Indicator

Objective Six different Boolean states can be displayed, for example output switching statuses.

Property

Indication 1	Link to the desired parameter.
Indication 2	Link to the desired parameter.
Indication 3	Link to the desired parameter.
Indication 4	Link to the desired parameter.
Indication 5	Link to the desired parameter.
Indication 6	Link to the desired parameter.

13.3.3.3 Submodule Numeric

Objective Display a line of text and a numeric value, including a bar graph.

Property

Description	A descriptive text or any desired parameter can be entered.
Value	Link to the desired parameter.

13.3.3.4 Submodule Match Code

Property

Match element	Link to the desired match code result.
---------------	--

13.3.3.5 Submodule Teach

Objective

Up to six different parameters can be changed via the OLED menu. The desired teach-in function must first be linked to the relevant memory location of the OLED display in the software.

Teach-in and the corresponding number can then be selected on the OLED display →. After pressing the T key at the sensor, the currently ascertained value is accepted.

Property

Teach 1	Display the current teach-in status
Teach 2	Display the current teach-in status
Teach 3	Display the current teach-in status
Teach 4	Display the current teach-in status
Teach 5	Display the current teach-in status
Teach 6	Display the current teach-in status

13.3.3.6 Submodule Formatting Options

Objective

Carry out the formatting of the characters.

Property

The following settings/results are displayed:

Integer	The number of digits can be defined. The plus/minus sign can also be read out if required.
Floating point	The number of digits before and after the comma can be defined. The plus/minus sign can also be read out if required.
Boolean	A Boolean value can be output as 0/1 or as true/false.

13.3.3.7 Submodule Error Handling

This setting can be used to set performance of the property when a linked event demonstrates an error status.

Property

The following settings are displayed:

Substitute BOOL types by	If this checkbox has been activated, all properties of the Boolean type are replaced by the active value, if the linked file type demonstrates an error.
Substitute INT types by	The numeric value can be specified which is used as a substitute value in the event of a linked data type which is faulty.
Substitute STRING types by	The text is specified which is used as a substitute text, when the linked data type is faulty.

13.4 Module Device Indicator (weQube only)

13.4.1 Overview

- Objective** The signal LEDs can be used for visualizing parameter states such as the correctness or error frequency of objects.
- Note** For using signal LEDs on the weQube, the light mode must be set to flash (see “9.1.2 Setting Parameters”, page 62). In continuous illumination mode, the signal LEDs are inactive to avoid influencing the image recording.
- Procedure** The red and green indicator LEDs included in the sensor’s internal illumination can be assigned to events, so that they light up when the respective event occurs.

13.4.2 Setting Parameters

Property The following settings/results are displayed:

Process Time [μs]	Sensor processing time for the module
Module State	Error codes for troubleshooting support (see section “14.4 Module Status” on page 213).
Green Indicator Value	The green LED can be statically switched on or off permanently. Dynamic linking with other project data for visualization is also possible.
Red Indicator Value	The red LED can be statically switched on or off permanently. Dynamic linking with other project data for visualization is also possible.
Green Logic	Logic for the green LED can be edited. <ul style="list-style-type: none">• Positive logic.• Negative logic.
Red Logic	Logic for the red LED can be edited. <ul style="list-style-type: none">• Positive logic.• Negative logic.

13.4.2.1 Submodule Error Handling

This setting can be used to set performance of the property when a linked event demonstrates an error status.

Property The following settings are displayed:

Substitute BOOL Types by	If this checkbox has been activated, all properties of the Boolean type are replaced by the active value, if the linked file type demonstrates an error.
--------------------------	--

13.5 Module Device RS232 (weQube Only)

13.5.1 Overview

Objective Sensor communication dictates how data can be transmitted to the sensor, and how the sensor itself transmits data.

Property The following settings/results are displayed:

Process Time [μs]	Sensor processing time for the module
Module State	Error codes for troubleshooting support (see section "14.4 Module Status" on page 213).
Preamble	The characters specified here precede the output data.
Postamble	The characters specified here follow the output data.
Delimiter	The delimiter used to separate the individual data packets from each other is specified here.
Output	The preview of the output value is displayed, which consists of preamble, delimiter and postamble.
String Count	The number of desired values to be transmitted is defined. String Count 1...8 The value can be entered statically or linked to a value. This value is then transmitted via the interface.
Output mode	The results can be output formatted or unformatted.
Error Handling	If a linked value is in error state, the value used to replace the result can be defined.

13.5.2 Configuration

13.5.2.1 Submodule String count

Objective Reading results out via the interface.

Property The number of elements included in the list depends on the String Count:
Character string #1 Enter a static value or link a result from the application.

13.5.2.2 Submodule Formatting Options

Objective

Carry out the formatting of the characters.

Property

The following settings/results are displayed:

Integer	The number of digits can be defined. The plus/minus sign can also be read out if required.
Floating point	The number of digits before and after the comma can be defined. The plus/minus sign can also be read out if required.
Boolean	A Boolean value can be output as 0/1 or as true/false.

13.6 Module Device FTP (weQube Only)

13.6.1 Overview

Objective

Configure the FTP interface.

Files can be written from the sensor to a PC via an FTP server, for example in order to compile error images or to document all objects. It is necessary to setup the user data for the ftp server in the properties of the device. (see section 8.3.2.3 Smart Camera weQube)

Alternatively, the files can also be saved to the SD card in the sensor.

Property

Process Time [μs]	Sensor processing time for the module
Module State	Error codes for troubleshooting support (see section "14.4 Module Status" on page 213).
Data sink	<p>FTP The images can be saved to an FTP server within the network. The sensor functions as an FTP client in this case. Access data for the FTP server must be saved under the sensor settings.</p> <p>Local folder "Output" The relevant images are saved.</p>
Blocking mode	<p>The speed at which saving data to an FTP server or the local folder takes place varies. Saving may take longer than the evaluation process. As a result, some events might not be saved. For example, this could be the case when images are saved along with events.</p> <p>The evaluation process can be suspended until saving has been successfully completed. The blocking mode must be activated to this end (activate the checkbox).</p>
File name	The file name consists of: Filename_consecutive number
Save image type	Before an image can be saved, its type must be defined.
Save image compression	This setting is used to decide whether the image is saved in uncompressed state in BMP format, or whether it should be saved in compressed JPG format. It should be noted that the quality may be impaired if the image is compressed. The compressed image should no longer be used as an input image.
Image	Link to the desired image in the sensor
Observer	This Boolean value can be used to specify whether or not an image will be saved. If this value is linked, the application can be set up so that, for example, only error images are saved. Network load is reduced as a result, and data are pre-filtered. If the Boolean value is in status "false", the image is saved.

Property

Preamble	The characters specified here precede the output data.
Postamble	The characters specified here follow the output data.
Delimiter	The delimiter used to separate the individual data packets from each other is specified here.
Output	The preview of the output value is displayed, which consists of preamble, separator and postamble.
String Count	The number of desired values to be transmitted is defined. String Count 1...8 The value can be entered statically or linked to a value. This value is then transmitted via the interface.

13.6.2 Configuration

13.6.2.1 Submodule String Count

Objective Reading results out via the interface.

Property The number of elements included in the list depends on the String Count:
Character string #1 Enter a static value or link a result from the application.

13.6.2.2 Submodule Error Handling

Action can be used to set performance when a linked event demonstrates an error status.

Property The following settings/results are displayed:

Substitute STRING types by	The text is specified which is used as a substitute text, when the linked data type is faulty.
-----------------------------------	--

13.7 Module Device TCP

13.7.1 Overview

Objective

Configure process data via TCP/IP.

Abbreviated procedure

Set the data transmission format and link the values of the results. The uniVision Application behaves as a TCP server. Process data can be received via the selected port (default setting: 32002). Establish a connection to the respective application to this end.



NOTE!

The application's IP Address is in the device list.

13.7.2 Setting Parameters

Property

The following settings/results are displayed:

Process Time [us]	Process Time for process steps in the current module.
Module State	Error codes provide support for troubleshooting.
Interface type	TCP
Output	Preview of the output value which is comprised preamble, linked value, delimiter and postamble.
Preamble	The characters specified here precede the output data.
Postamble	The characters specified here follow the output data.
Delimiter	The delimiter used to separate the individual data packets from each other is specified.
String Count	The number of desired values to be transmitted is defined. String Count: 1...30 Any value can be set statically or linked to a value from the evaluation. This value is then transmitted via the interface.
Error Handling	Performance of the following read-out options in case of error.

Property

Connections	Number of permissible connections for receiving process data via TCP.
TCP port	Port for transmitting TCP process data (default setting: 32002).
Blocking mode	When the blocking mode is active, the application is stopped until process data have been transmitted via TCP/IP. This ensures that results are transmitted for each profile recording. If the blocking mode has not been activated, the application is not slowed down.

13.7.3 Configuration

The TCP device module includes the configuration:

- String Count
- Error Handling
- Formatting options

13.7.3.1 Submodule String Count

Objective Read out results from the application via the interface.

Property The number of elements included in the list depends on the String Count:

String #1	Enter a static value or link a result from the application.
------------------	---

13.7.3.2 Submodule Error Handling

Objective Define performance in the event of an error.

Property Specify with which value linked string types will be replaced in the event of an error.

Substitute STRING types by	The text is specified which is used as a substitute text, when the linked data type is faulty.
-----------------------------------	--

13.7.3.3 Submodule Formatting Options

Objective

Carry out the formatting of the characters.

Property

The following settings/results are displayed:

Integer	The number of digits can be defined. The plus/minus sign can also be read out if required.
Floating point	The number of digits before and after the comma can be defined. The plus/minus sign can also be read out if required.
Boolean	A Boolean value can be output as 0/1 or as true/false.

13.8 Module Device UDP

13.8.1 Overview

Objective	Configure process data via UDP.
Abbreviated procedure	Set the data transmission format and link the values of the results. UDP process data are transmitted via non-configurable port 32002.

13.8.2 Setting Parameters

Property The following settings/results are displayed:

Process Time [us]	Process Time for process steps in the current module.
Module State	Error codes provide support for troubleshooting.
Interface type	UDP
Output	Preview of the output value which is comprised preamble, linked value, delimiter and postamble.
Preamble	The characters specified here precede the output data.
Postamble	The characters specified here follow the output data.
Delimiter	The delimiter used to separate the individual data packets from each other is specified.
Number of characters	The number of desired values to be transmitted is defined. String Count: 1...30 Any value can be set statically or linked to a value from the evaluation. This value is then transmitted via the interface.
Error Handling	Performance of the following read-out options in case of error.

13.8.3 Configuration

The UDP device module includes the following configuration options:

- String Count
- Error Handling
- Formatting options

13.8.3.1 String Count Submodule

Objective Read out results from the application via the interface.

Property	The number of elements included in the list depends on the String Count:	
	Character string #1	Enter a static value or link a result from the application.

13.8.3.2 Error Handling Submodule

Objective Define performance in the event of an error.

Property	Specify with which value linked string types will be replaced in the event of an error.	
	Substitute STRING types by	The text is specified which is used as a substitute text, when the linked data type is faulty.

13.8.3.3 Formatting options

Objective Carry out the formatting of the characters.

Property	The following settings/results are displayed:	
	Whole number	The number of digits can be defined. The plus/minus sign can also be read out if required.
	Floating point	The number of digits before and after the comma can be defined. The plus/minus sign can also be read out if required.
	Boolean	A Boolean value can be output as 0/1 or as true/false.

14. Appendix

14.1 Change Index, Operating Instructions

Version	Date	Description/change	Associated software version
1.0.0	31.08.2016	Official version for market launch	Software: 1.0.0
1.1.0	27.03.2017	<ul style="list-style-type: none"> • System overview • Software language DE • Network protocols • Sensor connection • weCat3D device module • Pointcloud filter module • Pointcloud measuring module (find segments, turning points) • Pointcloud region module (area, center of gravity) • Device replacement and expanding a Control Unit 	Software: 1.1.0
2.0.0	13.07.2018	<p>uniVision for Smart Cameras:</p> <ul style="list-style-type: none"> • New products are supported: weQube Smart Camera • Templates and uniVision assistant for specific modules • Measuring module: Find tool point • Measuring/coordinate system module: Adjust maximum geometry • TCP device module <p>uniVision for 2D-/3D sensors:</p> <ul style="list-style-type: none"> • weCat3D device module: Further sensor parameters and sensor data • Templates • Teach+ recording and offline processing of projects • uniVision for Windows for editing uniVision Applications • Pointcloud measuring module: Find tool point • Pointcloud measuring module: Find point usage for the tools line and arc • Pointcloud measuring module: Local minimum and maximum • Calculus module: Find edges • Additional languages 	Software: 2.0.0
2.0.1	05.10.2018	Small bugfixes	Software 2.0.1
2.0.2	08.02.2019	Add info to changelog	Software 2.0.2

14.2 Change Index Software

Version	Release Date	Description/change	Compatibility
1.0.0	31.08.2016	Official version for market launch	Projects: 2.0 Firmware 2D-/3D sensor: 1.0.0
1.1.0	27.03.2017	<p>New functions:</p> <ul style="list-style-type: none"> • Several applications and 2D-/3D sensors per Control Unit • Extended function of the 2D-/3D sensors (trigger modes, temperature) • TCP device module • Extensions in the Pointcloud measuring module (find segments, turning points) • Extension in the Pointcloud region module (area, center of gravity) • Pointcloud filter module • Language DE • Further more minor functions <p>Eliminated errors:</p> <ul style="list-style-type: none"> • Links remain in place during the project change 	Projects: 2.1 Firmware 2D-/3D sensor: 1.0.8
1.1.3	19.03.2018	<p>New functions:</p> <ul style="list-style-type: none"> • Installation of plugins (e.g. robot interfaces) on Control Unit • Additional port 32005 for uniVision Applications in live mode <p>Bug fixes:</p> <ul style="list-style-type: none"> • Pointcloud coordinate system module in error state • TCP device module in trigger mode software • Following the system start, a connection to multiple 2D-/3D sensors is established automatically • Linking of Pointclouds from a Pointcloud filter module to another Pointcloud filter module • Change properties of uniVision Applications (in German) • Pointcloud measuring module shows the found arcs and arc segments correctly • Further minor bug fixes 	Projects: 2.1 Firmware 2D-/3D sensor: 1.1.0

2.0.0	13.07.2018	<p>Description:</p> <p>uniVision for Smart Cameras:</p> <ul style="list-style-type: none"> • New products are supported: weQube Smart Camera • Templates and uniVision assistant for specific modules • Measuring module: Find tool point • Measuring/coordinate system module: Adjust maximum geometry • TCP device module <p>uniVision for 2D-/3D sensors:</p> <ul style="list-style-type: none"> • weCat3D device module: Further sensor parameters and sensor data • Templates • Teach+ recording and offline processing of projects • uniVision for Windows for editing uniVision Applications • Pointcloud measuring module: Find tool point • Pointcloud measuring module: Find point usage for the tools line and arc • Pointcloud measuring module: Local minimum and maximum • Calculus module: Find edges • Additional languages <p>Bug fixes</p>	<p>Projects: 2.2 Firmware 2D-/3D sensor: 1.1.1 Firmware Control Unit: 2.0.x Firmware weQube: 2.0.x</p>
2.0.1	5.10.2018	<p>Bugfixes:</p> <ul style="list-style-type: none"> • Load projects on Control Unit with default network settings of Control Unit • Open templates on Control unit with default network settings of Control Unit • Record teach+ with F5 • Behavior of digital inputs and outputs after loading projects (for weQube and Control Unit) 	<p>Projects: 2.2 Firmware 2D-/3D Sensor: 1.1.1 Firmware Control Unit: 2.0.x Firmware weQube: 2.0.x</p>

2.0.2	08.02.2019	<p>Bugfixes:</p> <ul style="list-style-type: none"> • Device TCP/UDP/RS232: Carriage return is now working correct • Zoom in and out in the scene of the software uniVision with plus and minus buttons • Module Pointcloud Coordinate System: Several bugfixes for correct tracking • Module Pointcloud Calculus: Several bugfixes with linked coordinate system • Module Measure and Module Pointcloud Measure: Several bugfixes for find line tool and sorting segments • Triggering uniVision Application via LIMA command (Software) • Set startup project and load project via OLED display of weQube with long project names • Open projects with special characters in project or module names offline 	<p>Projects 2.2 Firmware 2D/3D Profile Sensors: 1.1.1 Firmware Control Unit: 2.0.x Firmware weQube: 2.0.x</p>
-------	------------	---	---

14.3 Status Information

14.3.1 weQube Smart Camera

Via the UDP interface, the device status is sent in the set interval. The status is also shown on the OLED display of the device.

Bit	Section	Signal	Description
0	General	Information	Busy
1		Warning	There is at least one bit set, level = Warning
2		Critical Error	There is at least one bit set, level = Critical Error
3		Fatal Error	There is at least one bit set, level = Fatal Error
6	Peripheral	TCP/IP	There is an error concerning the TCP/IP socket
7		UDP	There is an error concerning the UDP socket
8		Industrial Ethernet	There is an error concerning industrial ethernet
12		UART	There is an error concerning the UART device
13		FTP	There is an error concerning the FTP interface.
14	Memory	Flash	There is an error concerning the flash access
15		RAM	There is an error concerning the RAM access
16		SD-Card	There is an error concerning the SD card access
18		Compatibility	There is an error concerning the version of the loaded project
19		Reserved	for future use, value=0
24	Image Processing	Sequencing	There is an error concerning IData vision engine
26		Trigger	There is an error concerning HW trigger

14.3.2 uniVision Application

Via the UDP interface, the device status of the uniVision Application is sent in the set interval.

Bit	Section	Signal	Description
0	General	Information	Busy
1		Warning	There is at least one bit set, level = Warning
2		Critical Error	There is at least one bit set, level = Critical Error
3		Fatal Error	There is at least one bit set, level = Fatal Error
6	Peripheral	TCP/IP	There is an error concerning the TCP/IP socket
7		UDP	There is an error concerning the UDP socket
14	Memory	Flash	There is an error concerning the flash access
15		RAM	There is an error concerning the RAM access
16		SD-Card	There is an error concerning the SD card access
24	Image Processing	Sequencing	There is an error concerning IData vision engine
26		Trigger	There is an error concerning HW trigger

14.3.3 Control Unit

Via the UDP interface, the device status of the Control Unit is sent in the set interval.

Bit	Section	Signal	Description
0	General	Information	Busy
1		Warning	There is at least one bit set, level = Warning
2		Critical Error	There is at least one bit set, level = Critical Error
3		Fatal Error	There is at least one bit set, level = Fatal Error
6	Peripheral	TCP/IP	There is an error concerning the TCP/IP socket
7		UDP	There is an error concerning the UDP socket
14	Memory	Flash	There is an error concerning the flash access
15		RAM	There is an error concerning the RAM access
16		SD-Card	There is an error concerning the SD card access

14.4 Glossar

uniVision Software	<p>Software for configuring the parameters of weQube and the Control Unit (i.e. uniVision applications)</p> <p>Differentiation according to operating system:</p> <ul style="list-style-type: none"> • uniVision for Windows: for Laptop/PC • uniVision for Linux: already included in the Control Unit's firmware <p>Differentiation according to device:</p> <ul style="list-style-type: none"> • uniVision for Smart Cameras • uniVision for 2D/3D Sensors
uniVision Application	Application (engine) for evaluating images or point clouds (can be run on smart devices or the Control Unit)
uniVision Project	Testing task which is executed by the uniVision application
Template	<p>Ready-made project for certain standard applications (e.g. check presence, find highest point)</p> <ul style="list-style-type: none"> • Picture analysis templates (for weQube) • Profile analysis templates (for weCat3D)
uniVision Assistant	Step-by-step explanation of a module
Control Unit	Brand name of wenglor's IPC
weQube firmware	Firmware update file for weQube
Control Unit firmware	Firmware update file for the Control Unit
Picture analysis	Evaluation of images using image processing algorithms
Profile analysis	Evaluation of height profiles using point cloud algorithms
Module	A tool in uniVision software for a special task (e.g. measuring module, 1D code module)
License	File required in order to activate a module

14.5 Module Status

The following module statuses are available in uniVision:



NOTE!

Section “5.2.2.2 uniVision Project, Module Status and Error Handling” on page 27 lists the most important module statuses with relevant explanations and solution suggestions.

0	no error
1001	undefined
1010	Input value error
1011	Return value error
1012	Internal data error
1020	Alignment error
1030	Function not implemented
1040	Image not linked
1050	Invalid operation
1060	Module timeout
1098	Exception bad allocation
1099	Exception
1100	Module unlicensed
1101	Module init failed
1102	Device not available
1103	Data loss
1104	Module not taught
10000-19999	Internal error of data structure
21201	Wrong type of control parameter: 1
21202	Wrong type of control parameter: 2
21203	Wrong type of control parameter: 3
21204	Wrong type of control parameter: 4
21205	Wrong type of control parameter: 5
21206	Wrong type of control parameter: 6
21207	Wrong type of control parameter: 7
21208	Wrong type of control parameter: 8
21209	Wrong type of control parameter: 9
21210	Wrong type of control parameter: 10
21211	Wrong type of control parameter: 11
21212	Wrong type of control parameter: 12
21213	Wrong type of control parameter: 13
21214	Wrong type of control parameter: 14
21215	Wrong type of control parameter: 15
21216	Wrong type of control parameter: 16
21217	Wrong type of control parameter: 17
21218	Wrong type of control parameter: 18
21219	Wrong type of control parameter: 19
21220	Wrong type of control parameter: 20
21301	Wrong value of control parameter: 1
21302	Wrong value of control parameter: 2
21303	Wrong value of control parameter: 3

21304 Wrong value of control parameter: 4
21305 Wrong value of control parameter: 5
21306 Wrong value of control parameter: 6
21307 Wrong value of control parameter: 7
21308 Wrong value of control parameter: 8
21309 Wrong value of control parameter: 9
21310 Wrong value of control parameter: 10
21311 Wrong value of control parameter: 11
21312 Wrong value of control parameter: 12
21313 Wrong value of control parameter: 13
21314 Wrong value of control parameter: 14
21315 Wrong value of control parameter: 15
21316 Wrong value of control parameter: 16
21317 Wrong value of control parameter: 17
21318 Wrong value of control parameter: 18
21319 Wrong value of control parameter: 19
21320 Wrong value of control parameter: 20
21350 Wrong value of component (see reset_obj_db())
21351 Wrong value of gray value component (see reset_obj_db())
21401 Wrong number of values of control parameter: 1
21402 Wrong number of values of control parameter: 2
21403 Wrong number of values of control parameter: 3
21404 Wrong number of values of control parameter: 4
21405 Wrong number of values of control parameter: 5
21406 Wrong number of values of control parameter: 6
21407 Wrong number of values of control parameter: 7
21408 Wrong number of values of control parameter: 8
21409 Wrong number of values of control parameter: 9
21410 Wrong number of values of control parameter: 10
21411 Wrong number of values of control parameter: 11
21412 Wrong number of values of control parameter: 12
21413 Wrong number of values of control parameter: 13
21414 Wrong number of values of control parameter: 14
21415 Wrong number of values of control parameter: 15
21416 Wrong number of values of control parameter: 16
21417 Wrong number of values of control parameter: 17
21418 Wrong number of values of control parameter: 18
21419 Wrong number of values of control parameter: 19
21420 Wrong number of values of control parameter: 20
21500 Number of input objects too big
21501 Wrong number of values of object parameter: 1
21502 Wrong number of values of object parameter: 2
21503 Wrong number of values of object parameter: 3
21504 Wrong number of values of object parameter: 4
21505 Wrong number of values of object parameter: 5
21506 Wrong number of values of object parameter: 6
21507 Wrong number of values of object parameter: 7
21508 Wrong number of values of object parameter: 8
21509 Wrong number of values of object parameter: 9
21510 Number of output objects too big

22000 Wrong specification of parameter (error in file: xxx.def)
22001 Initialize Halcon: reset_obj_db (width, heights, components)
22002 Used number of symbolic object names too big
22003 No license found
22004 Lost connection to license server
22005 No modules in license (no VENDOR_STRING)
22006 No license for this operator
22007 Time zone offset from GMT is > 24 hours
22008 Vendor keys do not support this platform
22009 Bad vendor keys
22010 Unknown vendor key type
22011 malloc() call failed
22012 Vendor keys have expired
22013 Second call to lc_init() (multiple jobs), and vendor keys do not support multiple jobs
22014 Vendor key data not supplied
22015 Imclient.h/liblmgr.a version mismatch
22016 Networking software not available on this machine
22017 Old vendor keys supplied
22018 License key in license file does not match other data in file
22019 Encryption handshake with daemon failed
22020 'key' structure is incorrect type, or feature Err:520 NULL, or num_licenses Err:520 0
22021 System clock has been set back. This error can only occur when the FEATURE line contains an expiration date
22022 Version argument is invalid floating point format
22023 License server busy starting another copy of itself -0 retry
22024 Cannot establish a connection with a license server
22025 Feature is queued. lc_status will determine when it is available
22026 Vendor keys do not support this function
22027 Checkout request filtered by the vendor-defined filter routine
22028 Checkout exceeds MAX specified in options file
22029 All licenses in use
22030 No license server specified for counted license
22031 Can not find feature in the license file
22032 Server has different license file than client -0 client's license has feature, but server's does not
22033 License file does not support a version this new
22034 This platform not authorized by license -0 running on platform not included in PLATFORMS list
22035 License server busy -0 the request should be retried. (This is a rare occurrence.)
22036 Could not find license.dat
22037 Invalid license file syntax
22038 Cannot connect to a license server
22039 No TCP license service exists
22040 No socket connection to license manager server
22041 Invalid host
22042 Feature has expired
22043 Invalid date format in license file
22044 Invalid returned data from license server
22045 Cannot find SERVER hostname in network database
22046 Cannot read data from license server
22047 Cannot write data to license server
22048 Error in select system call

22049 Feature checkin failure detected at license
22050 Users are queued for this feature
22051 License server does not support this version of this feature
22052 Request for more licenses than this feature supports
22053 Cannot read /dev/kmem
22054 Cannot read /vmunix
22055 Cannot find ethernet device
22056 Cannot read license file
22057 Feature not yet available (wrong time/date set?)
22058 No such attribute
22059 Clock difference too large between client and server
22060 Feature database corrupted in daemon
22061 Duplicate selection mismatch for this feature
22062 User/host on EXCLUDE list for feature
22063 User/host not on INCLUDE list for feature
22064 Feature was never checked out
22065 Invalid FLEXIm key data supplied
22066 Clock setting check not available in daemon
22067 Date too late for binary format
22068 FLEXIm not initialized
22069 Server did not respond to message
22070 Request rejected by vendor-defined filter
22071 No FEATURESET line present in license file
22072 Incorrect FEATURESET line in license file
22073 Cannot compute FEATURESET line
22074 Socket() call failed
22075 setsockopt() failed
22076 Message checksum failure
22077 Cannot read license file from server
22078 Not a license administrator
22079 Imremove request too soon
22080 Attempt to read beyond the end of LF path
22081 SYS\$SETIMR call failed
22082 Internal FLEXIm Error -0 Please report to Globetrotter Software
22083 FLEXadmin API functions not available
22084 Invalid PACKAGE line in license file
22085 Server FLEXIm version older than client's
22086 Incorrect number of USERS/HOSTS INCLUDED in options file – see server log
22087 Server doesn't support this request
22088 This license object already in use
22089 Future license file format or misspelling in license file
22090 Feature removed during Imrread or wrong SERVER line hostid
22091 This feature is available in a different license pool
22092 Network connect to THIS_HOST failed
22093 Server node is down or not responding
22094 The desired vendor daemon is down
22095 The decimal format license is typed incorrectly
22096 All licenses are reserved for others
22097 Terminal Server remote client not allowed
22098 Cannot borrow that long

22099	License server out of network connections
22100	Wrong index for output object parameter
22101	Wrong index for input object parameter
22102	Wrong index for image object (too big or too small)
22103	Wrong number region/image component (see: HGetComp)
22104	Wrong relation name
22105	Access to undefined gray value component
22106	Wrong image width
22107	Wrong image height
22108	Undefined gray value component
22200	Inconsistent data of data base (typing)
22201	Wrong index for input control parameter
22202	Data of data base not defined (internal error)
22203	Number of operators too big
22205	User extension not properly installed
22206	Number of packages too large
22207	No such package installed
22300	Dongle not attached, or can't read dongle
22301	Missing dongle driver
22302	FLEXlock checkouts attempted
22303	SIGN= attribute required
22304	CRO not supported for this platform
22305	BORROW failed
22306	BORROW period has expired
22307	FLOAT_OK license must have exactly one dongle hostid
22308	Unable to delete local borrow info
22309	Support for returning aborrowed license early is not enabled
22310	Error returning borrowed license on server
22311	Error when trying to checkout just a PACKAGE(BUNDLE)
22312	Composite Hostid not initialized
22313	An item needed for Composite Hostid missing or invalid
22314	Borrowed license doesn't match Alle known server license
22315	Error enabling event log
22316	Event logging is disabled
22317	Error writing to event log
22318	Timeout
22319	Bad message command
22320	Error writing to socket, peer has closed socket
22321	Attempting to generate version specific license tied to a single hostid, which is composite
22322	Version-specific signatures are not supported for uncounted licenses
22323	License template contains redundant signature specifiers
22324	Invalid V71_LK signature
22325	Invalid V71_SIGN signature
22326	Invalid V80_LK signature
22327	Invalid V80_SIGN signature
22328	Invalid V81_LK signature
22329	Invalid V81_SIGN signature
22330	Invalid V81_SIGN2 signature
22331	Invalid V84_LK signature
22332	Invalid V84_SIGN signature

22333 Invalid V84_SIGN2 signature
22334 License key required but missing from the license certificate
22335 Bad AUTH= signature
22336 TS record invalid
22337 Cannot open TS
22338 Invalid Fulfillment record
22339 Invalid activation request received
22340 No fulfillment exists in trusted storage which matches the request
22341 Invalid activation response received
22342 Can't return the fulfillment
22343 Return would exceed max count(s)
22344 No repair count left
22345 Specified operation is not allowed
22346 User/host on EXCLUDE list for entitlement
22347 User/host not in INCLUDE list for entitlement
22348 Activation error
22349 Invalid date format in trusted storage
22350 Message encryption failed
22351 Message decryption failed
22352 Bad filter context
22353 SUPERSEDE feature conflict
22354 Invalid SUPERSEDE_SIGN syntax
22355 SUPERSEDE_SIGN does not contain a feature name and license signature
22356 ONE_TS_OK is not supported in this Windows Platform
22357 Internal error -178
22358 Only one terminal server remote client checkout is allowed for this feature
22359 Internal error -180
22360 Internal error -181
22361 Internal error -182
22362 More than one ethernet hostid not supported in composite hostid definition
22363 The String Count in the license file paths exceeds the permissible limit
22364 Invalid TZ keyword syntax
22365 Invalid time zone override specification in the client
22366 The time zone information could not be obtained
22367 License client time zone not authorized for license rights
22368 Invalid syntax for VM_PLATFORMS keyword
22369 Feature can be checked out from physical machine only
22370 Feature can be checked out from virtual machine only
22371 Vendor keys do not support Virtualization feature
22372 Checkout request denied as it exceeds the MAX limit specified in the options file
22373 Binding agent API -0 Internal error
22374 Binding agent communication error
22375 Invalid Binding agent version
22452 HALCON id out of range
22800 Wrong hardware knowledge file format
22801 Wrong hardware knowledge file version
22802 Error while reading the hardware knowledge
22803 Error while writing the hardware knowledge
22804 Tag in hardware knowledge file not found
22805 No cpu information in hardware knowledge file found

22806	No aop information in hardware knowledge file found
22807	No aop information for this HALCON variant found
22808	No aop information for this HALCON architecture found
22809	No aop information for specified Operator found
22810	Unknown aop model
22811	Wrong tag derivate in hardware knowledge file
22812	Internal error while processing hardware knowledge
22813	Optimizing aop was canceled
22830	Wrong access to global variable
22831	Used global variable does not exist
22832	Used global variable not accessible via GLOBAL_ID
22835	Halcon server to terminate is still working on a job
22837	No such HALCON software agent
22838	Hardware check for parallelization not possible on a single-processor machine
22839	Sequential HALCON does not support parallel hardware check (use Parallel HALCON instead)
22840	Initialization of agent failed
22841	Termination of agent failed
22842	Inconsistent hardware description file
22843	Inconsistent agent information file
22844	Inconsistent agent knowledge file
22845	The file with the parallelization information does not match to the currently HALCON version/ revision
22846	The file with the parallelization information does not match to the currently used machine
22847	Inconsistent knowledge base of HALCON software agent
22848	Unknown communication type
22849	Unknown message type for HALCON software agent
22850	Error while saving the parallelization knowledge
22851	Wrong type of work information
22852	Wrong type of application information
22853	Wrong type of experience information
22854	Unknown name of HALCON software agent
22855	Unknown name and communication address of HALCON software agent
22856	cpu representative (HALCON software agent) not reachable
22857	cpu refuses work
22858	Description of scheduling resource not found
22859	Not accessible function of HALCON software agent
22860	Wrong type: HALCON scheduling resource
22861	Wrong state: HALCON scheduling resource
22862	Unknown parameter type: HALCON scheduling resource
22863	Unknown parameter value: HALCON scheduling resource
22864	Wrong post processing of control parameter
22867	Error while trying to get time (time query)
22868	Error while trying to get the number of processors
22869	Error while accessing temporary file
22900	Error while forcing a context switch
22901	Error while accessing the cpu affinity
22902	Error while setting the cpu affinity
22950	Wrong synchronization object
22952	Wrong thread object
22953	Input Object was not initialized

22954 Input control parameter is not initialized
 22955 Output Object parameter is not initialized
 22956 Output control parameter is not initialized
 22970 creation of pthread failed
 22971 pthread-detach failed
 22972 pthread-join failed
 22973 Initialization of mutex variable failed
 22974 Deletion of mutex variable failed
 22975 Lock of mutex variable failed
 22976 Unlock of mutex variable failed
 22977 failed to signal pthread condition variable
 22978 failed to wait for pthread condition variable
 22979 failed to init pthread condition variable
 22980 failed to destroy pthread condition variable
 22981 failed to signal event
 22982 failed to wait for an event
 22983 failed to init an event
 22984 failed to destroy an event
 22985 failed to create a tsd key
 22986 failed to set a tsd key
 22987 failed to get a tsd key
 22988 failed to free a tsd key
 22989 aborted waiting at a barrier
 22990 'Free list' is empty while scheduling
 22991 Communication partner not checked in
 22992 you can not start the communication system while running it
 22993 Communication partner not checked in
 23010 Region completely outside of the image domain
 23011 Region (partially) outside of the definition range of the image
 23012 Intersected definition range region / image empty
 23013 Image with empty definition range (= > no gray values)
 23014 No common image point of two images
 23015 Wrong region for image (first row < 0)
 23016 Wrong region for image (column in last row >= image width)
 23017 Number of images unequal in input parameters
 23018 Image height too small
 23019 Image width too small
 23020 Internal error: multiple call of HRLInitSeg()
 23021 Internal error: HRLSeg() not initialized
 23022 Wrong size of filter for Gauss
 23033 Filter size exceeds image size
 23034 Filter size have to be odd
 23035 Filter is too big
 23036 Input region is empty
 23040 Row value of a coordinate > $2^{15}-1$
 23041 Row value of a coordinate < -2^{15}
 23042 Column value of a coordinate > $2^{15}-1$
 23043 Column value of a coordinate < -2^{15}
 23100 Wrong segmentation threshold
 23101 Unknown feature

23102	Unknown gray value feature
23103	Internal error in HContCut
23104	Error in HContToPol: distance of points too big
23105	Error in HContToPol: contour too long
23106	Too mAlle rows (IPImageTransform)
23107	Scaling factor = 0.0 (IPImageScale)
23108	Wrong range in transformation matrix
23109	Internal error in IPvfvf: no element free
23110	Number of input objects is zero
23111	At least one input object has an empty region
23112	Operation allowed for rectangular images 2**n only
23113	Too mAlle relevant points (IPHysteresis)
23114	Number of labels in image too big
23115	No labels with negative values allowed
23116	Wrong filter size (too small ?)
23117	Images with different image size
23118	Target image too wide or too far on the right
23119	Target image too narrow or too far on the left
23120	Target image too high or too far down
23121	Target image too low or too far up
23122	Number of channels in the input parameters are different
23123	Wrong color filter array type
23124	Wrong color filter array interpolation
23125	Homogeneous matrix does not represent an affine transformation
23126	Inpainting region too close to the image border
23127	Source and destination differ in size
23128	To mAlle Features
23129	Reflection axis undefined
23131	Cocurrence Matrix: too little columns for quantisation
23132	Cocurrence Matrix: too little rows for quantisation
23133	Wrong number of columns
23134	Wrong number of rows
23135	Number has too mAlle digits
23136	Matrix is not symmetric
23137	Matrix is too big
23138	Wrong structure of file
23139	Lesser than 2 matrices
23140	Not enough memory
23141	Can not read the file
23142	Can not open file for writing
23143	Too mAlle lookup table colors
23145	Too mAlle Hough points (lines)
23146	Target image has got wrong height (not big enough)
23147	Wrong interpolation mode
23148	Region not compact or not connected
23170	Wrong filter index for filter size 3
23171	Wrong filter index for filter size 5
23172	Wrong filter index for filter size 7
23173	Wrong filter size; only 3/5/7
23175	Number of suitable pixels too small to reliably estimate the noise

23200 Different number of entries/exits in HContCut
 23250 Wrong XLD type
 23252 Internal error: border point is set to FG
 23253 Internal error: maximum contour length exceeded
 23254 Internal error: maximum number of contours exceeded
 23255 Contour too short for fetch_angle_xld
 23256 Regression parameters of contours already computed
 23257 Regression parameters of contours not yet entered! Please compute them by calling regress_
 cont_xld
 23258 Data base: XLD object has been deleted
 23259 Data base: object has no XLD-ID
 23260 Internal error: wrong number of contour points allocated
 23261 Contour attribute not defined
 23262 Ellipse fitting failed
 23263 Circle fitting failed
 23264 All points classified as outliers (ClippingFactor too small)
 23265 Quadrangle fitting failed
 23266 No points found for at least one side of the rectangle
 23267 A contour point lies outside of the image
 23274 Not enough valid points for fitting the model
 23275 No ARC/INFO world file
 23276 No ARC/INFO generate file
 23278 Unexpected end of file while reading DXF file
 23279 Cannot read DXF-group code from file
 23280 Inconsistent number of attributes per point in DXF file
 23281 Inconsistent number of attributes and names in DXF file
 23282 Inconsistent number of global attributes and names in DXF file
 23283 Cannot read attributes from DXF file
 23284 Cannot read global attributes from DXF file
 23285 Cannot read attribute names from DXF file
 23286 Wrong generic parameter name
 23289 Internal DXF I/O error: Wrong data type
 23290 Isolated point while contour merging
 23291 Constraints (MaxError/MaxDistance) cannot be fulfilled
 23300 Syntax error in file for training
 23301 Maximum number of attributes per example exceeded
 23302 Not possible to open file for training
 23303 Too mAlle data sets for training
 23304 Wrong key for data for training
 23305 Too mAlle examples for one data set for training
 23306 Too mAlle classes
 23307 Maximum number of cuboids exceeded
 23308 Not possible to open classificator's file
 23309 Error while saving the classificator
 23310 Not possible to open protocol file
 23311 Classificator with this name is already existent
 23312 Maximum number of classificators exceeded
 23313 Name of classificator is too long, ≥ 20
 23314 Classificator with this name is not existent
 23315 Current classificator is not defined

23316	Wrong id in classification file
23317	The version of the classifier is not supported
23318	Serialized item does not contain a valid classifier
23330	Wrong covariance initialization
23331	The version of the GMM training samples is not supported
23332	Wrong training sample format
23333	Invalid file format for Gaussian Mixture Model (GMM)
23334	The version of the Gaussian Mixture Model (GMM) is not supported
23335	Internal error while training the GMM
23336	Singular covariance matrix
23337	No samples for at least one class
23338	Too few samples for at least one class
23340	GMM has not been trained yet
23341	No training samples stored in the classifier
23342	Serialized item does not contain a valid Gaussian Mixture Model (GMM)
23350	Unknown output function
23351	Target vector not in 0-1 encoding
23352	No training samples stored in the classifier
23353	Invalid file format for MLP training samples
23354	The version of the MLP training samples is not supported
23355	Wrong training sample format
23356	MLP is not a classifier; use OutputFunction = 'softmax' in create_class_mlp
23357	Invalid file format for multilayer perceptron (MLP)
23358	The version of the multilayer perceptron (MLP) is not supported
23359	Wrong number of image channels
23360	Number of MLP parameters too large
23361	Serialized item does not contain a valid multilayer perceptron (MLP)
23370	Wrong number of image channels
23371	A look-up table can be build only for a 2 or 3 channel classifier
23372	Cannot create a look-up table. Please choose a larger 'bit_depth' or select 'fast' for 'class_selection'.
23380	No training samples stored in the classifier
23381	Invalid file format for SVM training samples
23382	The version of the SVM training samples is not supported
23383	Wrong training sample format
23384	Invalid file format for support vector machine (SVM)
23385	The version of the support vector machine (SVM) is not supported
23386	Wrong class
23387	Nu was chosen too big
23388	SVM training failed
23389	Old SVM and new SVM do not match
23390	SVM contains no trained support vectors
23391	Kernel is not an RBF kernel
23392	Train data does not contain all classes
23393	SVM not trained
23394	Classifier not trained
23395	Serialized item does not contain a valid support vector machine (SVM)
23401	Wrong rotation number
23402	Wrong letter for Golay element
23403	Wrong reference point

23404 Wrong number of iterations
 23405 Morphology: system error
 23406 Wrong type of boundary
 23407 Morphology: wrong number of input objects
 23408 Morphology: wrong number of output objects
 23409 Morphology: wrong number of input control parameter
 23410 Morphology: wrong number of output control parameter
 23411 Morphology: structuring element is infinite
 23412 Morphology: wrong name for structuring element
 23500 Wrong number of run length rows (chords): smaller than 0
 23501 Number of chords too big. Increase 'current_runlength_number' using set_system!
 23502 Run length row with negative length
 23503 Run length row \geq image height
 23504 Run length row < 0
 23505 Run length column \geq image width
 23506 Run length column < 0
 23507 For CHORD_TYPE: Number of row too big
 23508 For CHORD_TYPE: Number of row too small
 23509 For CHORD_TYPE: Number of column too big
 23510 Exceeding the maximum number of run lengths while automatical expansion
 23511 Internal error: Region->compl neither TRUE/FALSE
 23512 Internal error: Region->max_num $<$ Region->num
 23513 Internal error: number of chords too big for num_max
 23514 Operator cannot be implemented for complemented "
 23520 Image width < 0
 23521 Image width $> \text{MAX_FORMAT}$
 23522 Image height < 0
 23523 Image height $> \text{MAX_FORMAT}$
 23524 Image width ≤ 0
 23525 Image height ≤ 0
 23550 Too mAlle segments
 23551 'int8' images are available on 64 bit systems only
 23600 Point at infinity cannot be converted to a Euclidean point
 23601 Covariance matrix could not be determined
 23602 RANSAC algorithm didn't find enough point correspondences
 23603 RANSAC algorithm didn't find enough point correspondences
 23604 Internal diagnosis: fallback method had to be used
 23605 Projective transformation is singular
 23606 Mosaic is under-determined
 23607 Input covariance matrix is not positive definite
 23620 Inconsistent number of point correspondences
 23621 At least one image cannot be reached from the reference image
 23622 The image with specified index does not exist
 23623 Matrix is not a camera matrix
 23624 Skew is not zero
 23625 Illegal focal length
 23626 Distortion is not zero
 23627 It is not possible to determine all parameters for variable camera parameters
 23628 No valid implementation selected
 23629 Kappa can only be determined with the gold-standard method

23630	Conflicting number of images and projection mode
23631	Error in projection: Point not in Alle cube map
23632	No solution found
23640	Illegal combination of estimation method and parameters to be determined
23650	Invalid file format for FFT optimization data
23651	The version of the FFT optimization data is not supported
23652	Optimization data was created with a different HALCON variant (Sequential HALCON / Parallel HALCON)
23653	Storing of the optimization data failed
23654	Serialized item does not contain valid FFT optimization data
23660	No contours suitable for self-calibration found
23661	No stable solution found: please change the inlier threshold or select contours manually
23662	Unstable solution: please choose more or different contours
23663	Not enough contours for calibration: please select contours manually
23700	Epipoles are within the image domain: no rectification possible.
23701	Fields of view of both cameras do not intersect each other.
23750	Invalid sheet-of-light handle
23751	No sheet-of-light model available
23752	Wrong input image size (width)
23753	Wrong input image size (height)
23754	The bounding-box around the profile region does not fit the domain of definition of the input image
23755	Calibration extend not set
23756	Undefined disparity image
23757	Undefined domain for disparity image
23758	Undefined camera parameter
23759	Undefined pose of the lightplane
23760	Undefined pose of the camera coordinate system
23761	Undefined transformation from the coordinate system of the camera to the coordinate system of the lightplane
23762	Undefined movement pose for xyz calibration
23763	Wrong value of scale parameter
23764	Wrong parameter name
23765	Wrong type of parameter method
23766	Wrong type of parameter ambiguity
23767	Wrong type of parameter score
23768	Wrong type of parameter calibration
23769	Wrong type of parameter number_profiles
23770	Wrong type of element in parameter camera_parameter
23771	Wrong type of element in pose
23772	Wrong value of parameter method
23773	Wrong type of parameter min_gray
23774	Wrong value of parameter ambiguity
23775	Wrong value of parameter score_type
23776	Wrong value of parameter calibration
23777	Wrong value of parameter number_profiles
23778	Wrong type of camera
23780	Wrong number of values of pose
23850	The light source positions are linearly dependent
23851	No sufficient image indication

23852 Internal error: Function has equal signs in HZBrent
 23900 Kalman: Dimension n,m or p has got a undefined value
 23901 Kalman: File does not exist
 23902 Kalman: Error in file (row of dimension)
 23903 Kalman: Error in file (row of marking)
 23904 Kalman: Error in file (value is no float)
 23905 Kalman: Matrix A is missing in file
 23906 Kalman: Matrix C is missing in file
 23907 Kalman: Matrix Q is missing in file
 23908 Kalman: Matrix R is missing in file
 23909 Kalman: G or u is missing in file
 23910 Kalman: Covariant matrix is not symmetric
 23911 Kalman: Equation system is singular
 24050 Image data management: object is a object tuple
 24051 Image data management: object has been deleted already
 24052 Image data management: wrong object-ID
 24053 Image data management: object tuple has been deleted already
 24054 Image data management: wrong object tuple-ID
 24055 Image data management: object tuple is a object
 24056 Image data management: object-ID is NULL (0)
 24057 Image data management: object-ID outside the valid range
 24058 Image data management: access to deleted image
 24059 Image data management: access to image with wrong key
 24060 Image data management: access to deleted region
 24061 Image data management: access to region with wrong key
 24062 Image data management: wrong value for image channel
 24063 Image data management: index too big
 24064 Image data management: index not defined
 24100 No OpenCL available
 24101 OpenCL Error occured
 24102 No compute device available
 24104 Out of compute device memory
 24105 Invalid work group shape
 24106 Invalid compute device
 25100 Wrong (logical) window number
 25101 Error while opening the window
 25102 Wrong window coordinates
 25103 It is not possible to open another window
 25104 Device resp. operator not available
 25105 Unknown color
 25106 No window has been opened for desired action
 25107 Wrong filling mode for regions (fill or margin)
 25108 Wrong gray value (0..255)
 25109 Wrong pixel value (use value of get_pixel(P) only)
 25110 Wrong line width (see: query_line_width(Min,Max))
 25111 Wrong name of cursor
 25112 Wrong color table (see: query_lut(Name))
 25113 Wrong representation mode (see: query_insert(Mode))
 25114 Wrong representation color (see: query_color(List))
 25115 Wrong dither matrix (binary image representation)

25116 Wrong image transformation (name or image size)
25117 Unsuitable image type for image transformation
25118 Wrong zooming factor for image transformation
25119 Wrong representation mode
25120 Wrong code of device
25121 Wrong number for father window
25122 Wrong window size
25123 Wrong window type
25124 No current window has been set
25125 Wrong color combination or range (RGB)
25126 Wrong number of pixels set
25127 Wrong value for comprise (object or image)
25128 set_fix with 1/4 image levels and static not valid
25129 set_lut not valid in child windows
25130 Number of concurrent used color tables is too big
25131 Wrong device for window dump
25132 Wrong window size for window dump
25133 System variable DISPLAY (setenv) not defined
25134 Wrong thickness for window margin
25135 System variable DISPLAY has been set wrong (<host>:0.0)
25136 Too mAlle fonts loaded
25137 Wrong font name
25138 No valid cursor position
25139 Window is not a textual window
25140 Window is not a image window
25141 String too long or too high
25142 Too little space in the window rightwards
25143 Window is not suitable for the mouse
25144 Here Windows on a equal machine is permitted only
25145 Wrong mode while opening a window
25146 Wrong window mode for operation
25147 Operation not possible with fixed pixel
25148 Color tables for 8 image levels only
25149 Wrong mode for pseudo real colors
25150 Wrong pixel value for LUT
25151 Wrong image size for pseudo real colors
25152 Error in procedure HRLUT
25153 Wrong number of entries in color table for set_lut
25154 Wrong values for image area
25155 Wrong line pattern
25156 Wrong number of parameters for line pattern
25157 Wrong number of colors
25158 Wrong value for mode of area creation (0,1,2)
25159 Spy window is not set (set_spy)
25160 No file for spy has been set (set_spy)
25161 Wrong parameter output depth (set_spy)
25162 Wrong window size for window dump
25163 Wrong color table: wrong file name or query_lut()
25164 Wrong color table: empty string ?
25165 Using this hardware set_lut('default') is allowed only

25166 Error while calling online help
 25167 Row can not be projected
 25168 Operation is unsuitable using a computer with fixed color table
 25169 Computer represents gray scales only (no colors)
 25170 LUT of this display is full
 25171 Internal error: wrong color code
 25172 Wrong type for window attribute
 25173 Wrong name for window attribute
 25174 Negative height of area (or 0)
 25175 Negative width of area (or 0)
 25176 Window not completely visible
 25177 Font not allowed for this operation
 25178 Operation not possible (window was created in different thread)
 25179 Depth was not stored with window
 25180 Internal error: only RGB-Mode
 25181 No more (image-)windows available
 25182 Object index was not stored with window
 25183 Operator does not support primitives without point coordinates
 25184 Operator not available with Windows Remote Desktop
 25185 No OpenGL support available
 25186 No depth information available
 25187 OpenGL error occurred
 25188 Required framebuffer object is unsupported
 25189 OpenGL accelerated hidden surface removal not supported on this machine
 25190 Invalid window parameter
 25191 Invalid value for window parameter
 25192 Unknown mode
 25195 Invalid value for navigation mode
 25196 Internal file error
 25197 Error while file synchronization
 25198 Insufficient rights on file
 25199 Bad file descriptor
 25200 File not found
 25201 Error while writing image data (sufficient memory ?)
 25202 Error while writing image descriptor (sufficient memory ?)
 25203 Error while reading image data (format of image too small ?)
 25204 Error while reading image data (format of image too big ?)
 25205 Error while reading image descriptor: file too small
 25206 Image matrices are different
 25207 Help file not found (setenv HALCONROOT <Halcon- Homedirectory>)
 25208 Help index not found (setenv HALCONROOT <Halcon- Homedirectory>)
 25209 File <standard_input> can not be closed
 25210 <standard_output/error> can not be closed
 25211 File can not be closed
 25212 Error while writing to file
 25213 Exceeding of maximum number of files
 25214 Wrong file name
 25215 Error while opening the file
 25216 Wrong file mode
 25217 Wrong type for pixel (e.g. byte)

25218 Wrong image width (too big ?)
25219 Wrong image height (too big ?)
25220 File already exhausted before reading an image
25221 File exhausted before terminating the image
25222 Wrong value for resolution (dpi)
25223 Wrong output image size (width)
25224 Wrong output image size (height)
25225 Wrong number of parameter values: format description
25226 Wrong parameter name for operator
25227 Wrong slot name for parameter
25228 Operator class is missing in help file
25229 Wrong or inconsistent help/*.*.idx or help/*.*.sta
25230 File help/*.*.idx not found (setenv HALCONROOT <Halcon- Homedirectory>)
25231 File help/*.*.sta not found (setenv HALCONROOT <Halcon- Homedirectory>)
25232 Inconsistent file help/*.*.sta
25233 No explication file (.exp) found
25234 No file found in known graphic format
25235 Wrong graphic format
25236 Inconsistent file halcon.num
25237 File not a TIFF file
25238 Wrong file format
25239 gnuplot could not be started
25240 Output file for gnuplot could not be opened
25241 Not a valid gnuplot output stream
25242 No PNM format
25243 Inconsistent or old help file (\$HALCONROOT/help)
25244 Wrong file handle
25245 File not open
25246 No files in use so far (none opened)
25247 Invalid file format for regions
25248 Error while reading region data: Format of region too big.
25250 Invalid handle for a serial connection
25251 Serial port not open
25252 No serial port available
25253 Could not open serial port
25254 Could not close serial port
25255 Could not get serial port attributes
25256 Could not set serial port attributes
25257 Wrong baud rate for serial connection
25258 Wrong number of data bits for serial connection
25259 Wrong flow control for serial connection
25260 Could not flush serial port
25261 Error during write to serial port
25262 Error during read from serial port
25270 Serialized item does not contain valid regions
25271 The version of the regions is not supported
25272 Serialized item does not contain valid images
25273 The version of the images is not supported
25274 Serialized item does not contain valid XLD objects
25275 The version of the XLD objects is not supported

25276 Serialized item does not contain valid objects
25277 The version of the objects is not supported
25280 File has not been opened in text format
25281 File has not been opened in binary file format
25282 Cannot create directory
25283 Cannot remove directory
25300 No image acquisition device opened
25301 Image acquisition: wrong color depth
25302 Image acquisition: wrong device
25303 Image acquisition: determination of video format not possible
25304 Image acquisition: no video signal
25305 Unknown image acquisition device
25306 Image acquisition: failed grabbing of an image
25307 Image acquisition: wrong resolution chosen
25308 Image acquisition: wrong image part chosen
25309 Image acquisition: wrong pixel ratio chosen
25310 Image acquisition: handle not valid
25311 Image acquisition: instance not valid (already closed?)
25312 Image acquisition: device cannot be initialized
25313 Image acquisition: external triggering not supported
25314 Image acquisition: wrong camera input line (multiplex)
25315 Image acquisition: wrong color space
25316 Image acquisition: wrong port
25317 Image acquisition: wrong camera type
25318 Image acquisition: maximum number of acquisition device classes exceeded
25319 Image acquisition: device busy
25320 Image acquisition: asynchronous grab not supported
25321 Image acquisition: unsupported parameter
25322 Image acquisition: timeout
25323 Image acquisition: invalid gain
25324 Image acquisition: invalid field
25325 Image acquisition: invalid parameter type
25326 Image acquisition: invalid parameter value
25327 Image acquisition: function not supported
25328 Image acquisition: incompatible interface version
25329 Image acquisition: could not set parameter value
25330 Image acquisition: could not query parameter setting
25331 Image acquisition: parameter not available in current configuration
25332 Image acquisition: device could not be closed properly
25333 Image acquisition: camera configuration file could not be opened
25334 Image acquisition: callback type not supported
25335 Image acquisition: device lost
25400 Image type is not supported
25401 Invalid pixel format
25402 Internal JPEG-XR error
25403 Invalid format string
25404 Maximum number of channels exceeded
25405 Unspecified error in JPEG-XR library
25406 Bad magic number in JPEG-XR library
25407 Feature not implemented in JPEG-XR library

25408 File read/write error in JPEG-XR library
25409 Invalid file format in JPEG-XR library
25500 Error while closing the image file
25501 Error while opening the image file
25502 Premature end of the image file
25503 Image dimensions too large for this file format
25504 Image too large for this HALCON version
25505 Too mAlle iconic objects for this file format
25510 File is no PCX-File
25511 PCX: unknown encoding
25512 PCX: More than 4 image plains
25513 PCX: Wrong magic in color table
25514 PCX: Wrong number of bytes in span
25515 PCX: Wrong number of bits/pixels
25516 PCX: Wrong number of plains
25520 File is no GIF-File
25521 GIF: Wrong version (not 87a/89a)
25522 GIF: Wrong descriptor
25523 GIF: Wrong color table
25524 GIF: Premature end of file
25525 GIF: Wrong number of images ','
25526 GIF: Wrong image extension '!'
25527 GIF: Wrong left top width
25528 GIF: Cyclic index of table
25529 GIF: Wrong image data
25530 File is no Sun-Raster-File
25531 SUN-Raster: Wrong header
25532 SUN-Raster: Wrong image width
25533 SUN-Raster: Wrong image height
25534 SUN-Raster: Wrong color map
25535 SUN-Raster: Wrong image data
25536 SUN-Raster: Wrong type of pixel
25540 XWD: Wrong type of pixel
25541 XWD: Wrong visual class
25542 XWD: Wrong X10 header
25543 XWD: Wrong X11 header
25544 XWD: Wrong X10 colormap
25545 XWD: Wrong X11 colormap
25546 XWD: Wrong pixmap
25547 XWD: unknown version
25548 XWD: Error while reading an image
25550 TIFF: Error while reading a file
25551 TIFF: Wrong colormap
25552 TIFF: Too mAlle colors
25553 TIFF: Wrong photometric interpretation
25554 TIFF: Wrong photometric depth
25555 TIFF: Image is no binary file
25556 TIFF: Image format not supported by HALCON
25557 TIFF: Wrong specification of the TIFF file format
25558 TIFF: TIFF file is corrupt

25559 TIFF: A required TIFF tag is missing the the TIFF file
25560 File is no BMP-File
25561 BMP: Premature end of file
25562 BMP: Incomplete header
25563 BMP: Unknown bitmap format
25564 BMP: Unknown compression format
25565 BMP: Wrong color table
25566 BMP: Write error on output
25567 BMP: File does not contain a binary image
25570 JPEG: wrong number of components in image
25571 JPEG: unknown error from libjpeg
25572 JPEG: no implemented feature in libjpeg
25573 JPEG: file access error in libjpeg
25574 JPEG: tmp file access error in libjpeg
25575 JPEG: memory error in libjpeg
25576 JPEG: Error in input image
25580 PNG: File is not a PNG file
25581 PNG: Unknown interlace type
25582 PNG: Unsupported color type
25583 PNG: Image is no binary file
25590 JPEG-2000: File corrupt
25591 JPEG-2000: Image has more than 28 significant bits
25592 JPEG-2000: Error while encoding
25600 Socket can not be set to block
25601 Socket can not be set to unblock
25602 Received data is no tuple
25603 Received data is no image
25604 Received data is no region
25605 Received data is no xld object
25606 Error while reading from socket
25607 Error while writing to socket
25608 Illegal number of bytes with `get_rl`
25609 Buffer overflow in `read_data`
25610 Socket can not be created
25611 Bind on socket failed
25612 Socket information is not available
25613 Socket cannot listen for incoming connections
25614 Connection could not be accepted
25615 Connection request failed
25616 Hostname could not be resolved
25617 No data on socket
25618 Unknown tuple type on socket
25619 Timeout occured on socket
25620 No more sockets available
25621 Socket is not initialized
25622 Invalid socket
25623 Socket is NULL
25624 Received data type is too large
25625 Wrong socket protocol
25626 Received data does not contain packed data

25627	Error when handling the parameter
25628	Format specification does not match the data
25629	Invalid format specification
25630	Received data is no serialized item
25678	XLD object data can only be read by HALCON XL
25700	Too mAlle contours/polygons for this file format
25750	The version of the quaternion is not supported
25751	Serialized item does not contain a valid quaternion
25752	The version of the homogeneous matrix is not supported
25753	Serialized item does not contain a valid homogeneous matrix
25754	The version of the homogeneous 3D matrix is not supported
25755	Serialized item does not contain a valid homogeneous 3D matrix
25756	The version of the tuple is not supported
25757	Serialized item does not contain a valid tuple
25758	Tuple data can only be read on 64-bit systems
25759	The version of the camera parameters (pose) is not supported
25760	Serialized item does not contain valid camera parameters (pose)
25761	The version of the internal camera parameters is not supported
25762	Serialized item does not contain valid internal camera parameters
26000	Access to undefined memory area
26001	Not enough memory available
26002	Memory partition on heap has been overwritten
26003	HALloc: 0 bytes requested
26004	Tmp-memory management: Call freeing memory although nothing had been allocated
26005	Tmp-memory management: Null pointer while freeing
26006	Tmp-memory management: could not find memory element
26007	Memory management: wrong memory type allocated
26021	Not enough video memory available
26040	System parameter for memory-allocation inconsistent
26041	No memory block allocated at last
26500	Process creation failed
27000	Wrong index for output control parameter
27001	Wrong number of values: output control parameter (see: HPut*Par)
27002	Wrong type: output control parameter (see: HPut*Par)
27003	Wrong data type for object key (input objects)
27004	Range for integer had been passed
27005	Inconsistent Halcon version
27006	Not enough memory for strings allocated
27007	Internal error: Proc is NULL
27100	Wrong list structure using input objects
27101	Wrong input object parameter (not bound)
27102	Wrong input control parameter (not bound)
27103	Wrong output object parameter (already bound)
27104	Wrong output control parameter (already bound)
27105	Unknown symbolic object key (input objects)
27200	Wrong number of output object parameter
27300	Wrong number of input parameter
27400	System error: output type <string> expected
27401	System error: output type <long> expected
27402	System error: output type <float> expected

27403 Object parameter is a zero pointer ('_' not allowed)
 27404 Tupel had been deleted; values are not valid Alle more
 27430 CPP-interface internal error: wrong object mode
 27431 Wrong number of regions (> 1) for type HRegion
 27432 Wrong number of images (> 1) for type HImage
 27433 Tupel with undefined values
 27500 No contact to RPC server
 27501 Error in remote procedure call
 27600 Parameter value is neither a list nor a atom
 28000 Unknown operator name
 28001 register_comp_used is not activated (see set_system)
 28002 Unknown operator class
 28101 convol/mask: error while opening the file
 28102 convol/mask: premature end of file
 28103 convol/mask: conversion error
 28104 convol/mask: wrong row-/column number
 28105 convol/mask: mask size overflow
 28106 convol/mask: too mAlle elements entered
 28107 convol: wrong margin type
 28108 convol: no mask object has got empty region
 28110 convol: Weight factor is 0
 28111 convol: inconsistent number of weights
 28112 rank: wrong rank value
 28113 convol/rank: error while handling margin
 28114 Error while parsing filter mask file
 28120 Wrong number of coefficients for convolution (sigma too big?)
 28200 No valid ID for data set
 28201 No data set active (set_bg_esti)
 28202 ID already used for data set (is not possible)
 28204 No data set created (create_bg_esti)
 28205 Not possible to pass an object list
 28206 Image has other size than the background image in data set
 28207 Up-date-region is bigger than background image
 28208 Number of statistic data sets is too small
 28209 Wrong value for adapt mode
 28210 Wrong value for frame mode
 28300 Maximum number of fonts exceeded
 28301 Wrong ID (Number) for font
 28302 OCR internal error: wrong ID
 28303 OCR not initialised: no font was read in
 28304 No font activated
 28305 OCR internal error: wrong threshold in angle determination
 28306 OCR internal error: wrong attribute
 28307 The version of the OCR classifier is not supported
 28308 OCR File: inconsistent number of nodes
 28309 OCR File: File too short
 28310 OCR: internal error 1
 28311 OCR: internal error 2
 28312 Wrong type of OCR tool (no 'box' or 'net')
 28313 The version of the OCR training characters is not supported

28314 Image too large for training file
28315 Region too large for training file
28316 Protected training file
28317 Wrong password for protected training file
28318 Serialized item does not contain a valid OCR classifier
28320 Invalid file format for MLP classifier
28321 The version of the MLP classifier is not supported
28322 Serialized item does not contain a valid MLP classifier
28330 Invalid file format for SVM classifier
28331 The version of the SVM classifier is not supported
28332 Serialized item does not contain a valid k-NN classifier
28333 Invalid file format for k-NN classifier
28340 Invalid text model
28341 Invalid text result
28350 OCV system not initialized
28351 The version of the OCV tool is not supported
28353 Wrong name for an OCV object
28354 Training has already been applied
28355 No training has been applied to the character
28356 Serialized item does not contain a valid OCV tool
28370 Wrong number of function points
28371 List of values is not a function
28372 Wrong ordering of values (not ascending)
28373 Illegal distance of function points
28374 Function is not monotonic
28375 Wrong function type
28400 You have to indicate at least 3 calibration points
28402 No calibration table found
28403 Error while reading calibration table description file
28404 Minimum threshold while searching for ellipses
28405 Read error / format error in calibration table description file
28406 Error in projection: $s_x = 0$ or $s_y = 0$ or $z = 0$
28407 Error in inverse projection
28408 Not possible to open camera parameter file
28409 Format error in file: no colon
28410 Format error in file: 2. colon is missing
28411 Format error in file: semicolon is missing
28412 Not possible to open camera parameter (pose) file
28413 Format error in camera parameter (pose) file
28414 Not possible to open calibration target description file
28415 Not possible to open postscript file of calibration target
28416 Error while norming the vector
28417 Fitting of calibration target failed
28418 No next mark found
28419 Normal equation system is not solvable
28420 Average quadratic error is too big for 3D position of mark
28421 Non elliptic contour
28422 Wrong parameter value `slvand()`
28423 Wrong function results `slvand()`
28424 Distance of marks in calibration target description file is not possible

28425 Specified flag for degree of freedom not valid
28426 Minimum error did not fall below
28427 Wrong type in Pose (rotation / translation)
28428 Image size does not match the measurement in camera parameters
28429 Point could not be projected into linescan image
28430 Diameter of calibration marks could not be determined
28431 Orientation of calibration plate could not be determined
28432 Calibration plate does not lie completely inside the image
28433 Wrong number of calibration marks extracted
28434 Unknown name of parameter group
28435 Focal length must be non-negative
28436 Function not available for cameras with telecentric lenses
28437 Function not available for line scan cameras
28438 Ellipse is degenerated to a point
28439 No orientation mark found
28440 Camera calibration did not converge
28441 Error in calibration data, try to recalibrate with improved input data!
28442 Point cannot be distorted
28451 Model not optimized yet -0 no results can be queried
28452 Model not postprocessed yet -0 no auxiliary results can be queried
28453 Calibration setup: fields of view do not intersect
28454 Camera type and camera parameters incompatible
28455 Calibration setup: incompatible camera types
28456 Camera type not supported
28457 Invalid camera index
28458 Invalid calibration object index
28459 Invalid calibration object pose index
28460 Undefined camera
28461 Indices: ambiguous observation index
28462 Undefined calibration object
28463 Invalid file format for calibration data model
28464 The version of the calibration data model is not supported
28465 Zero-motion in line scan camera parameters
28466 Calibration setup: multiple cameras and/or calibration objects not supported for camera type
28467 Incomplete observation data
28468 Invalid file format for camera setup model
28469 The version of the camera setup model is not supported
28470 Full HALCON calibration plate description required
28471 Invalid observation index
28472 Serialized item does not contain a valid camera setup model
28473 Serialized item does not contain a valid calibration data model
28474 Invalid tool pose index
28475 Undefined tool pose
28476 Feature or operation not supported for current calibration data model type
28490 Feature or operation not supported for current stereo model type
28491 Feature or operation available only in 'persistent' mode
28492 Invalid bounding box
28493 Image sizes must be identical with the corresponding camera parameters from the camera setup
28494 Bounding box lies partially or completely behind the base line of at least one camera pair

28495 Ambiguous calibration: Please, recalibrate with improved input data!
28496 Pose of calibration plate could not be determined!
28500 Invalid file format for template
28501 The version of the template is not supported
28502 Error during changing the file mode (t/b)
28503 Inconsistent match file: coordinates out of range
28505 The image(s) is not a pyramid (wrong zooming factor?)
28506 Number of template points too small
28507 Template data can only be read by HALCON XL
28508 Serialized item does not contain a valid NCC model
28509 Serialized item does not contain a valid template
28510 Number of shape model points too small
28511 Gray-value-based and color-based shape models cannot be searched simultaneously
28512 Shape model data can only be read by HALCON XL
28513 Shape model was not created from XLDs
28514 Serialized item does not contain a valid shape model
28530 Initial components have different region types
28531 Solution of ambiguous matches failed
28532 Computation of the incomplete gamma function not converged
28533 Too mAlle nodes while computing the minimum spanning arborescence
28534 Component training data can only be read by HALCON XL
28535 Component model data can only be read by HALCON XL
28536 Serialized item does not contain a valid component model
28537 Serialized item does not contain a valid component training result
28540 Size of the training image and the variation model differ
28541 Variation model has not been prepared for segmentation
28542 Invalid variation model training mode
28543 Invalid file format for variation model
28544 The version of the variation model is not supported
28545 Training data has already been cleared
28546 Serialized item does not contain a valid variation model
28550 No more measure objects available
28551 Measure object is not initialized
28552 Invalid measure object
28553 Measure object is NULL
28554 Measure object has wrong image size
28555 Invalid file format for measure object
28556 The version of the measure object is not supported
28557 Measure object data can only be read by HALCON XL
28558 Serialized item does not contain a valid measure object
28570 Metrology model is not initialized
28571 Invalid metrology model
28572 Invalid metrology object
28573 Not enough valid measures for fitting the metrology object
28575 Invalid file format for metrology model
28576 The version of the metrology model is not supported
28577 Fuzzy function is not set
28578 Serialized item does not contain a valid metrology model
28600 Dynamic library could not be opened
28601 Dynamic library could not be closed

28602 Symbol not found in dynamic library
28650 Not enough information for radiometric calibration
28700 Unknown bar code
28701 Wrong number of modules
28702 Wrong number of elements
28703 Unknown character (for this code)
28705 wrong name for attribute in barcode descriptor
28706 Wrong thickness of element
28707 No region found
28708 Wrong type of bar code
28720 Invalid bar code handle
28721 List of bar code models is empty
28722 Training cannot be done for multiple bar code types
28723 Cannot get bar code type specific parameter with `get_bar_code_param`. Use `get_bar_code_param_specific`
28724 Cannot get this object for multiple bar code types. Try again with single bar code type
28725 Invalid file format for bar code model
28726 The version of the bar code model is not supported
28800 Specified code type is not supported
28801 Wrong foreground specified
28802 Wrong matrix size specified
28803 Wrong symbol shape specified
28804 Wrong generic parameter name
28805 Wrong generic parameter value
28806 Wrong symbol printing mode
28807 Symbol region too near to image border
28808 No rectangular module boundingds found
28809 Couldn't identify symbol finder
28810 Symbol region with wrong dimension
28811 Classification failed
28812 Decoding failed
28813 Reader programing not supported
28820 General 2d data code error
28821 Corrupt signature of 2d data code handle
28822 Invalid 2d data code handle
28823 List of 2d data code models is empty
28825 Invalid 'Candidate' parameter
28829 Unexpected 2d data code error
28830 Invalid parameter value
28831 Unknown parameter name
28832 Invalid value for 'polarity'
28833 Invalid value for 'symbol_shape'
28834 Invalid symbol size
28835 Invalid module size
28836 Invalid value for 'module_shape'
28837 Invalid value for 'orientation'
28838 Invalid value for 'contrast_min'
28839 Invalid value for 'measure_thresh'
28840 Invalid value for 'alt_measure_red'
28841 Invalid value for 'slant_max'

28842 Invalid value for 'L_dist_max'
28843 Invalid value for 'L_length_min'
28844 Invalid module gap
28845 Invalid value for 'default_parameters'
28846 Invalid value for 'back_texture'
28847 Invalid value for 'mirrored'
28848 Invalid value for 'classifier'
28849 Invalid value for 'persistence'
28850 Invalid model type
28851 Invalid value for 'module_roi_part'
28852 Invalid value for 'finder_pattern_tolerance'
28853 Invalid value for 'mod_aspect_max'
28854 Invalid value for 'small_modules_robustness'
28863 Invalid module aspect ratio
28864 Invalid layer num
28865 Wrong data code model file version
28866 Serialized item does not contain a valid 2D data code model
28900 Unknown parameter name
28901 Invalid value for 'num_levels'
28902 Invalid value for 'optimization'
28903 Invalid value for 'metric'
28904 Invalid value for 'min_face_angle'
28905 Invalid value for 'min_size'
28910 The projected model is too large "
28920 Invalid value for 'longitude_min'
28921 Invalid value for 'longitude_max'
28922 Invalid value for 'latitude_min'
28923 Invalid value for 'latitude_max'
28924 Invalid value for 'cam_roll_min'
28925 Invalid value for 'cam_roll_max'
28926 Invalid value for 'dist_min'
28927 Invalid value for 'dist_max'
28928 Invalid value for 'num_matches'
28929 Invalid value for 'max_overlap'
28933 Invalid value for 'border_model'
28940 Pose is not well-defined
28941 Invalid file format for 3D shape model
28960 Invalid file format for descriptor model
28961 The version of the descriptor model is not supported
28962 Invalid value for 'radius'
28963 Invalid value for 'check_neighbor'
28964 Invalid value for 'min_check_neighbor_diff'
28965 Invalid value for 'min_score'
28966 Invalid value for 'sigma_grad'
28967 Invalid value for 'sigma_smooth'
28968 Invalid value for 'alpha'
28969 Invalid value for 'threshold'
28970 Invalid value for 'depth'
28971 Invalid value for 'number_trees'
28972 Invalid value for 'min_score_descr'

28973 Invalid value for 'patch_size'
28974 Invalid value for 'tilt'
28975 Invalid value for 'guided_matching'
28976 Invalid value for 'subpix'
28977 Too few feature points can be found
28978 Invalid value for 'min_rot'
28979 Invalid value for 'max_rot'
28980 Invalid value for 'min_scale'
28981 Invalid value for 'max_scale'
28982 Invalid value for 'mask_size_grd'
28983 Invalid value for 'mask_size_smooth'
28984 Model broken
28985 Invalid value for 'descriptor_type'
28986 Invalid value for 'matcher'
28987 Too mAlle point classes -0 model storing in a file is not possible
28988 Serialized item does not contain a valid descriptor model
29000 Function not implemented on this machine
29001 Image to process has wrong gray value type
29002 Wrong image component (see: get_system(obj_images,H))
29003 Undefined gray values
29004 Wrong image format for operation (too big or too small)
29005 Wrong number of image components for image output
29006 String is too long (max. 1024 characters)
29007 Wrong pixel type for this operation
29008 Operation not realized yet for this pixel type
29009 Image is no color image with three channels
29010 Image acquisition devices are not supported in the demo version
29011 Packages are not supported in the demo version
29020 Internal error: Unknown value
29021 Image domain too small.
29022 Input dimension too small
29023 Draw operator has been canceled
29050 Operator is not available in this restricted version of HALCON
29051 Packages are not available in this restricted version of HALCON
29052 The selected image acquisition interface is not available in this restricted version of HALCON
29100 Too mAlle unknown variables in linear equation
29101 No (unique) solution for the linear equation
29102 Too little equations in linear equation
29200 Matrix is not invertible
29201 Singular value decomposition did not converge
29202 Matrix has too few rows for singular value partition
29203 Eigenvalue computation did not converge
29204 Eigenvalue computation did not converge
29205 Matrix is singular
29206 Function matching did not converge
29207 Input matrix undefined
29208 Input matrix with wrong dimension
29209 Input matrix is not quadratic
29210 Matrix operation failed
29211 Matrix is not positive definite

29212	One element of the matrix is zero: Division by zero
29213	Matrix is not an upper triangular matrix
29214	Matrix is not a lower triangular matrix
29215	One element of the matrix is negative
29216	Matrix file: Invalid character
29217	Matrix file: Matrix incomplete
29218	Invalid file format for matrix
29219	Resulting matrix has complex values
29220	Wrong value in matrix of exponents
29221	The version of the matrix is not supported
29222	Serialized item does not contain a valid matrix
29230	Internal error: wrong Node
29231	Inconsistent red black tree
29250	Internal error: Wrong LAPACK parameter
29260	Number of points too small for spherical triangulation
29261	First three points are collinear in spherical triangulation
29262	Spherical triangulation contains identical input points
29263	Internal error: array not allocated large enough for spherical triangulation
29264	Spherical Voronoi diagram contains degenerate triangle
29265	Internal error: inconsistent spherical triangulation
29266	Spherical Voronoi diagram contains self-intersecting polygon
29267	Internal error: inconsistent spherical polygon data
29268	Internal error: Ambiguous great circle arc intersection
29269	Internal error: Ambiguous great circle arc
29270	Internal error: Illegal parameter
29280	Not enough points for planar triangular meshing
29281	The first three points of the triangular meshing are collinear
29282	Planar triangular meshing contains identical input points
29283	Invalid points for planar triangular meshing
29284	Internal error: allocated array too small for planar triangular meshing
29285	Internal error: planar triangular meshing inconsistent
29300	Eye point and reference point coincide
29400	Timeout occurred
29401	Invalid value for timeout
29450	Invalid value for 'sub_object_size'
29451	Invalid value for 'min_size'
29452	Invalid number of least-squares iterations
29453	Invalid value for 'angle_step'
29454	Invalid value for 'scale_r_step'
29455	Invalid value for 'scale_c_step'
29456	Invalid value for 'max_angle_distortion'
29457	Invalid value for 'max_aniso_scale_distortion'
29458	Invalid value for 'min_size'
29459	Invalid value for 'cov_pose_mode'
29460	Model contains no calibration information
29461	Generic parameter name does not exist
29462	Provided camera parameters have different resolution than image
29463	Invalid file format for deformable model
29464	The version of the deformable model is not supported
29465	Invalid 'deformation_smoothness'

29466 Invalid 'expand_border'
29467 Model origin outside of axis-aligned bounding rectangle of template region
29468 Serialized item does not contain a valid deformable model
29500 3D Object Model has no points
29501 3D Object Model has no faces
29502 3D Object Model has no normals
29506 Invalid file format for 3D surface model
29507 The version of the 3D surface model is not supported
29508 Serialized item does not contain a valid 3D surface model
29510 Invalid 3D file
29511 Invalid 3D object model
29512 Unknown file type
29513 The version of the 3D object model is not supported
29514 Required attribute missing in 3D object model
29515 Required points missing in 3D object model
29516 Required normals missing in 3D object model
29517 Required triangulation missing in 3D object model
29518 Required polylines missing in 3D object model
29519 Required triangle neighborhood missing in 3D object model
29520 Required polygons missing in 3D object model
29521 Required 2D mapping missing in 3D object model
29522 Required primitive missing in 3D object model
29523 Required 3D shape model missing in 3D object model
29524 Required extended attribute missing in 3D object model
29525 Serialized item does not contain a valid 3D object model
29526 Primitive in 3D object model has no extended data
29527 Operation invalid, 3D object model already contains triangles
29528 Operation invalid, 3D object model already contains lines
29529 Operation invalid, 3D object model already contains faces or polygons
29530 For at least one input 3D object model no neighbor with sufficient surface overlap is available.
29531 All components of points must be set at once
29532 All components of normals must be set at once
29533 Number of values doesn't correspond to number of already existing points
29534 Number of values doesn't correspond to number of already existing normals
29535 Number of values doesn't correspond to already existing triangulation
29536 Number of values doesn't correspond to length of already existing polygons
29537 Number of values doesn't correspond to length of already existing polylines
29538 Number of values doesn't correspond to already existing 2D mapping
29539 Number of values doesn't correspond to already existing extended attribute
29550 Triangles of the 3D object model are not suitable for this operator
29551 Too few suitable 3D points in the 3D object model
29580 Invalid file format for serialized items
29581 Serialized item: premature end of file
29600 Invalid value for 'image_resize_method'
29601 Invalid value for 'image_resize_value'
29602 Invalid value for 'rating_method'
29603 At least one type of image information must be added
29604 Sample identifier does not contain color information
29605 Sample identifier does not contain texture information
29606 Sample image does not contain enough information

29607	Sample identifier does not contain unprepared data (use add_sample_identifier_preparation_data)
29608	Sample identifier has not been prepared yet (use prepare_sample_identifier)
29609	Sample identifier does not contain untrained data (use add_sample_identifier_training_data)
29610	Sample identifier has not been trained yet (use train_sample_identifier)
29611	Sample identifier does not contain result data
29612	Sample identifier must contain at least two training objects (use add_sample_identifier_training_data)
30000	no error
30001	Input invalid
30002	Input negative
30003	Input exceeded range
30004	Memory exceeded boundary
30004	Memory allocation failure
30006	Memory pointer null
30007	DMA failure
30008	File open failure
30009	File read failure
30010	File write failure
30011	File close failure
30012	File format failure
30013	Warning low memory
40000	No error occurred in camera device.
40001	Initialization of image chip driver failed.
40002	Converting image to RGB or HSV failed.
40003	The capture process timed out.
40004	Arming video driver failed -> driver is in error state.
40005	Setting up image chip failed while changing size.
40006	Setting up video driver failed while changing size.
40007	Setting up image chip failed while changing brightness.
40008	Setting light mode failed -> typically UART communication.
40009	Setting focus pos. failed -> typically UART communication.
40010	Auto focus process failed -> typically UART communication.
50001	Indicates the configuration is invalid.
50002	Indicates the configuration API was not initialized.
50003	Indicates the configuration API was already initialized.
50004	Indicates that a function argument was invalid.
50005	Indicates a channel was defined twice.
50006	One has tried to define more than 2 quadrature channels.
50007	Indicates that more than 1 TRIGGER inputs is defined.
50008	Indicates that more than 1 READY signal is defined.
50009	Indicates that more than 1 FLASH output is defined.
50010	Indicates that more than 1 PROCESS output is defined.
50011	Indicates that more than 1 CAPTURE output is defined.
50012	Indicates that more than 1 PROJECT_SELECT feedback output defined.
50013	Indicates that more than 1 PROJECT_SELECT input is defined.
50014	Indicates invalid configuration of timer/quadrature.
50015	Indicates PRU couldn't started.